


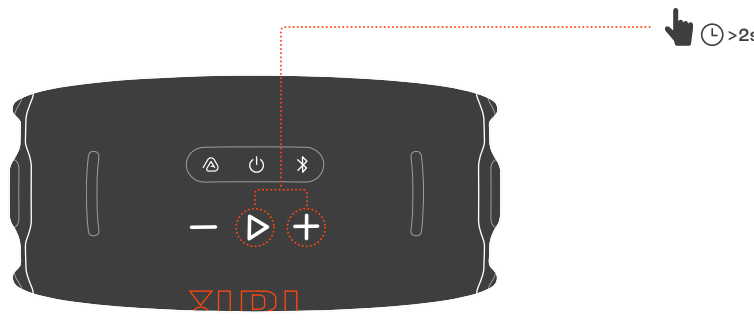
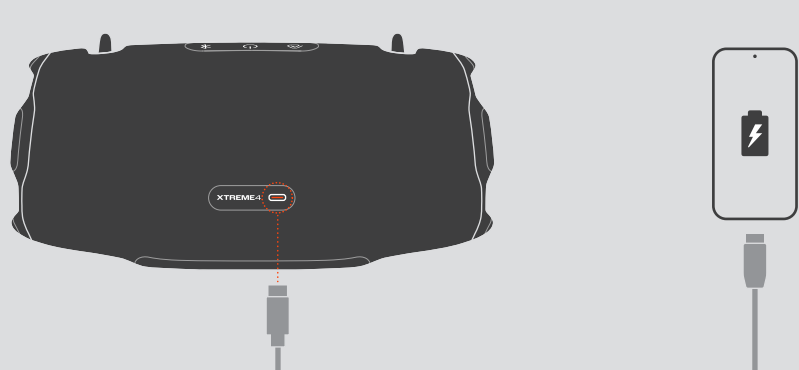
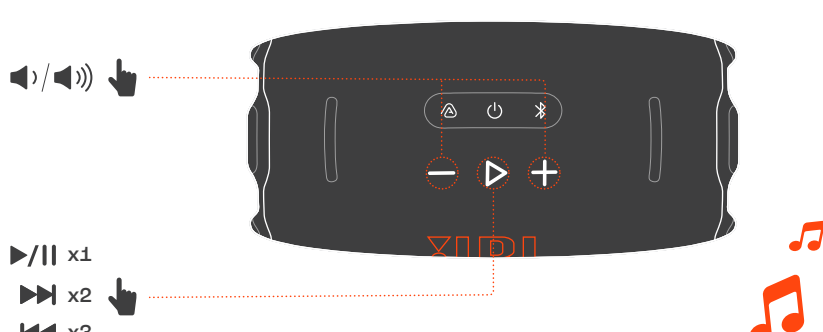


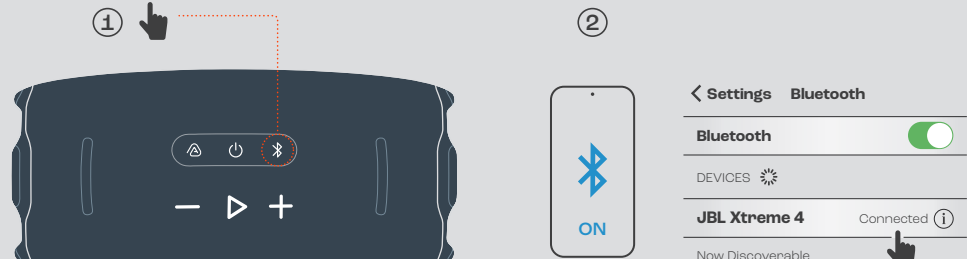


1

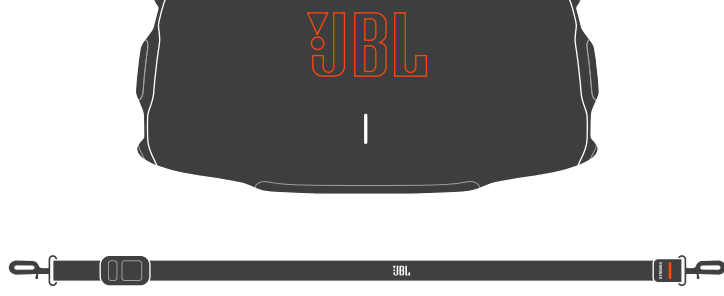

① Remove the Old Battery

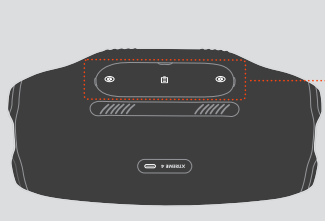

Replace the rechargeable battery only when it is defective.
Ensure the battery cover is securely locked to protect the integrity of the waterproof seal.

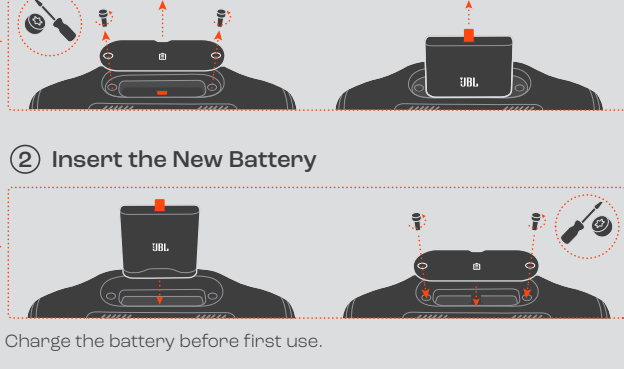

	2 x 20 W RMS tweeter (AC power mode)*	Bluetooth® transmitter modulation:	GFSK, n/4 DQPSK, 8DPSK
	2 x 20 W RMS woofer +	Bluetooth® transmitter frequency range:	2400 MHz ~ 2483.5 MHz
	2 x 15W RMS tweeter (Battery mode)	Bluetooth® transmitter power:	< 15 dBm (EIRP)
Power input:	5V / 9V / 12V / 15V / 20V, 3 A	2.4GHz SRD frequency range:	< 207 MHz ~ 2475 MHz
Frequency response:	45 Hz - 20 kHz	SRD transmitter power:	< 15 dBm (EIRP)
Signal-to-noise ratio:	> 80 dB	Product dimensions (W x H x D):	297 x 149 x 141 mm / 11.69" x 5.87" x 5.55"
Battery type:	JBL BATTERY400,		

Battery charge time: 3.5 hours (Li-ion 68 V)

