
1. Accessories Inspection

After the product is unpacked, check whether the following accessories are complete.

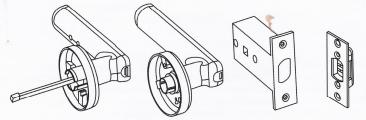

A-front handle B-rear handle C-spring bolt D-pinch plate 1 pc 1 pc 1 pc buckle cover 1 pc 1 pc 1 pc



E-key	F-square bar	G-grub	H-connecting	I-trick	J-tapping
2 pc	1 pc	screw	2 pc	lock screws of front	screw
		2 pc		and rear	4 pc
				2 pc	

2. Adjusting Handle

Adjust the handle according to the opening direction of the door, as shown in the following picture if necessary rotate the handle 180 degrees.

 


Diagram of Handle Change Direction

3. DOOR LOCK INSTALLATION

- 1. Tapping screw (J) is used to fix the spring bolt (C), pinch plate and buckle cover (D) on the door where the corresponding hole position is opened.
- 2. Tighten the grub screw (G) and connecting pipe (H) to the front handle panel (A) in turn. Insert the square bar (F) through the powe cord into the square hole of the front handle (A).
- 3. Install the front handle assembled with the accessories on the door, the square bar (F) and the square hole with the power line passing through the spring bolt.
- 4. Loosen the cover screw (B-1) of the rear handle -(B) and remove the battery box on the back cover (B-2).
- 5. Install the rear handle (B) on the door, and the power cord of the front handle and the square hole of the rear handle where the square bar is passing through. Tighten the rear handle and front handle with trick lock screws I of the two front and rear plate.
 6. Plug the power cord into the rear cover (B-2). Install 4 pieces of AAA alkaline batteries.
- 7. Put the excess power cord into the rear handle, and cover the back cover (B-2), tighten the cover screw (B-1) of back cover, and the installation is complete. At this time, you can set the keys to enter the administrator and user through the small hole on the handl (refer to the operation manual)

