
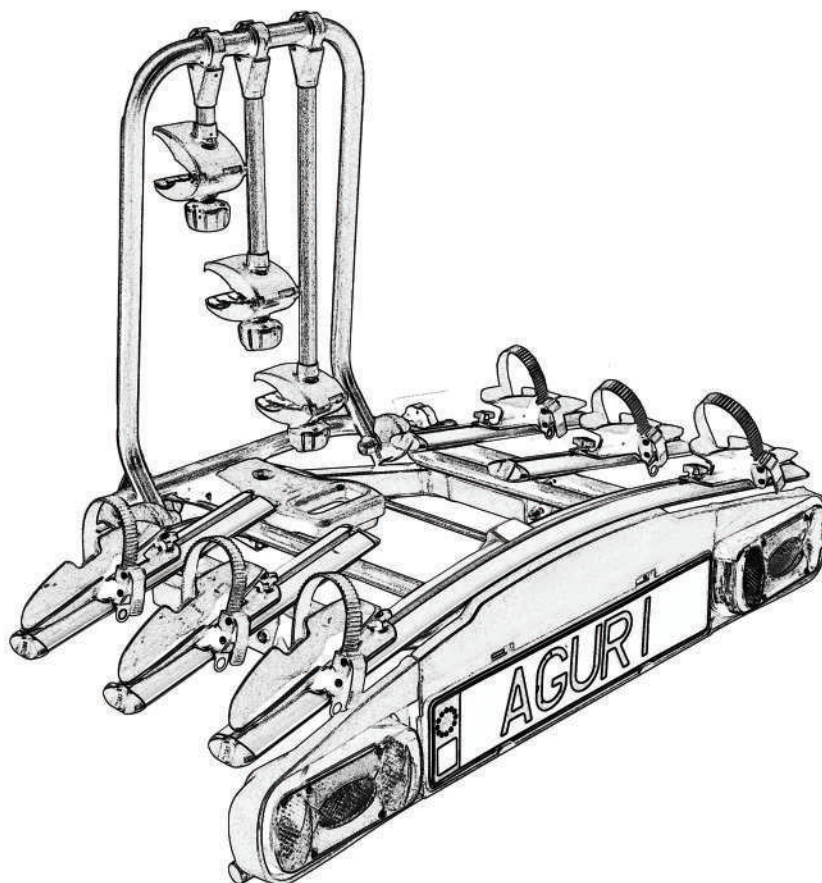
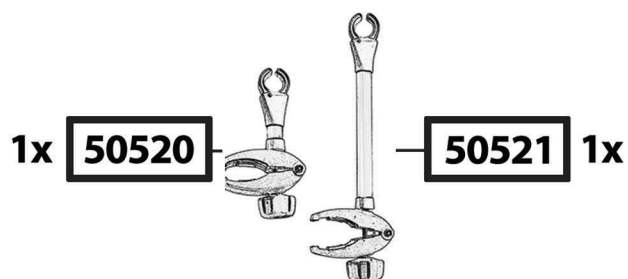
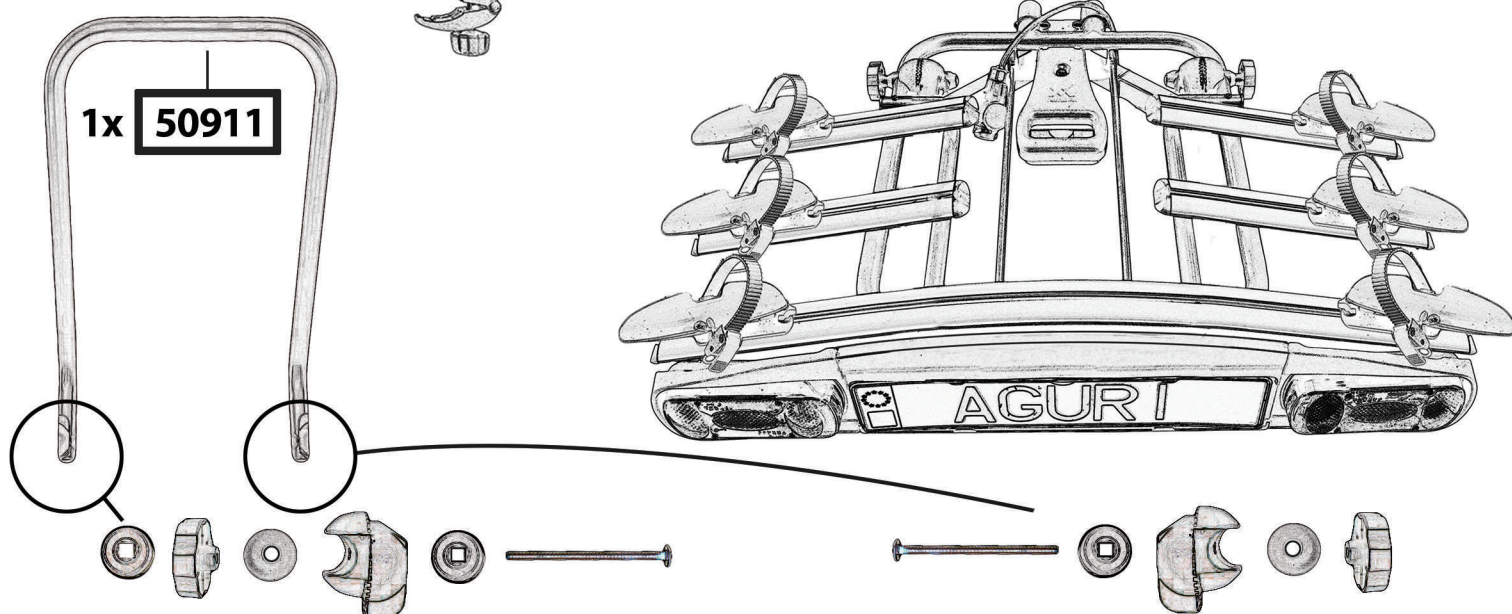
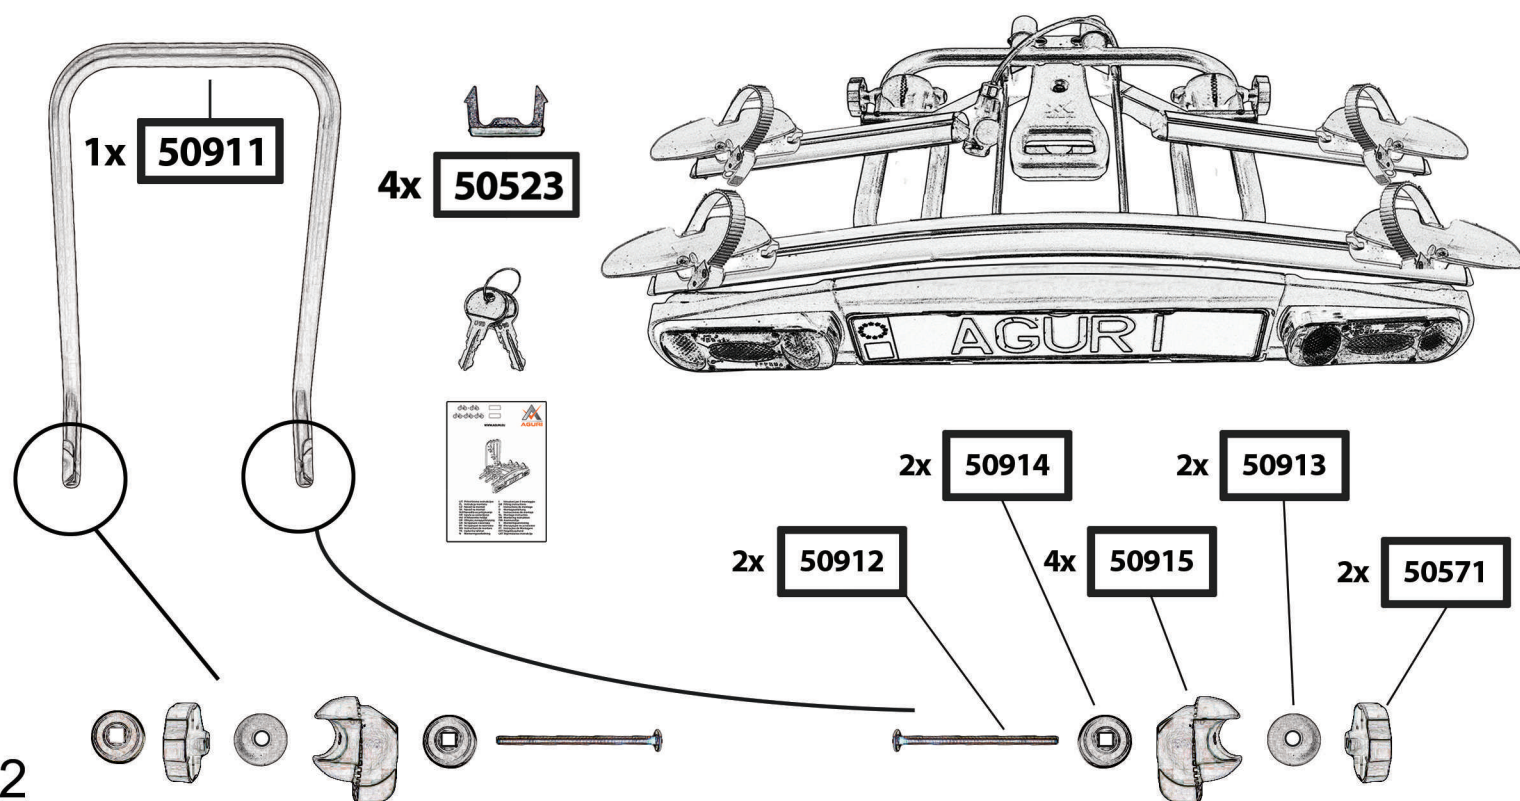
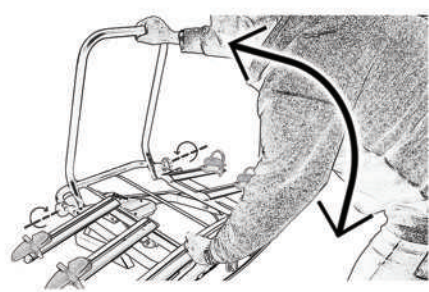
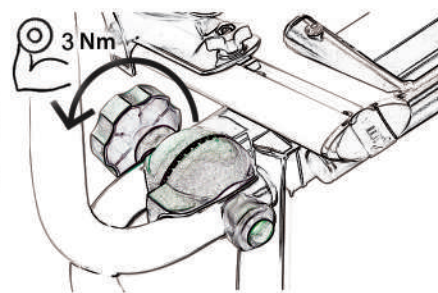
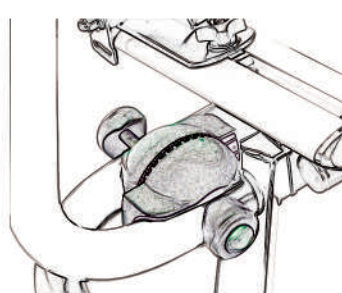
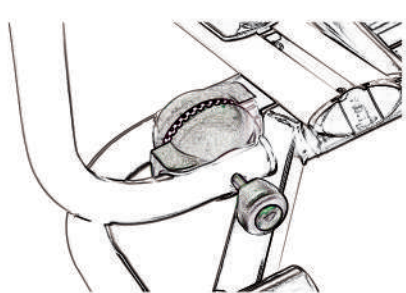
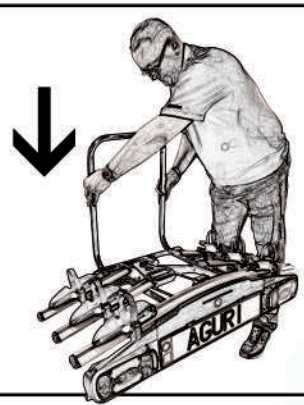
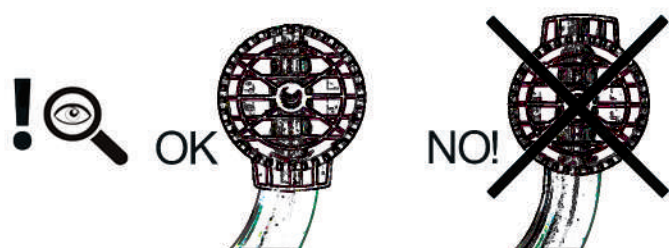
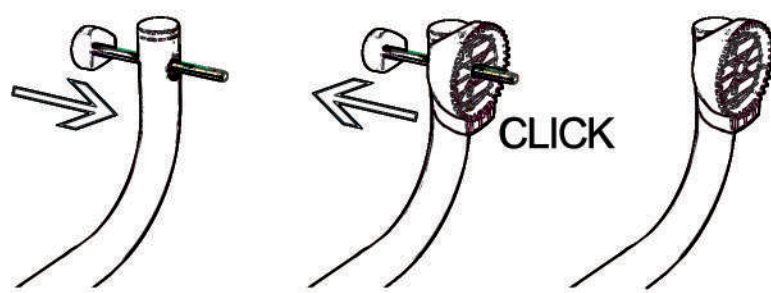










**50512****ACTIVE BIKE 2****50514****ACTIVE BIKE 3****AGURI****WWW.AGURI.EU****LIT** Pritvirtinimo instrukcijos**PL** Instrukcja montażu**CZ** Návod na montáž**SK** Návod na montáž**SLO** Navodila za pritrjevanje**HR** Uputa za sastavljanje**HU** A felszerelés módja**GR** Οδηγίες συναρμολόγησης**UA** Інструкція з монтажу**BY** Інструкцыя па мантажы**RO** Instrucțiuni de montare**TK** Uydurma talimat**N** Monteringsveiledning**I** Istruzioni per il montaggio**GB** Fitting instructions**F** Instructions de montage**D** Montageanleitung**E** Instrucciones de montaje**NL** Montage-instructies**DK** Monteringsinstruktion**FIN** Asennusohje**S** Monteringsanvisning**RU** Инструкция по установке**PT** Instruções de Montagem**EST** Paigaldusjuhend**LAT** Stiprināšanas instrukcija


50514 ACTIVE BIKE 3

**50512 ACTIVE BIKE 2**





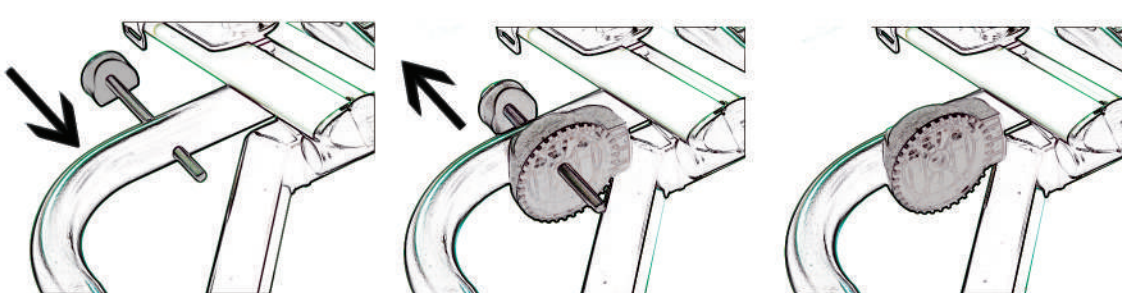





	50512		50514	
 KG				
	19,5 KG		21 KG	
50 KG	-19,5 KG	30,5 KG	-21 KG	29,5 KG
60 KG	-19,5 KG	40,5 KG	-21 KG	39,5 KG
70 KG	-19,5 KG	50,5 KG	-21 KG	49,5 KG
80 KG	-19,5 KG	60,5 KG	-21 KG	59,5 KG

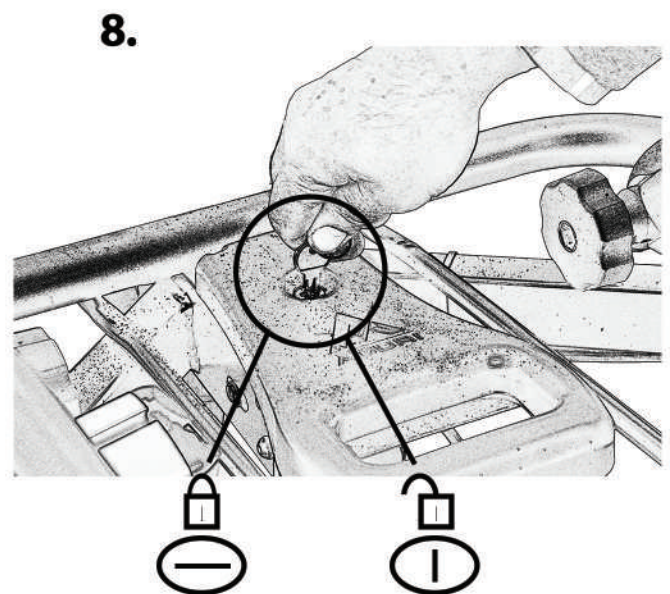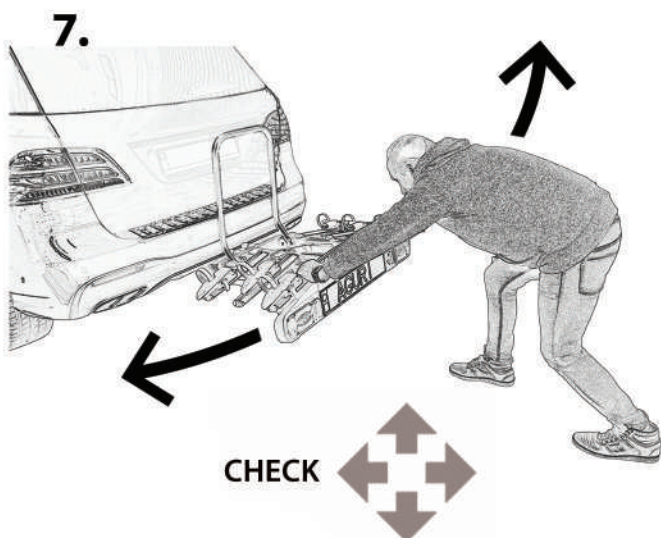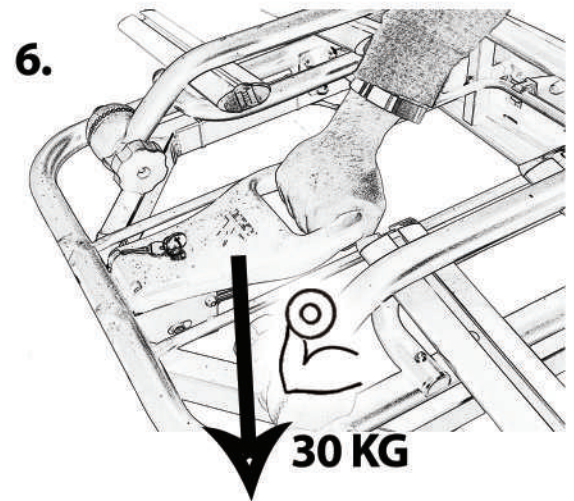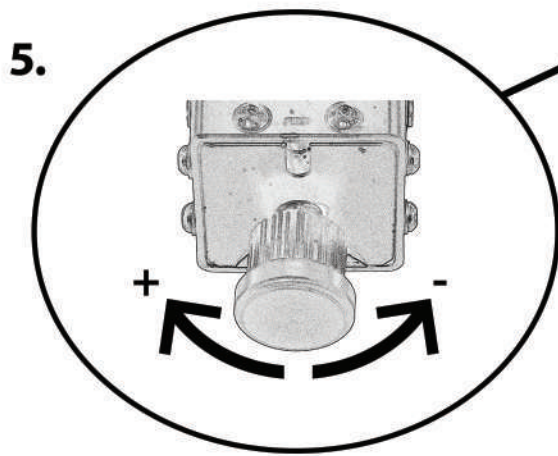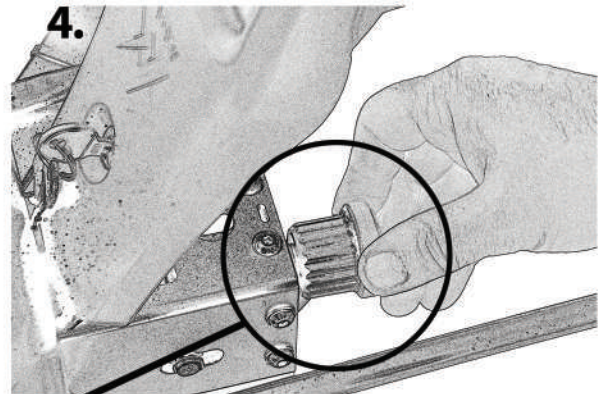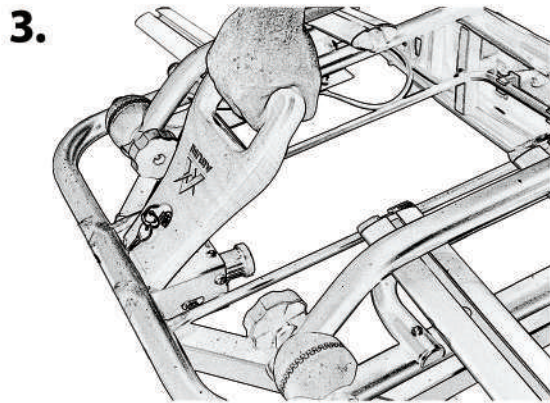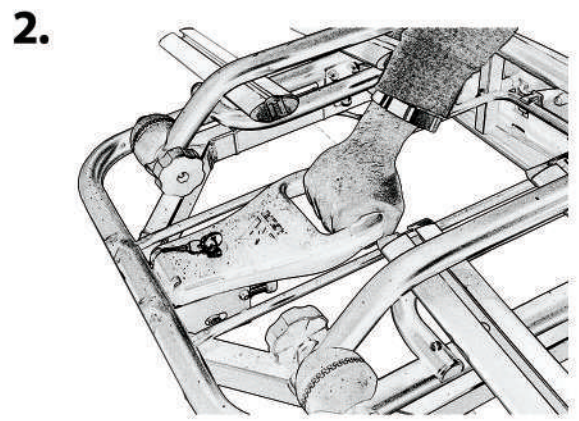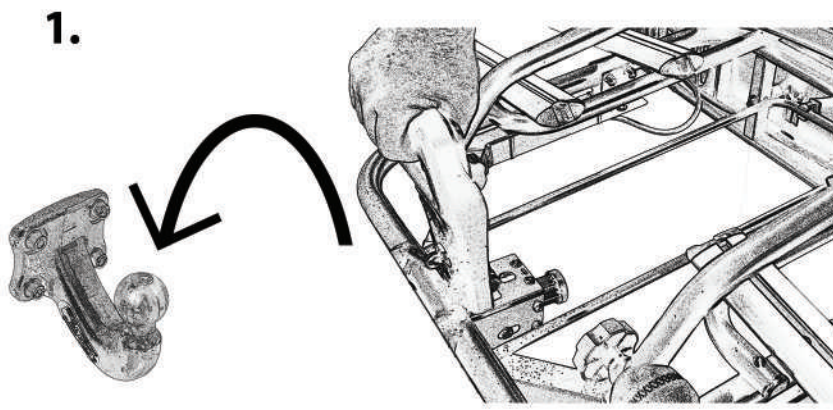





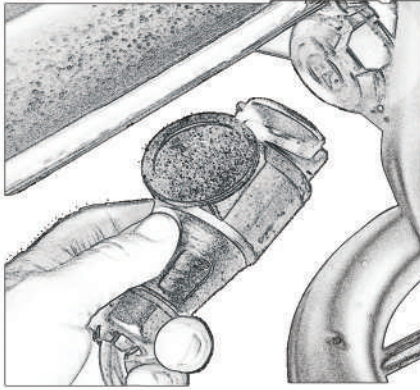










13 PIN

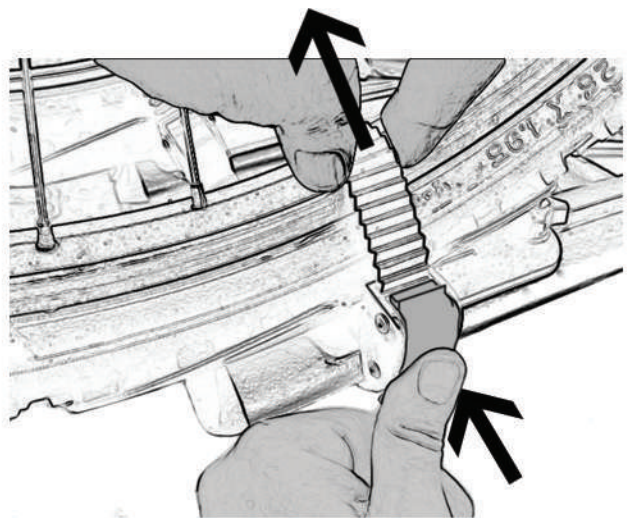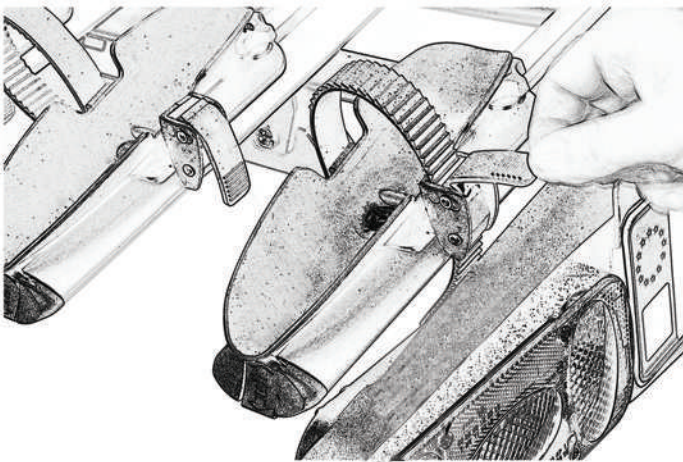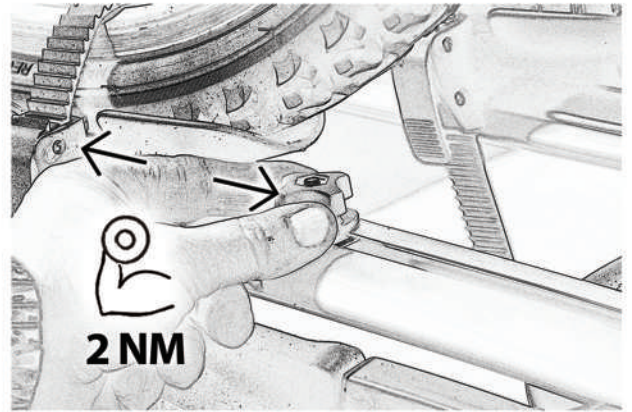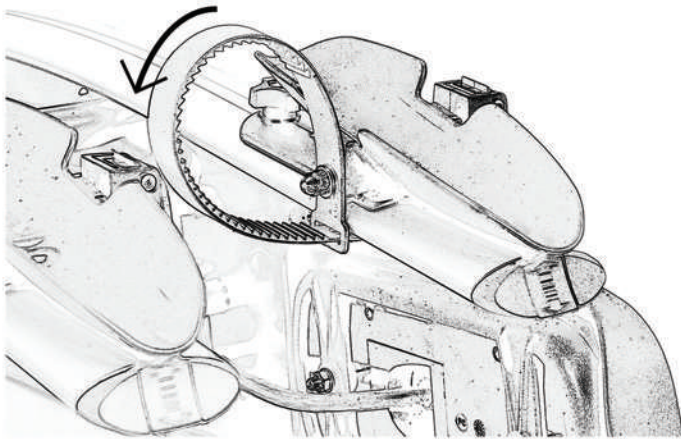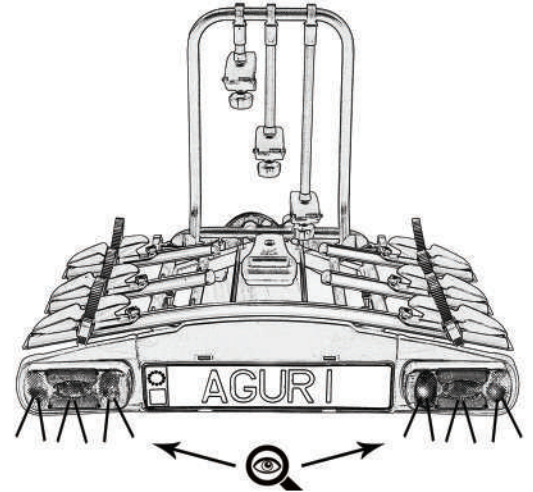


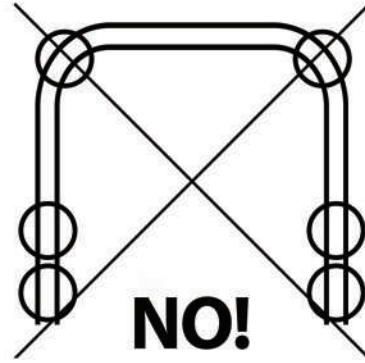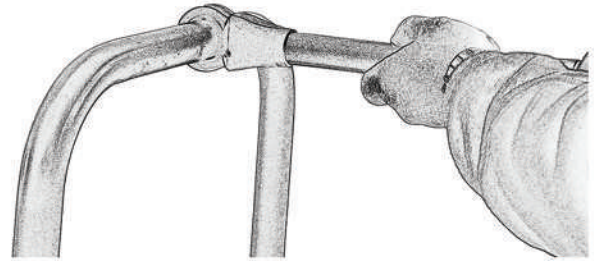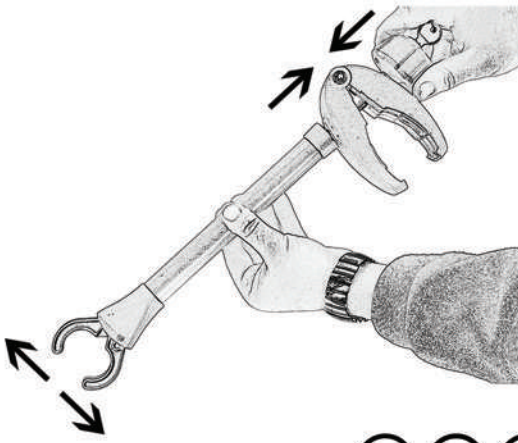


OK

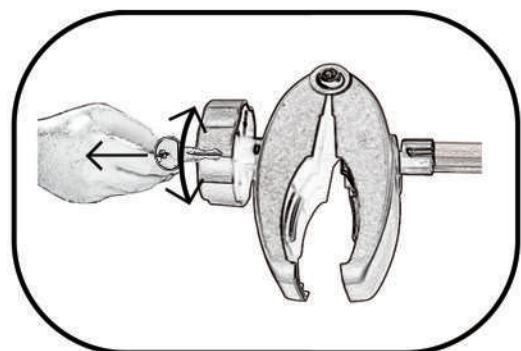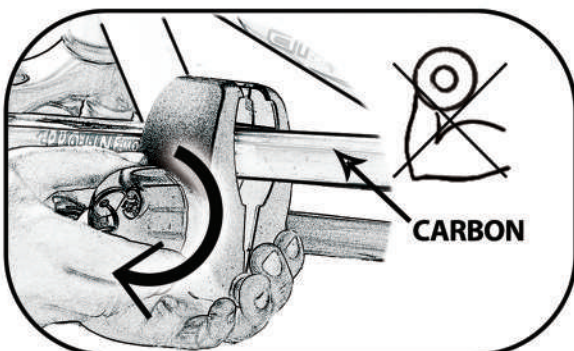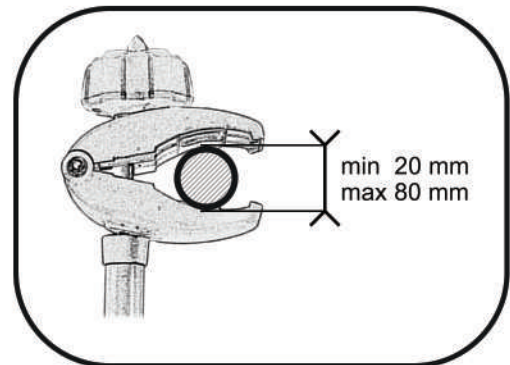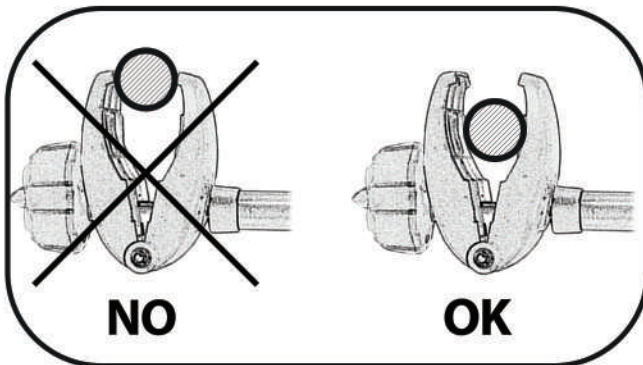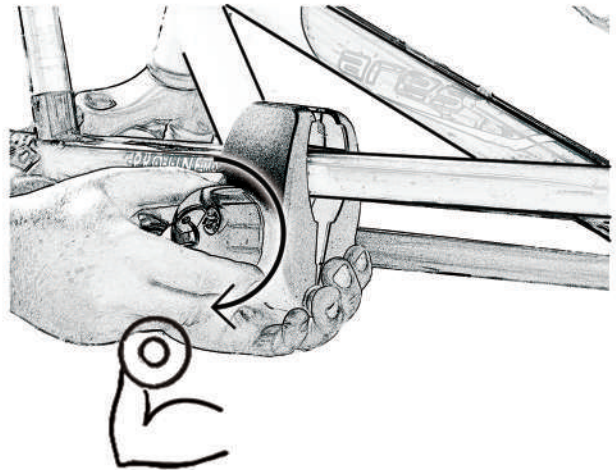

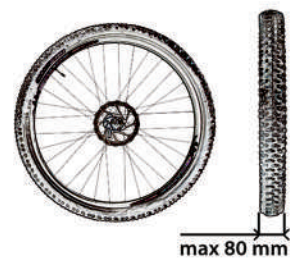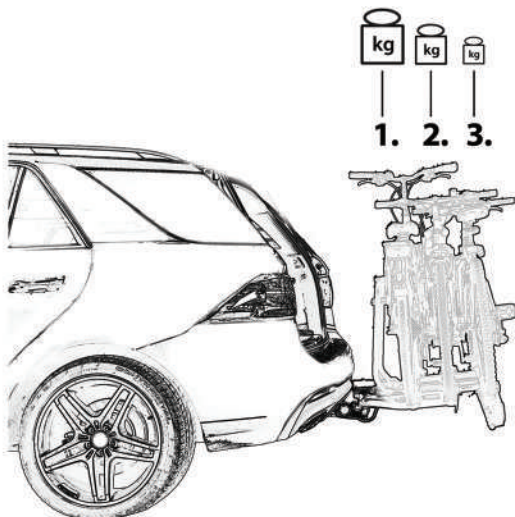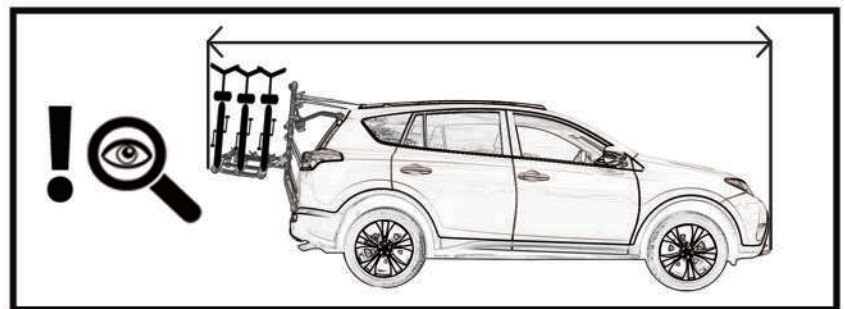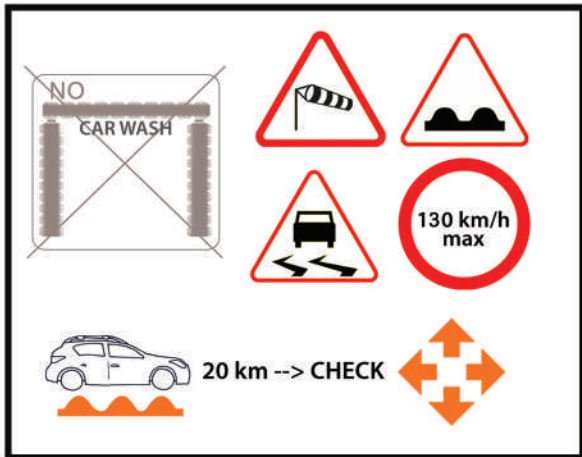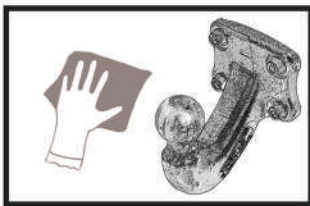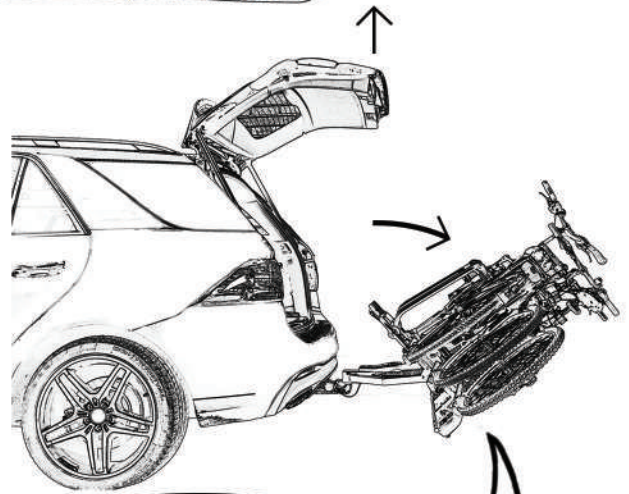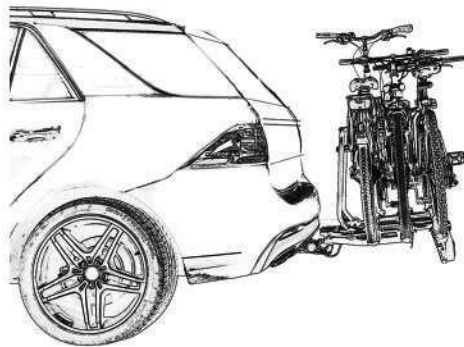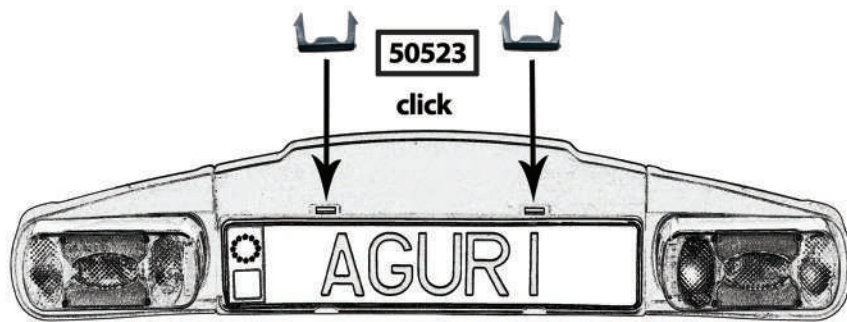

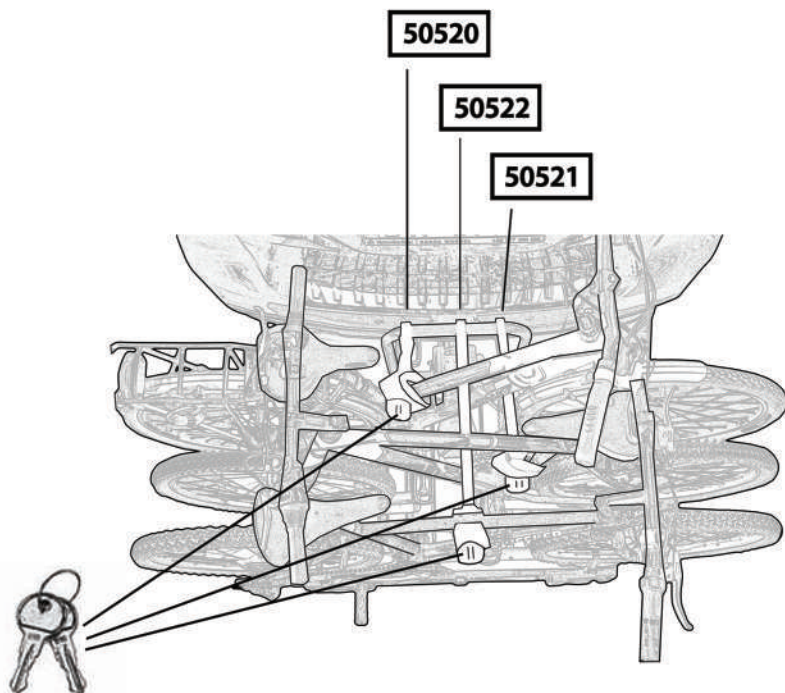



- 1.
- 2.
- 3.

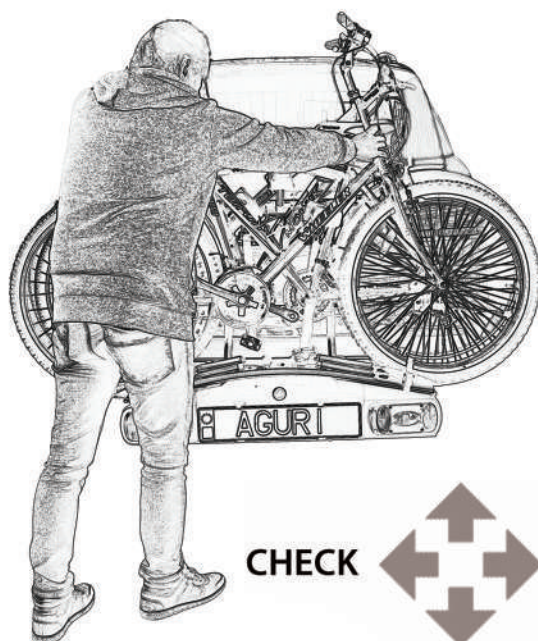

CHECK



ACCESSORIES

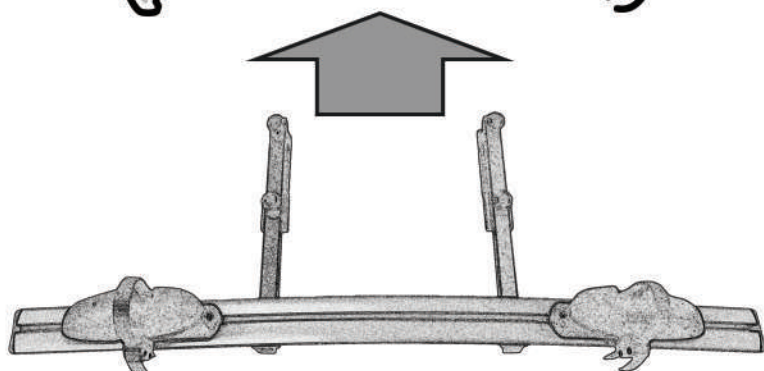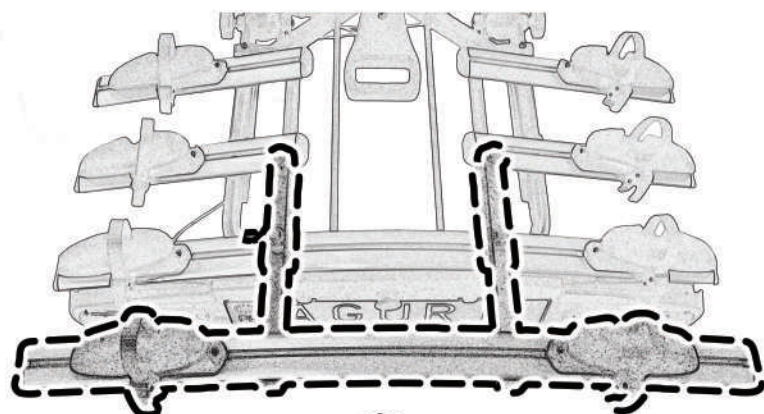


ADAPTER


50518



50532

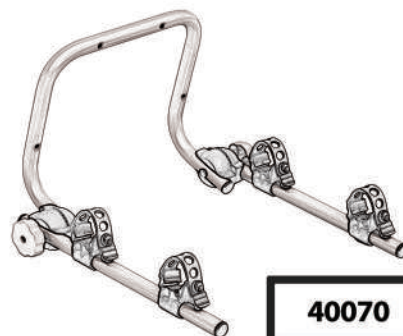


40070

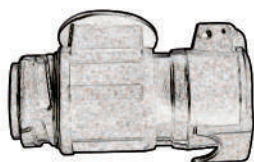

13 PIN / 7 PIN

50072

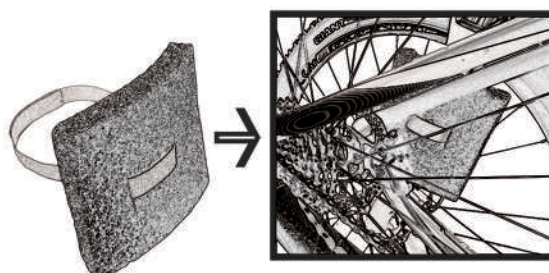

50538

30 x 30 cm