

APP产品

快速使用说明书

请务必仔细阅读后再使用本产品

产品参数

材质 硅胶+ABS
功能 震动
颜色 红色/青色/橙色

噪音 ≤50dB
频率 11模式
电源 USB充电

使用方法

长按1.5秒开机/关机；
开机后点击更改频率（共11种模式循环切换）。

生活防水

防水性能：IPX5防水性，可水洗或冲淋，禁止长时间用水浸泡。

充电方式

- 1、将充电线针头插入产品DC孔，USB头插入手机充电器（产品不含充电器）。
- 2、充电状态指示灯闪烁，充满指示灯常亮。

注：1、完整充电一次约0.5小时，根据产品内部残余电量，充电时间有所不同。
2、常温下满电储存，长时间不使用，请保持至少三个月充电一次,以防电池老化。
3、充电状态不能开机使用！

注意事项

- 1、本产品仅适合成年人使用，禁止未成年人使用。
- 2、使用中如有不适，请立即停止使用。
- 3、须定期检查产品是否受损，发现受损请停止使用。

APP使用

- 一、扫描下方二维码：根据提示下载安装APP。



支持iOS、安卓、
鸿蒙多个操作系统。

- 二、选择下载：选择适合设备的系统下载。



- 三、欢迎界面：开启蓝牙-确保玩具有充足的电量-长按玩具开机键-自动搜索连接玩具-自动跳转模式选择。



- 四、模式选择：选择您喜欢的模式。

自动模式

多种内置模式选择

触控模式

手指滑动任意强度

音乐模式

跟随音乐节奏起舞


远程模式

两人远程互动妙趣横生


- 五、自动模式：选择下方您喜欢的模式玩耍，控制条可以调节强度。



- 六、触控模式：随意滑动下方小红点，带来不一样的体验。

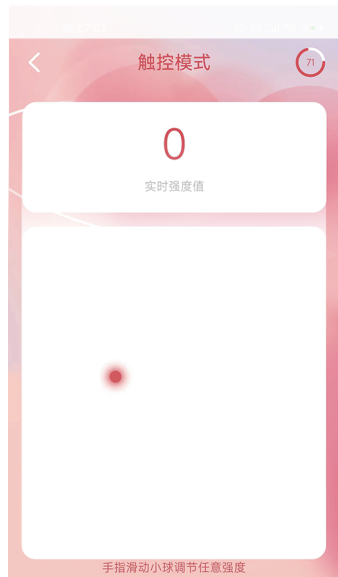

- 七、音乐模式：请允许连接设备本地音乐，让玩具跟随音乐节奏跳舞。

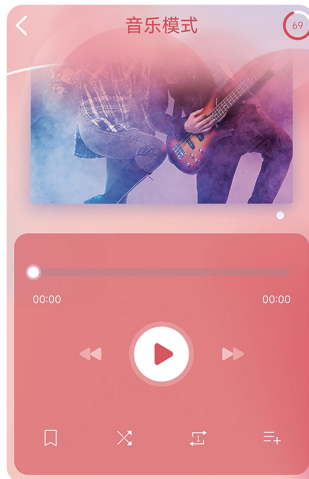

- 八、远程模式：开发中.....敬请期待！

APP PRODUCTS

INSTRUCTIONS

Please read carefully before using this product

Parameters

Product Material Silica Gel 、 ABS
Power Supply Charging
Product Function 11 Vibration Mode
Noise index ≤ 50dB
Product color Red 、 Cyan、 Orange

Method of use

Press 1.5 seconds to turn on / off ;
Click to change 11 vibration modes.

Waterproof

Waterproof performance: ipx5 waterproof,
washable, no water immersion.

Power Supply

1. Insert the round head of USB charging line into DC hole.
2. USB head connects with mobile phone charger (product without charger).
3. The red light of charging status flashes, and the red light is always on after charging.

Tip:

- 1、A full charge is about 0.5 hours. According to the residual electricity in the product, the charging time is different. **Charging state can not be turned on!**
- 2、It is stored at full charge under normal temperature and not used for a long time. Please keep charging at least once every three months to prevent the battery from aging.

Warm warmly

1. This product is only suitable for adults. It is prohibited for minors.
2. In case of any discomfort in use, please stop using immediately.
3. Check whether the product is damaged regularly, and stop using if it is found damaged.

 
How to use APP

- 1、Scan the QR code below:
Install the app according to the instructions below.




Support iOS,
Android,
HarmonyOS
operating systems.

- 2、Choose Download:
Choose the system that is suitable for your device to download.



- 3、Welcome interface:

Bluetooth ON--Ensure that the toy has sufficient power
--Long press the toy power button-Automatic search for connected toys-Automatic jump mode selection.

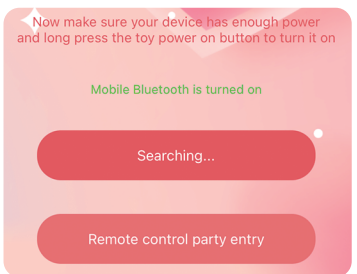

- 4、Mode selection：Choose your preferred mode.

Automatic mode

Multiple built-in mode options

Touch mode

Finger sliding at any strength


Music mode

Dance to the rhythm of the music


Remote mode

Remote interaction between
two people is full of fun

- 5、Automatic mode：Select your preferred mode below, and the control bar can adjust the intensity.

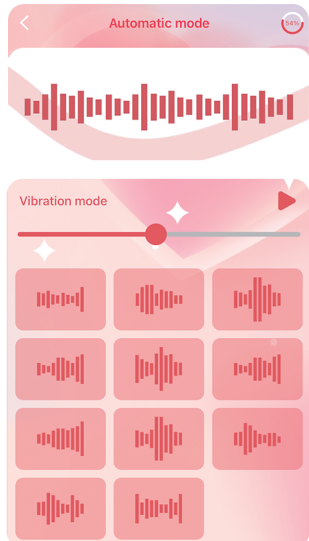


- 6、Touch mode：Finger sliding ball to adjust any strength.

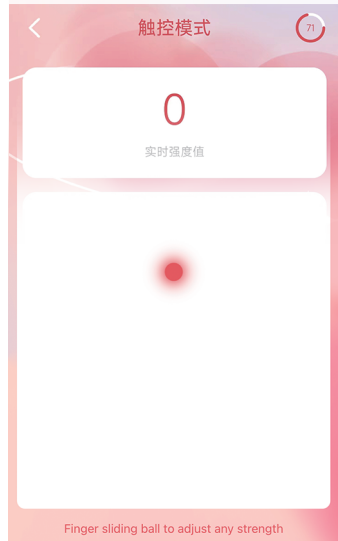

- 7、Music mode:

Please allow the device to connect to local music and let the toy follow the rhythm of the music.

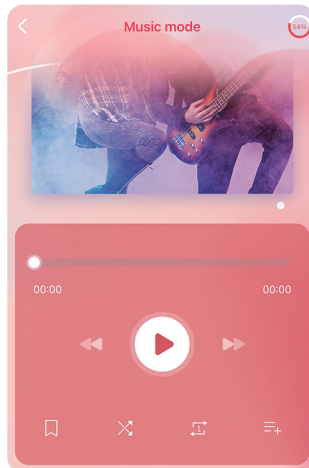

- 8、Remote mode：Under development.