 



60克书写纸材质，彩色印刷，单页100*150mm，整张规格600*150mm,注意框线不用印刷，按1-6页正面，7-12页背面，7页在6页背面，1页做封面，风琴折成小本。

正面




INSTRUKCJA OBSŁUGI
STOJĄCA LAMPA RGB

1.

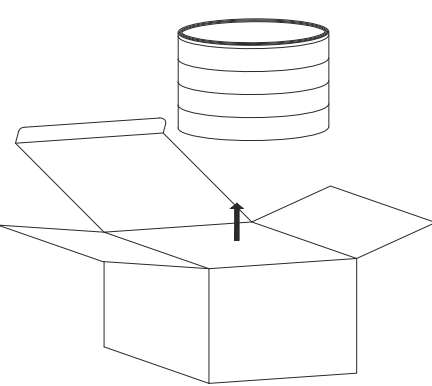


1. Wyciągnij klosz lampy z pudełka

2.

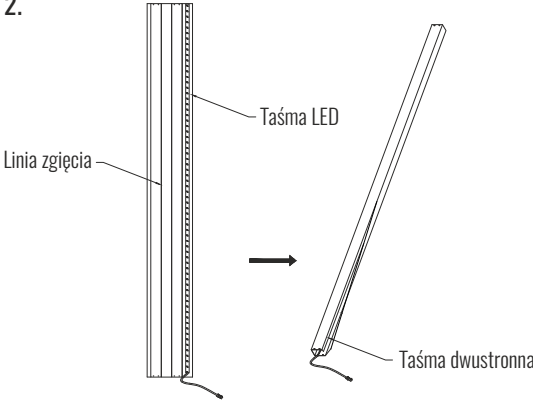


2. Rozwin klosz, i zegnij wzdłuż linii zgięcia. Oderwij zabezpieczenie z taśmy dwustronnej i sklej ze sobą obie strony klosza przy krawędziach.

3.

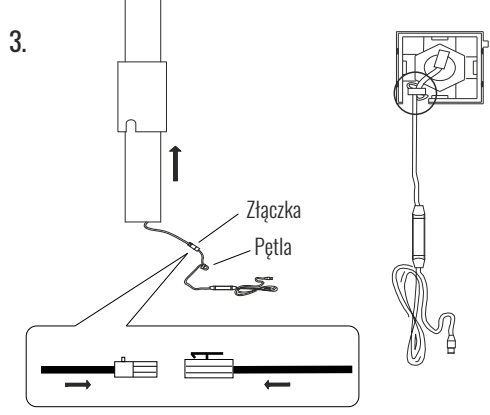


3. Włóż klosz do dolnej obudowy. Połącz złączki i umieść pętlę w obudowie tak jak na rysunku powyżej.

4.

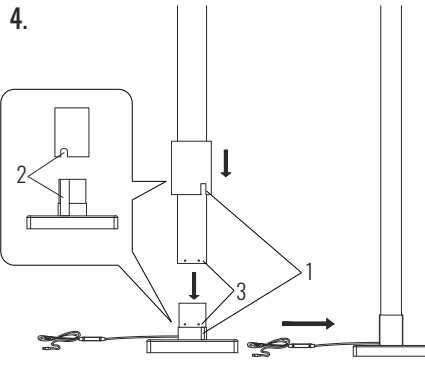


4. Ustaw obudowę odpowiednią stroną i wcisnij aż kliknie.

5.

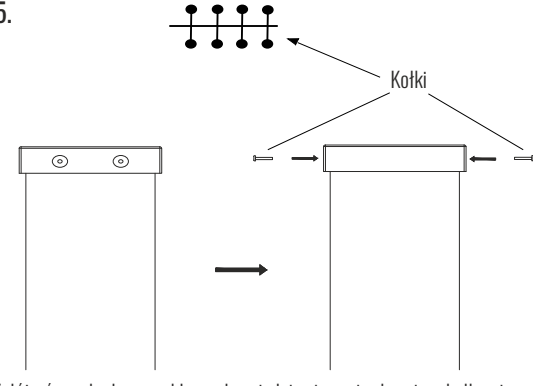


5. Załóż górną obudowę na klosz odpowiednią stroną i zabezpiecz kołkami.

6.

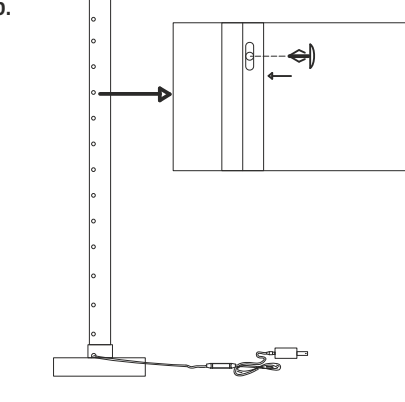

6. Zabezpiecz klosz dodatkowo kołkami, aby zapobiec rozklejaniu. Wcisnij kołki tak jak na rysunku powyżej.

7.

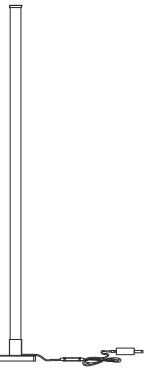


7. Podłącz kabel do portu USB w komputerze, do powerbanka lub do adaptera (DC 5V, min. 1.3A).


Sterownik



STERUJ ZA POMOCĄ PILOTA

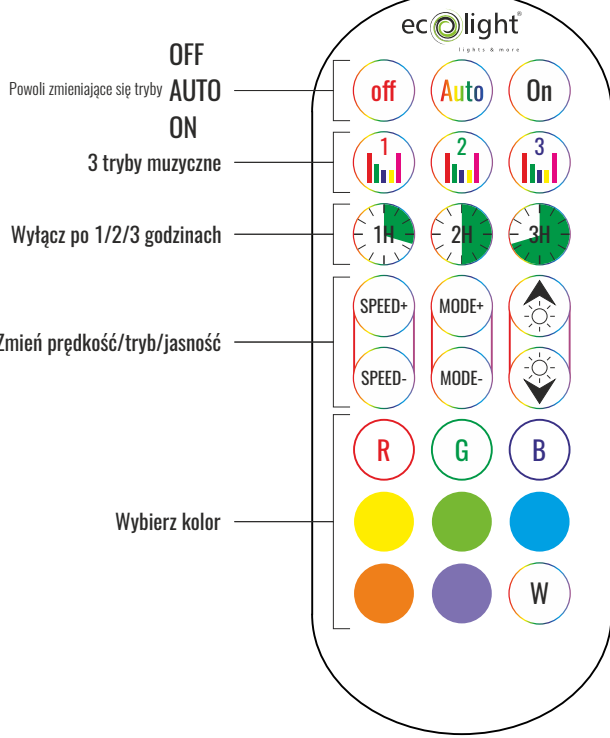

LUB PRZEZ APLIKACJĘ TUYA

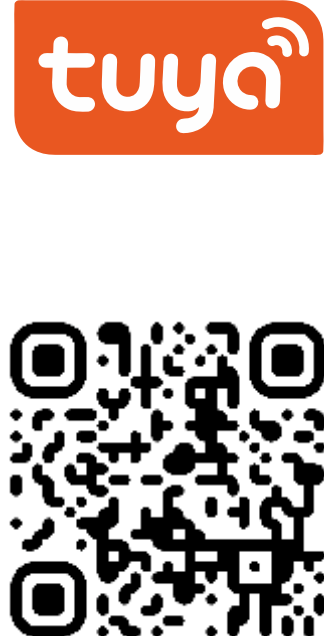

POBIERZ APLIKACJĘ

UWAGA!

1. Nie używaj produktu w wilgotnym środowisku.
2. Nie podłączaj bezpośrednio do gniazdka 230V. Używaj adaptera **5V**, min. **1.3A**, powerbanka lub portu USB w komputerze.
3. Nie modyfikuj produktu.

ECO LIGHT Sp. z o. o.
Działkowa 2a, 62-872 Borek
ecolight.pl



1

2

3

 
4

5

6


7

8




USER GUIDE
RGB FLOOR LAMP

1.

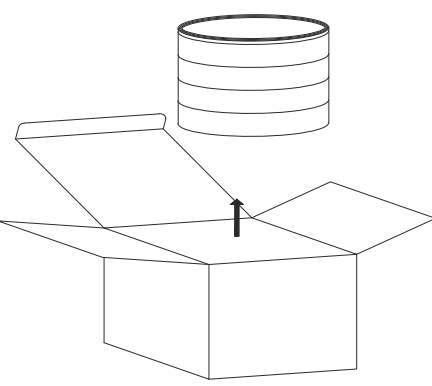


1. Take out the lampshade from the box.

2.

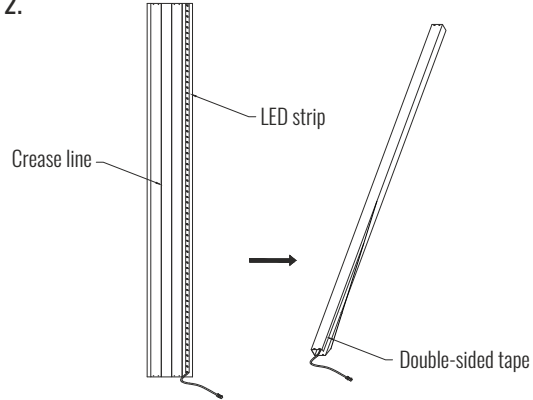


2. Unfold the lampshade, fold it into a rectangle along the crease lines. Tear off the protective film from double-sided tape, align it with the edge, then stick both sides together and gently smooth them out by hand.

3.

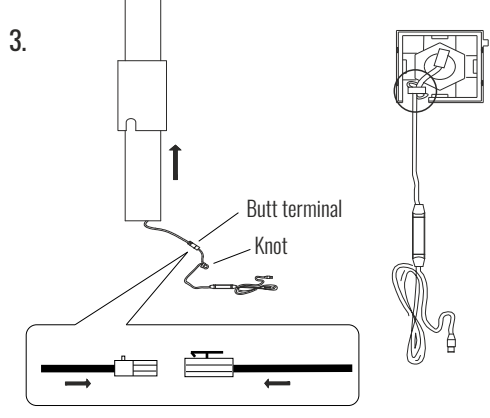


3. Put the lampshade into the bottom shell. Connect the terminals and put the knot inside the shell, as shown in the picture.

4.

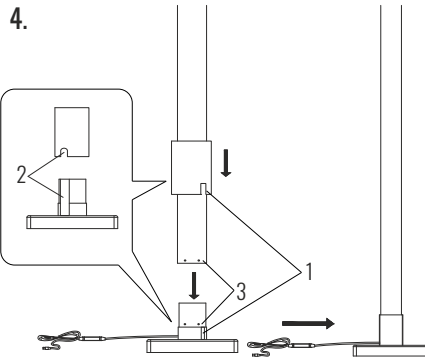


4. Align the bottom shell with the base and push it in until it clicks.

5.

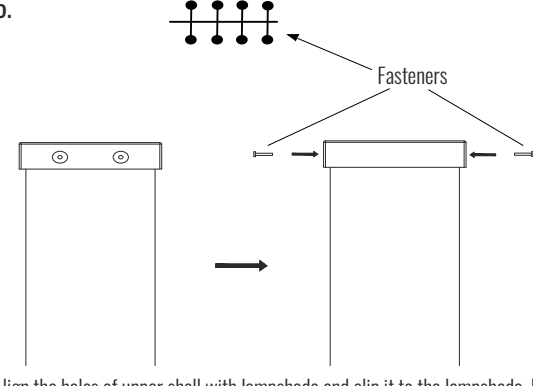


5. Align the holes of upper shell with lampshade and clip it to the lampshade. Insert the fasteners to fix the shell and lampshade

6.

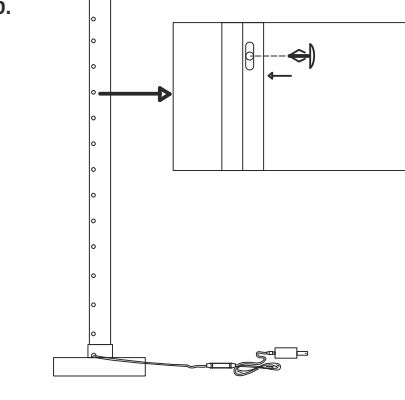

6. The position of the lampshade is fixed with plastic clips to prevent detachment; insert the plastic clip into the hole at the bonding position as shown in the picture above.

 7.




7. Connect cable to USB port in your computer, to powerbank or power adapter (DC 5V, min 1.3A).


Controller



CONTROL WITH REMOTE

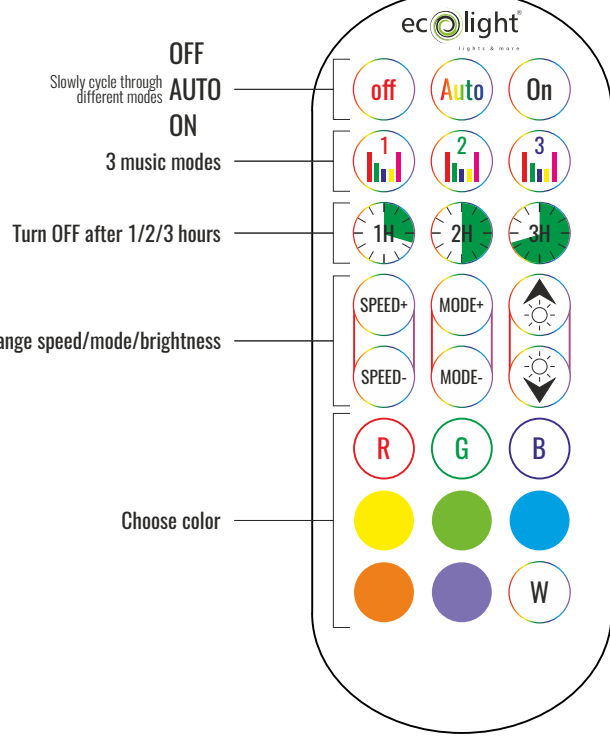

OR VIA TUYA APP

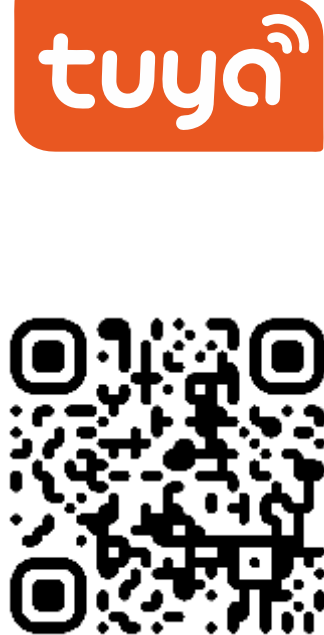

DOWNLOAD APP

WARNING!

1. Use product in dry environment.
2. DO NOT plug the product directly into 230V socket. Use **5V**, min **1.3A** power adapter or powerbank or PC USB port.
3. Do not modify the product.

ECO LIGHT Sp. z o. o.
Działkowa 2a, 62-872 Borek
ecolight.pl



9

10

11

12

13

14

15

16