



MAINTENANCE Nordic Flooring Marine

DAILY MAINTENANCE

Daily sweeping and dust mopping: sweep the floor with a non-treated dust mop and pick up debris with dustpan and brush or use a vacuum cleaner.

MANUAL MAINTENANCE

Clean the floor with a neutral detergent diluted in accordance with manufacturer's instructions. Rinse the mop frequently and change the water as necessary. If the floor is heavily soiled, repeat the process. Allow the entire floor area to dry. The other option is machine maintenance. Use a neutral cleaning solution in a suitable spray container. Apply a fine mist of liquid on to an area of approximately 2 m² at a time before using the rotary buffing machine (approx. 450rpm and fitted with a blue 3M nylon scrubbing pad). Spray Buffing may also be used to maintain surface appearance. Ensure all equipment is cleaned thoroughly after use and stored safely.

STAIN REMOVAL

Spills of water, grease, food, chemicals and other foreign matter may cause the floor to become slippery. Wipe up all spills immediately with an absorbent cloth, then wash thoroughly with a properly diluted neutral detergent until the spill area is completely clean. Rinse and allow to dry thoroughly.

PERIODIC MAINTENANCE

Once a year the floor should be stripped/scrubbed thoroughly to remove in-grained dirt and floor dressing applied.

Please contact us or visit our homepage for further information: www.nordicflooringmarine.se