Infantia NB1

Infant Incubator

Features quiet windows that minimize disturbance during nursing

FEATURES

- > Servo-controlled by micro-computer
- > Quiet windows reduce disturbance to the baby during nursing
- > Adjustable inclination of the bassinet
- Touch switch panel with LED digital display
- Set temperature, real temperature and auxiliary temperature are displayed separately

STANDARD CONFIGURATION

- > Hood
- > Infant bed
- > Temperature controller
- > Skin temperature sensor
- > Aluminum water tank
- > I.V. pole and cabinet
- > Air filter
- Guardrail

- Multiple self-checking alarms with audible and visible
- Heating power rate indicates 0 - 100%
- > RS 232 connector
- > Data output

B * 10.700.*

S -10.00+

Gross Weight: Main body - 145.5 lbs (66 kg); Cabinet - 149.9 lbs (68 kg)

SPECIFICATIONS

111

Dimensions: - Main body -42.7" x 25.2" x 35.4" (1,085 × 640 × 900 mm); - Cabinet -44.3" x 26.2" x 28.1" (1,125 × 665 × 715 mm)

4

Power Supply: AC110 - 240V/50-60Hz

Power Input: 600VA

Air Temperature Control Range: 25°C - 37°C

Skin Temperature Control Range: 34°C - 37°C

Sensor Precision: ≤ 0.3°C

Changing of Temperature: $\leq 0.5^{\circ}C$

Uniformity of Temperature: $\leq 0.8^{\circ}C$

Temperature Rising Time: ≤ 30min

306-2021-04-28

Ē



ALARMING

Audible and Visible Alarm: Indicates the real temperature and cuts off the power supply of heater (except for the low deviation alarm), meanwhile, the skin temperature indication window can indicate the alarm code. For Alarm 1 - 6, the relevant light is on. For Alarm 7, all alarming lights are on. All alarm sounds can be canceled except for the power failure alarm and the system alarm.

Over-Temp Alarm: Sounds when the air temperature control is \leq 38° C, and the skin temperature control is \leq 40° C

Upper Deviation Alarm: Sounds when the air temperature control is $+3.0^{\circ}$ C, and the skin temperature control is $+1.0^{\circ}$ C

Lower Deviation Alarm: Sounds when the air temperature control is -3.0° C, and the skin temperature control is -1.0° C

Sensor Alarm: Sounds when the sensor is disconnected, open circuit, short circuit or put on the wrong place

Fan Alarm: Sounds when the fan is blocked, speed ≤1000rpm or stop working

Power Failure Alarm: Sounds when there is no power or the power cord is disconnected

System Alarm: Sounds when there is an E2ROM malfunction inside of temperature controller

SPECIFICATIONS

(ind

Noise Level: ≤55dB (A)

Inclination of Bassinet: 0° - 5°

