

INSTALLATION MANUAL

89143F

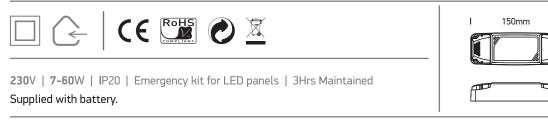

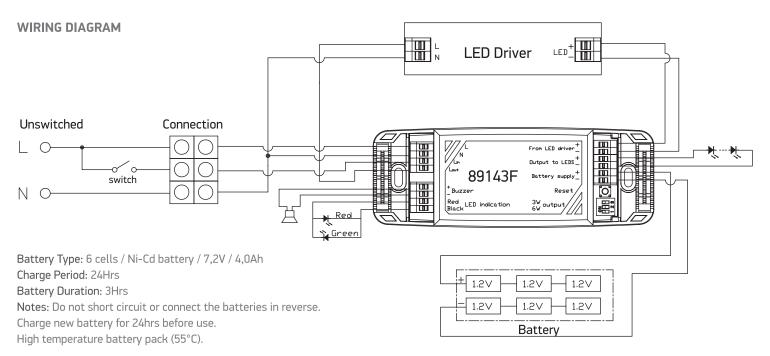



Bi-Colour LED Diagnostics

Status	Buzzer beep ② LED flash mode	Visual indication	Buzzer		
Battery failure	Red LED slowly flashes once in 3 seconds; buzzer beeps 10 seconds every hour.	• 0 0	u() (
LED lamp failure	Red LED rapidly flashes twice in 3 seconds buzzer beeps 10 seconds every hour.	• • 0	00(
Emergency LED driver failure	Red LED rapidly flashes 3 times in 3 seconds buzzer beeps 10 seconds every hour.	0 0 0	00(
Healthy condition	Green LED is constantly on		×		
Battery charge	Green LED slowly flashes once every second	0000	×		
Battery discharge	/	/	×		
Monthly test	Green LED slowly flashes once in 3 seconds	• 0 0	×		
6 month test	Green LED flashes twice in 3 seconds	• • 0	×		
12 month test	Green LED quickly flashes 3 times in 3 seconds	0 0 0	×		

Emergency mode light output compared with normal operation:

3W Luminaire Power	5W	7W	10W	12W	15W	20W	25W	30W	35W	40W	45W	50W	•
	60%	43%	30%	25%	20%	15%	12%	10%	9%	8%	7%	6%	3W (
6W Luminaire Power	7W	10W	12W	15W	20W	25W	30W	35W	40W	45W	50W	60W	☐ 6W (
	85%	60%	50%	40%	30%	24%	20%	18%	16%	14%	12%	10%	Ó

The driver automatically adjust the output LED current to provide the best optimum match between the battery and the load, providing maximum illumination whilst ensuring full battery duration.

Warnings:

- 1. Make sure that the product is installed properly before connecting to electricity.
- 2. Do not cover the fitting.
- 3. Maintenance and installation should only be carried out by a professional electrician.

