

# TR 135

|                  |                    |
|------------------|--------------------|
| <b>TIRE SIZE</b> | <b>12.4 - 38</b>   |
| <b>UM</b>        | IS STANDARD        |
| <b>MACHINERY</b> | TRACTOR / ANHÄNGER |
| <b>VERSION</b>   | STANDARD           |
| <b>TIRE TYPE</b> | TL                 |
| <b>LI/SS</b>     | 138 A6             |



## ABMESSUNGEN IS STANDARD

|                 |      |                |                 |
|-----------------|------|----------------|-----------------|
| <b>SW (MM)</b>  | 325  | <b>RIM REC</b> | W 11            |
| <b>OD (MM)</b>  | 1525 | <b>RIM ALT</b> | W 9 ; W 10      |
| <b>SLR (MM)</b> | 718  | <b>ECE</b>     | E11-106R-004454 |
| <b>RC (MM)</b>  | 4670 | <b>PR</b>      | 14              |

## LOAD CAPACITY (KG/TIRE)

|                   |             |
|-------------------|-------------|
| <b>KM/H / BAR</b> | <b>3.70</b> |
| 30                | 2360        |

Rolling Circumference & SLR values are at rated Load and inflation pressure. These values may vary at different Load and pressure condition.