 


# iHome™

*Model HiH66*  
**The Hotel System**  
**For Your iPod®**

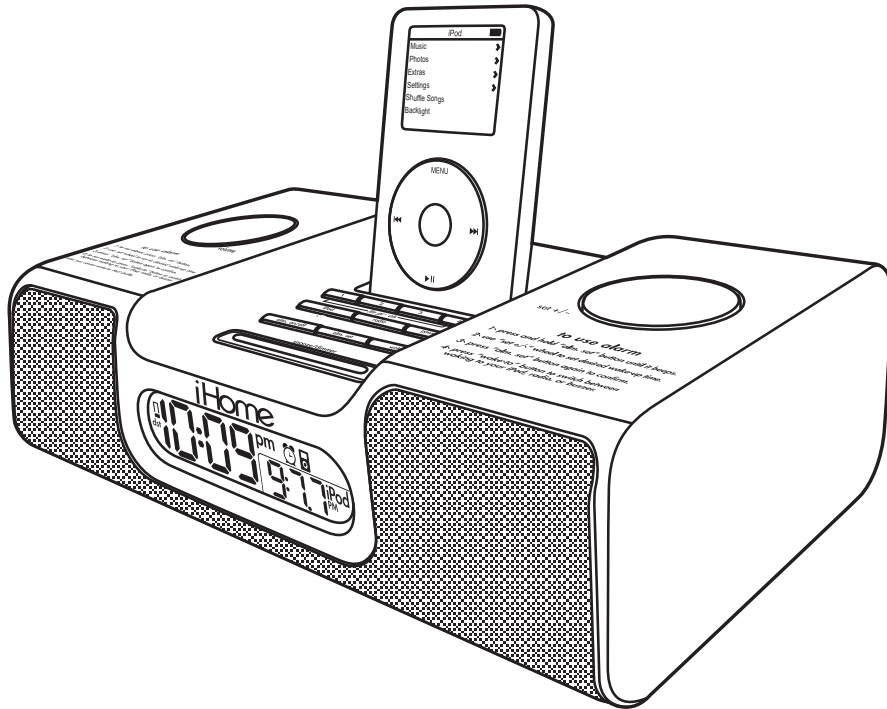

**NOTE: THIS UNIT WILL NOT CONTROL OR CHARGE 3G iPod**

**Questions? Visit [www.hoteltech.com](http://www.hoteltech.com)**

# Table of Contents

<b>Quick Set Up</b> .....	1
<b>Controls and Indicators / HiH66 Display</b> .....	2
<b>Using the HiH66</b> .....	3-4
<b>Replacing HiH66 Backup Batteries</b> .....	4
Install/Replace Backup Battery	
Batteries information	
<b>A Consumer Guide to Product Safety</b> .....	5
<b>Troubleshooting</b> .....	6-7

## A Consumer Guide to Product Safety

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

This equipment complies with the limits for a Class B digital device as specified in Part 15 of FCC Rules. These limits provide reasonable protection against radio and TV interference in a residential area.

However, your equipment might cause TV or radio interference even when it is operating properly. To eliminate interference you can try one or more of the following corrective measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the radio or TV.
- Use outlets on different electrical circuits for the equipment and the radio or TV.

Consult your dealer or an experienced radio/television technician if the problem still exists.

 
Modifying or tampering with your system's internal components can cause a malfunction and might invalidate the system's warranty and void your FCC authorization to operate it.

### Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzine, thinner or similar materials can damage the surface of the unit.


# quick set up

## 1:power

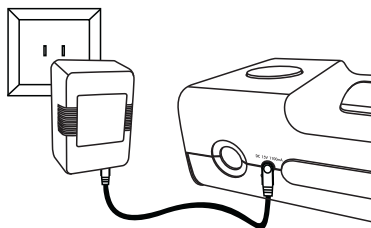

Attach AC adaptor cable to jack on back of the HiH66 and plug the other end into a wall socket.

## 2:rear cover

 


Unit is preset to Eastern time. If you need to change the time, turn thumbscrew to remove the Rear Cover to access Time Zone, Clock Adjust and DST (Daylight Savings Time) controls. Replace Rear Cover after adjusting settings.

## 3:time



 
- Press & hold the Time Zone button on back until display flashes
- Turn the Set Wheel to select your time zone
- Press the Time Zone button again
- Leave the DST switch on back of unit on Auto for automatic daylight savings time changes

## 4:radio presets

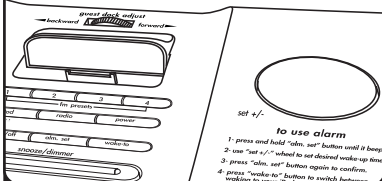

Press the Radio button to select FM radio mode. Turn the Set Wheel to tune in a station. Press and hold a pre-set button (1, 2, 3 or 4) to save the station as a preset.


## 5:security

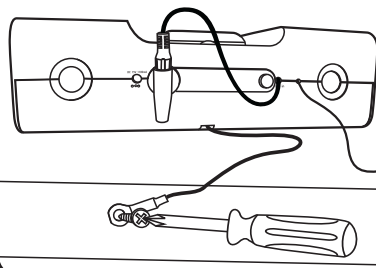 


Attach security tether to bottom of the HiH66 and secure the other end to a wall or other permanent surface.

**NOTE:** When not in use, attached line-in cord plug must be stored in plug holder on rear of unit to avoid improper operation

# Controls and Indicators

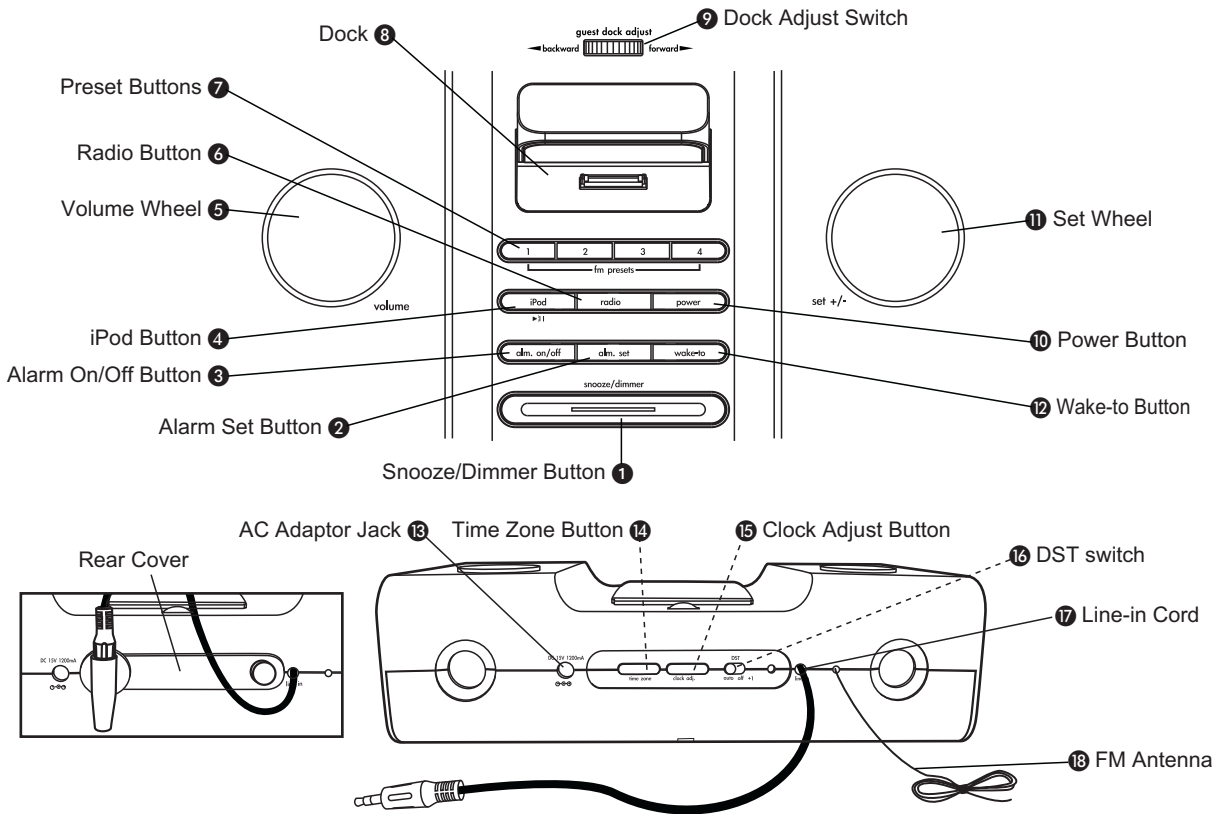 

# iH66 Display

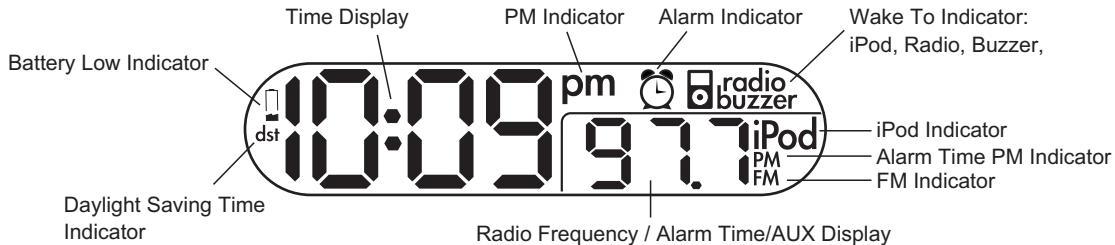 

## Connect HiH66 to Power Source

- a) Plug the AC adaptor cable into the ⑬ AC Adaptor Jack and the other end into a standard 120v wall socket. **The HiH66 does not operate on batteries.**

## Setting the Clock

- a) Press and hold the ⑭ Time Zone Button until the display flashes.
- b) Turn the Set Wheel to select your time zone.
- c) Press the Time Zone Button again. The clock will display the current time in your time zone.
- d) **DST (Daylight Saving Time):** This unit ships with the ⑮ DST Switch set to AUTO and will automatically adjust for daylight savings time in that position. In a non-DST zone, set the switch to OFF. To set DST manually, set to +1 to advance the time 1 hour. Slide to OFF to turn the clock back 1 hour.

### To Set Clock Manually

- a) Press and hold the ⑮ Clock Adjust Button. The clock display will flash.
- b) Turn the ① Set Wheel until the current time is displayed (a PM indicator appears when time is set to PM; there is no AM indicator).
- c) Press the Clock Adjust Button to accept the time. The year display will flash.
- d) Turn the Set Wheel to adjust the year and press the Clock Adjust Button. The date display will flash.
- e) Turn the Set Wheel to adjust the date and press the Clock Adjust Button. Two beeps will indicate clock setting is complete.

## Using the Alarm

### Setting the Alarms

- a) Press and hold the ② Alarm Set Button until the alarm time flashes and the unit beeps.
- b) Turn the Set Wheel to set the alarm time (a PM indicator appears when time is set to PM; there is no AM indicator).
- c) Press the Alarm Set Button again. Alarm is now armed, indicated by the alarm icon and alarm source icon.
- d) Press the Wake To Button at any time to select iPod, radio or buzzer as your alarm source. You cannot wake to shuffle.

### Arming and Disarming Alarm (Turn Alarm Function ON and OFF)

- a) Press the ③ Alarm On/Off Button to arm or disarm alarm functions. When armed, the related alarm icon appears in display.

### One Day Alarm

- a) Once the alarm sounds it will be disarmed and must be set again to come on the following day. This prevents waking to unwanted alarms.

### Snooze

- a) Press the ① Snooze/Dimmer Button after the alarm sounds. The alarm will be silenced and come on again 9 minutes later. Snooze can be pressed several times during the 1 hour alarm cycle.

### Sure Alarm

The HiH66 has a sure alarm feature so the buzzer alarm will still sound in the event of power failure, if backup batteries are installed.

## iPod

### Playing and charging your iPod

- a) Set Dock Adjust Switch to match your iPod, then gently dock iPod. iPod should be firmly in place in the dock. When docked, iPod will charge until fully charged. **Unit will not overcharge iPod. Note: The HiH66 will not control or charge 3G iPod models.**
- b) Press the ④ iPod Button to play iPod, and again to pause.
- c) Turn ⑤ Volume Wheel to adjust HiH66 volume up or down
- d) Press ⑩ Power Button to turn HiH66 and iPod off.

**Note: If you dock an iPod with a drained battery, it may take up to 6 minutes of charging before the iPod will respond.**

## Using the HiH66

### Radio

#### Setting up Antenna

- a) Extend the FM Antenna (on back of unit) fully for best reception. Do not strip, alter or attach to other antennas.

#### Tuning and Playing the Radio

- a) Press the **6** Radio Button to select FM radio.
- b) Turn the Set Wheel to tune radio to a desired station.
- c) To memorize the current station as a preset, press and hold **7** Preset Button 1,2,3 or 4. Repeat steps a,b,and c to preset up to 4 FM stations. To listen to a preset station at any time, simply press the desired preset button.
- d) Turn the **5** Volume Wheel to adjust HiH66 volume up or down.
- e) Press **10** Power Button to turn HiH66 off.

### Using the Line-in Cord

- a) An audio line-in cord comes with the HiH66. Use it to play nondocking iPods or other audio devices through the HiH66. Make sure there is no iPod docked in the HiH66 when using the line-in cord. Press the iPod Button until AUX appears on the display. Store the audio line-in cord properly in provided plug holder when not in use to avoid static charge which can interfere with proper operation.

### Using Dimmer

- a) Press the **1** Snooze/Dimmer Button during normal operation to adjust brightness of LCD display.

## Replacing HiH66 Backup Batteries

 
### Install/Replace Backup Battery

The HiH66 uses a backup battery system to provide continuous alarm operation and clock settings in the event of a power failure. If the Battery Low Icon located on the left of the display is flashing, it is time to replace the backup batteries. Please make sure the AC adaptor is connected, otherwise all settings may be lost during battery replacement.

Open the battery compartment cover located on the bottom of the unit. Insert 2 “AA” batteries as indicated. **We recommend the use of alkaline batteries for longer life.**

#### Batteries information:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon -zinc) or rechargeable (nickel-cadmium) batteries.

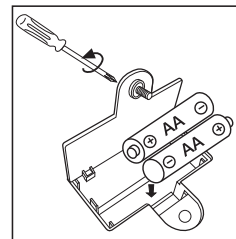

# IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. **Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. **Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
3. **Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Power-Cable Protection** – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
6. **Cleaning** – The unit should be cleaned only as recommended. See the Maintenance section of this manual for cleaning instructions.
7. **Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
8. **Attachments** – Do not use attachments not recommended by the product manufacturer.
9. **Lightning and Power Surge Protection** – Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
10. **Overloading** – Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. **Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
  - A. the power supply cable or plug has been damaged.
  - B. objects have fallen into or liquid has been spilled into the enclosure.
  - C. the unit has been exposed to rain.
  - D. the unit has been dropped or the enclosure damaged.
  - E. the unit exhibits a marked change in performance or does not operate normally.
12. **Antenna** – Do not connect an external antenna to the unit (other than that provided).
13. **Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
14. **Servicing** – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

Questions? Visit [www.hoteltech.com](http://www.hoteltech.com)

## Troubleshooting

Symptom	Possible Problem	Solution
HiH66 does not turn on	AC adaptor isn't plugged into a working wall socket or not plugged into the power supply jack on back of the unit	Plug the AC adaptor into a working wall socket and plug the connector into the supply jack on the unit
HiH66 doesn't respond	HiH66 requires a reset	If unit is plugged in and doesn't respond, try resetting the unit by following these steps: a) remove iPod from dock b) unplug unit from power source c) remove back up batteries d) wait 1 hour, then resume use
iPod does not dock properly	iPod didn't install properly	Remove your iPod from the dock and check for obstruction on the connectors in the dock and on your iPod. Then reseal it in the dock.
Battery Low icon always flashing	Batteries are weak	Replace with new batteries
	Batteries were not installed properly	Check to make sure the polarity ( + and – ends) matches the diagram in the battery compartment
iPod does not respond to the unit/iPod is playing but no sound comes out	iPod is not installed properly	Remove your iPod from the dock and check for obstruction on the connectors in the dock and on your iPod. Then reseal it in the dock.
	Your iPod software is too old	Upgrade software on your iPod. For details visit <a href="http://www.apple.com/ipod/download">http://www.apple.com/ipod/download</a>
	iPod is locked up/plays but no sound comes out	Check the volume setting. Make sure your iPod is working properly before docking into the unit. Please refer to your iPod manual for details. See above for software upgrade information. You may need to reset your iPod. To do so: 1. Toggle the Hold switch to hold position, then off. 2. Press and hold the Menu and center Select buttons at the same time until Apple logo appears. You may need to repeat this step.
	Using 1 <sup>st</sup> or 2 <sup>nd</sup> generation iPod, iPod Shuffle or other devices.	HiH66 cannot control those iPods or other devices.
HiH66/iPod performance is erratic	The HiH66 is reacting to external interference	Move unit away from potential sources of external interference such as computers, modems, wireless devices (routers) or fluorescent light
No sound from HiH66	Volume is set too low on HiH66	Make sure volume is turned up
iPod didn't charge up	iPod is not installed properly	Remove your iPod from the dock and check for obstruction on the connectors in the dock and on your iPod. Then reseal it in the dock.
	iPod is locked up/ frozen	Please make sure your iPod is working properly before docking into the unit. Please refer to your iPod manual for details.
	iPod battery has problem	



## Troubleshooting

Symptom	Possible Problem	Solution
Sound is distorted	Volume level is set too high	Decrease the volume
	Sound source is distorted	If the iPod original sound source (MP3) is old or of poor quality, distortion and noise are easily noticed with high-power speakers. Try a different audio source such as a music CD.
		If you are using an external sound source like older generation of iPod or iPod Shuffle, try reducing the output volume on the device itself. Also try turning bass boost OFF.
Unit/adaptor gets warm after extended play at high volume	This is normal	Turn unit off for awhile or lower volume
Can't hear headphones/speakers attached to line out jack	Line out jack is not meant for headphones. Speakers need a power source	The signal from the line out jack needs amplification. Use powered speakers/monitors or other amplified audio device.
Clock reset/changed times	Electrostatic charge from line-in cord	Store the end of the line-in cord properly away in provided plug holder on back of unit when not in use. Adjust clock to proper time.

**NOTE: When not in use, attached line-in cord plug must be stored in plug holder on rear of unit to avoid improper operation.**

