

3D Printers


Guide to Uploading the Firmware

Updating the firmware


Updating the printer to the latest version of the firmware is recommended so that the processes are optimised and new functionalities are added.

You can update it using various programs. To update with Cura version 15.04, follow these instructions:


- Download the latest version of the firmware from the official BQ website (bq.com/downloads). Select *Printers* and choose the model. A .hex file will be downloaded.
- Connect the printer to a computer with the USB cable.
- Under the main menu, go to *Machine > Machine Settings*. Under Communication Settings, select your printer's serial port (COM 1, COM 2...) and the speed (115200).

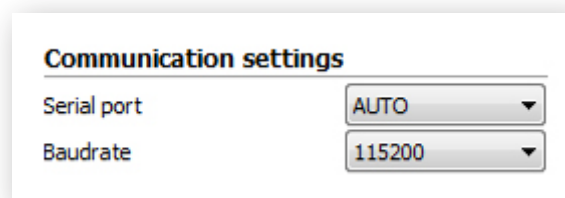


- Under the main menu, go to *Machine > Install custom firmware*.

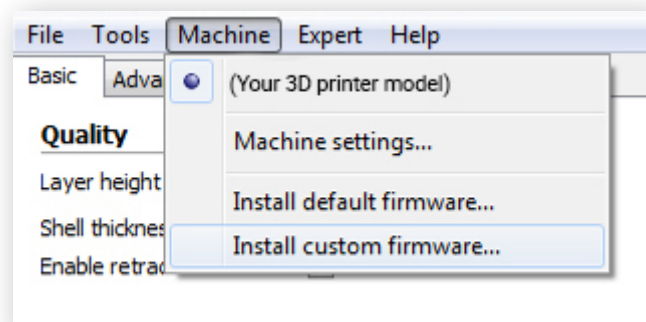

- Select the downloaded .hex file.

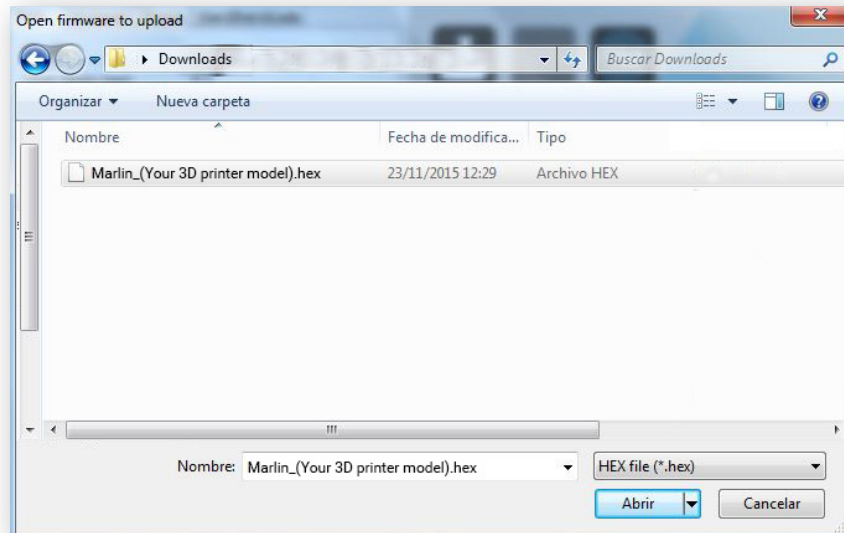

- A pop-up window will appear to inform you that the computer connected to the printer is uploading the new firmware.

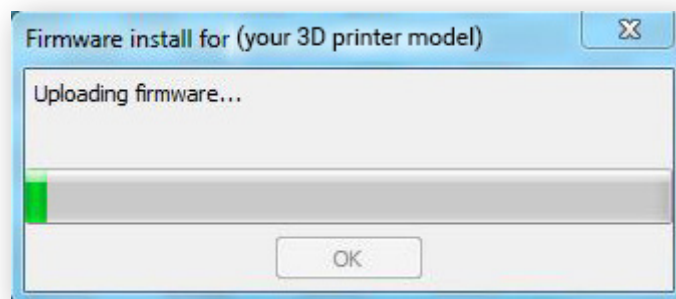

Your printer's firmware is now up to date.

