OCTOPUS

4G LTE SIGNAL METER INSTALLATION TOOL









AGITE BASE STATIONS





EXPORT MEASUREMENTS INTO INCLUDED PC SOFTWARE FOR FURTHER ANALYSIS

 
+1 732-548-3737 www.bvsystems.com sales@bvsystems.com





OCTOPUS

4G LTE SIGNAL METER INSTALLATION TOOL



RECEIVER MODES: Passive only (does not transmit nor require a SIM card)

4G LTE MEASUREMENTS: RSRP, RSRQ, RSSI

GENERAL SPECIFICATIONS:

Antenna: Multi-band SMA 50 ohm
Controls: Color touchscreen
USB Port: Trickle charges unit
Updates firmware

Export measurements to Windows PC for further analysis

Alerts: Audible beeps and vibrations

Warm Up Time: < 1 minute

Runtime: >10 hours on a full charge
Power: Internal Li-Po battery system

12V jack for external power & charging dock

Display 320 x 240 resistive LCD touchscreen

Weight: 1 lbs.

Dimensions: 5.5" H x 3" W x 1.25" L

INCLUDED ACCESSORIES:

Rugged Carrying Case AC Fast Charging Dock

(1) Omni-Directional Multi-Band SMA Antenna

OPTIONAL ACCESSORIES:

DF Antenna: Direction Finding Antenna



New Octopus Pro Kit includes rugged transport case and direction finding antenna for pinpointing distant cellular networks



Octopus can be fast charged via it's own cradle or trickle charged via Mini USB

Handy for wireless installations:



Fire Safety Alert Systems



EV Charging Stations



Ridesharing Services



Vending Machines



Security Alarm Systems



Utility Networks



+1 732-548-3737 www.bvsystems.com sales@bvsystems.com