

Series of two-dimensional scanner Quick Start Guide

Use

Connect USB as shown in the schematic,
When scanner gets power, it will beep and
enter working state.

Using methods of scanning barcodes

Targeting red scanning at the middle of the barcode,
if barcode is small, scans closer and if barcode is big
scans the barcode at a longer distance. To scan barcodes printed on
High-intensity reflective paper or plastic film covered barcodes,
Try to aim at a tilt angle of the barcode (ie not 90 degrees facing the bar code).



Restore factory settings



Output mode as USB PC Keyboard

Mode Configuration

Normal read mode



Turn off light after scan under autosensing read mode



Autosensing read mode



Open light after scan under autosensing read mode



Restore factory settings after highlight



Output mode as RS232 interface

Barcode Configuration

Open all category codes readable



Add CR after output barcodes



Add CR&LF after output barcodes



Clear all suffixes such as CR&LF etc



Disclaimer:

Due to improper installation or damage caused by improper use of the product not covered under warranty, including the following: A buyer or other party unauthorized modification or alteration damage caused; B damage caused by excessive voltage input & output.

Sample barcodes



PDF417



QR



code128
CODE128



DATA MATRIX