

USER MANUAL


40CM (16") PHOTO LIGHT TENT

ACCESSORY LIST


Plate: 6PCS
Aluminum alloy tube: 4 PCS
Light tube: 2 SETS
White Vinyl Background :1 PC
Paper Backdrop: 2 PCS(black and beige)
User manual: 1 PC

Accessories inside inner small box

Top cover on photo light box: 1PC
Screw: 8PCS
Power cable: 1PC
Light tube hook: 4 PCS
Background paper clamp: 4 PCS


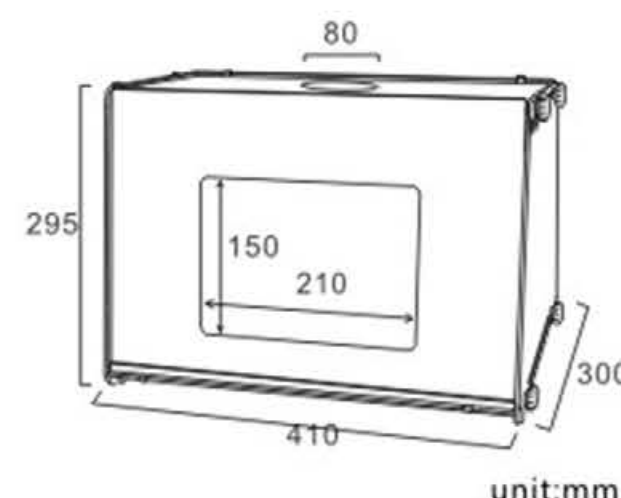


SET UP PHOTO LIGHT BOX

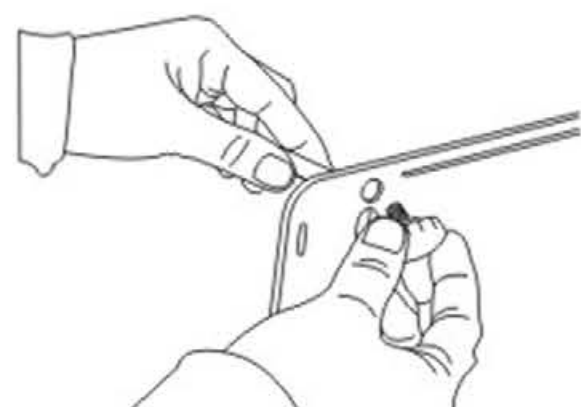


Fix aluminum alloy tube and sideboard together with screw


Fix two sideboards first and don't tighten the screw. After putting on other boards, you tighten the screw.

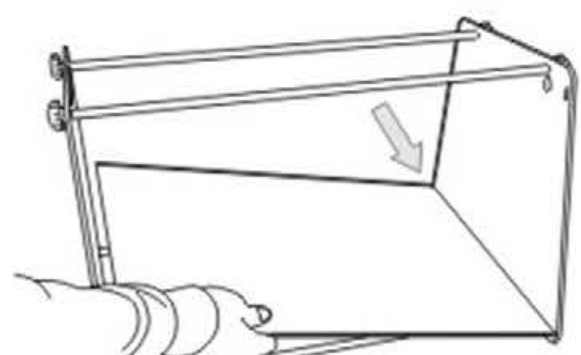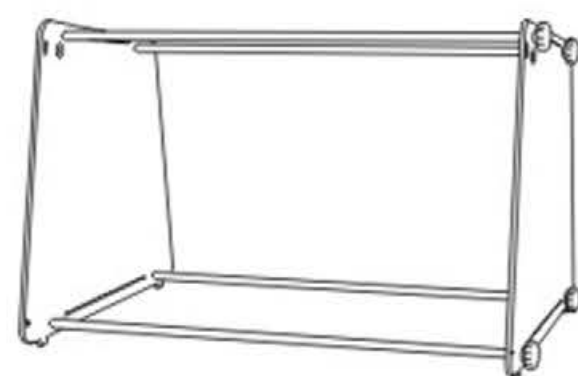

Insert the back board along the fluting one side with cut corner downward.

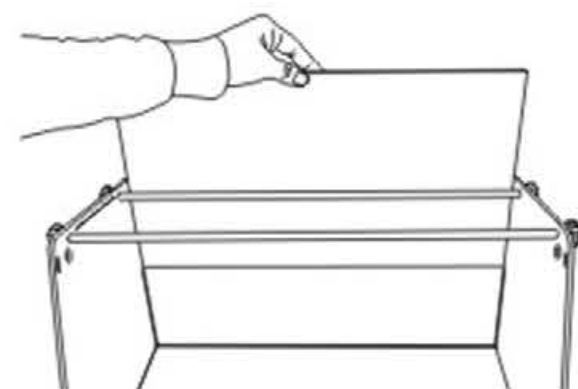


SET UP PHOTO LIGHT BOX

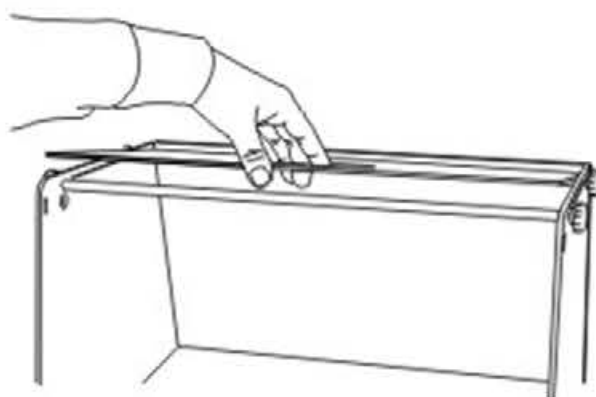


Putting on the top board, of which the center is round hole.

Loosen the screws on both sides of front door a little first, and then put on end of front door inside the fixed hole, and the other end to another fixed hole.

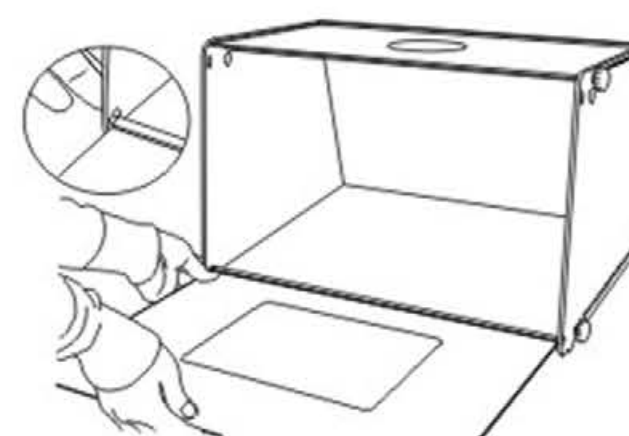


PUT BACKGROUND PAPER


Put the background paper inside the box and make it "L" shape.

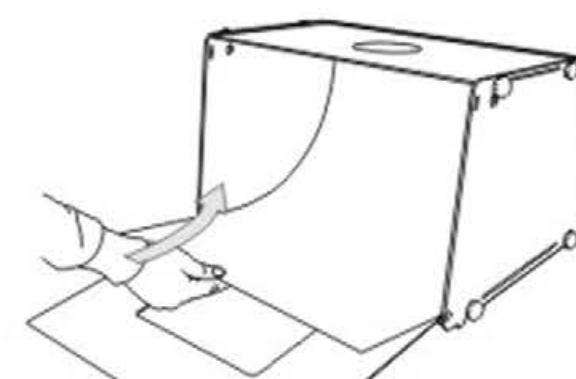


Insert the one side of background paper from the slot of top board and backboard and the other end comes out from the slot of front door and baseboard.

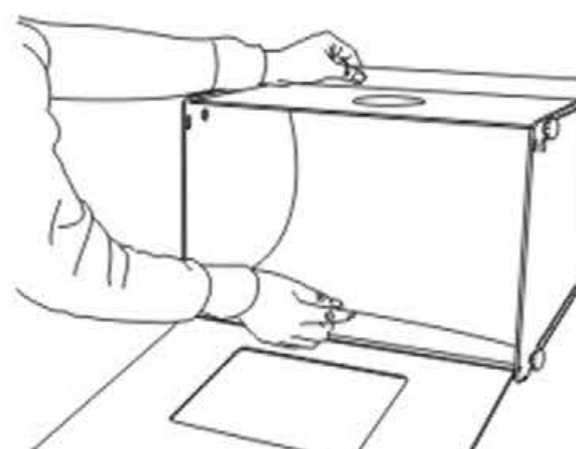

Clip the background paper and board with background clamp, and then tighten all screws of photo light box. Fixing is over.

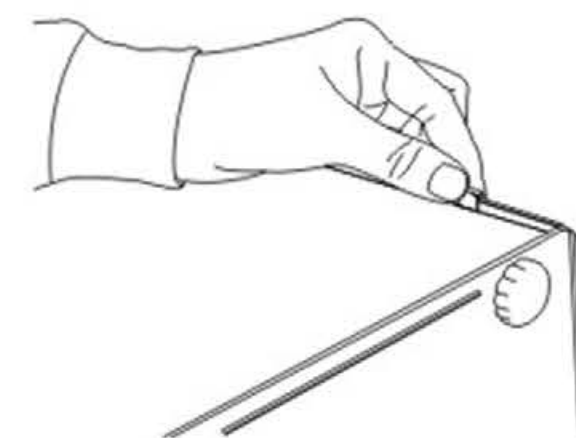


SET UP DOUBLE LIGHT TUBE

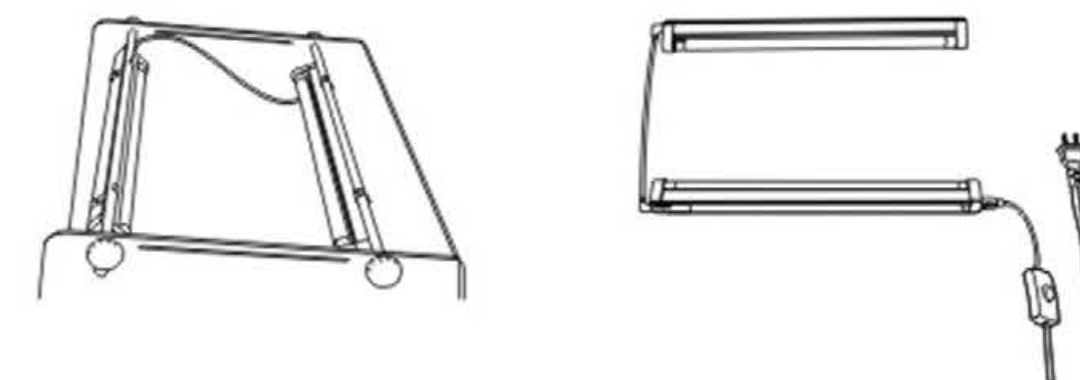



Connection method as shown: use double-ended line to connect the two lamps.

SET UP LIGHT TUBE

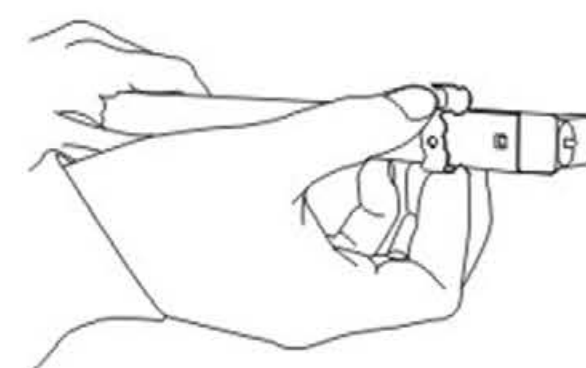

Clip the hook of light tube on the light tube base, one on each side.

Open top board a little, and hang the light tube on aluminum alloy tube.

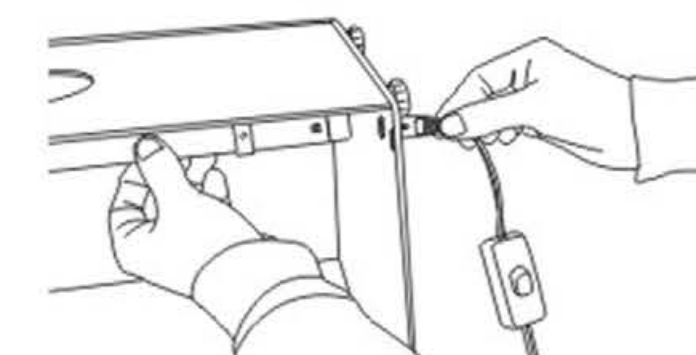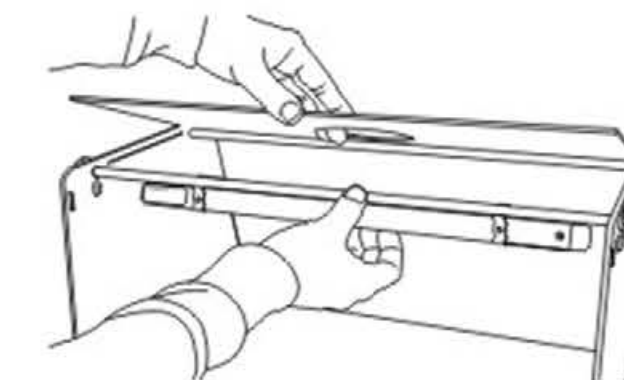

Take out power cable. Insert shape "8" plug from left or right into oval hole on side board. You can loosen the knob a little if the screw prevents you doing.

Light tube should be placed in middle of photo tent. After light tube is fixed, insert the power into right voltage (voltage label is stuck on the light tube). Turn on the switch, shooting can be started.



CHANGE LIGHT TUBE



Turn off power when changing light tube. Swivel light tube 90° upward and take out light tube.