
www.cablematic.com

## **Instruction Sheet**

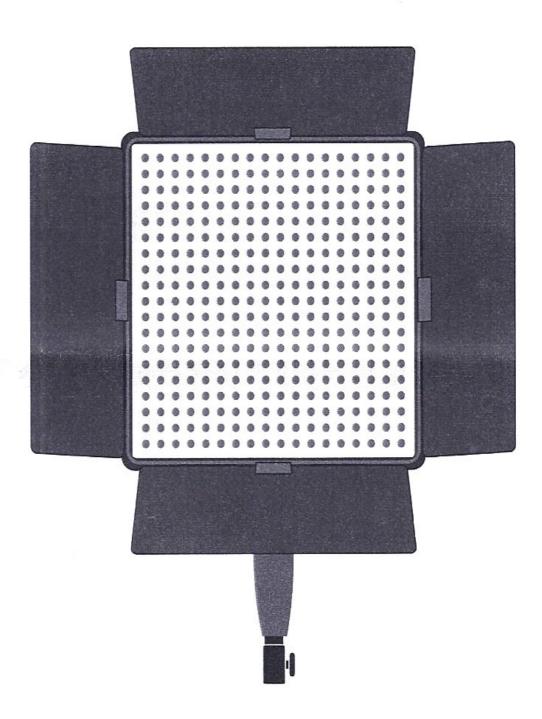

## Extra Parameters:

LED Bulbs Amount: 576 PCS


Total Power: 35W

Color Temperature: 7500K-3200K

AC Power: 100V-240V

Voltage: 7.2V-12V

Filter: 1 SET

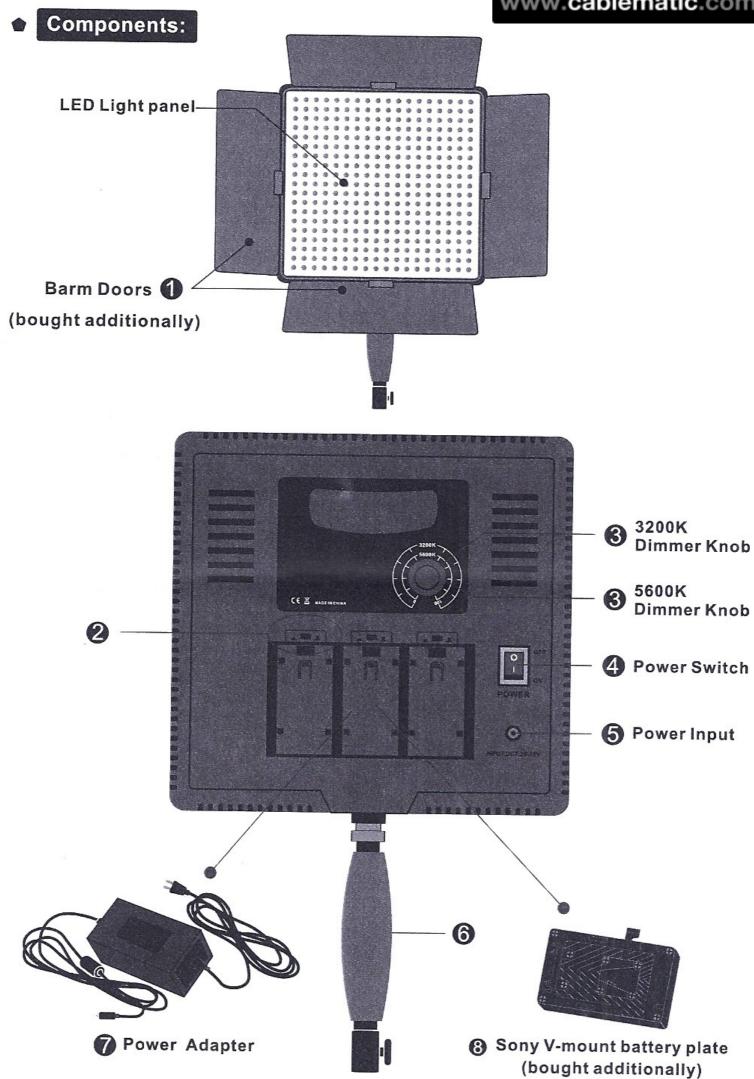


## www.cablematic.com


- 1. Barm Doors: For better adjustment of light direction (bought additionally).
- 2 .Battery locking button: For fix tight the battery, to avoid the battery fail off when shaking.

(Attention: Please press this button when need to remove the battery)

As below picture.

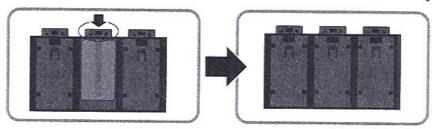

- 3.3200K Dimming Knob:For dimming 3200K LED bulbs from 0% to 100%. 5600K Dimming Knob:For dimming 5600K LED bulbs from 0% to 100%.
- Power Switch: To switch on or off.
- Power Input: For input of AC/DC power.
- 6 .Handle: An extra handle for the light, for portable use.
  You can change the direction of lighting through the handle.
- Power Adapter: For connecting 100V-240V AC power to DC inverting and power stabilizing.
- 3. Optional configuration Sony V-mount battery plate: For installing external Li-ion battery (bought additionally).

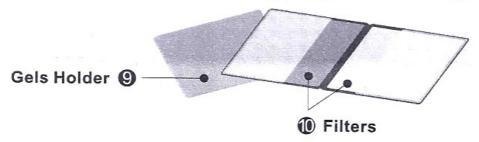

- Gels Holder: For packing the diffuser and filters.
- Diffuser and Filters: Without diffuser and filters, light is of spotlight effect and suitable for shooting at a relatively long distance; with diffuser, light is of soft light effect; with extra soft diffuser, light is of extra soft light effect; With blue filter, color temperature could be adjusted towards

With blue filter, color temperature could be adjusted towards 7500K (as below pictures).



Without filter and diffuser



With diffuser



With extra soft diffuser



With blue filter



- Mount the lighting on a light stand with a suitable direction, unfold the barn doors and then connect with power. If power is standalone Li-ion battery, please check if the standalone Li-ion battery is securely installed onto the battery plate and in normal condition before use.
- 2. Please insert diffuser or filter from upside (As below pictures).

- Switch on and dim according to different shooting conditions.
   Light direction can be adjusted through the two clamping screws that fix the panel with the U-bracket.
- 4. Switch off after use.





## Notice:

- 1. Dampness causes a shot circuit. Please place the product where it is dry and ventilated.
- Please turn off after use, so as to avoid waste of battery power and longtime heat generation, and further shorten the service life of the LED lamps.
- 3. Li-ion battery should be recharged in time.
- Please install Li-ion battery as gently as possible to avoid damage and distortion of the battery plate.

www.cablematic.com