


HDBaseT HDMI Extender over single CAT 5/6/7

User's manual


BUY ON
www.cablematic.com

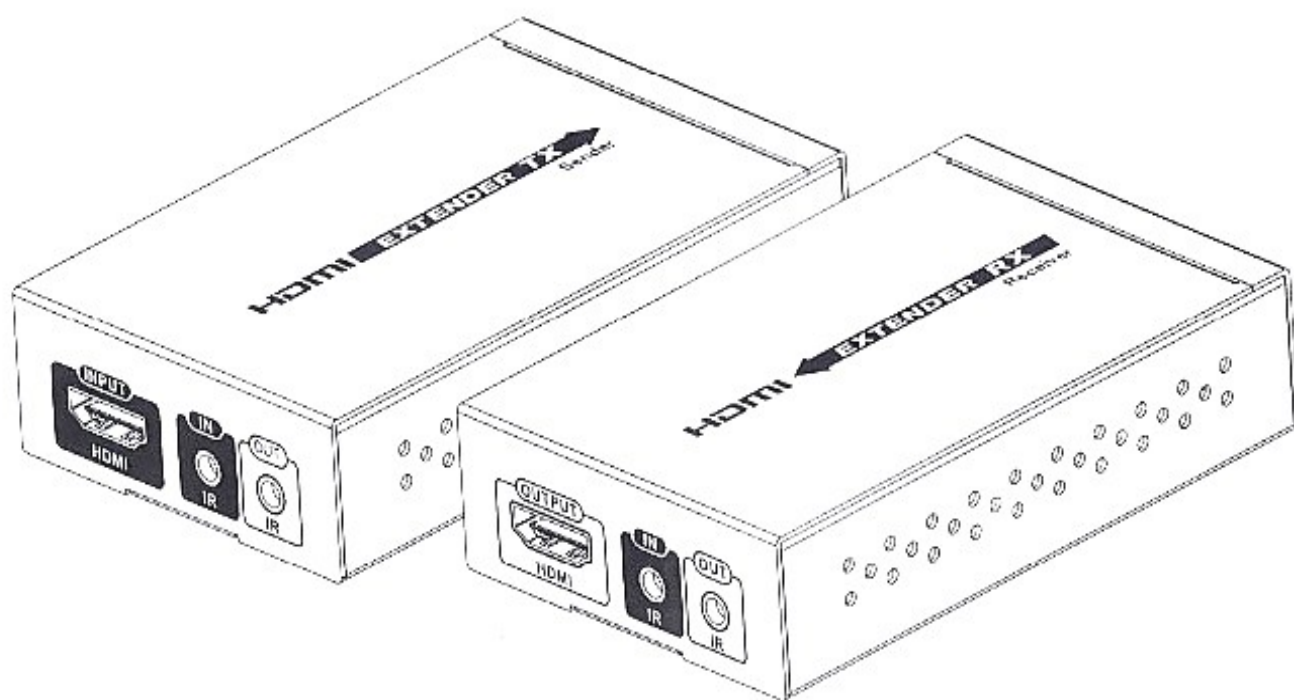

IMPORTANT SAFETY INSTRUCTIONS

1. Do not mix up HDBaseT TX and HDBaseT RX before installation.
2. Do not mix up IR receiver and IR blaster before installation.
3. Use DC5V power supply only. Make sure specification matched if using adapters not supplied by factory.

1. PACKAGE CONTENTS

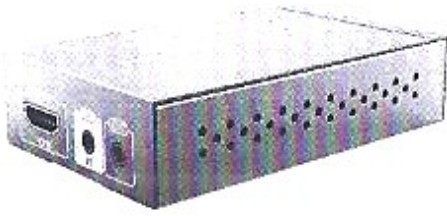

HDBaseT to HDMI receiver
RX*1pcs



HDMI to HDBaseT sender
TX*1pcs



DC5V2A*2pcs



IR blaster extension cable



IR receiver extension cable



User's manual*1pcs

2. INSTALLATION REQUIREMENTS

- 2.1 HDMI source device (computer graphics card, DVD, PS3, HD monitoring equipment etc)
- 2.2 HDMI display device like SDTV, HDTV, projector with HDMI port.
- 2.3 UTP/STP CAT5E/6/6A/7 cable
- 2.4 Follow standard IEEE-568B

BUY ON
www.cablematic.com

3. INTERFACES

3.1 HDMI to HDBaseT





① ② ③



④ ⑤


- ① HDMI IN: HDMI signal input to connect with HDMI source device.
- ② IR IN: IR signal input to connect with IR receiver extension cable
- ③ IR OUT: IR signal output to connect with IR blaster extension cable
- ④ DC5V: Power input
- ⑤ HDBT OUT: HDBaseT signal output

3.2 HDBaseT to HDMI

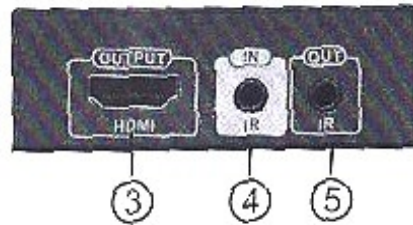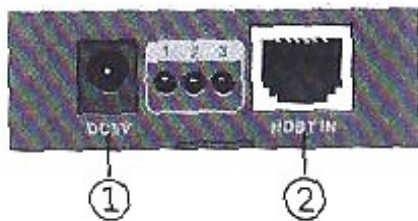

- ① DC5V: Power input
- ② HDBT IN: HDBaseT signal input
- ③ HDMI OUT: HDMI signal output to connect with HDMI display device.
- ④ IR IN: IR signal input to connect with IR receiver extension cable
- ⑤ IR OUT: IR signal output to connect with IR blaster extension cable

4. LED INDICATORS WORKING STATUS

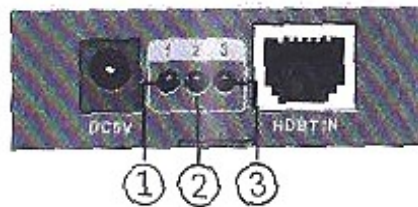

BUY ON
www.cablematic.com

- ① It is flashing with power on.
- ② It is lighting on when TX and RX are well connected.
- ③ It is lighting on when RX's HDMI OUT connects with HDMI display device and has HDMI signal output.


5. INSTALLATION PROCEDURES

5.1 To make CAT6 network cable

Follow the standard of IEEE-568B: 1-Orange/white, 2-Orange
3-Green/white, 4-Blue
5-Blue/white, 6-Green
7-Brown/white, 8-Brown



5.2 Connections

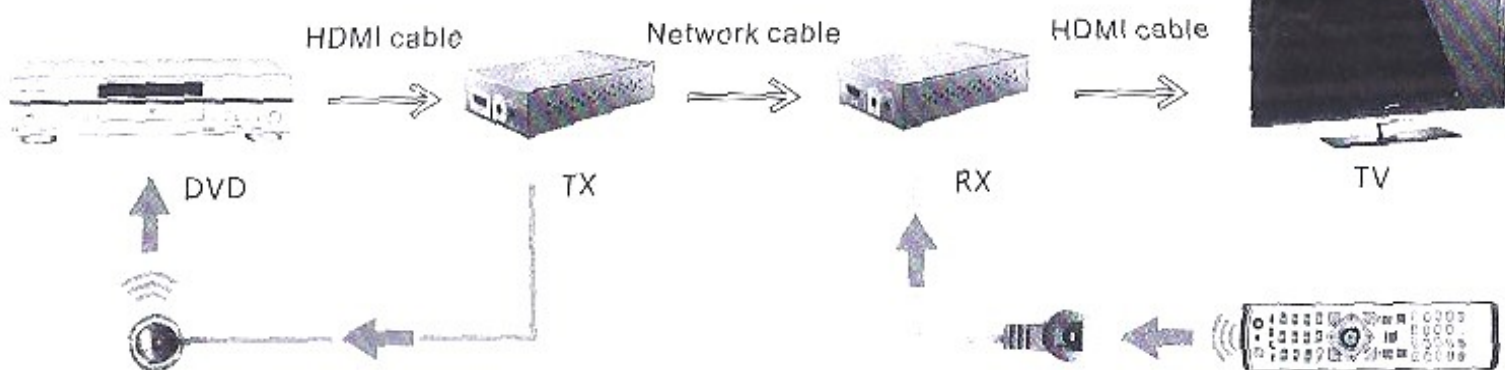

6. RFQ

Q1: No image output?

A1: Check the led indicator status to make sure all connections are good and stable.

Q2: Signal led "3" is flashing but no image output?

A2: Check if the HDMI display device has been switched to the right HDMI input channel.

Q3: Signal led "2" is flashing but "3" light is off?

A3: Check whether the TX' HDMI IN has signal input and make sure RX's HDMI OUT is well connected with HDMI display .

Q4: Output image has flashing points or disturbance points?

A4: Change TX' HDMI signal input cable or use shorter HDMI cable.

BUY ON

www.cablematic.com

7. SPECIFICATION

Items	Specifications	Note		
Power supply	DC5V/2A	2pcs		
HDMI signal	4KX2K, compatible with HDCP; support CEC and 24bits deep color			
resolution Supported	480i, 480P, 576i, 576P, 720P, 1080i, 1080P, 3D, 4Kx2K			
Network cable	CAT5E, CAT6, CAT6A, CAT7			
Transmission length	CAT5E	60m	Up to 1080P @60Hz 36bpp	
	CAT6	35m	1080P@60Hz 48bpp,1080P@60Hz 3D, 4Kx2K 30Hz	
	CAT6A	70m	Up to 1080P@60Hz 36bpp	
	CAT7	40m	1080P@60Hz 48bpp,1080P@60Hz 3D, 4Kx2K 30Hz	
Infrared back	Support 20~60kHz wide frequency devices and Bi-directional IR transmission			
Power consumption	TX : <3.5W ; RX : <6W			
Product dimension	98.5(L)X66.5(W)X23(H)mm			