


Physical Connection

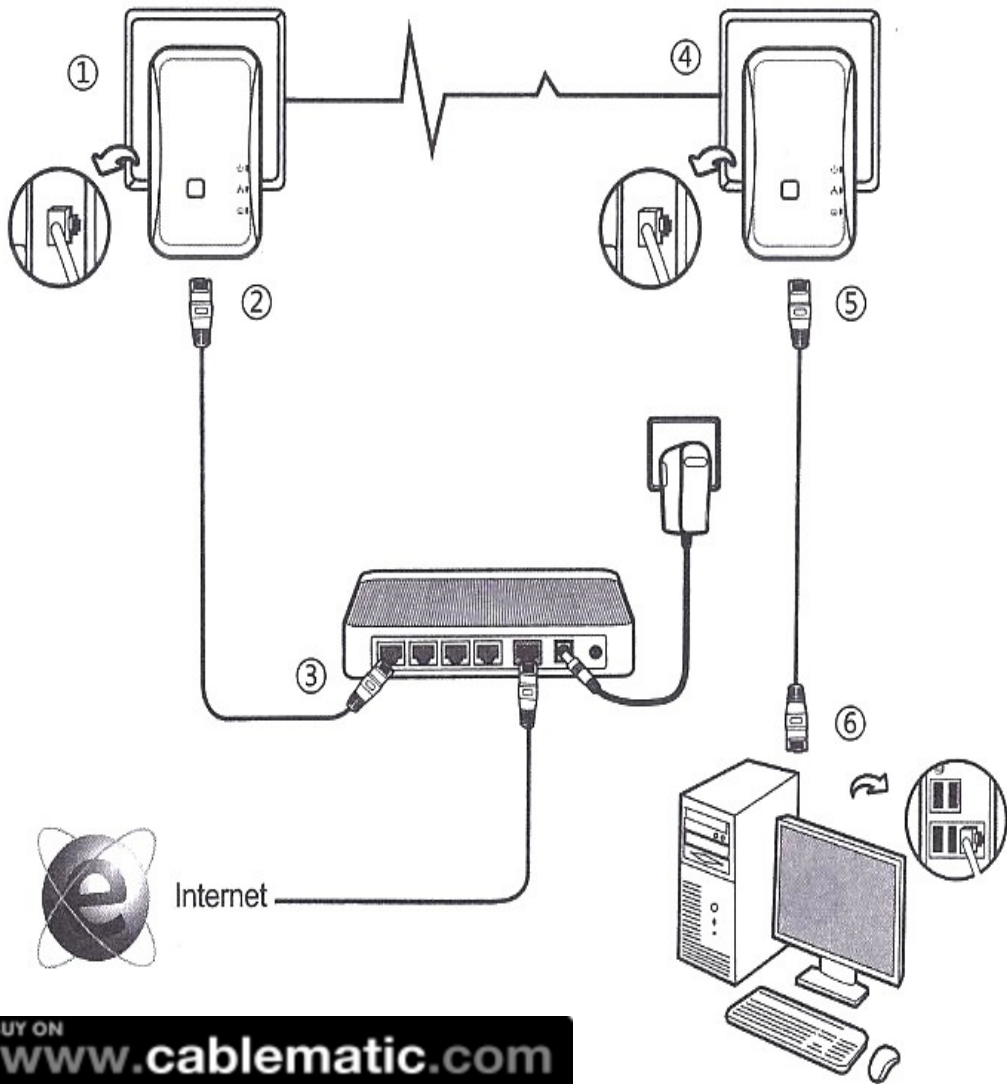


BUY ON
www.cablematic.com



Note:

Please ensure that the PWR, ETH and Data LED are on after you finished the connection.

LED and Button Descriptions

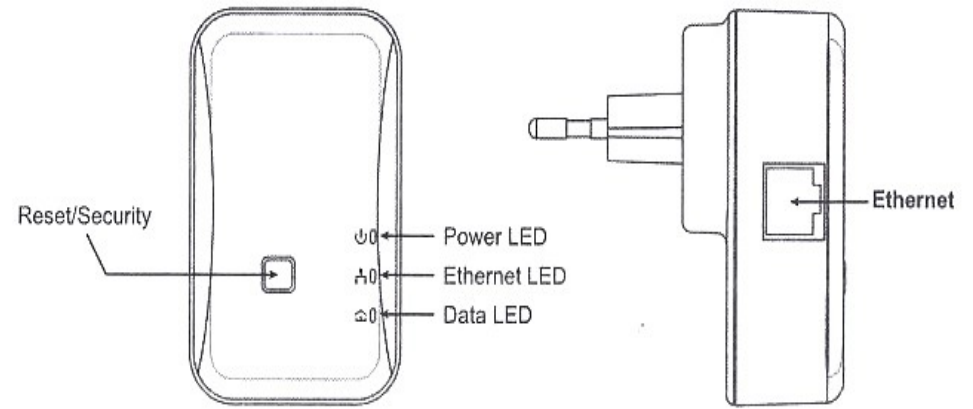

LED	Status	Description
⏻	Off	Power is off
	On	Power is on
🌐	Off	No network connection
	On	The LAN cable is connected successfully
	Blinking	Data is being transmitted over Ethernet
🏠	Off	The product is not connected to Powerline network
	On	The product is connected to Powerline network
	Blinking	Data is being transmitted over Powerline network

LED	Function
Reset/Security	Pressing and holding the Security/Reset button for less than 3 seconds makes the adapter a member of the existing AVLN. Pressing and holding the Button for between 10 seconds and 15 seconds makes the adapter restore the factory default settings.