


Product Descriptions:

(Pic.1)


- ① Fixing Adapter for (Canon) DSLR series camera
- ② Fixing Adapter for (Nikon) DSLR series camera
- ③ Magnifier Body
- ④ Catcher
- ⑤ Eye Cap
- ⑥ Magnifier Lens
- ⑦ Strap
- ⑧ Safety Clip-on
- ⑨ Front and Back Cover for Magnifier

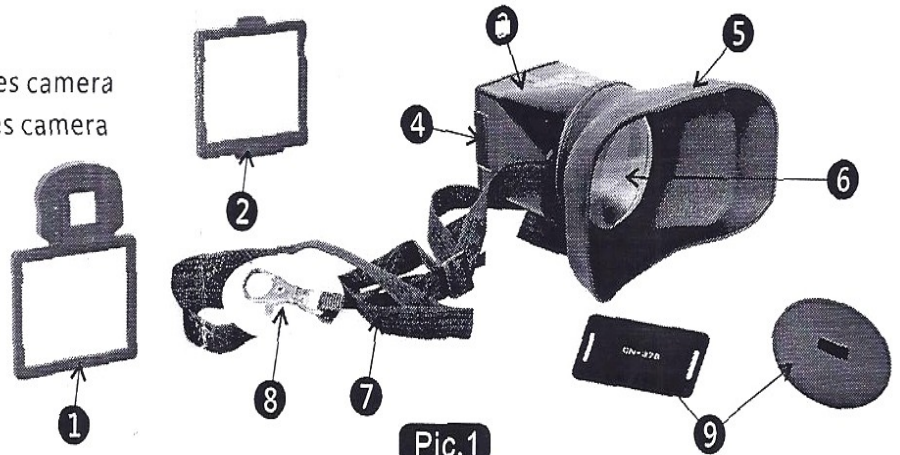


Pic.1

Use on (Canon) DSLR Series Camera


1. (Pic. 2) Take away the eye cap from the camera's viewfinder.
2. (Pic. 3) Insert the fixing adapter onto the camera's viewfinder.
3. Take away the front and back cover from the magnifier, squeeze two sides of catcher (Pic. 4), and put them into the fixing adapter, then release your fingers, so the magnifier is locked and attached onto the fixing adapter.
4. Fasten and connect the safety clip-on with the camera strap, to avoid the magnifier fall down.
5. After use, please remove the magnifier according to the opposite steps of installation.

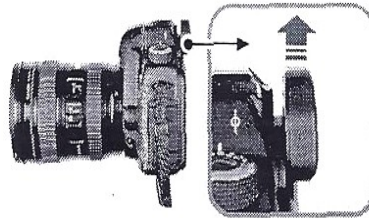

Pic.2

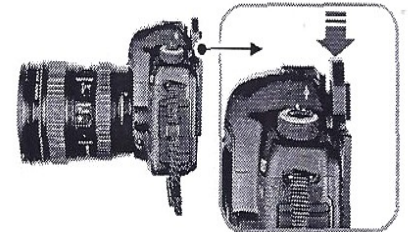


Pic.3

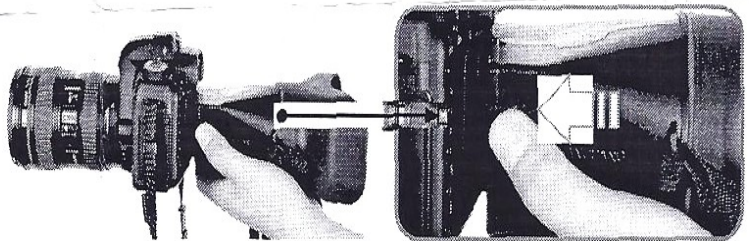


Pic.4

Use on (Nikon) DSLR Series Camera

1. Remove the transparent protective cover from camera LCD.
2. (Pic. 6) Clamp the fixing adapter on the LCD.
3. Take away the front and back cover from the magnifier, squeeze two sides of catcher (Pic. 4), and put them into the fixing adapter, then release your fingers, so the magnifier is locked and attached onto the fixing adapter.
4. Fasten and connect the safety clip-on with the camera strap, to avoid the magnifier fall down.
5. After use, please remove the magnifier according to the opposite steps of installation.

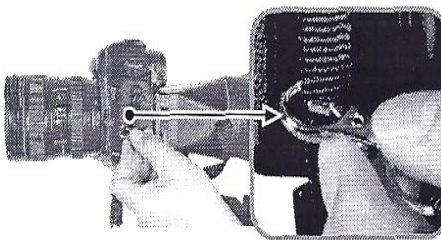

Pic.5

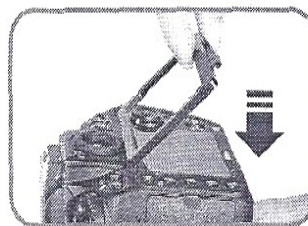

Pic.6



Pic.7

Cautions:

1. Do not let the sun shine into the magnifier directly, otherwise the LCD screen may burn and damage.
2. On the magnifier lens, there is antireflection coating, please keep the lens clean, if any dirty, please clean it by degreased cotton or lens paper.
3. When using, please avoid any crashes.
4. Do not take up the camera by handling the magnifier.