 
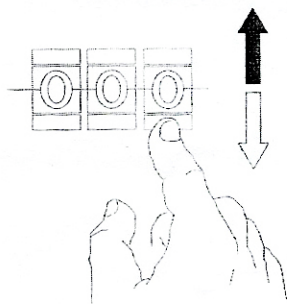 


BUY ON




www.cablematic.com

MANUAL

1. Enter the correct combination code (initial code is 000), then turn the knob to open the door

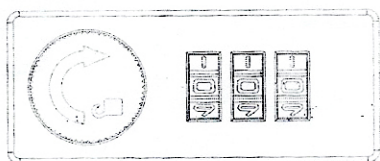

2. Set the code when control button turned on "B" position. Turn on "A" when finish

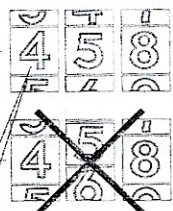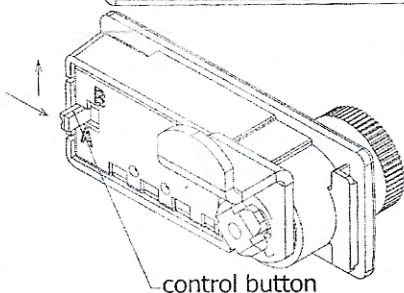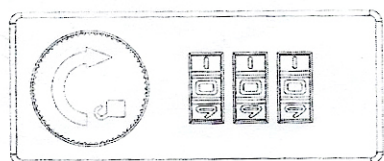

3. Pls remember the reset code

