

BUY ON
www.cablematic.com

HEADSET TELEPHONE

User's manual



PLEASE READ THIS MANUAL CAREFULLY BEFORE USE

CONTENTS

1. INSTRUCTIONS	2 -
2. FEATURES	2 -
3. PACKAGING LIST	2 -
4. SKETCH MAP	2 -
5. INSTALLATION	3 -
6. SYSTEM SETTING OPERATION	3 -
6.1 SET DATE/TIME	3 -
6.2 SET LOCAL AREA CODE	3 -
6.3 SET AREA CODE	3 -
7. FUNCTION OPERATION	3 -
7.1 ANSWER A CALL	3 -
7.2 MAKE A CALL	3 -
7.3 RING SELECT	3 -
7.4 SPEAKER VOLUME ADJUST	3 -
7.5 FLASH FUNCTION	4 -
7.6 REDIAL FUNCTION	4 -
7.7 RECEIVING CALLER ID INFORMATION	4 -
7.8 CALLING BACK A NUMBER FROM THE CALLER ID LIST	4 -
7.9 REVIEWING THE CALLER ID LIST	4 -
7.10 DELETE FUNCTION	4 -
7.11 SETTING AND CHECKING VIP NUMBER	5 -
8. TROUBLESHOOTING	5 -

1. INSTRUCTIONS

Thank you for your purchasing our newest telephone with Caller ID function. This manual is designed to familiarize with your phone. To get the maximum use from this product, we suggest that you read this instruction manual before operating it.

2. FEATURES


- FSK/DTMF dual system auto switch
- 38 group Caller ID message memories
- 5 group outgoing message memories
- 3 group one-touch dialing memories
- 5 digit of local area code
- 16 digits of number of incoming call display and backlight indication
- 15dB speakerphone volume number control
- Ringer of outside and inside option function, incoming call indication
- In use indication
- RJ-11 jack

3. PACKAGING LIST

1. Headset telephone	1pc,	2. Use manual	1pc,
3. Telephone line	1pc,	4. Headset (option)	1pc,
5. Bracket mount (option)	1pc		


4. SKETCH MAP

1. Set button
2. Up button
3. Down button
4. Delete button
5. Ringer indicator
6. Out button
7. Flash button
8. Redial button
9. On/off button
10. Number button
11. Hold button
12. Pause button
13. Headset jack
14. M3 button
15. Ringer out/in select
16. M2 button
17. M1 button
18. Volume adjust
19. In use indicator Pause button
20. Line
21. LCD display
22. Bracket mount jack

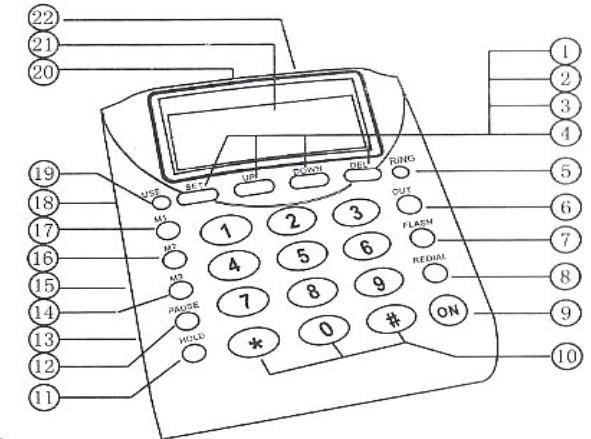

BUY ON
www.cablematic.com

- 23. Speaker
- 24. Microphone
- 25. Joint jack
- 26. Joint connection-peg
- 27. Telephone jack

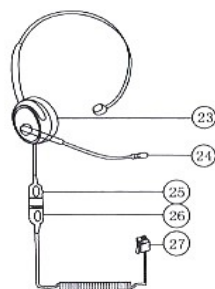

5. INSTALLATION

- 5.1 Plug one end of bracket mount to the jack of the base set
Note: when the batteries are installed, the screen will show 00:00 and the clock will begin to run. It will reset to the correct time when the first caller ID data is received.
- 5.2 Plug one end of flat cord to line jack
- 5.3 Plug one end of headset cord to the jack of the base set.

6. SYSTEM SETTING OPERATION

At standby state, press SET to enter the set at this time, LCD will display the item to set. Use UP or DOWN to select from the menu including Set Time/Date, Set Local Area Code, Set Area Code, Set Flash Time. Press DELETE to exit the setting menu.

6.1 SET DATE/TIME

When the LCD displays "SET 1 DATE", press SET to enter

- Press UP or DOWN to set the present year
- Press SET to confirm the year
- Use the same method to set month, day, hour and minute

6.2 SET LOCAL AREA CODE

When the LCD displays "SET 2 CODE", press SET to enter

- Use UP or DOWN to select the first digit of area code
- Press SET to confirm the first digit
- Use the same method to set the rest digits

6.3 SET AREA CODE

When the LCD displays "SET 3 PCODE", press SET to enter

- Use UP or DOWN to select the first digit of area code
- Press SET to confirm the first digit
- Use the same method to set the rest digits

7. FUNCTION OPERATION

7.1 ANSWER A CALL

When you hear the phone ring and the ringing indicator turns on, you have an incoming call. Press ON button to answer the call.

7.2 MAKE A CALL

Press the ON button, when you hear a dial tone, dial using the dial pad or memory buttons.

7.3 RINGER SELECT

Use the RINGER switch on the side of the base to adjust the ringer volume to OUT or IN.

7.4 SPEAKER VOLUME ADJUST

Use the volume switch on the side of the base to adjust the speaker volume.

7.5 FLASH FUNCTION

Press the FLASH button to get special service such as 'Call Waiting' or "3-way calling".

7.6 REDIAL FUNCTION

Press the ON button, then press the REDIAL button, the latest dialed number will be dialed out.

7.7 RECEIVING CALLER ID INFORMATION

Note: You must make sure your Telephone Company offer caller ID service so that the caller ID function can be activated.

When there is an incoming call, the LCD will display the number, area code, time and date of the call. When receiving a telephone call, the telephone will detect the FSK or DTMF format and display the calling number. If this is a FSK format caller ID signal, the current date and time display will also be updated. If this is a newly coming call, the "NEW" icon will be displayed. If the incoming call is a repeat number, the "REP" icon will be displayed. If the incoming call is a private call, the icon ---p--- will be displayed. If the incoming call is out of area, the icon ---o--- will be displayed. If a wrong number comes in, the ---E--- will be displayed.

7.8 CALLING BACK A NUMBER FROM THE CALLER ID LIST

Under standby state, use UP and DOWN to select the desired number.

- If the area code was set and the incoming call is 7 digits, press REDIAL once to keep showing 7 digits, press REDIAL twice to show 10 digits with adding 3 digits area code, press REDIAL three times to show 11 digits with adding area code and long distance code '1' as the first digit. Pick the handset to dial out the displaying number.
- If the incoming call is 10 digits, press REDIAL once to show 11 digits with adding long distance code '1' as the first digit. Press REDIAL twice to show 10 digits and press REDIAL three times to show 7 digits to eliminate the area code. Pick the handset to dial out the displaying number.

Under in-use state, use UP and DOWN to select the desired number. Press REDIAL and the displaying number will be dialed out automatically after 2 seconds.

- If the area code was set and the incoming call is 7 digits, press REDIAL once to keep showing 7 digits, press REDIAL twice to show 10 digits with adding 3 digits area code, press "REDIAL" three times to show 11 digits with adding area code and long distance code '1' as the first digit. Waiting for 2 seconds and the displaying number will be dialed out automatically.
- If the incoming call is 10 digits, press REDIAL once to show 11 digits with adding long distance code '1' as the first digit. Press REDIAL twice to show 10 digits and press REDIAL three times to show 7 digits to eliminate the area code. Waiting for 2 seconds and the displaying number will be dialed out automatically.

7.9 REVIEWING THE CALLER ID LIST

Press UP or DOWN to review the outgoing calls (at most 16 calls)

7.10 DELETE FUNCTION

- In set mode, press DELTET button is used to quit set.
- When you use pre-dial function, press DEL button is used to correct the input mistake.
- When you check the incoming calls memories, press DELETE button is used to delete the unwanted memory. If you press DELETE button and to not release for more than 4 second, all memories will be deleted,

- When you check the outgoing calls memories, press DELETE button is used to delete the unwanted memory. If you press DELETE button and do not release for more than 4 second, all memories will be deleted.

7.11 SETTING AND CHECKING VIP NUMBER

You can set some important numbers in the Caller ID list to VIP numbers. The VIP number will not be flush away by the newly coming number when the memory is full.

- When standby state, press UP or DOWN button to select a number.
- Press PAUSE button, this selected number becomes VIP number. If a number is set as VIP, the LCD will show a “LOCK” icon. You can set as many as 62 VIP numbers.
- For a VIP number, press PAUSE again to cancel the VIP setting.

8. TROUBLESHOOTING

Trouble	Check-up	Trouble remove
No in-use	Check telephone line	Connect telephone line
No ringer or ringer LOW	Check telephone for outside tel. Check ringer switch select HI	Remove outside tel.
Receiving abnormality	Check headset	Replacing headset
Tone abnormality	Check telephone line for not hard up	Replacing telephone line
No caller ID	Check a make sure your Telephone Company offer caller ID service.	You must make sure your Telephone Company offer caller ID service so that the caller ID function can be activated.

BUY ON
www.cablematic.com