


# HEADSET TELEPHONE

## User's Manual

BUY ON  
[www.cablematic.com](http://www.cablematic.com)

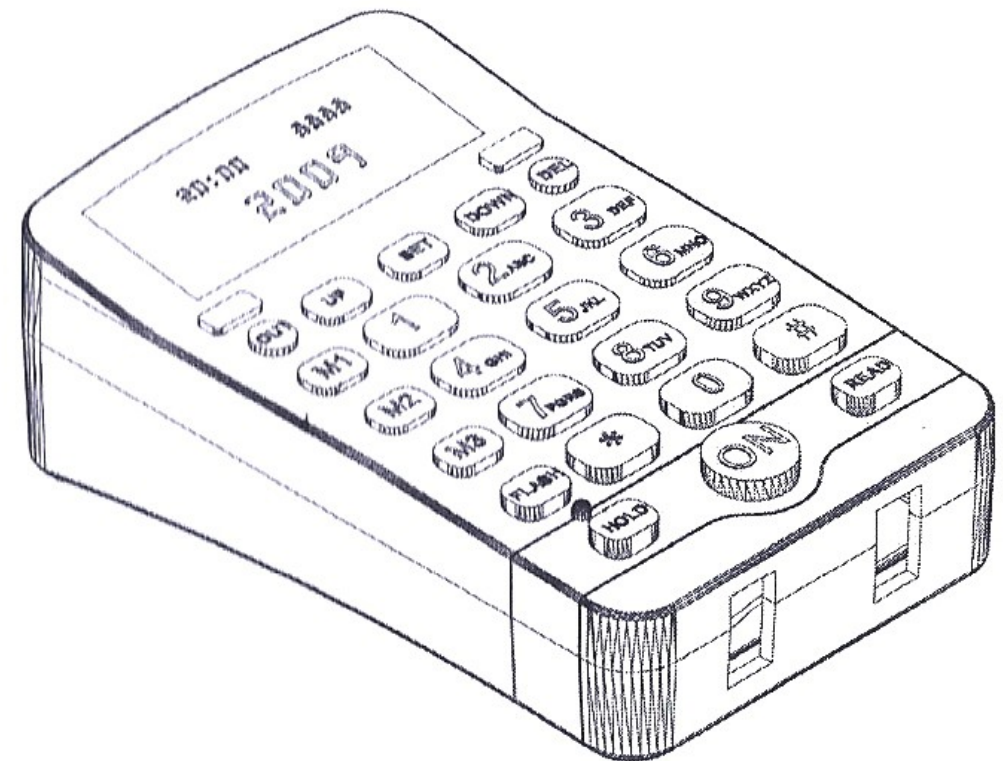

PLEASE READ THIS MANUAL CAREFULLY BEFORE USE

## Caller ID Headset Telephone USER'S MANUAL

FEATURE LIST .....	- 2 -
SAFETY INSTRUCTIONS .....	- 2 -
INTRODUCTION .....	- 3 -
LOCATION OF CONTROLS .....	- 4 -
FUNCTION BUTTONS .....	- 5 -
SETTINGS .....	- 7 -
RECEIVING CALL RECORDS .....	- 8 -
CALLER ID SYSTEM OPERATIONS .....	- 9 -

## FEATURE LIST

1. FSK+DTMF dual system Caller ID
2. Stores up to 62 incoming call numbers, date & time
3. Stores up to 16 outgoing call numbers
4. Deletes individual or all records
5. Real time clock (time setting)
6. LCD contrast setting
7. Area code setting
8. Alert function
9. Privacy call /Repeat call /Out of area/Error indicators
10. One-touch memory (M1~M3)
11. Last number redials
12. Call back function
13. New call Indicator
14. Headset volume adjustment

## SAFETY INSTRUCTIONS

- 1 To avoid the risk of fire, electrical shock and injury, please carefully read the instructions in this manual and follow these basic safety precautions before you use this equipment.
- 2 Follow all warnings and instructions marked on the unit.
- 3 When cleaning, please unplug the telephone jack from the wall outlet and use a damp cloth. DO NOT use liquid or aerosol cleaners.
- 4 Do not use this equipment near water, e.g. near kitchen sink, bathtub, washbowl, laundry tub, swimming pool or wet basement.
- 5 Install in a protected location. Ensure all lines and cords are away from foot traffic.

BUY ON  
**www.cablematic.com**

- 6 DO NOT place objects on the line that may cause damage or abrasion.
- 7 Avoid spilling any liquid on the unit. This may cause internal shorting, fire or shock, which is not covered under your warranty.
- 8 Do not overload wall outlets and extension cords as this can result in the risk of fire or electrical shock. Never push objects of any kind into this unit as they can touch dangerous voltage points and result in short circuit, electrical shock or risk of fire.
- 9 Take this unit to a qualified technician when it requires repairing or service.
- 10 To reduce the risk of electrical shock, do not disassemble this unit. Opening or removing covers can expose you to dangerous voltages or other risks. Incorrect reassembly can cause electrical shock during subsequent use.
- 11 Avoid using this unit during an electrical storm. There can be a risk of slight electrical shock from lightning.
- 12 DO NOT use the telephone to report a gas leak in the vicinity of the leak.
- 13 Unplug this unit from the wall outlet and refer service to qualified personnel under the following conditions:
- If liquid is spilled into the unit;
  - If the unit is exposed to rain or water;
  - If the unit does not work normally by following operating instructions;
  - If the unit is dropped off or the case is damaged;
  - If the unit exhibits a distinct change in performance.

## INTRODUCTION

### 1. Check the content of the box

Box should contain:

- Headset telephone
- Telephone line
- User's manual
- Headset bracket


BUY ON  
**www.cablematic.com**

Headset (up to your order or not)

### 2. Connect the phone line

Plug one end of the supplied modular cord into the line jack. Then plug the other end into telephone wall line jack.#

## LOCATION OF CONTROLS

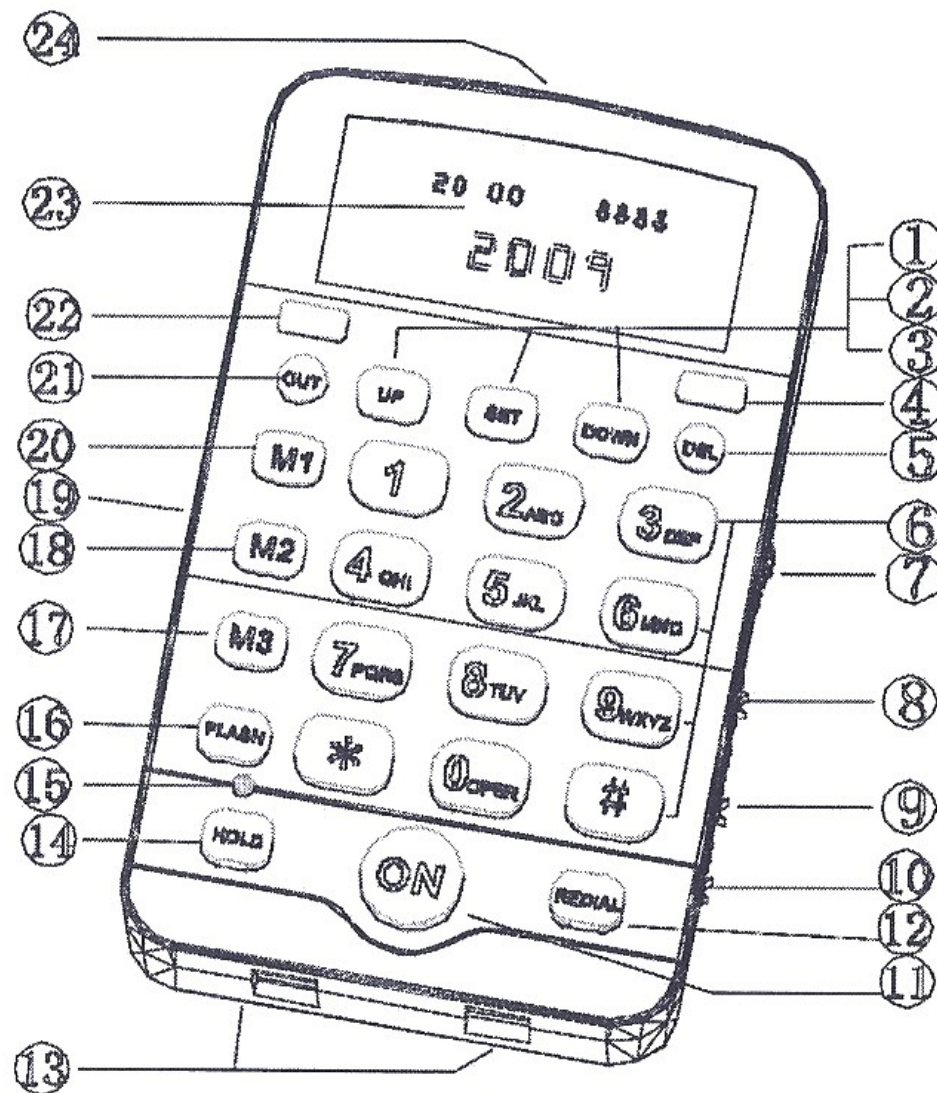

1. Up button
2. Set button
3. Down button
4. Ringer indication
5. Delete button
6. Number button
7. Volume adjust
8. Answering way select
9. Ringer out/in set
10. Call forwarding delay switch
11. On/off
12. Redial button
13. Headset jacks
14. Hold button
15. Hold indication
16. Call forwarding button
17. Memory button 3
18. Memory button 2
19. Headset bracket mount jack
20. Memory button 1
21. Out button
22. Incoming call indication
23. LCD display
24. Telephone line Jack

## FUNCTION BUTTONS

### 1. Redial Function

Press the ON button, and then press the REDIAL button to redial the last dialed number.

### 2. SET Button

In the standby mode, press and hold the SET button to enter the menu.

### 3. DEL Button

Press the DEL button to delete the incorrect digit when you set the code. In menu mode, use the button to exit from the menu. When the LCD shows the CID number, press the button to delete the record. If you press and hold this button for more than 3 seconds, all the CID numbers will be deleted.

### 4. FLASH Button

In order to fulfill the function of FLASH, please move the FLASH switch to the 100 position before you plug the phone line. To forward a call, first pick up the phone, then Press FLSH button and dial the number. When the forwarding is finished, please hang up the pone. Use the FLASH switch on the right side of this unit to choose your preference time for forwarding calls.

### 5. LCD contrast setting

In the on-hook state, press FLASH button repeatedly to adjust the LCD contrast (up to 5 levels) according to your need.

### 6. Ringer out/in select

Slide the Ringer switch on right side to select in/out ringer. H---high loudness, L---low loudness, OFF---in ringer

### 7. Answer mode

Slide the AUTO switch on the right side to select answering manually or automatically, ON---answering automatically, OFF---answering manually

### 8. Memory Dialing

You can store 3 telephone numbers in the one-touch memory.

Storing a number in the one-touch memory either in hang-up or off-hook state:

A. Press UP or DOWN button to select the incoming number or press the OUT button repeatedly to select the outgoing number you desire to store (up to 32 digits).

B. Press the SET button and the LCD shows STORE IN

C. Press the desired location button (M1 ~M3) to store the number.

NOTE: To update the number stored in the one-touch memory, just repeat above steps to store a new number to replace the previous one.

D. To dial a number in the one-touch memory press the ON button, and then press the location button (M1~M3) to dial out the matching number.

E. In the on-hook state, you can press the (M1~M3) button to review numbers in one-touch memory.

## SETTINGS

This dialer has the following special settings:

1. Time & date setting;
2. Area code setting,
3. Out of system code setting;
4. Alert setting.

In the standby mode, press and hold the SET button to enter the setting mode and the LCD shows **SET 1 DATE**.

NOTE: After you enter the setting mode, you can press UP or DOWN button to select the desired menu or press DEL button to exit or do these settings in sequence.

### A. Time & date setting

Press SET button to enter the time & date setting mode, press the SET button again, the digits for year will flash, use UP or DOWN button to select the desired number, press SET button to confirm and enter the next item. The setting sequence is YEAR---MONTH---DAY--- HOUR---MINUTE. (When the date has been set, the matching weekday will automatically show on the middle line). When the setting is finished you can press SET button to confirm and enter the next setting mode automatically. The LCD will show **SET 2 CODE**.

### B. Area code setting

When the LCD shows **SET 2 CODE**, press SET button to confirm and enter the area

code setting, the LCD shows **CODE** or the area code you set before. Press UP or DOWN button to set it. Press SET button to confirm and enter the next item (up to 5 digits). When the setting finished you can press SET button to confirm and enter the next setting mode automatically. The LCD will show **SET 3 PCODE**.

### C. Out of system code setting

When the LCD shows **SET 3 PCODE**, press SET button to confirm and enter the out of system code setting, then the current setting PCODE or the code you set before will show on the LCD. Press UP or DOWN button to set it. For example, if you set code "3", when you pre-dial a number which is more than 6 digits and begin without "3", press the REDIAL button, it will dial out with adding 3 automatically. When the setting is finished, you can press SET button to confirm and enter the next setting mode automatically. The LCD will show **SET4 ALERT**.

### D. Alert setting

When the LCD shows **SET4 ALERT**, press SET button to confirm and it will display. Press UP or DOWN button to set the alert time and then the SET button to confirm. ON or OFF will flash on the LCD after setting alert time. Press UP or DOWN button to select ON or OFF button to activate or deactivate the alert function, then press the SET button to confirm, the LCD shows **SET 1 DATE**. Press the DEL button to exit.

NOTE: When the alert rings, press any key to switch off.

## RECEIVING CALL RECORDS

In standby mode: LCD will show numbers of incoming calls, date and the real time.

**1. New call indicator:** When a new call is received, the **NEW** icon will flash on the LCD. After it has been reviewed, the NEW icon will disappear.

**2. Repeat call indicator:** If the call comes repeatedly, the **REP** coin will appear.

**3. Incoming call indicator:** When a new call is coming or when you are reviewing the incoming call numbers, the **IN** icon and the call sequence will show on the LCD.

**4. Privacy call indicator:** If the caller has exercised the option to prevent his number from being sent, the **—P—** will be shown on the LCD.

**5. Out of area call indicator:** When someone calls from an area where the telephone company is not offering the caller identification services or an area that is not yet providing number delivery to your area via the long distance network, LCD will show **—O—**.

**6. Error:** If the phone can not recognize the information within the caller display messages, it will show **—E—** instead of the message.

## CALLER ID SYSTEM OPERATIONS

Subscription for Caller ID service from your local phone company is required before initial use.

### 1. Reviewing incoming numbers

Either in on-hook or off-hook state, press UP or DOWN button to scroll through the incoming caller list directly. You can review the records quickly by holding UP or DOWN button for more than 3 seconds.

### 2. Reviewing outgoing numbers

Either in on-hook or off-hook state, press OUT button once and the last outgoing number will show on the LCD, press OUT button repeatedly to review other records or review the records quickly by holding OUT button for more than 3 seconds.

### 3. Saving call records

Save specific calls by deleting old or unnecessary call records. NOTE: If the memory is full, the oldest record will be erased to make room for the new call record automatically.

### 4. Deleting function

When reviewing the incoming or outgoing numbers, press DEL button to delete the record shown on the LCD. If you press and hold this button for more than 4 seconds, all the incoming & outgoing records will be deleted.

### 5. Using the call back function

This unit can store up to 62 incoming numbers (each number up to 8 digits)

A. Select the number that you want to call back in the caller list by pressing UP or DOWN button repeatedly.

B. Press the REDIAL button to dial it.

NOTE: A. Press the REDIAL button twice quickly after selecting the incoming numbers by pressing UP or DOWN button, the number will be dialed ahead with "0" automatically. B. Press the REDIAL button to dial out.

BUY ON  
[www.cablematic.com](http://www.cablematic.com)