

Dry Cell operation

All ABS Body, sturdy yet light weight

Built –in Music & Microphone

Clear sound, long range & efficient design

Conveniently located Volume Control & Switch

10 Seconds Voice Recording Function

SPECIFICATIONS

Power Output: 5W Rated / 10W Max

Voice Range: 0.2 km

Power Source: 4 x“D”Cells

Battery Life: 8-10 hrs.

Microphone: Unidirectional

Dimensions: Horn Dia.155mm, Length 250mm

Weight: 0.6 kg without cells



OPERATION

Open the Back Cover by pressing the Open Button.

Insert 4 x“D”cells then close the back cover until it locks. Now your megaphone is ready for action.

To activate the megaphone, press the ON/OFF Button on the Back Cover.

When carrying it on the shoulder, Press the ON/OFF button on the megaphone and the button on the hanger inlet to activate.

When using the megaphone, place your lips as close as possible to the megaphone or the megaphone on the hanger inlet. Adjust the Volume Control to the desired level without causing any howling or feedback.

Press Music button to activate Music. To switch off the Music press the same button again, or press the ON/OFF button.

Adjust the volume control to the min. and pull out the hanger inlet before recording. Press the REC button , the indicator light will be on. Now your megaphone is ready for recording. The longest record time is about 10 secs. Press the same button after you finish recording.

Press the PLAY button to activate the recorded materials circularly.

PRECAUTIONS

Ensure correct polarity of Cells. Insert the batteries in the correct direction by aligning the (–) marks on the batteries with the spring in the back cover.

When the megaphone is not in use for a long period, remove the dry cells.

Drained cells will not give sufficient sound volume.

Replace cells at regular intervals, for optimum result.



Cablematic