

MEGAPHONE

Dry Cell operation

All ABS Body, sturdy yet light weight

Built-in Siren

Clear sound, long range & efficient design

Conveniently located Volume Control & Switch

10 Seconds Voice Recording Function

OPERATION

Open the Back Cover. Remove the plastic battery sleeve and insert 8 nos. UM-1 cells with correct polarity, insert the sleeve into the battery compartment according to the instructions in the compartment. Then close the back cover until it locks. Now your megaphone is ready for action. Or open the back cover. Remove the plastic battery sleeve and insert one 12v rechargeable battery, Then coupler plug and close the back cover until it locks.

To activate the megaphone, press the button on the grip when holding it in the hand after fixing the hanger inlet to the Mic fixing hanger, or switch the button to TALK when carrying it on the shoulder.





When using the megaphone, place your lips as close as possible to the megaphone on the hanger inlet. Adjust the Volume Control to the desired level without causing any howling or feedback.

Switch the button to TALK, and press the SIREN button to activate emergency siren. To turn off the siren, switch back the same button to OFF or press the SIREN button again.

Before recording, switch the button to TALK, and press the REC button, then the REC indicator light is on. Now the recording function is ready. Speak to the microphone on the hanger inlet to record. To finish or stop the recording, just press the REC button again. The MAX recording time is 10 seconds.

To play the music or voice you recorded circularly, press the PLAY button. To stop, press PLAY button again.

If you have finished the megaphone, you must switch the button to OFF.

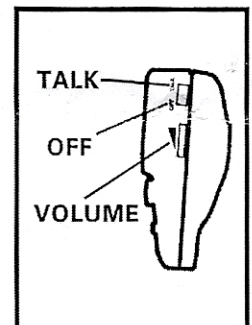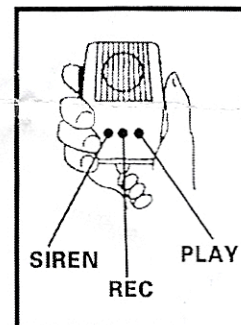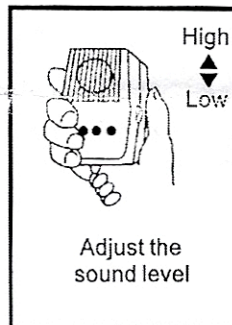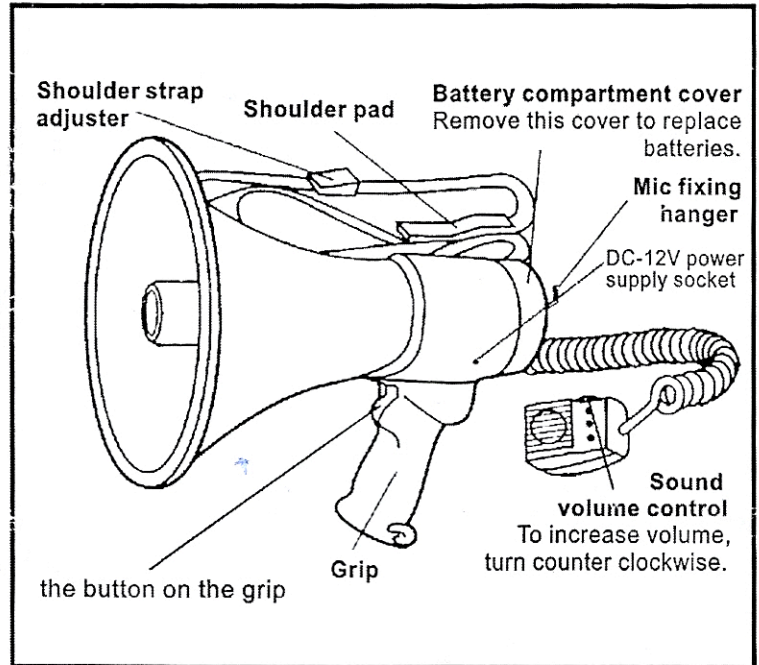


To replace batteries

1. Loosen the locking screw of the battery compartment cover on the back of the body. The battery compartment cover comes off.
2. Insert 8 x type D (UM-1) batteries in the battery case observing correct polarity.
3. Insert the battery case with batteries into the battery compartment of the megaphone observing correct polarity.

To replace 12v rechargeable battery

4. Open the back cover. Remove the plastic battery sleeve and insert one 12v rechargeable battery, Then coupler plug and close the back cover until it locks.

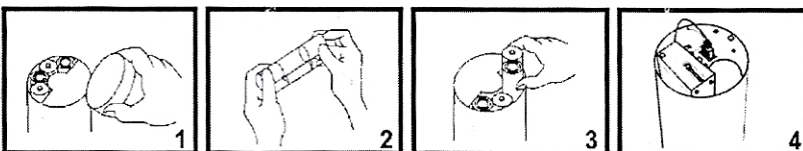

Notes

- 1 Make sure the batteries are inserted correctly, observing correct polarity.
- 2 Charge the battery for 12~16 hours in 220v before the first use. Don't charge exceeding 16 hours.
- 3 When the megaphone is not in use for a long period, remove the dry cells.
- 4 Drained cells or rechargeable battery will not give sufficient sound volume.
- 5 Replace cells or charge the battery at regular intervals, for optimum result.
- 6 If you have finished the megaphone, you must switch the button to OFF.
- 7 Rechargeable battery is not included

Technical specifications

Range.....0.5-0.7km depending on operating conditions
 Power..... 8 x D type batteries (not supplied)
 Weight.....1.50kg approx. excluding batteries
 Dims.....230mm (dia.) x 350mm

BUY ON

www.cablematic.com