


Technical data	
Voltage	220V-50Hz
Rated Power	1500W
Temperature of overheat protection	125C*
Delay tome on/off seitch	<1s/<5s
Sensing distance	<10cm
Net weight	2.38kg
Electromotor rev	2500rpm
Power rating motor	75w

Power diagram

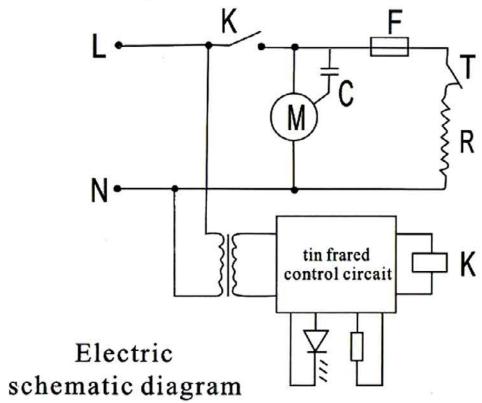

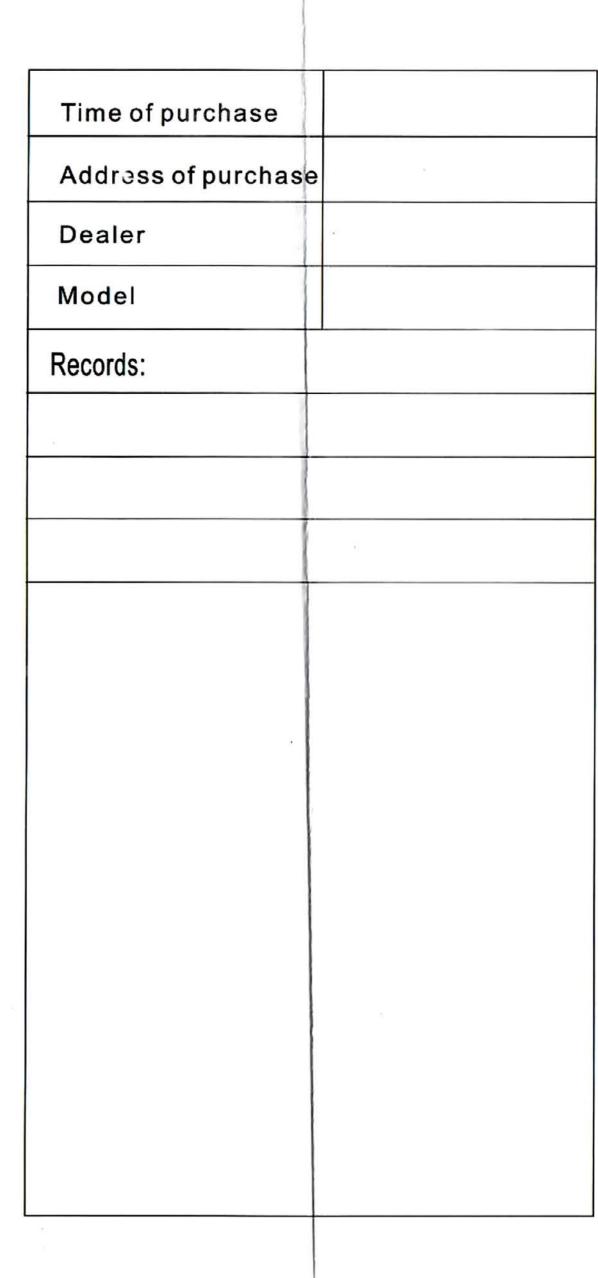


HAND DRYER

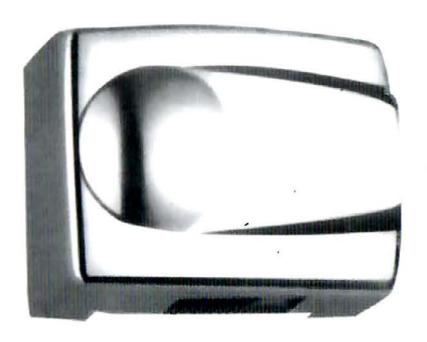




Usage 1

- 1. According to the size(Pic 1), drill two holes spaced 225mm, then remove the accessories, installed by rubber plugs and screws. (Aside the screw of 20MM to hang the machine)
- 2. As (Pic 2)shown, fix the machine with two screws, machine installed completely.

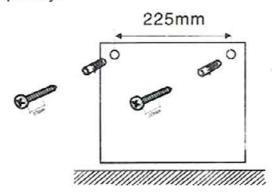

Pic 1

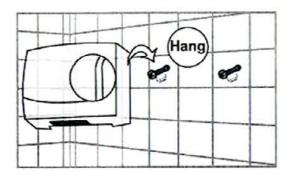


Pic 2

NOTICE


- 1)The machine should fix firmly and fastened on the wall.
- ?) Don't stop the draftmouth.
- 3) You should cut off the power immediately when the machine occorents breakdown, at the same time, you'd better stop to use and contact the seller.
- 4)Forbid to wipe the outer shall with caustic liquid, such as banana water.alcohel.
- 5) If there is dirt on the outer shell .you could wipe with soap of the wet lowel when entting off power.
- 7)Don t dismantle by yoursell of you are not a professi onal
- Don't install the wall which raw material is casy-fired.


Usage 2

- After the installation of hand dryer.get through the power source, the machine is in the stale of working. (when get through the power source, it is normal that the hand dryer automatically works one time.)
- 2. When the distance between the hand and, the wind outict is within 15 cm, the device will automatically stnrt and send hot wind, after the hand gets awny, the device will amomatically stop.
- 3. The hand dryer will automatically stop after I second the hands get away from the dryer. Takin into consideration diterent installation environments the off-line wire launcher has been adjuster in the most sensitive position before the machine leaves the factory in case of long time working or nonworking when installation, can adjust as shown in the figure. (figure 4)

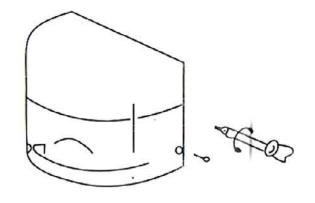

(figure 2)

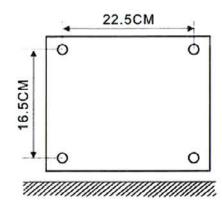

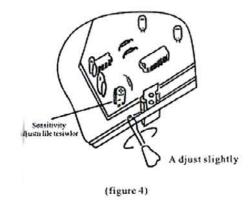

(figure 3)



Descriptions

1 Autormatic hand drver is a new-slylc modern produtl. It is used for human hands, with the features as disinfection, quick in dryin g.health protection, it is soitabte for hatel. wine house, househol dctc.


2 Infrared automatically-controlled, 12m 75°C hot wind each ai inute. When the distance between the hand and the wind outlet is within 15cm, the device will automatically start and send hot wind. After one second the hand gets away, the device will automatically stop.

3 Equipped with a temperature controller inside, when incorrccl operation or the temperature exceeds125℃, device will im tomatically cut off hot wind and send cool air.


Installation

Bcfore connccl the power source, should connect onc two-clcc mclc switch, the contact distance > 3mm, this machine need grounding.


(Figure I)

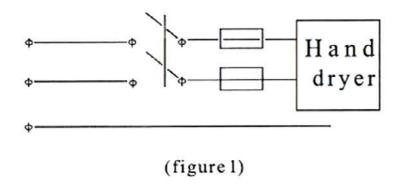

- 1. Take down the screws on two sides of the shell as figure 2, drill Ø 8 hole as the sizes shown in figure 3, fix the machine on the wall with the glue plug and serews attached with this machine. (Notes: when dismantlement of shell, should carefully remove! he yellow-green two-color earth wire of the shell from the base. (figure 2) (figure 3)
- 2. Remove the original power wire of the machine and make the wire pass through the round holc, respectively connect live wire L, null tine N and earth wire in the L,N, position, the yellow-green wire is earth wire.
- 3. Insert the yellow-green carth wire of the shell into the base, and then, close the shell fix the shell with the original serews of the machine

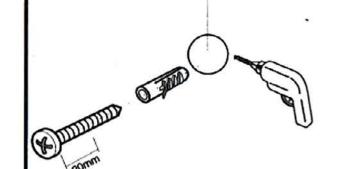



FIX PLATE

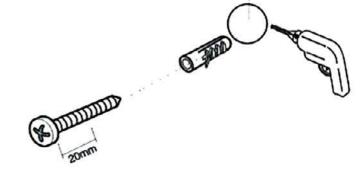

Fix Method:

- 1. According to the size(Pic 1), drill two holes spaced 225mm, then remove the accessories, installed by rubber plugs and screws. (Aside the screw of 20MM to hang the machine)
- 2. As (Pic 2)shown, fix the machine with two screws, machine installed completely.

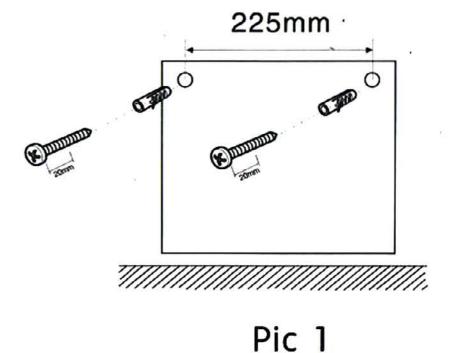

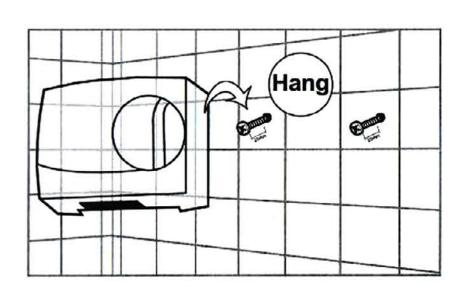

Pic 2

