

Parallel installation steps of door closers

- 1. Fold the parallel template installation chart lint into 90 degrees accroding to the broken line , then stick it on the door frame and door.
- 2. Use the electric drill to drill the hole for screw according to the installation template (wooden door: D4.Metal Door: D4.2, M5screw).
- 3. According to drilled mounting holes, installed the body and parallel -plate on the door or door frame respectively, and tightening up.
- 4. Remove the flat washer and screw, after turn the square tenon of spindleinto 45 degrees, install the main arm on the square tenon of spindle, then Install the bearing on the parallel plate, and tightenting up with screw.
- 5. Adjust the length of screw, and make the main arm parallel to the main body of door closers; Then set the screw sleeve on the shaft core of parallel plate, and tightening up with combination screw.
- 6. Put the dust cap on the other end of spingle.


The speed adjustment of door closers

- 1. Speed 1 is adjustment valve for closing the door, speed 2 is adjustment valve for locking the door.
- 2. Speed regulating valve counterclockwise to growth, speed regulating valve clockwise to slow down.

speed adjusting

Attention:

- 1. It is forbidden to throw the shaft side tenon before installi the door closer
- 2. Please don't beat the square tenon of spindle when installi the rocker arm.
- 3. The door closer will automatic shut down the door, so it is strictly prohibited to forced shut down.
- 4. Please tighten up every screw of each part every half month.
- 5. Pay attention to adjust the speed of every summer and winter
- 6. It is forbidden to turn the speed regulation valve out of the body while making the debugging

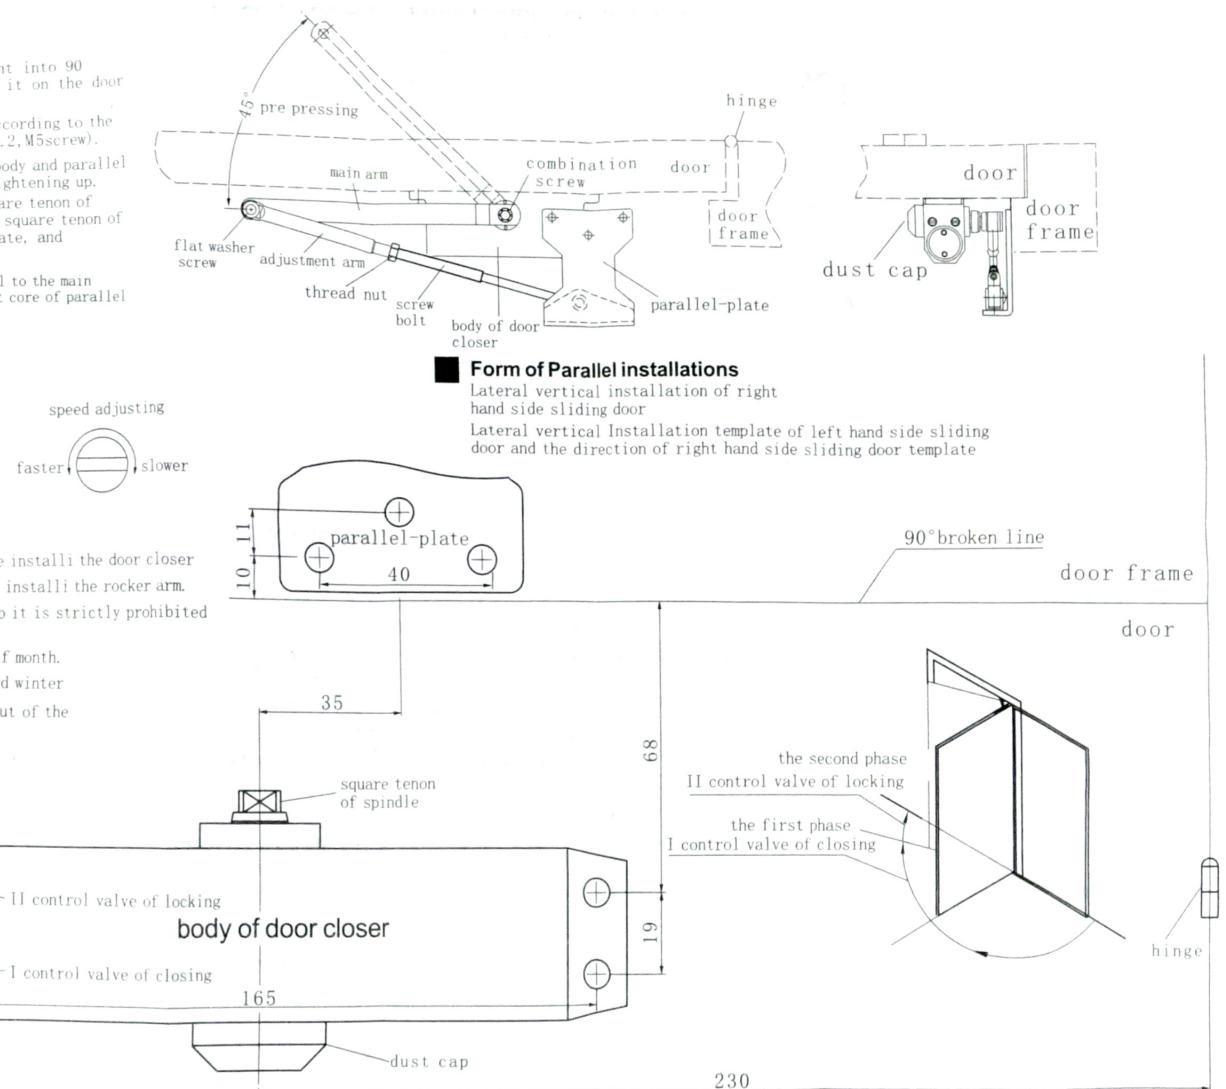

open angle of door 180