



# **Auto Coin Counter Operation Instruction**


# FORWARD

This manual uses for telling you how to operate the machine. Before using it, please read this manual carefully and know about all the options for this machine.

# CONTENTS

I.	APPEARANCES.....	2
II.	DESCRIPTION.....	3
III.	SPECIFICATIONS.....	3
IV.	FUNCTION DEFINITIONS.....	4
V.	FEATURES.....	4
VI.	OPERATION.....	4
VII.	ERROR TREATMENT.....	5
VIII.	AUTO COIN COUNTER MAINTENANCE.....	6

# I. APPEARANCES

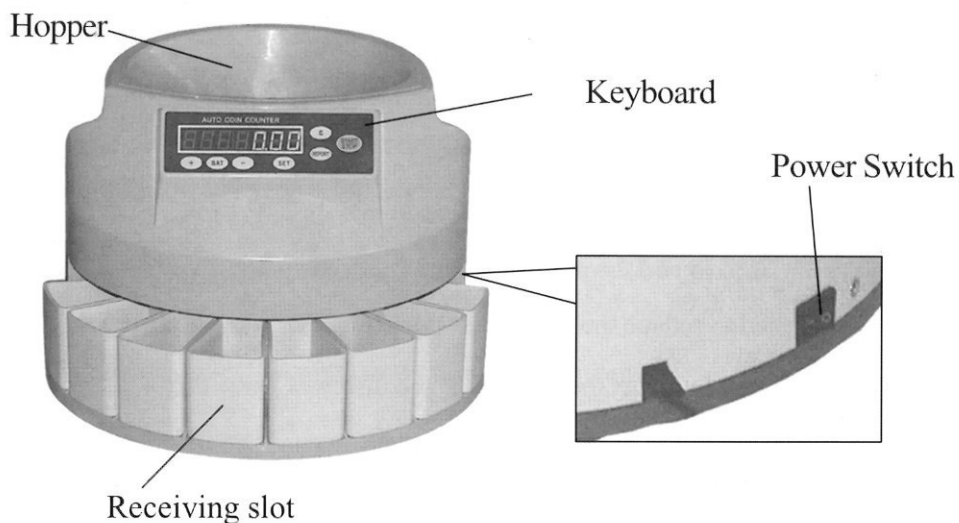

1	“+ ”KEY	5	REPORT KEY
2	BAT KEY	6	START&STOP KEY
3	“ - ” KEY	7	CLEAR KEY
4	SET KEY		

## II. DESCRIPTION

1. Hopper  
The place for putting the coins
2. Keyboard  
Control display. Used to preset optional batch size (up to 4 digits).
3. Receiving Slot  
The place for receiving the different value coins.
4. Power Switch  
To control the power source.
5. Bat key  
Used to set the batch number (up to 4 digits)
6. “+”KEY  
Used to add the number of presetting the batch number
7. “-”KEY  
Used to reduce the number of presetting the batch number
8. Set Key  
Used to preset the number of the different value coins
9. Clear Key  
Used to return to display total value menu.
10. Report Key  
Used to display the individual value of different coins
11. Start & Stop Key  
Used to start counting or stop counting.

## III. SPECIFICATIONS

Ambient temperature:	0℃～40℃
Ambient Humidity:	30～80%
Hopper capacity:	300～500 units
Each receiving slot capacity:	80～150 units
Batch preset number display:	3 Digits LED
Counting number display:	4 Digits LED
Power Source:	AC220V/50HZ
Power Consumption:	45W (MAX)
Dimensions:	355mm×330mm×266mm
Net weight:	4.5KG
Counting speed:	216units/min

## IV. FUNCTION DEFINITIONS

### 1. SET OPTION

It uses for presetting the number of the different value coins.

### 2. REPORT OPTION

It uses for giving a report about the number of the different value coins after counting.

## V. FEATURES

### 1. Convenient operation

### 2. Batch count mode and free count mode

## VI. OPERATION

### 1. Put the machine on the horizontal and then turn on the power switch.

### 2. Select the count mode

This machine can work in two ways: free count and batch count mode. The count mode can be selected by presetting the batch number.

#### ◆ Free Count Mode


In this mode, the machine counts all the coins in the hopper with no stoppage until one of coins receiving slot is full. This mode machine will preset the Batch Number itself when power up.

#### ◆ Batch Count Mode

In this mode, the machine counts a batch coins according to the presetting number. This count mode will be set by presetting an expected number on the Batch Number Display. Before counting, please use the "SET" KEY to select which kind of the coins you want to preset and then use "+", "-", and "BAT" KEY to preset the expected number.

3. Put the coins to the hopper, and the coins should not be piled up higher than the top of the shunting stick one time and then it press the "START&STOP" KEY to start counting.
4. When finish counting, please press the START&STOP KEY to stop the machine, or it will auto stop after about 20 seconds.
5. If you want to get the result of each kind coins, press the "Report" Key and then the machine will display the individual number for the each kind of coins, and then press "C" KEY it will return to display total value of all the coins.

## VII. ERROR TREATMENT

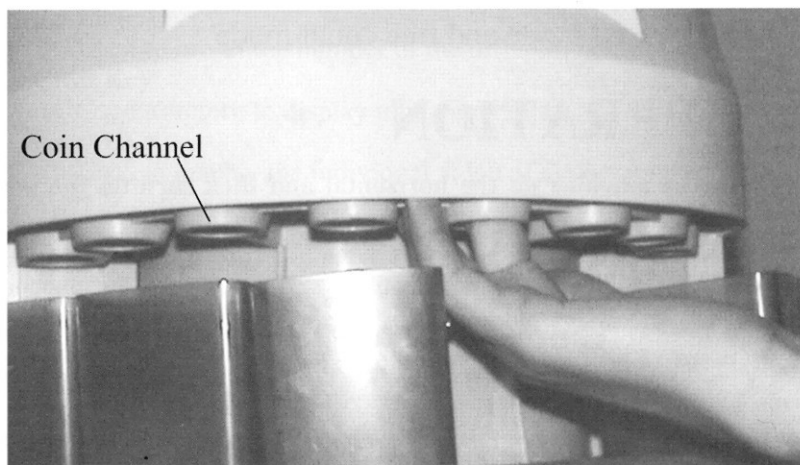


If the machine isn't put on the **horizontal** or it **shakes** too much when it's working, sometimes a coin will fall in a smaller Coin Channel by error and then it will cause a jam. To settle this error, please push the coins in the jam-packed channel with the finger and then let them down from the gap between two coin channels just as the picture above.

## ***NOTICE:***

**Sometimes if the coins can't fall to the counting plate when the machine is working, please use a stick or others to help them.**

## **VIII . AUTO COIN COUNTER MAINTENANCE**

**After the machine working about two weeks, please use liquid wax to clean the Turntable as the pictures above.**

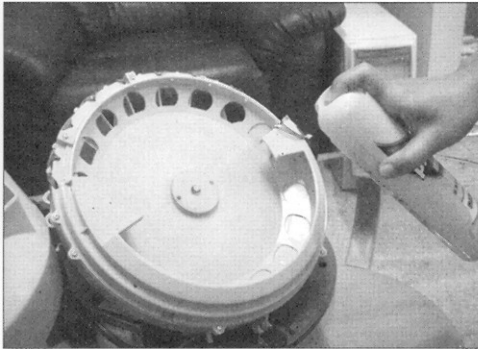

# WARNING

1. Do not run the machine in humidity.
2. Avoid the machine falling from altitude.
3. Avoid the sundries dropping into the machine.
4. Keep the machine horizontal during running.
5. Do not cleaning the machine sensors with water.
6. Don't open the back cover when the power is on.
7. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a simiarly qualified person in order to avoid a hazard.