

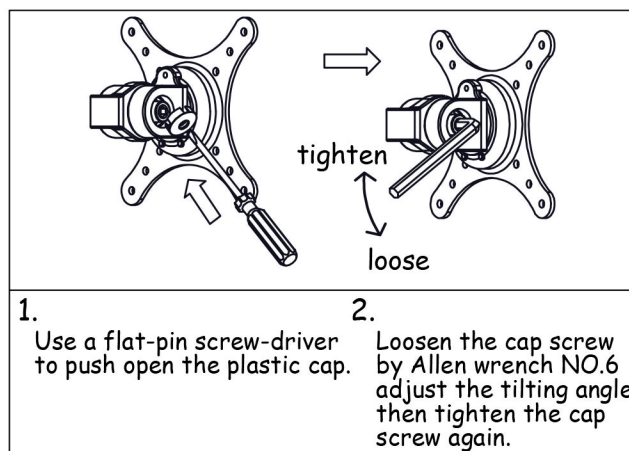


OH42

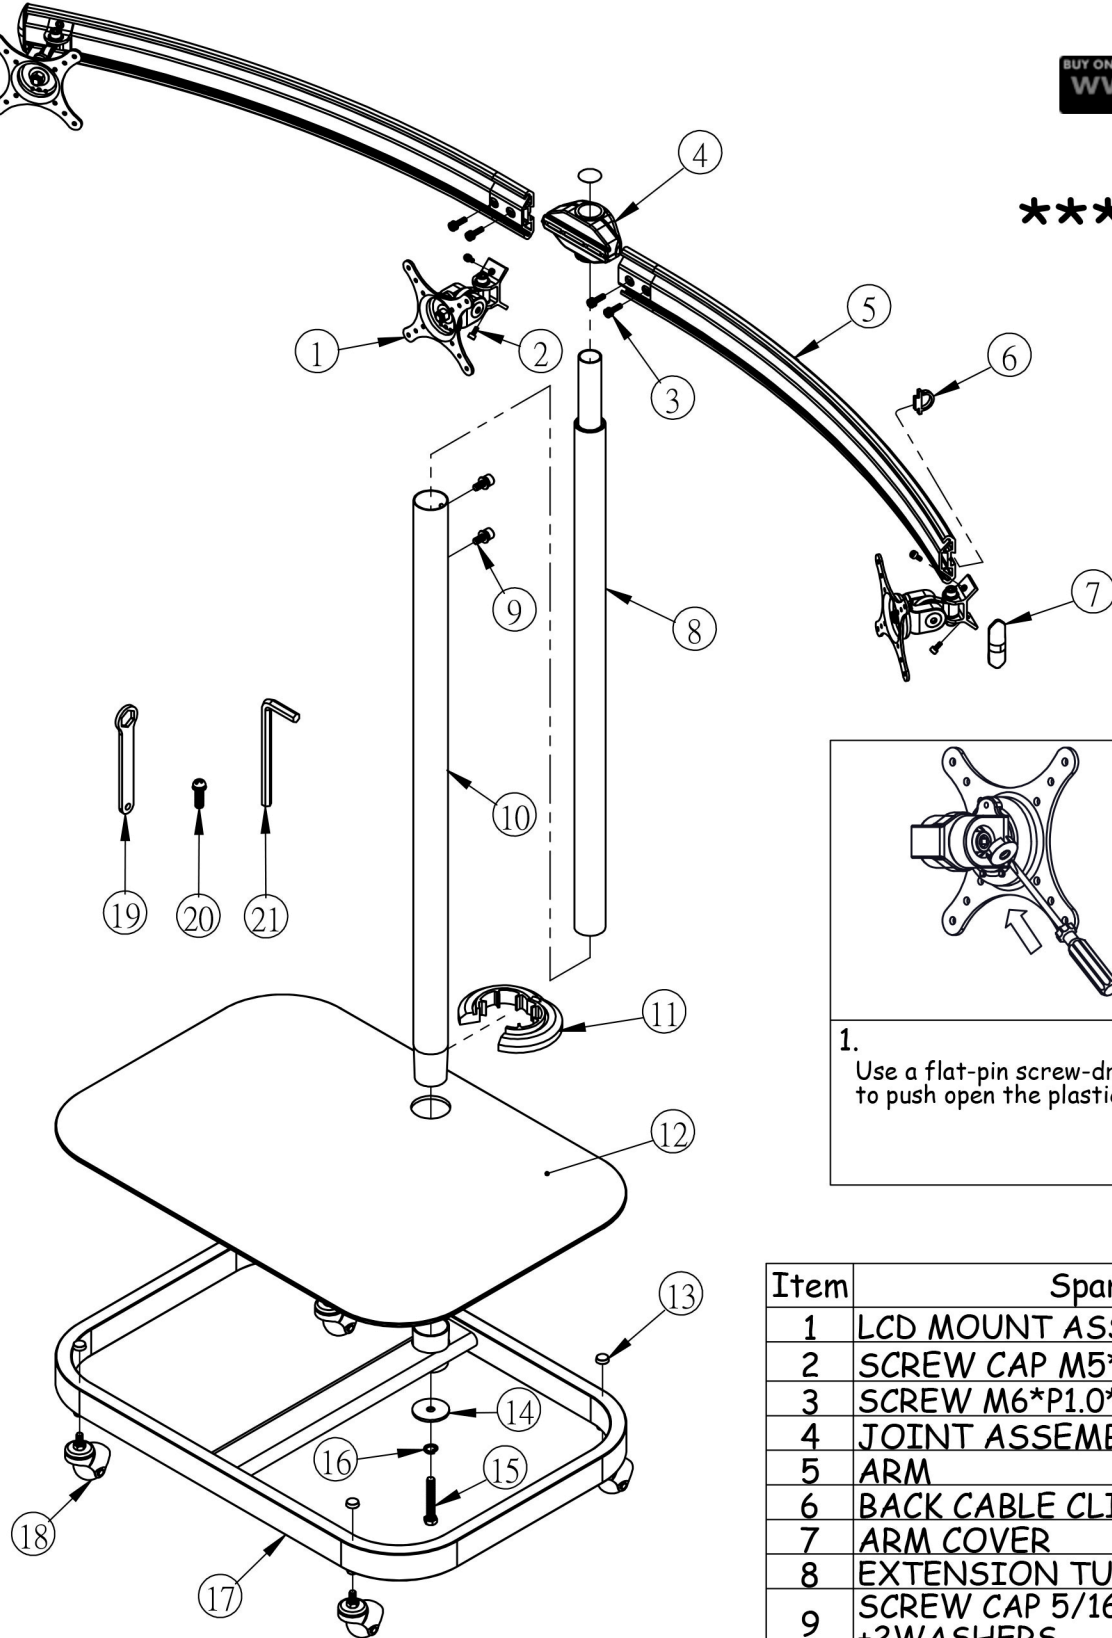

Item	Spare parts	Q'ty
1	LCD MOUNT ASSEMBLY	3
2	SCREW CAP M5*P0.8*L10	6
3	SCREW M6*P1.0*L22 + 2WASHERS	4
4	JOINT ASSEMBLY	1
5	ARM	2
6	BACK CABLE CLIP	4
7	ARM COVER	2
8	EXTENSION TUBE A	1
9	SCREW CAP 5/16"-18UNC*L3/4" +2WASHERS	2
10	EXTENSION TUBE B	1
11	PLASTIC COVER	2
12	BASE PLATE W650*D450*T=5.0	1
13	GLASS PROTECTOR ϕ 12.6	4
14	WASHER ϕ 9.5* ϕ 45	1
15	SCREW BH 3/8"-16UNC*L58mm	1
16	SPRING WASHER ϕ 3/8"	1
17	BASE	1
18	WHEEL	4
19	WRENCH NO.13	1
20	SCREW M4*P0.7*L12mm FOR LCD	12
21-1	ALLEN WRENCH NO.4	1
21-2	ALLEN WRENCH NO.6	1

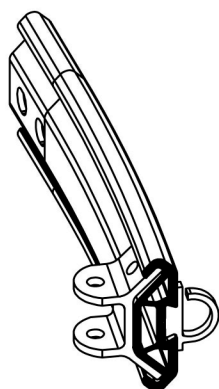

Installing LCD mount assembly
& Cable clip from both sides of slide track