



1. Use a flat-pin screw-driver to push open the plastic cap.
2. Loosen the cap screw by Allen wrench NO.6 adjust the tilting angle then tighten the cap screw again.

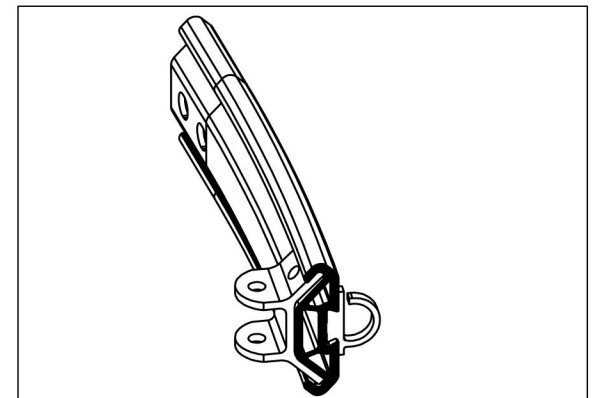

Installing LCD mount assembly
& Cable clip from both sides of slide track

*****OH43*****

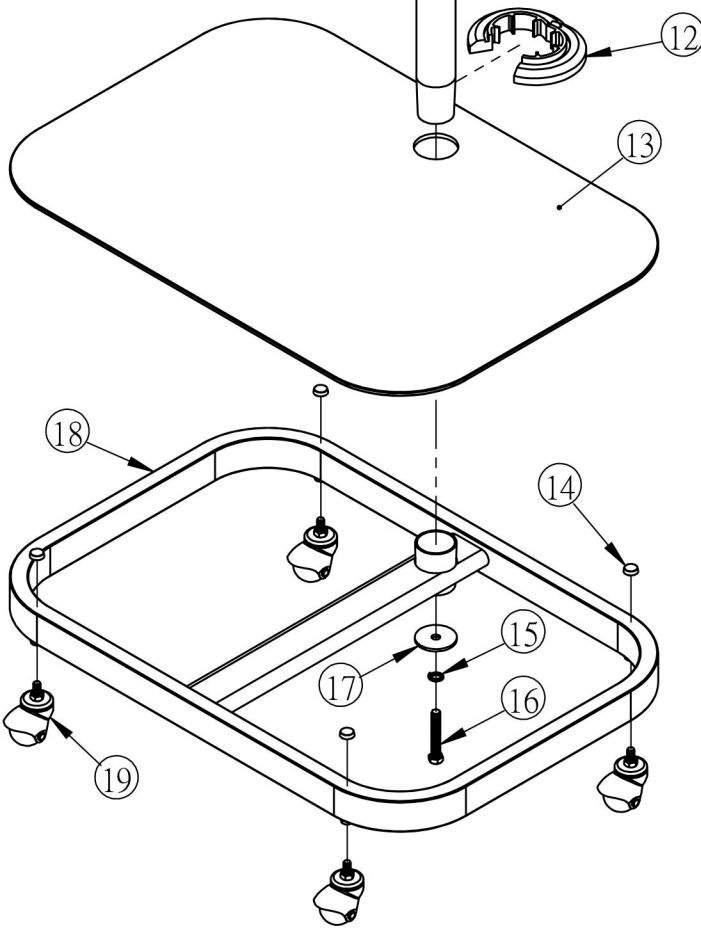

Item	Spare parts	Q'ty
1	LCD MOUNT ASSEMBLY	4
2	SCREW CAP M5*P0.8*L10	8
3	JOINT ASSEMBLY	2
4	ARM	4
5	BACK CABLE CLIP	4
6	ARM COVER	4
7	SCREW M6*P1.0*L22 + 2WASHERS	8
8	TUBE CABLE CLIP	1
9	EXTENSION TUBE A	1
10	SCREW CAP 5/16"-18UNC*L3/4" +2WASHERS	2
11	EXTENSION TUBE B	1
12	PLASTIC COVER	1
13	BASE PLATE W650*D450*T=5.0	1
14	GLASS PROTECTOR ϕ 12.6	4
15	SPRING WASHER ϕ 3/8"	1
16	SCREW BH 3/8"-16UNC*L58mm	1
17	WASHER ϕ 9.5* ϕ 45	1
18	BASE	1
19	WHEEL	4
20	WRENCH NO.13	1
21	SCREW M4*P0.7*L12mm FOR LCD	16
22-1	ALLEN WRENCH NO.4	1
22-2	ALLEN WRENCH NO.6	1