

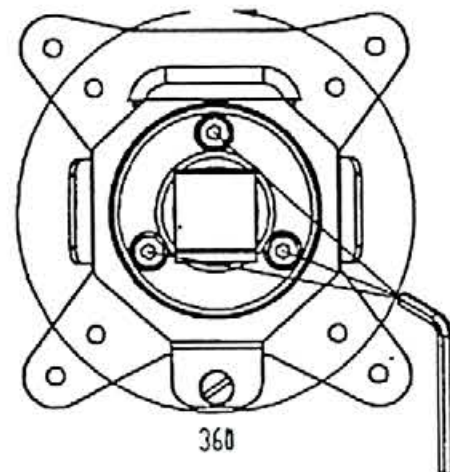


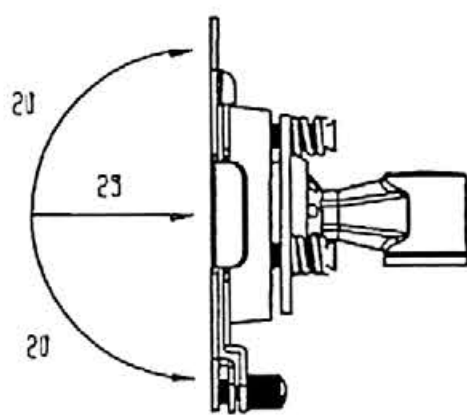


To loosen screws W/Allen key
to adjust monitor tilting
or swiveling.

Pls note hold the monitor w/hand
while loosening the screws,
otherwise, it might cause
the bracket or monitor damaged.

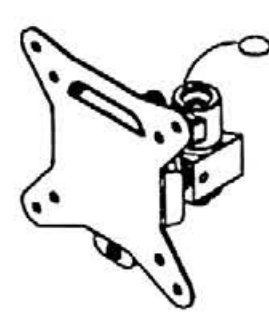

Take off the
plastic cover.


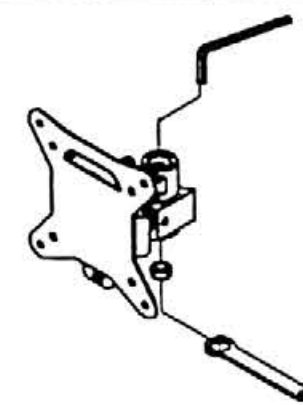


Using Allen key to
adjust swiveling left
or right
freely 90.



Put back the
plastic cover
After adjusting

LCD-417

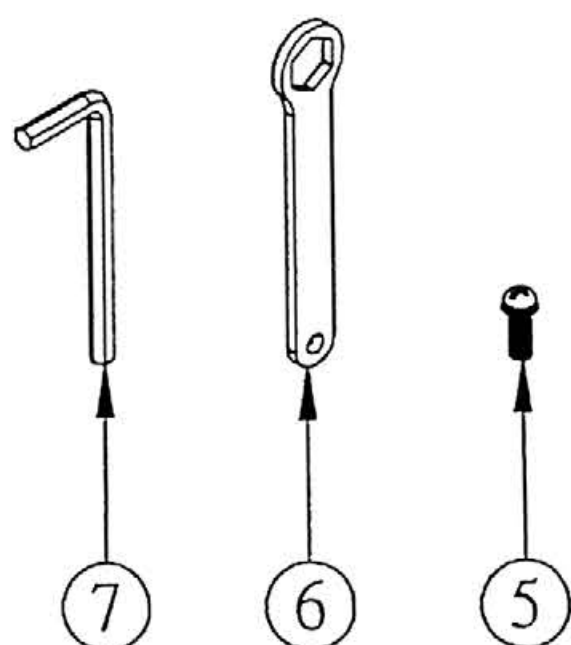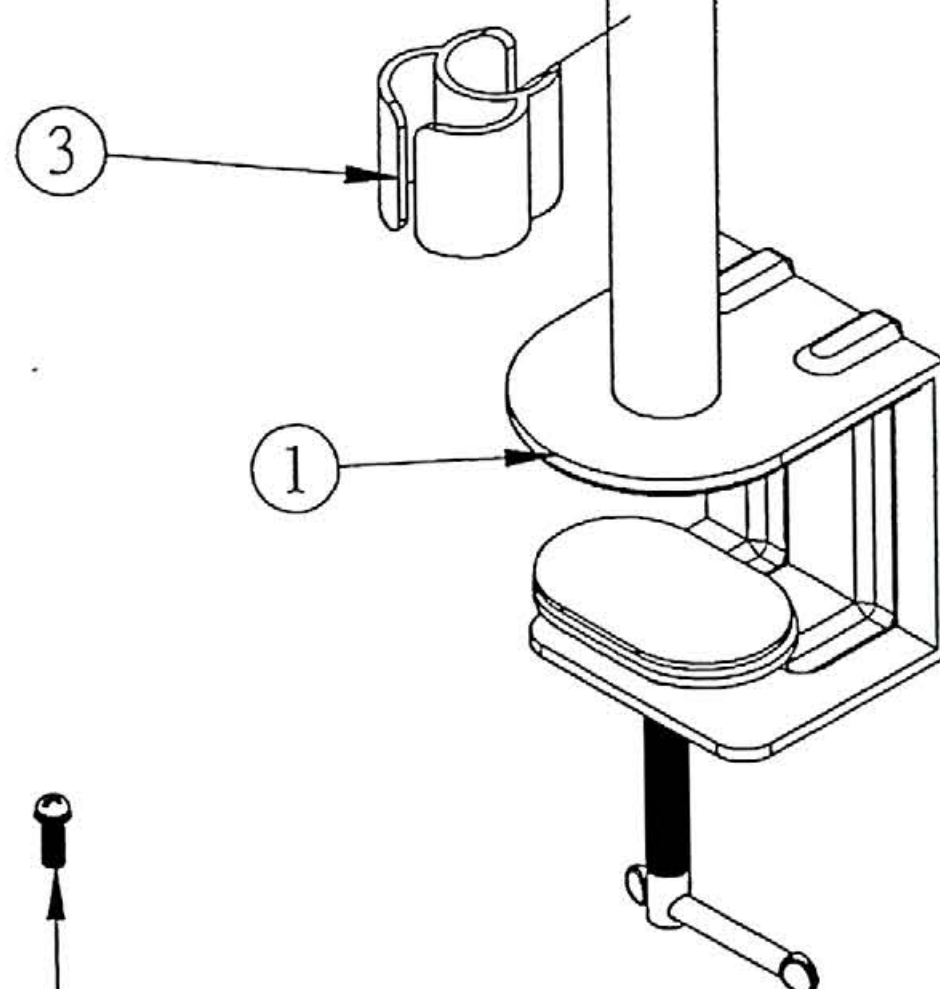

Item	Spare parts	Q'ty
1	FIXED TUBE	1
2	LCD MOUNT ASSEMBLY	1
3	CABLE CLIP	1
4	SCRERW M4*P0.7*L7mm	2
5	SCREW M4*P0.7*L12mm FOR LCD	8
6	WRENCH NO.13	1
7-1	ALLEN WRENCH NO.4	1
7-2	ALLEN WRENCH NO.5	1
7-3	ALLEN WRENCH NO.6	1



Cablematic