 



## Installation Instructions

Model: WM4201 Z1

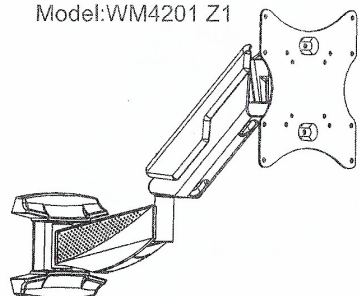


### Screw bag accessories:

- |                                |                          |
|--------------------------------|--------------------------|
| (A) 6x50 Drywall Screw (x4)    | (I) 5x16 Washer (x4)     |
| (B) 6x16 Washer (x4)           | (J) Bubble Level (x1)    |
| (C) 10X50 Concrete Anchor (x4) | (K) Plastic housing (x2) |
| (D) M4X25 Screw (x4)           | (L) S4 allen wrench (x1) |
| (E) M5X25 Screw (x4)           | (M) S5 allen wrench (x1) |
| (F) M6X30 Screw (x4)           | (N) S6 allen wrench (x1) |
| (G) M8X30 Screw (x4)           | (O) Wrench (x1)          |
| (H) Spacer (x4)                |                          |

### Installation Steps 1-A


The installation of concrete wall

Installation the plastic expansion on the wall

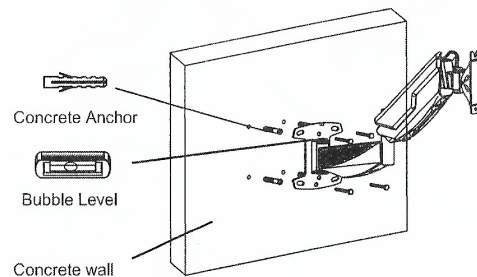


### Installation Steps 1-B

The installation of wooden post

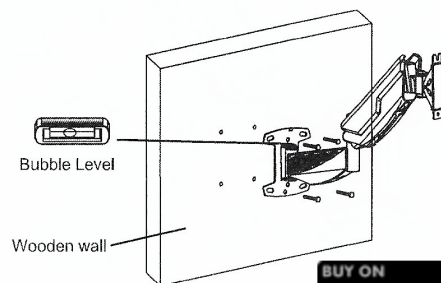


### Installation Steps 2

Install plastic housing to the wall

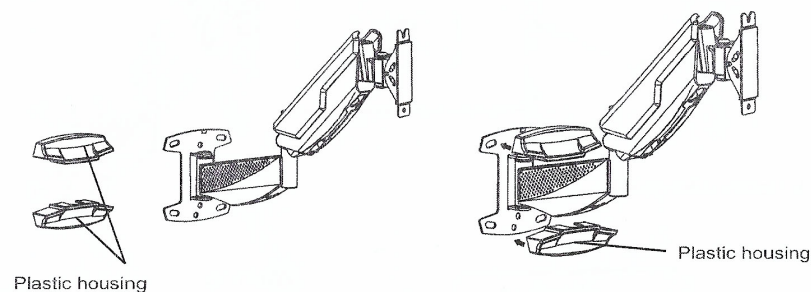


### Installation Steps 3

Let mounting panel link to the panel

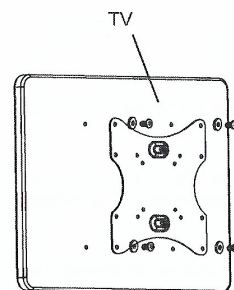

Install mounting panel to flat back of TV

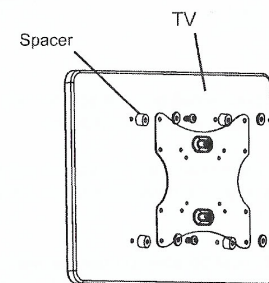

Install mounting panel to bent back of TV

