 



Installation Instructions

Model: WM4201 Z2

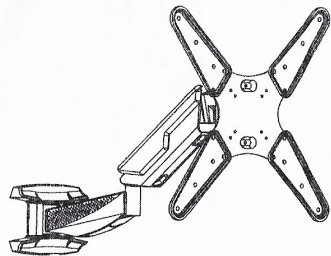


Screw bag accessories:

- | | |
|--------------------------------|--------------------------|
| (A) 6x50 Drywall Screw (x4) | (I) 5x16 Washer (x4) |
| (B) 6x16 Washer (x4) | (J) Bubble Level (x1) |
| (C) 10X50 Concrete Anchor (x4) | (K) Plastic housing (x2) |
| (D) M4X25 Screw (x4) | (L) S4 allen wrench (x1) |
| (E) M5X25 Screw (x4) | (M) S5 allen wrench (x1) |
| (F) M6X30 Screw (x4) | (N) S6 allen wrench (x1) |
| (G) M8X30 Screw (x4) | (O) Wrench (x1) |
| (H) Spacer (x4) | |

Installation Steps 1-A


The installation of concrete wall

Installation the plastic expansion on the wall

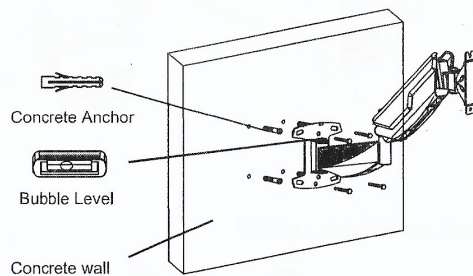


Installation Steps 1-B

The installation of wooden post

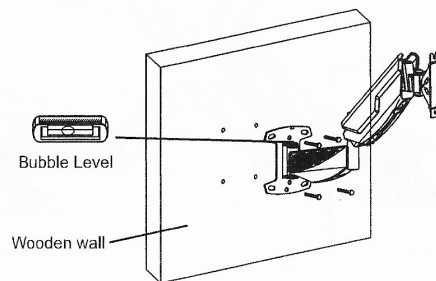


Installation Steps 2

Install plastic housing to the wall

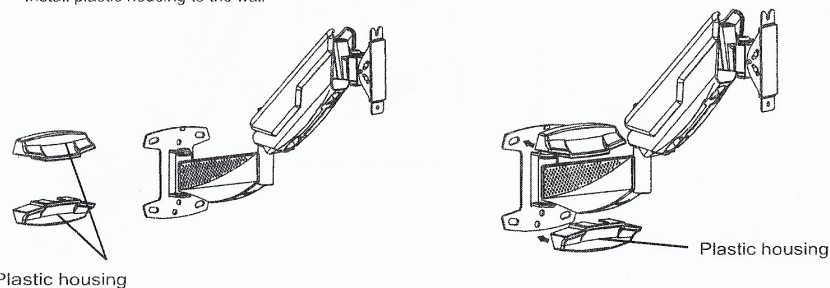


Installation Steps 3

Let mounting pannel link to the panel

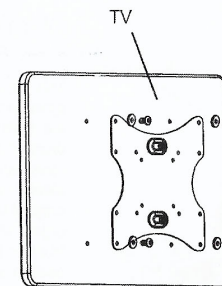

Install mounting panel to flat back of TV

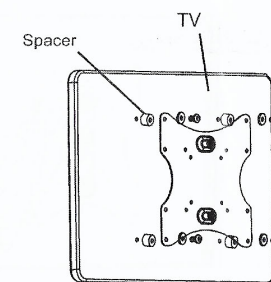

Install mounting panel to bent back of TV

If mounting patter greater than 200X200MM, need expander slice to install

