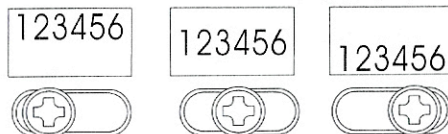


# PRICE LABELLER

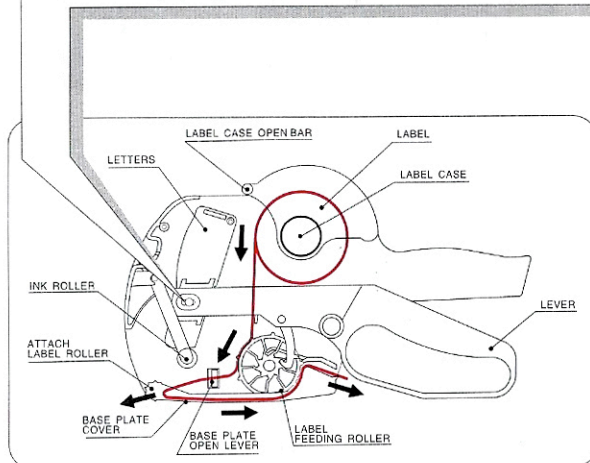


Loosen the two screws on both sides of labeler close to letter head.



Move them left or right as instructed on above diagram.

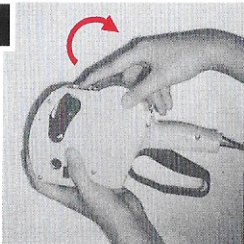
\*It's better not to change the position frequently.

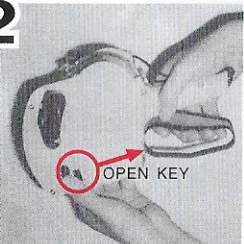


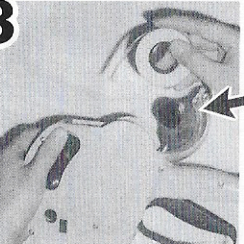
## CAUTIONS

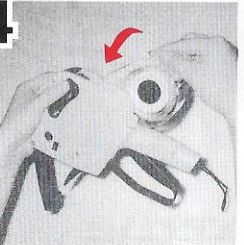
- Do not drop the labeler from 1m or higher above the ground or do not expose it to places where shocks occur.
- The Labeler consists of A.B.S. and P.O.M. resin that are sensitive to chemical reactions, especially A.B.S. Do not expose to heat over 60 degrees Celsius (60°C).
- Do not inject general ink into Ink Roller. Special ink should be used for the product, otherwise the band will be damaged.

## Operating Instructions

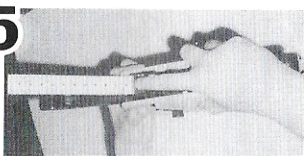
- 

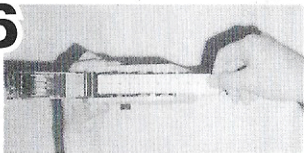
Pull out **Label Case** as shown.
- 


Pull out **Base Plate** by pulling back **Plate Open Keys** on both sides of labeler.
- 

Load **Label** onto **Label Hanger** inside of **Label Case**.
- 

Insert **Roll** into **Tunnel** above "LABEL" sign until you see 10cm of label paper coming out of the bottom. Then close **Label Roll Cover**.

- 

Close **Base Plate**.
- 

Line up **Holes** with **Feed Roller's sprocket pins** : prominent parts.
- 

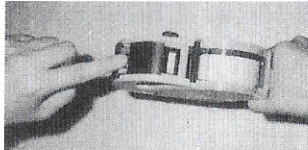
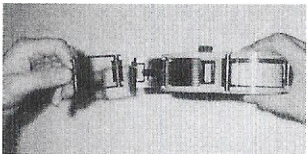
Close **Base Plate Cover**. Be careful not to detach stickers of label.

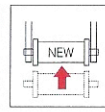
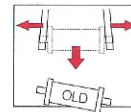
- 

Squeeze and release lever three times for trial. Then the labels come out. Attach labels by **sliding** it onto a desired place of product.

ATTACH LABEL ONTO DESIRED PLACE OF PRODUCT.

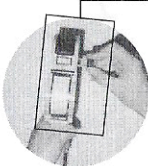
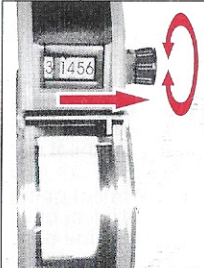
## Replacing Ink Roller

- 
- Press and pull apart **Ink Roller Case**.
- 
- Pull **Ink Roller Holder** by its grip.



\* Widen Ink Roller Holder's sides, and replace Ink Roller with a new one.

## Setting Letter Head

- 
1. Pull out or push in **Dial Shaft** to a desired digit of **letter-band** then turn the shaft.
- 
2. After you set up all letters, push in the shaft completely.