



CABLEMATIC

● Changing the Ink- Roller.

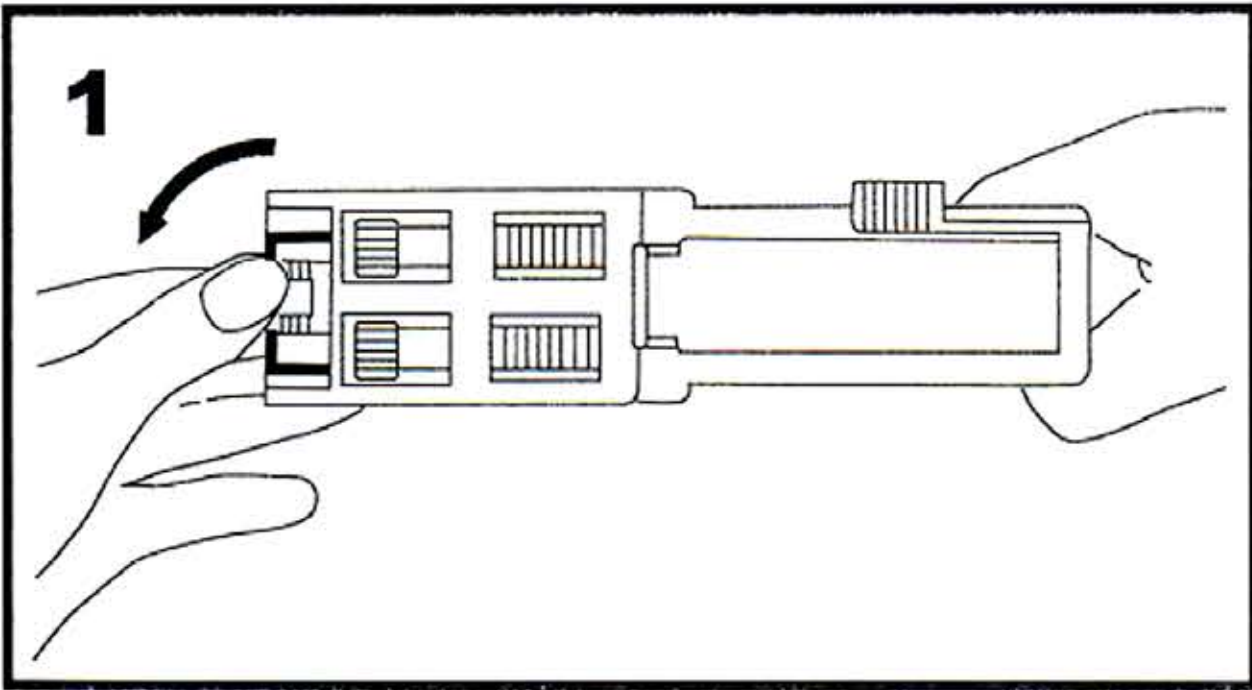


- Pull the Ink-Roller case and take out it from the machine.

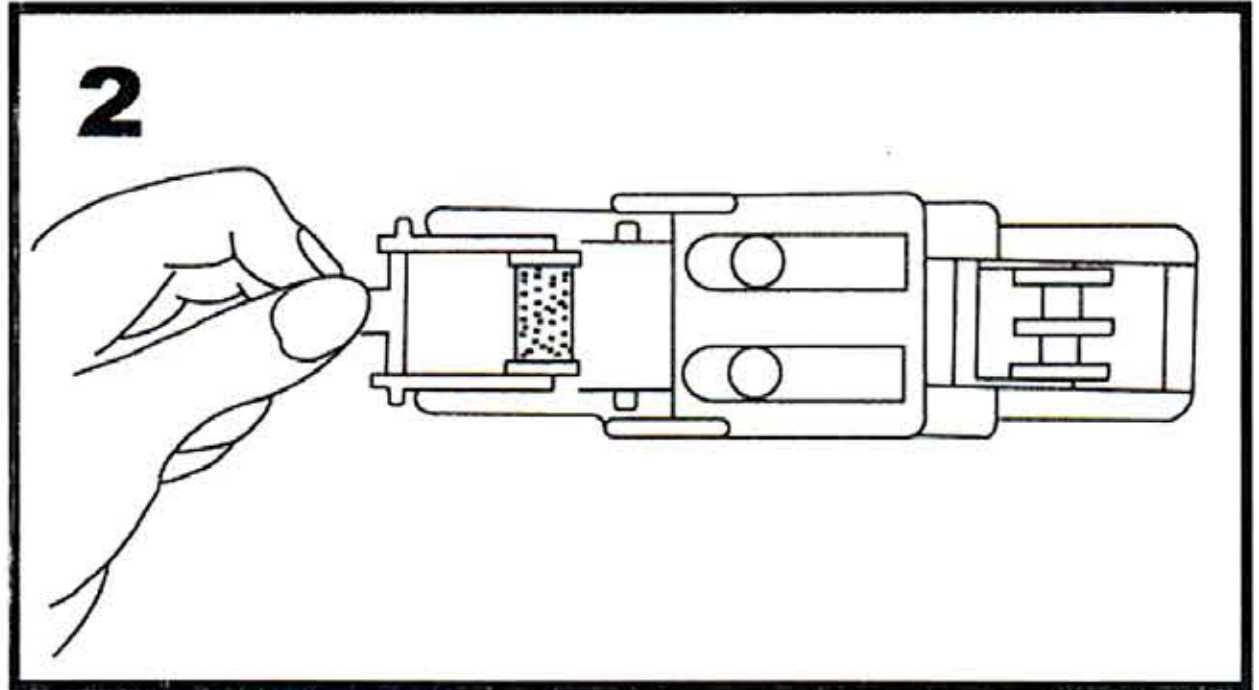


- Insert the new Ink- Roller to case as per drawing and Re -Insert the Ink-Roller case to the machine.

● Setting the letter-head

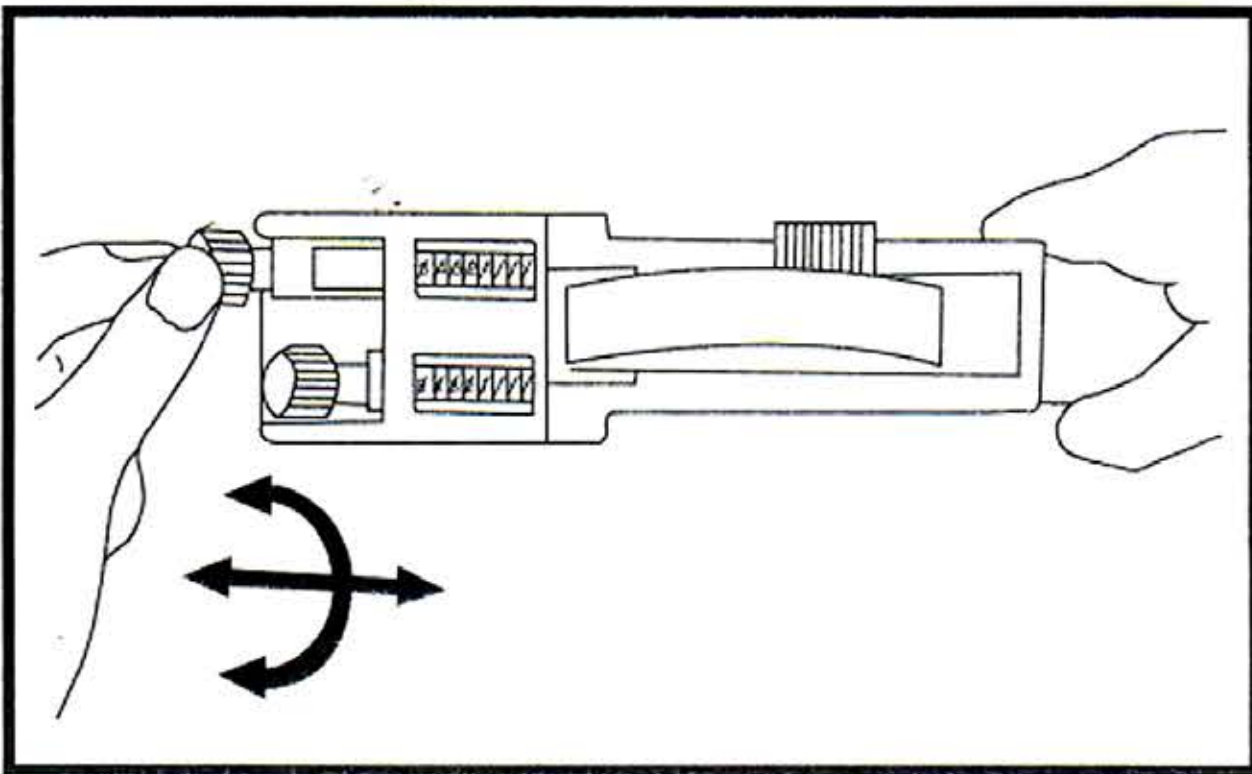

- Pulling the dial outward and rotate each band.
- Setting the bands from the left or right.
- Return the dial to the original position.

● Adjusting the printing position.

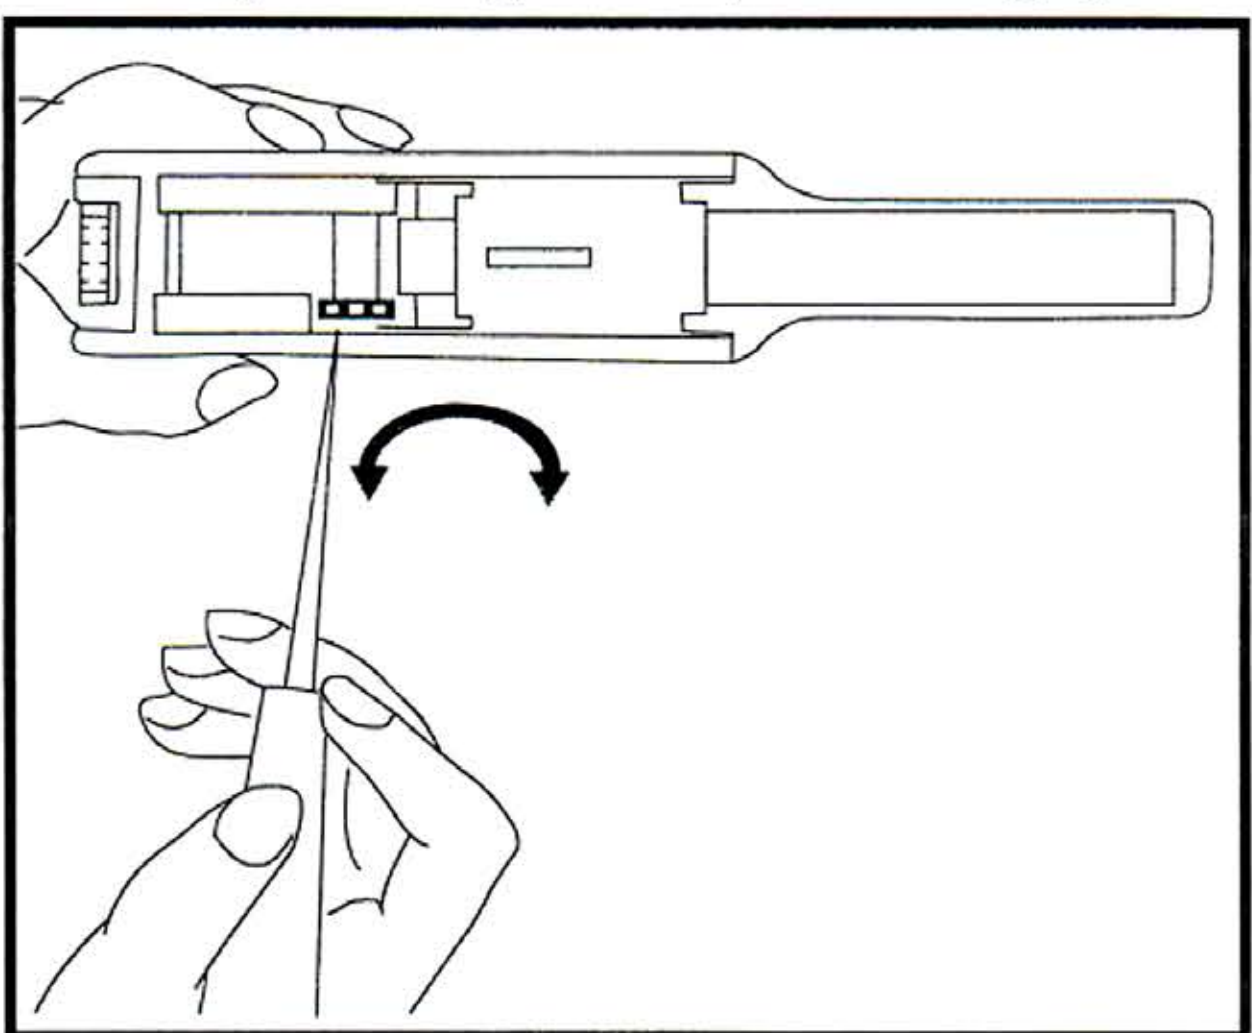


If the printing position is not correct, please adjust the Printing-Letter control Key to left or right.

0	1	2	3	4	5	6	7	9	0	0	1	2	3	4	5	6	7	9	0	0	1	2	3	4	5	6	7	9	0
0	1	2	3	4	5	6	7	9	0	0	1	2	3	4	5	6	7	9	0	0	1	2	3	4	5	6	7	9	0




CABLEMATIC


● Inserting the Labels

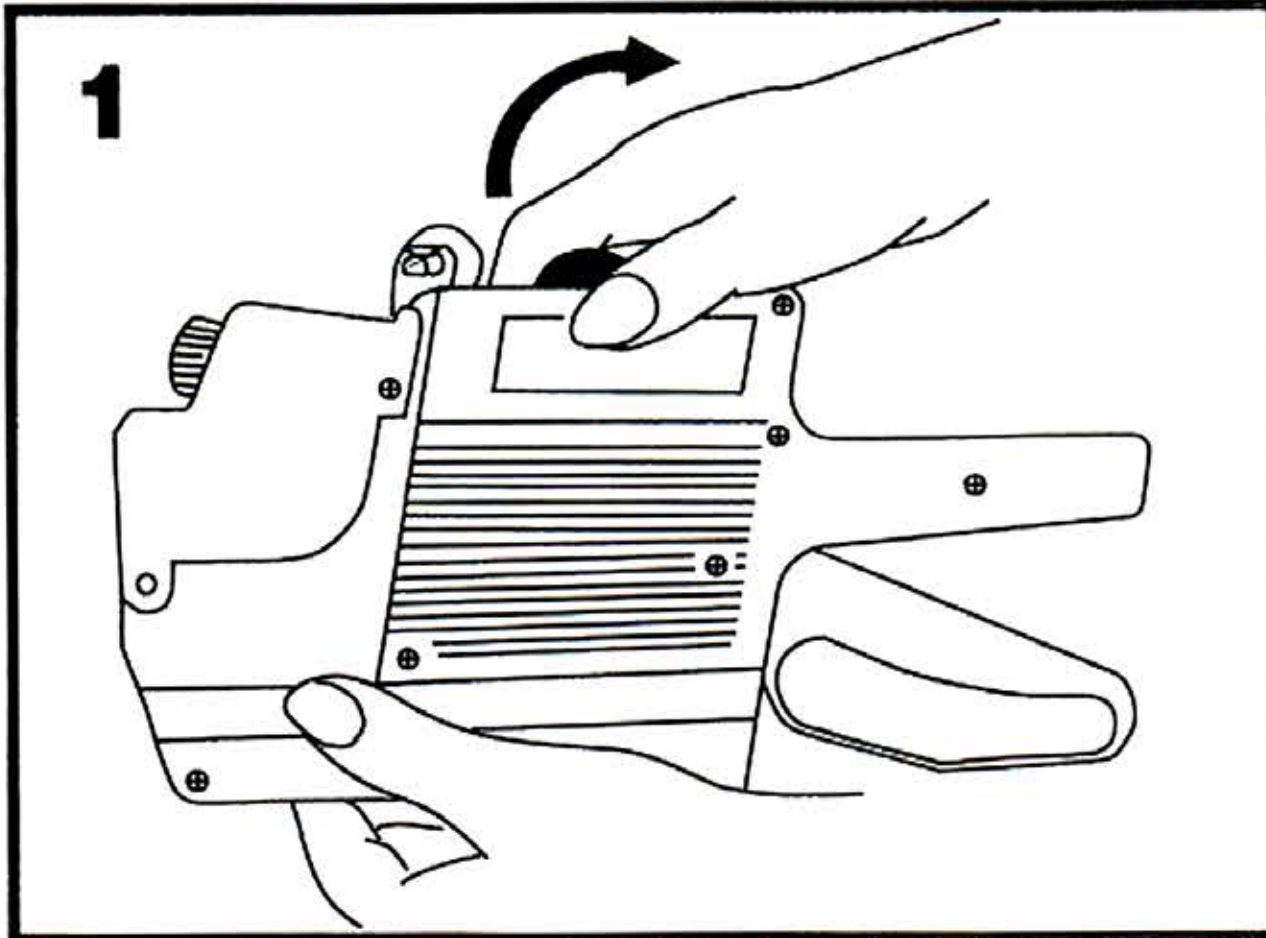


- Pull up the label case to the direction of arrow.

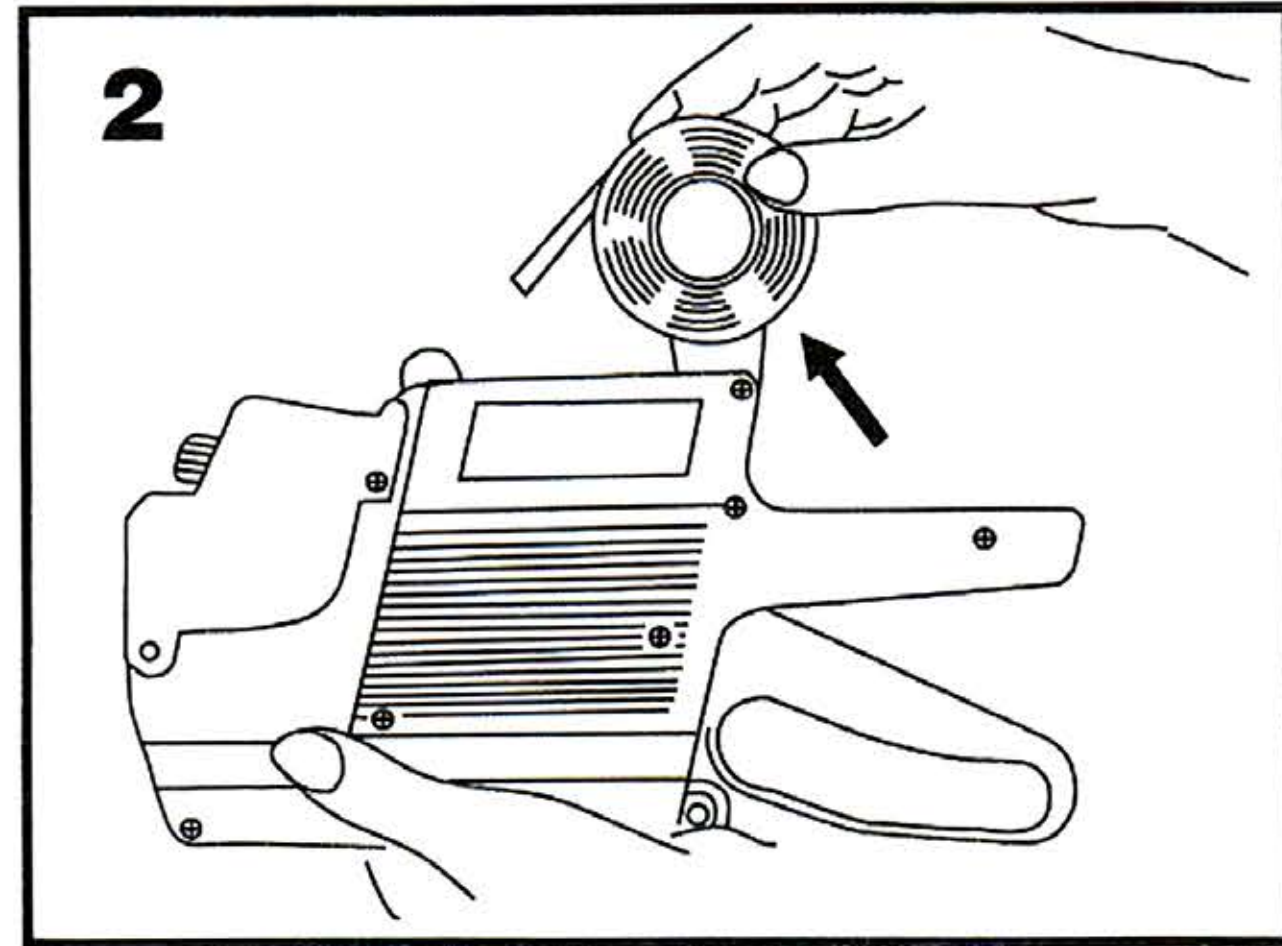

- Return the label case to original position after inserting the label.

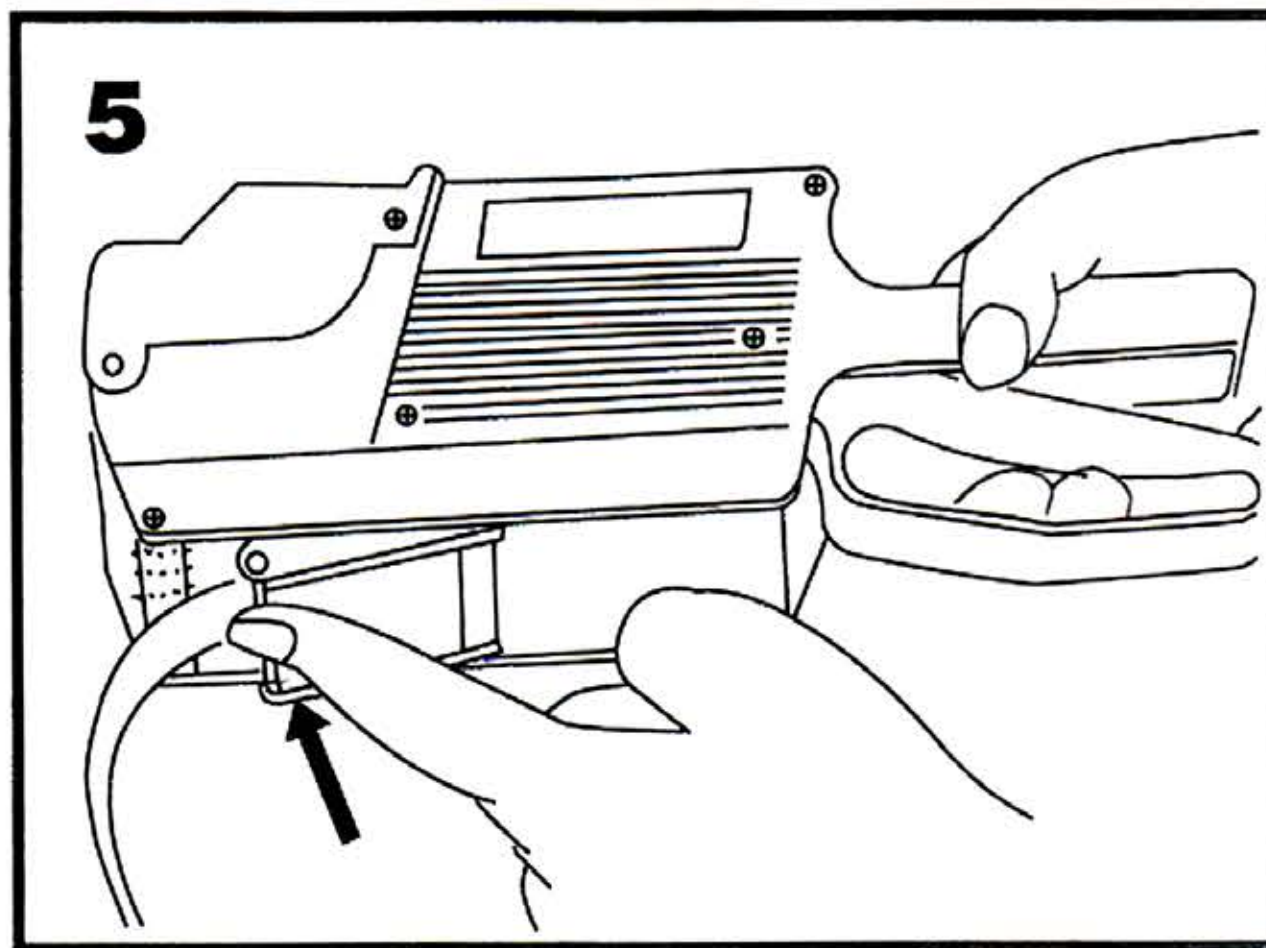


- Close the base plate when the label come out from it about 10cm.

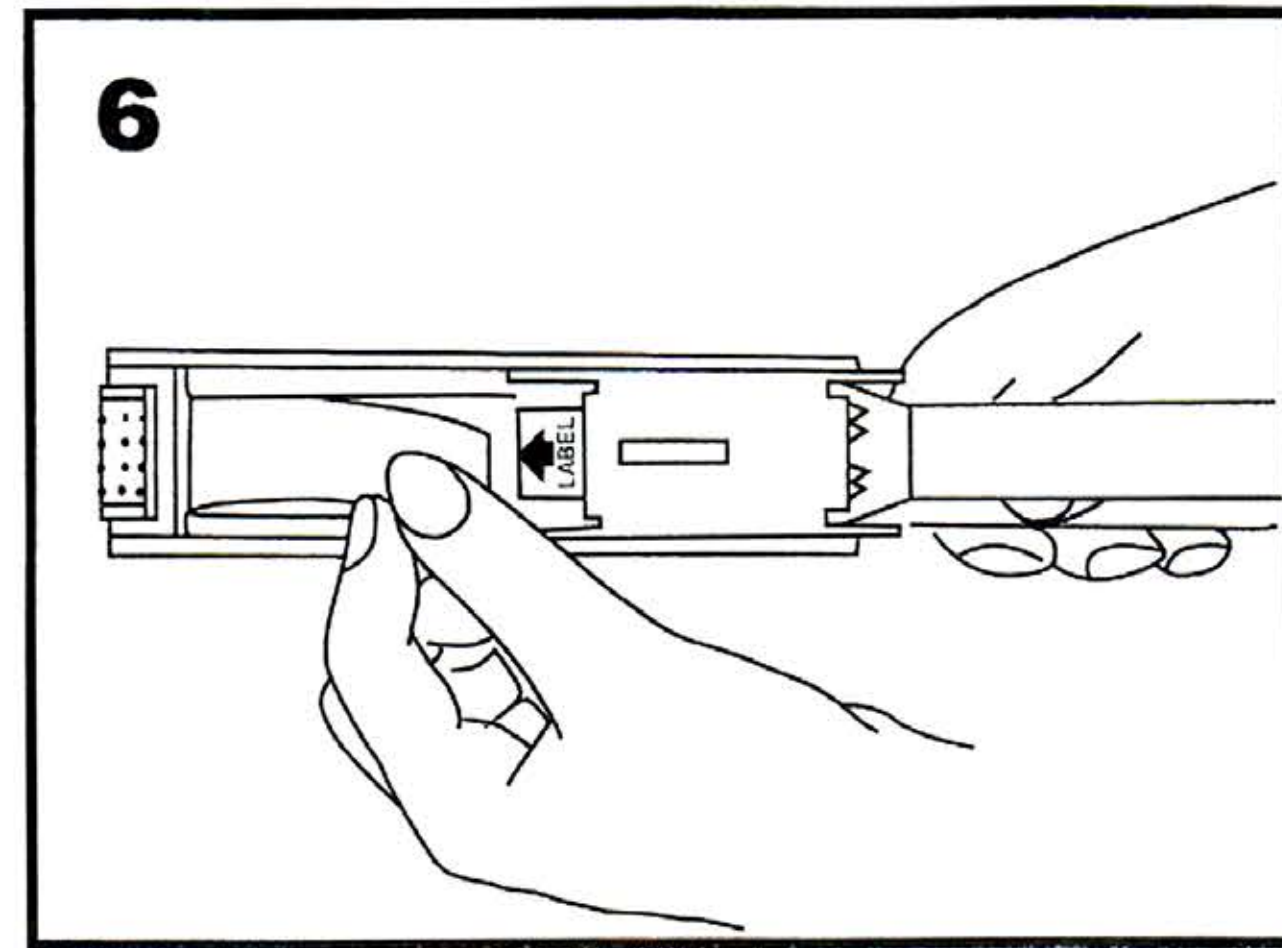


- Insert the label to the label tunnel.




CABLEMATIC

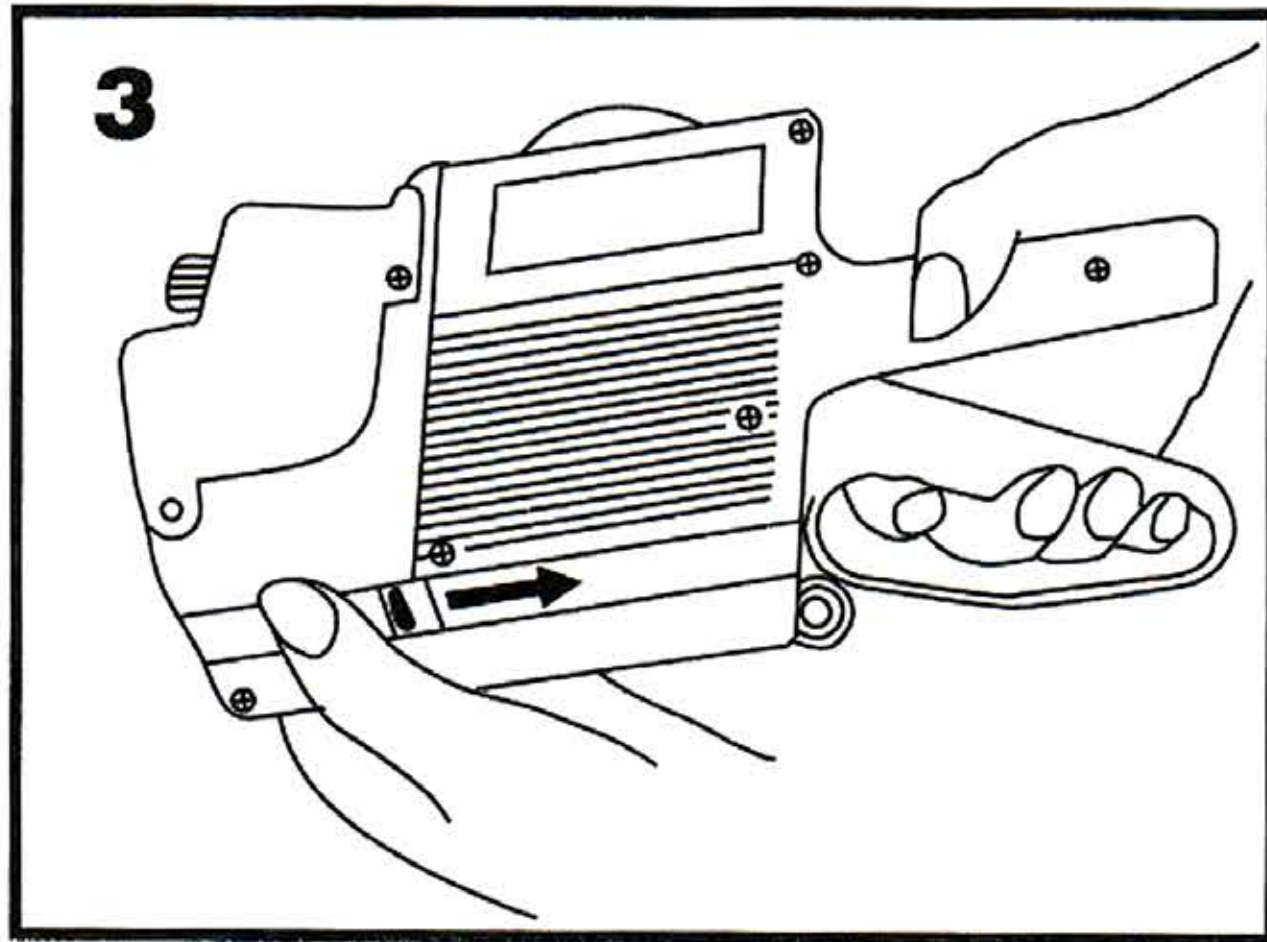


- Press the base plate open key to the direction of handle. Then the base plate will be opened.

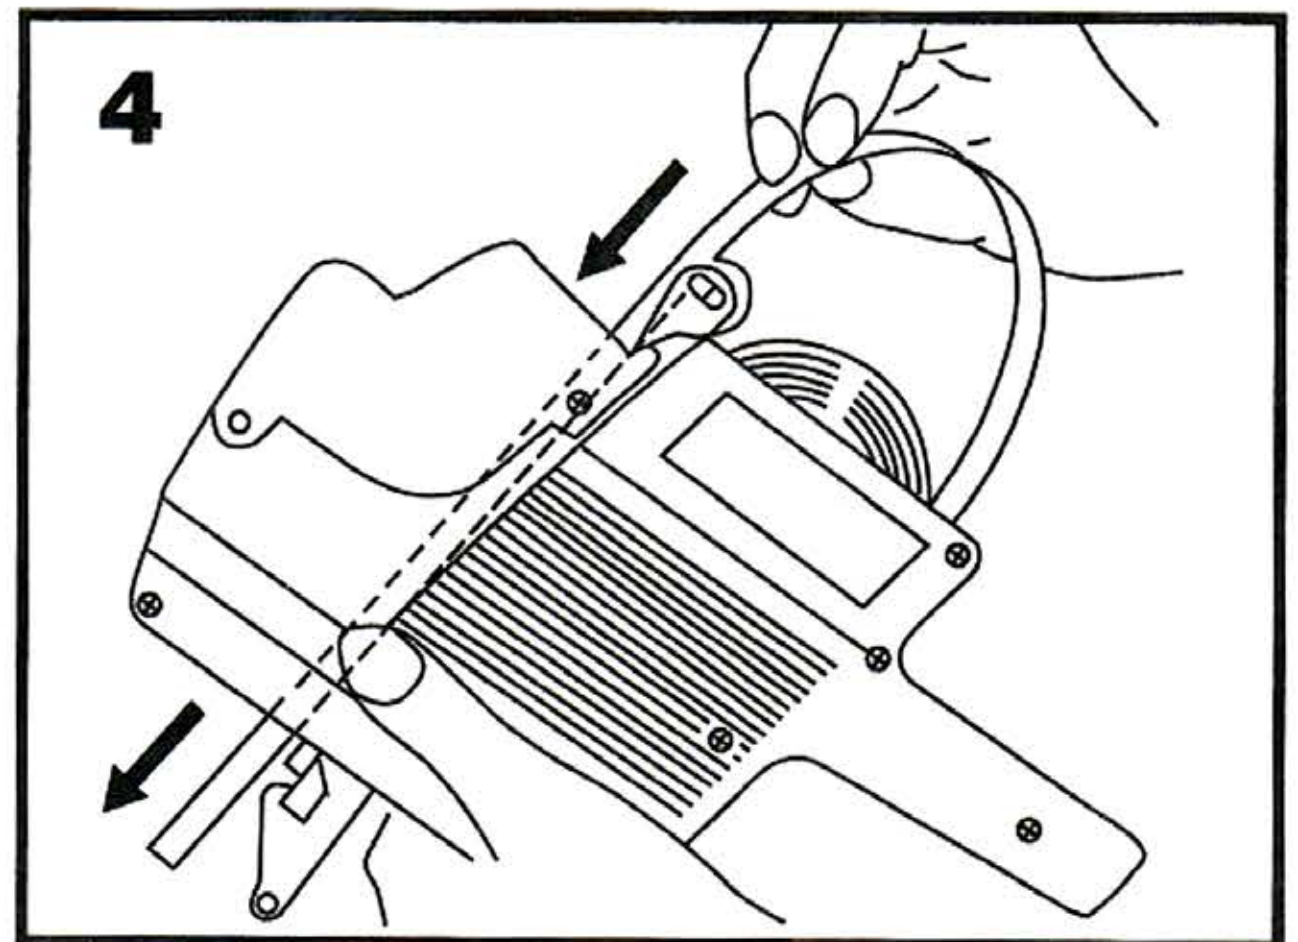

- Insert the label to the direction of arrow sufficiently.

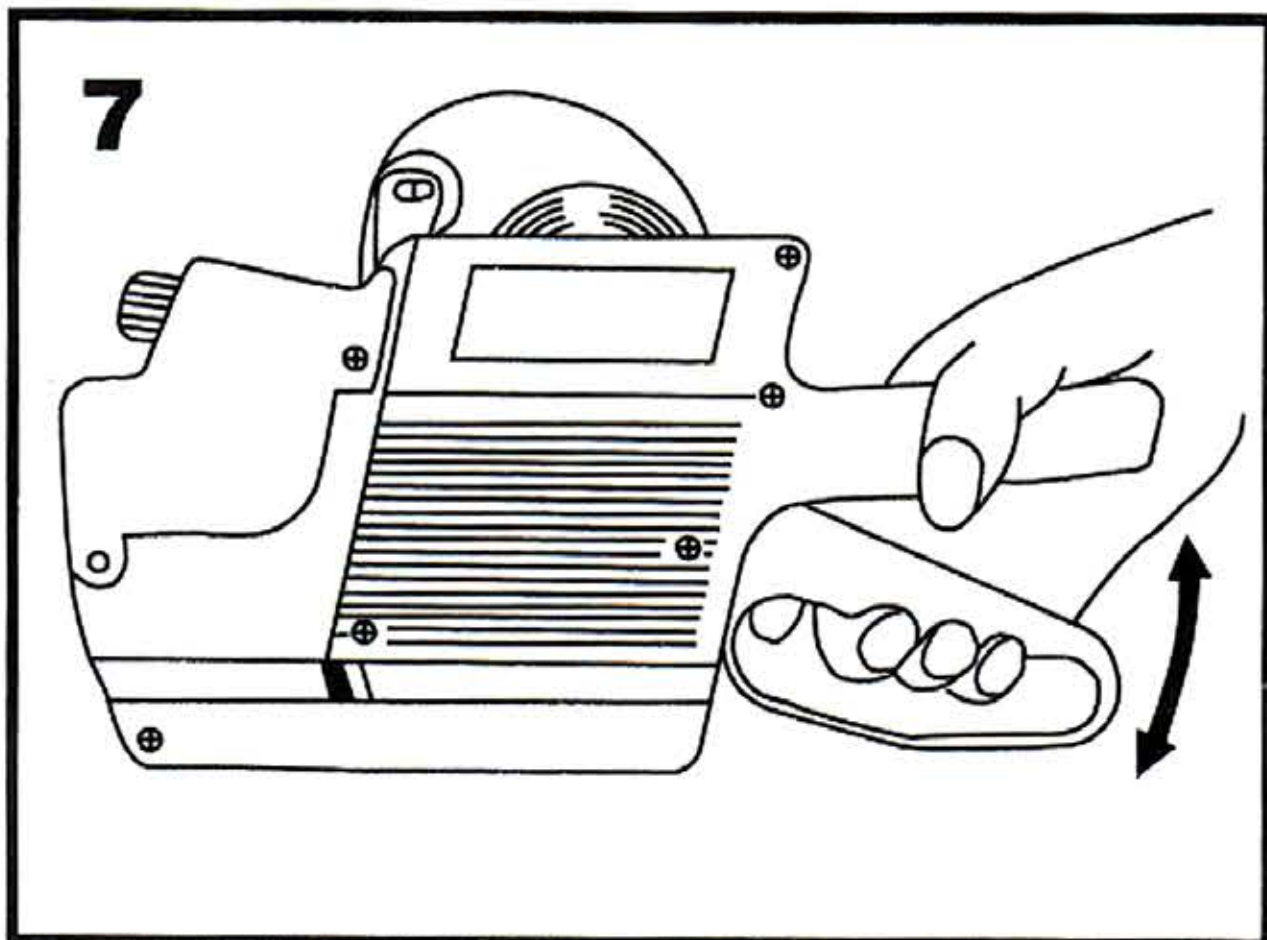

- Operate the the labeller 2 or 3 times. Then the printing labels come-out.

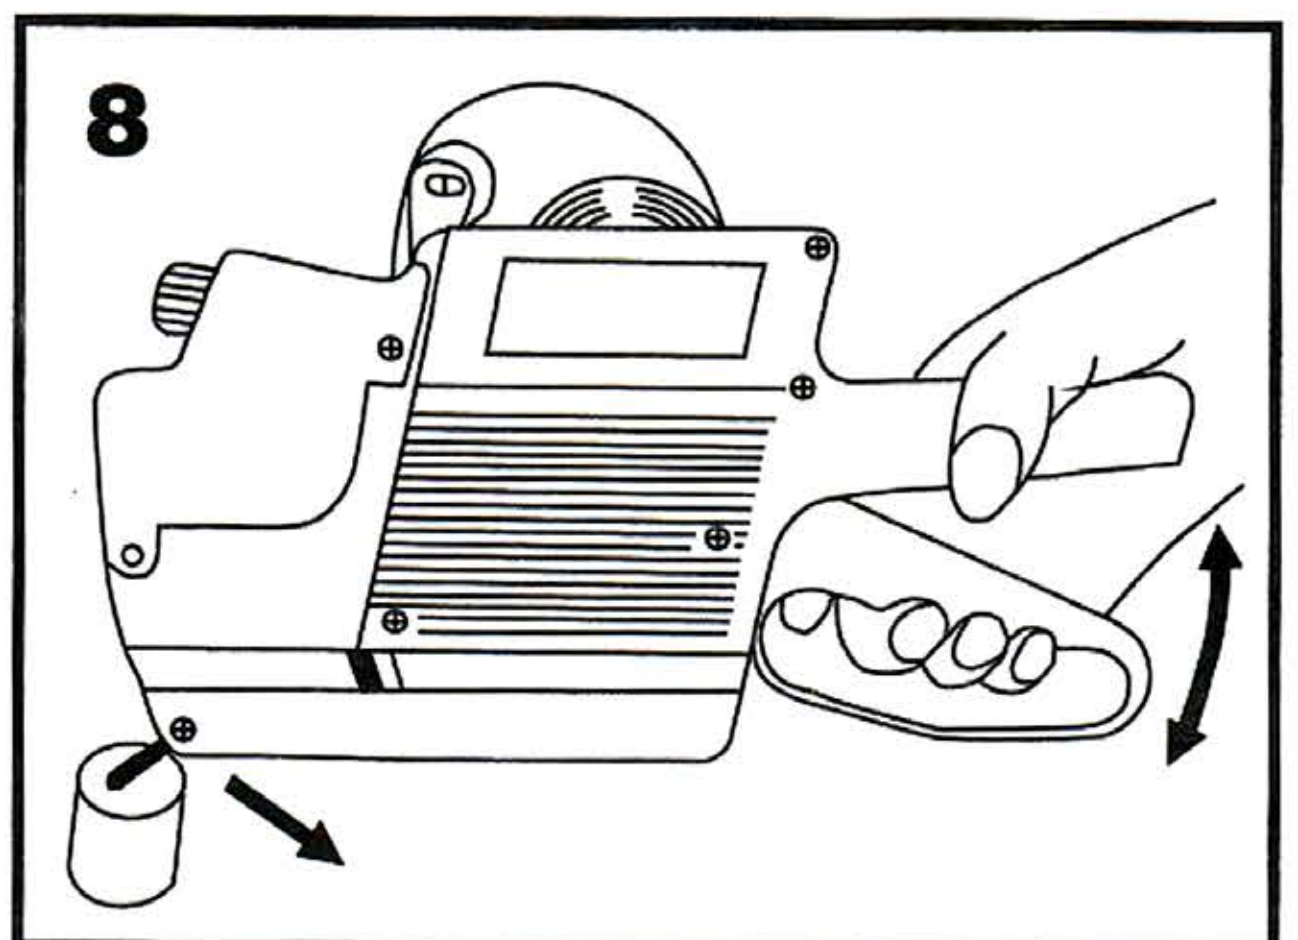

- Attach the label on the goods.



CABLEMATIC