buy on www.cablematic. The 12V Power Supply

Installation insruction

- 1.Mount the enclosure in a preselected location where it is out of sight and protected forom moisture and water.
- 2.Knock out the appropriate knockouts for running cables.
- 3. Turn power switch to "OFF" position.
- 4.Connect all camera 's power pairs to individual protected outputs.
- 5.Plug the AC plug into AC100-240V outlet. Turn power switch to "ON" position, the green light should be on 6 Close the cover and secure it with the provided screws.
- 7.The indvidual PTC fuse is rated be on 60V/2.5A(4 outputs-5A,9 outputs-10A); 60V/1.1A(9 outputs-5A,18 outputs-10A). 8.The PTC5 and PTC10 fuse is rated at 16V/14A(4 outputs-5A,9 outputs-5A,9 outputs-10A); The PTC19 and PTC20 fuse is rated at 30V/6A(18 outputs-10A). The PTC19 and PTC20 fuse is rated at 16V/14A(18 outputs-15A).

