

## USER MANUAL

Thank you for having chosen our Turntable-BKL® product. For your own safety, please read the user manual carefully before installing it.

## SPECIFICATIONS TECHNIQUES

Article	ND-RC8013	
Power Supply	Input AC110V- 240V~50/60Hz, 1.5A ; Output DC12V 2.5A	Easy control: Remote control +button switch control
Power Consumption	36W	Tendor H2.
Rotation Speed	0.5RPM-2RPM	
Max. Loading Weight	100KG (custom other heave duty turntable)	
Product Dimensions	Dia80cm, H8cm	
Net Weight	24kg/pc	IR receiver Clockwise Speed down

## Instruction

- 1. Place the turntable horizontally;
- 2. Remove the packing belt from the gap !



- 3. Plug in the power cord;
- 4. Approach IR remote control to the turntable within 5m by aiming it at the infrared receiver on turntable ;
- 5. Press direction button "CW" to rotate clockwise, or press "CCW" to rotate counterclockwise(Same in remote control and Manual button control).
- 6. Press "+" to speed up ,and press "-" to speed down(Same in remote control and Manual button control).
- 7. Keep the turntable away from water.
- 8. keep the turntable out of reach of children under 3 years .

Remarks: each time to change rotating direction by remote control ,it takes 2 seconds for the turntable to receive the command and respond.