

 
User Manual of ND-RP200 Motorized Turntable

Outstanding
intelligent hardware service provider


Thank you for using product. For your own safety please read this user manual carefully before install it.

Product Feature


360-degree rotating display product or for product photography shots. Adjustable speed and direction control by remote control or manual button control (Both control methods can be used interchangeably).

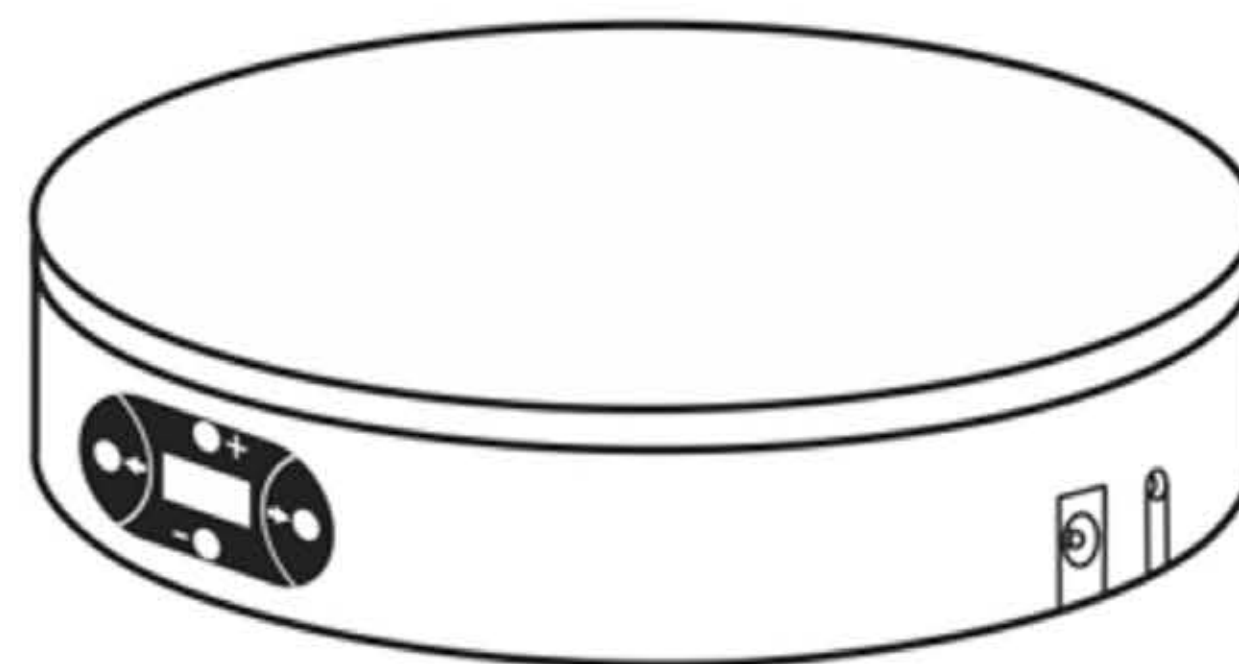

| Standard configuration | |
|------------------------|---------|
| Turntable ND-RP200 | 1 piece |
| Remote control | 1 piece |
| AC/DC adapter | 1 piece |

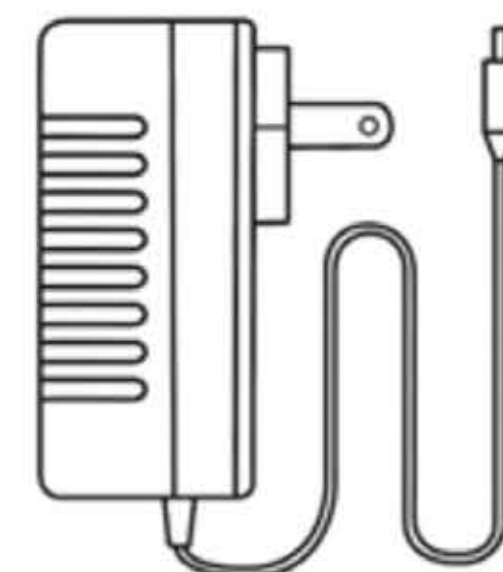 

Remote control instructions

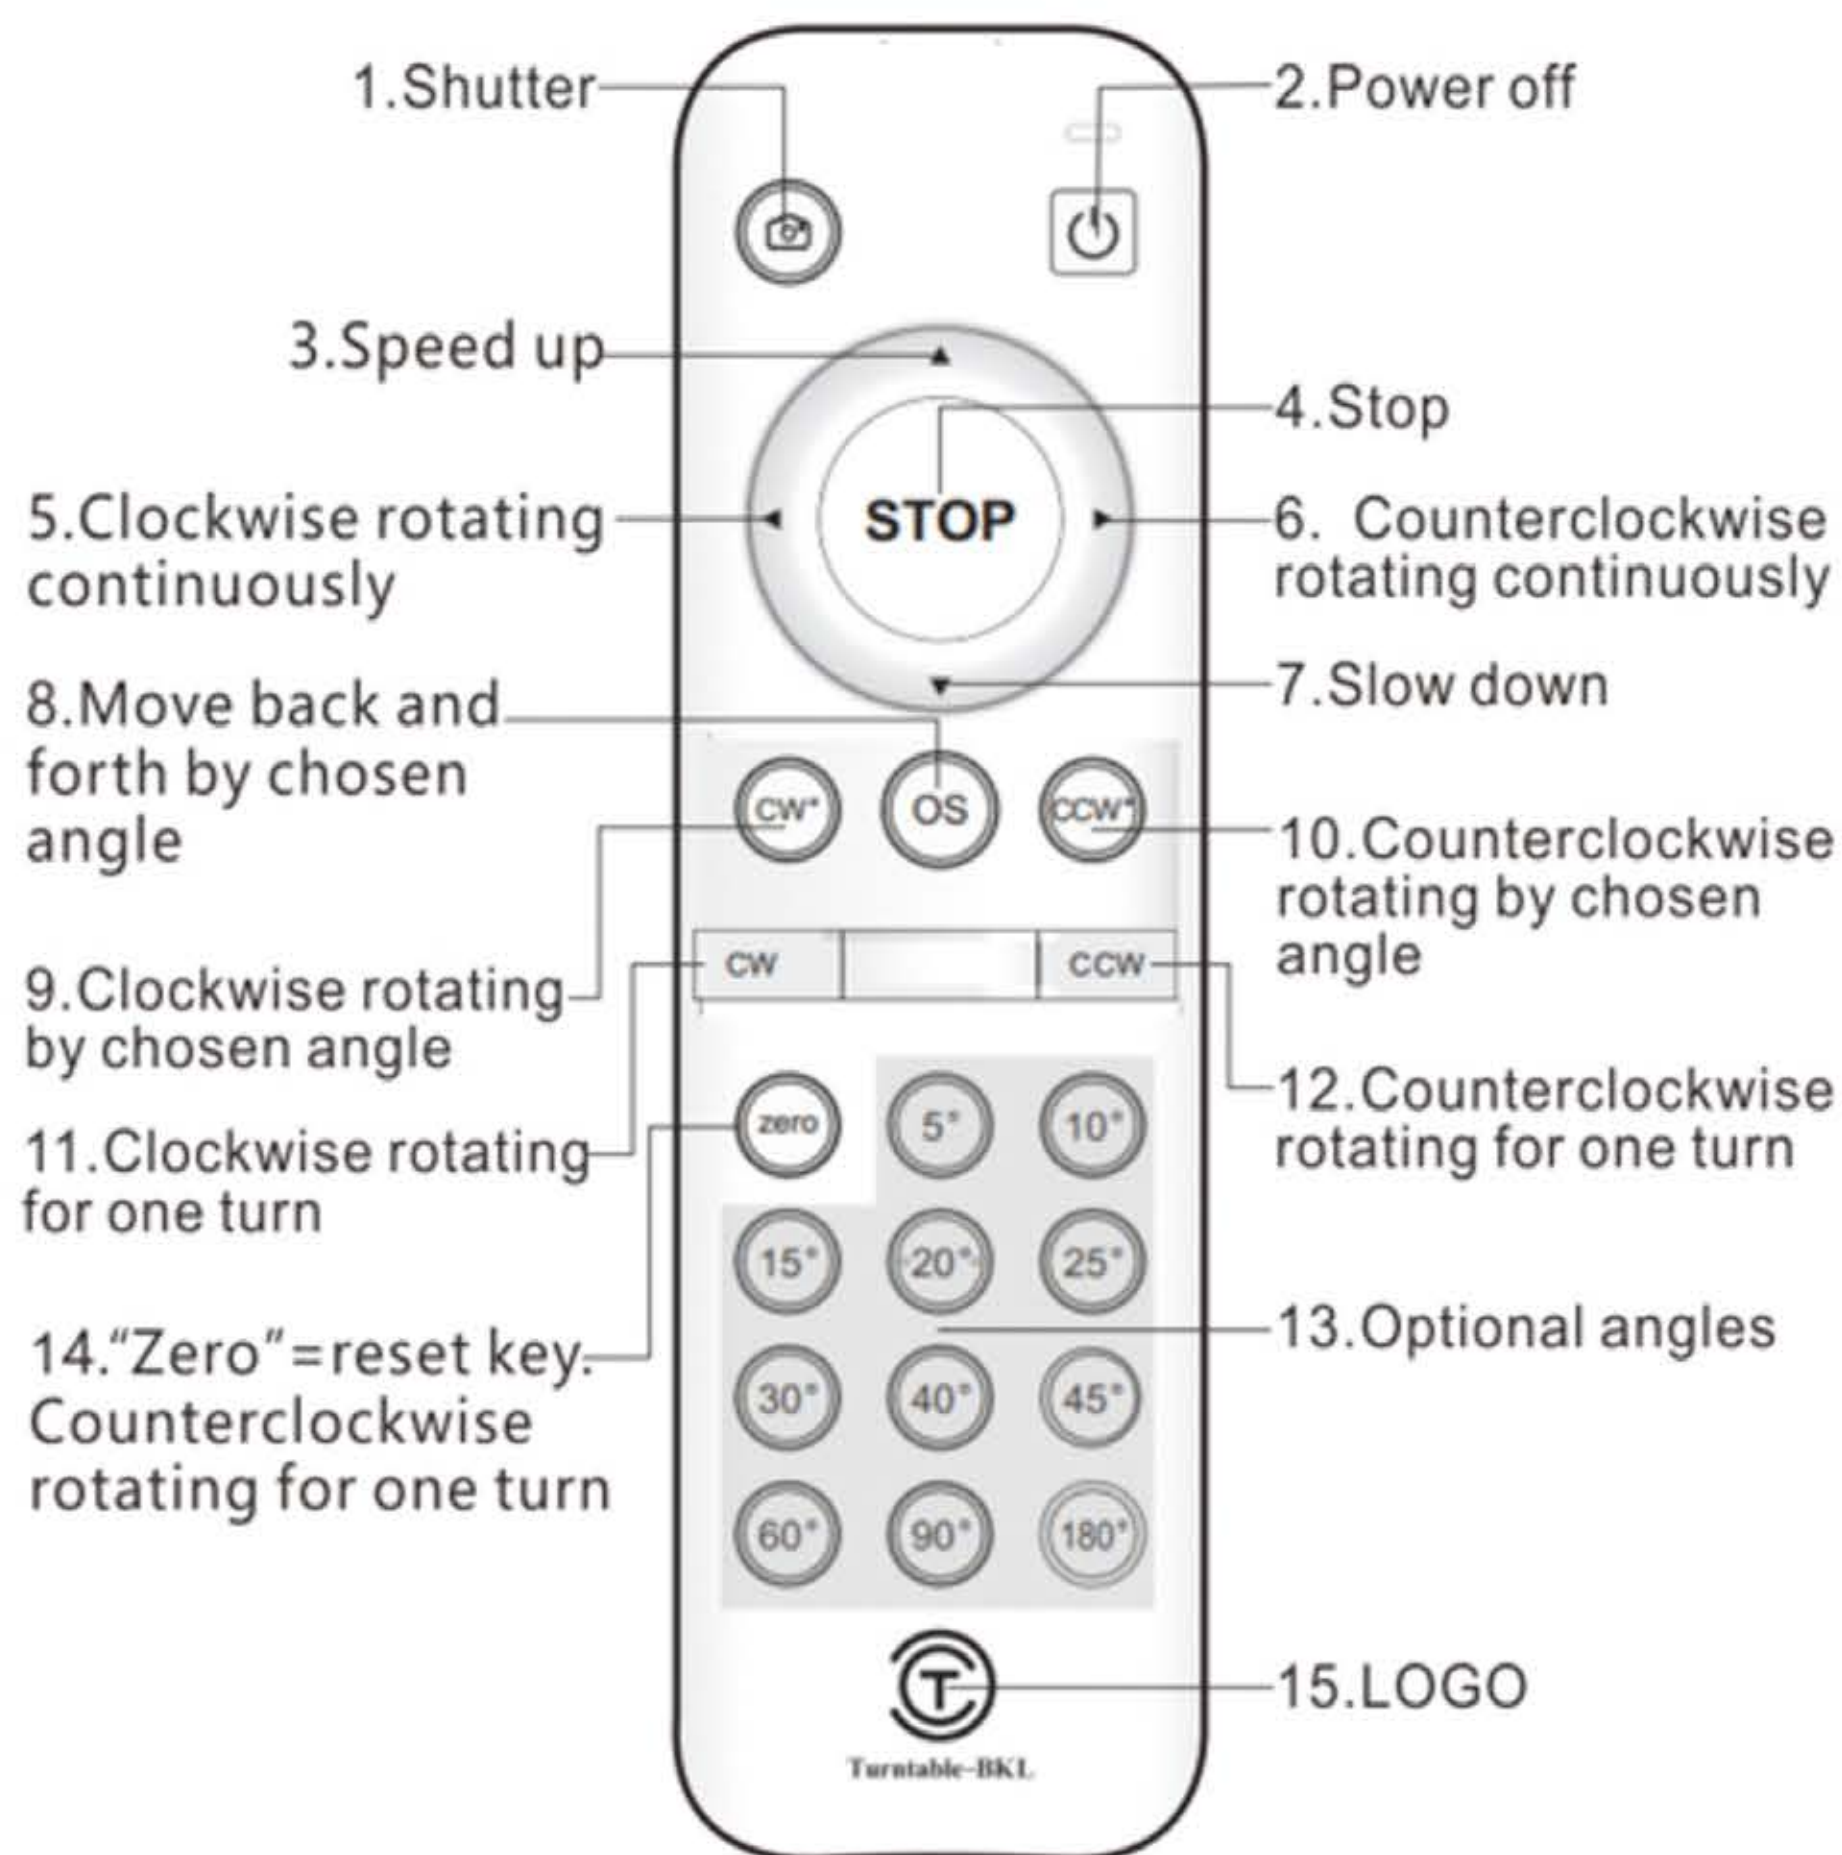 


Remarks: "A°" stand for the angle keys 5°/10°/15°/20°/25°/30°/40°/45°/60°/90°/180°.

1. Press "Shutter" button to control camera or smartphone to take a photo automatically when the turntable and camera or smartphone are connected via a matching shutter release.
2. Power off.
3. Speed up.
4. Stop.
5. Clockwise rotating continuously.
6. Counterclockwise rotating continuously.
7. Slow down.
8. "OS" is oscillating motion to move back and forth in any chosen angle. This key only works with the angle key together. Press "OS+A°", then turntable move back and forth in the chosen angle.
9. "CW°" is the mode to rotate turntable clockwise intermittently under any chosen angle within a circle for one fully turn. This key only works with the angle key together. Press "CW° + A°", then turntable rotate, pause time for every angle intermittent is about 3 seconds.
10. "CCW°" is the mode to rotate turntable counterclockwise intermittently under any chosen angle for one fully turn. This key only works with the angle key together. Press "CCW° + A°", then starts rotating, pause time for each angle intermittent is about 3 seconds.
11. Clockwise rotating fully one turn.
12. Counterclockwise rotating fully one turn.
13. Except "Zero" key, press any other angle key "A°" is invalid. They can only be used together with keys "CW° / CCW° / OS", press "CW°" or "CCW° + A°" to realize angle rotating and release the shutter shooting signal automatically. Press "OS + A°" to realize angle rotating at move back and forth mode.
14. "Zero" key, press it and set the current position as the starting position of turntable, and turntable starts counterclockwise rotating fully one turn, then stop.

Specifications

| | | | |
|--------------------|---|-------------------|-------------------------|
| Material | Plastic | Adjustable speeds | 1.7RPM-4RPM |
| Color | White | Control | IR remote/Manual button |
| Size | Φ200mm*H50mm | Certification | CE/FCC/ROHS |
| Rotating direction | Anticlockwise, Clockwise | Max load capacity | 15KG |
| Voltage | AC/DC adapter Input :100v-240v 50/60Hz; Output: DC12V1A | | |

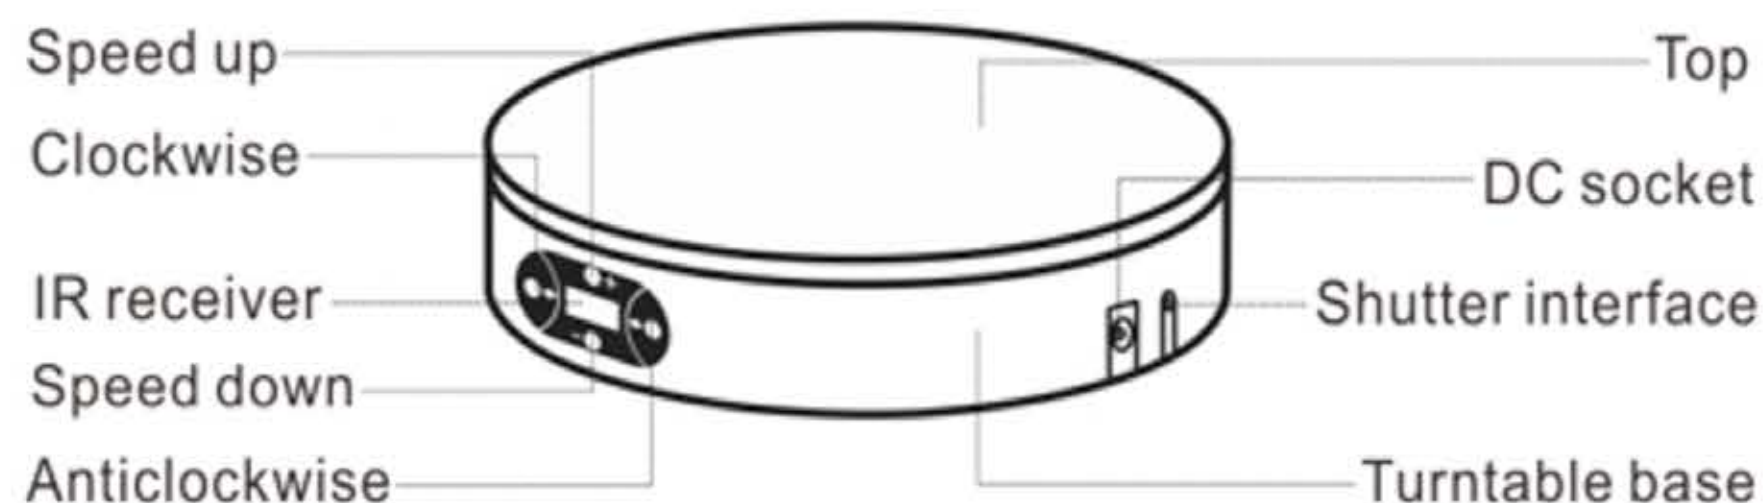 

Maintenance and repair

- Disconnect from mains before starting maintenance operation.
- We recommend a frequent cleaning of the device. Please use a soft lint-free dry cloth. Never use alcohol or solvents.
- Maintenance should be carried out by qualified professionals only .
- Please use the original packing for transportation in case the turntable need maintenance by manufacturer.
- Should you need any spare parts, please contact us.

Notes

- Please place the shooting items at the center of the turntable for shooting.
- Default start speed at 15s/r(4RPM),the difference between each gear is about 3 seconds.
- Keep the children away from the device.
- The ambient temperature must always be between -5°Cto+45°C. Use under indoor dry condition .
- Normal noise value within 50 decibels during product operation.
- Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not responsible for any resulting defects or problems.
- Any unauthorized modifications on the device is forbidden due to safety consideration.



Danger of life!

Never touch the device with wet hands, as it could lead to mortal electrical shock or injury!



Official WeChat Account



Home page

Warranty Card

User's name:

Tel:

Add:

Item No:

Shop's name :

Purchase time:

Maintenance record:

Please keep this card properly

Patented product , Imitation is prohibited.