
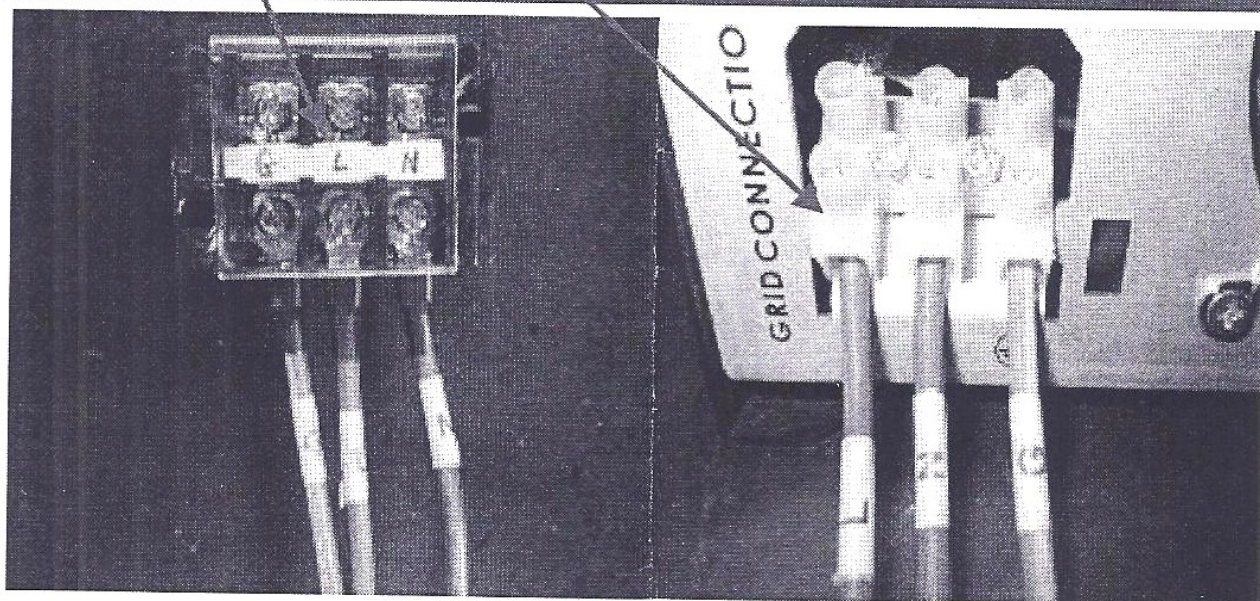


AC INPUT FILTER MANUAL

The AC filter is used to suppress the surge in the AC input, which is installed between the AC input and the inverter. It's necessary to install this AC filter if the AC input is poor or unstable.

BUY ON
www.cablematic.com

Please refer to the following wiring diagram.

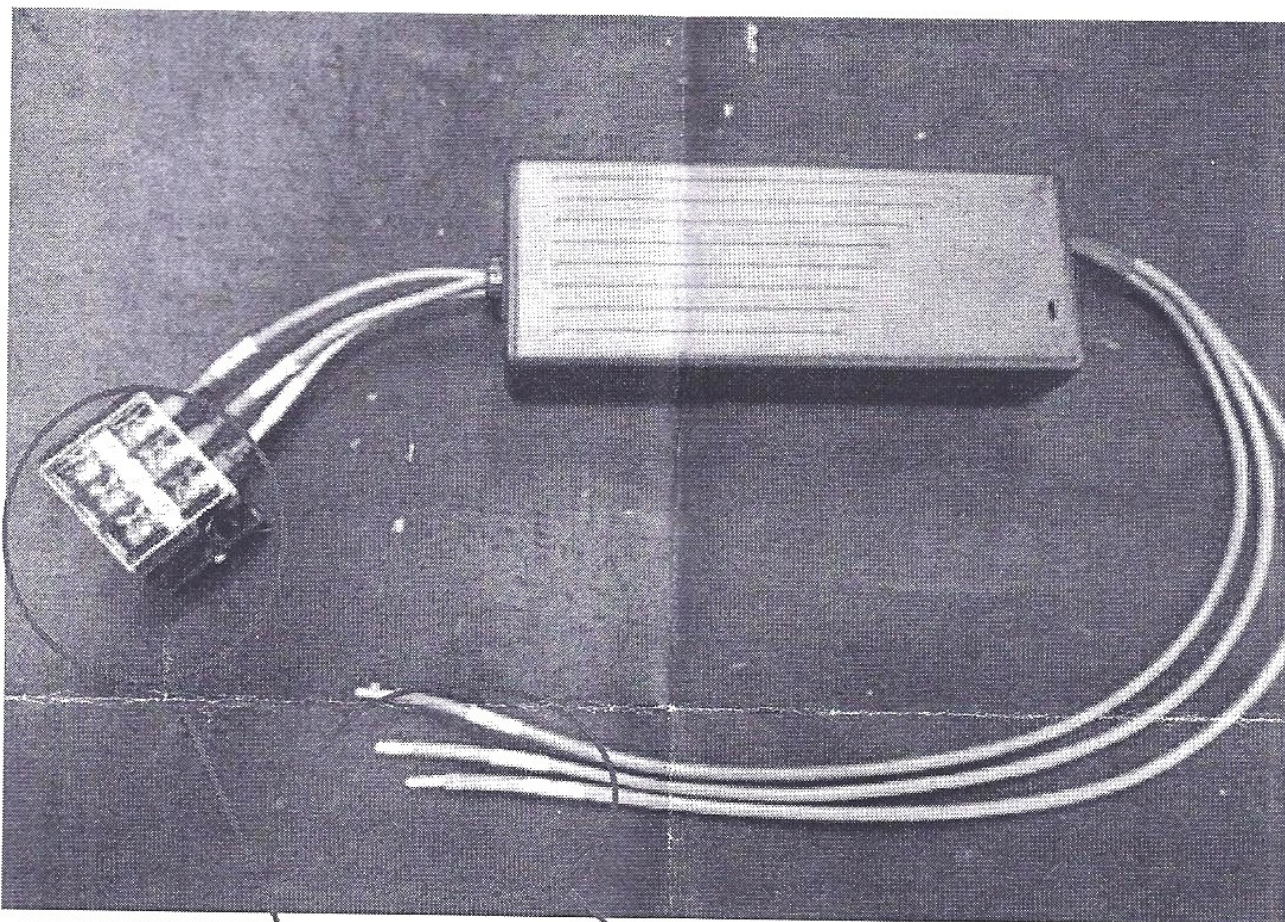

CONNECT TO AC INPUT SOURCE

CONNECT TO THE AC INPUT OF
INVERTER TERMINAL

Note: PLEASE USE AWG12 WIRE