

# Manual



Thank you for choosing LED Moving Head Light Moving Head Light series, the use of this product, please carefully read this

1. Product instruction, to understand the product features and Caution.DMX512 **【address setup】**; this function let you change equipment address value.
2. Press 'FUNC' KEY one time or time after time, until display 'A.001'; Now press; UP 'or' DOWN 'key will browse other function
3. Press; ENTER 'key, word' A 'black out' use; UP ;or; DOWN 'key to choose adress value '001—512' press' ENTER 'key confirm and that exit,or press'' FUNC'' lose exit.
4. To accept the host sync slave mode **【that should address value is set to '001'**
5. In the show addresses the value of state, such as the device without connecting DMX controller, the display will flash, such as the device to connect DMX controller, the display will not flicker, and DMX signal indicator light flashes due to signal

TWO:dn.Pr. [DMX default] This feature allows you to choose different control methods.

1, according to 'UP' or, 'DOWN' button once or several times until the display dn, pr '

2 Press; ENTER 'to enter, then; UP' or, 'DOWN' select 'nod.1' press 'ENTER' OK to save the exit or press 'FUNC' quit without saving.

Nod.1; [Mode 1] the normal channels control Nod.2 [Mode 2] less the number of control channels

3. To accept the host sync from the machine model **【DMX default should be set to "nod.1."**

THREE: Procedures for self-propelled Press "FUNC" key once or several times to display "A001", then "UP" button twice to display

"tEst". Press "ENTER" twice to enter self-propelled procedure, the display "RUN" thorough test run. If you need to exit, press the

"FUNC" key multiple times to exit to the A001.2 nAst [host control] This feature allows you to thoroughly test run when the need does

not have to host send DMX signal to the auxiliary engine used simultaneously. By '; UP' or; DOWN 'keys to select other mode, press the'

ENTER 'to enter, display "ON' for host sent the signal, DMX signal indicator lights. Display; OFF 'do not send signals, DMX signal

indicator off, press' ENTER 'to confirm saving exit, press the' FUNC 'quit without saving. set to' ON ', you have to interrupt an external

DMX controller and can not have the same set of host two or more connected in the same way.

FOUR: Audi [voice excited] (multi-machine synchronization secret door: Audi. Is set to "OFF" show host "RUN" from the plane shows "A001")

This feature allows you to run the thorough test program with voice excited.

1 Press the 'UP' or 'DOWN' browse other power table.

2 Press 'ENTER' to enter, then 'UP' or 'DOWN' select 'ON' or 'OFF' said Toru test whether the use of run-time voice excited, 'ON' that the use of voice 'OFF' that do not use voice-activated, the test mode control. set the 'ON' after. run the program when the audio signal lights will flash with the music.

FIVE: rPAn. [Level rPAn reversal] (multi-machine synchronization secret door: rPAn. Is set to "OFF" show host "RUN" from the machine shows "A001")

This feature allows you to reverse the level of action. Press UP or; DOWN 'button several times or once, until you r.PAn in the press ENTER' to confirm, using the 'UP' or DOWN 'choice, if you do not reversed, select 'OFF' press 'ENTER' to confirm saving exit or press the "FUNC' quit without saving,

SIX: r.tilt. [Vertical r.tilt reversal] (multi-machine synchronization secret door: r.tilt. Is set to "OFF" show host "RUN" from the machine shows "A001")

This feature allows you to reverse the vertical motion.

In the Press "UP" or "DOWN" button several times or once, until the display "r.tilt" in the press 'ENTER' to confirm 'UP' or 'DOWN' select 'ON', if you do not reversed, select "OFF" press "ENTER; recognize the preservation of exit or press "FUNC" exit without saving

SEVEN : RSEt [Device Reset]

This feature allows you to restart the device back to the original standard position, according to "UP' or DOWN' key repeatedly until the display or a" rEst "then press" ENTER "to determine reset.

#### Channel Description

CH1	horizontal scan	0-255 °	0-450 °
CH2	vertical scan	0-255 °	0-270 °
CH3	LED strobe, the opening 0-1	0-1 2-100 101-199 200-207 208-217 218-255	Guan Guang Stroboscopic slow - fast Time strobe slow - fast The opening Reset Delay The opening
CH4	Dimming	0-255	Quanmie - all bright
CH5	LED color / rainbow effect	0-4 5-9 10-14 15-19 20-24 25-29 30-34 35-49 50-255	Red Red and Green Green Green Blue Blue Blue and red RGB Red - Green - Blue Gradient
CH6	R	0-255	Off - light
CH7	G	0-255	Off - light
CH8	B	0-255	Off - light
H9	RGB Rainbow	0-5 6-130 131-255	

CH10	degree horizontal scan tuning	0-255	No automatic
CH11	degree of vertical scan tuning	0-255	Full-color rainbow effect gradual slow - fast
CH12	horizontal and vertical speed 0-251	0-251 252-255	7-color rainbow effect change slow - fast

Technical parameters

Using sophisticated production techniques, streamlined high-temperature plastic shell, antioxidant paint handling, overheating protection; reference control of advanced LED technology, long life, low power consumption.

8.] LED technical parameters.

EIGHT: LED technical parameters

Emitting Colo	Forward voltage [V]		Luminous intensity [mcd]		Dominant Wavelength [nm]	
	MIN	MAN	MIN	MAN	MIN	MAN
Biue	2.8	3.8	6000	10000	450	485
Gree	2.8	3.8	8000	12000	500	545
Red	1.8	2.4	6000	10000	600	660
IF—20m                      Forward current of 20 mA						

X, Y axis speed adjustable

270 degrees horizontal 540 degrees vertical

Control channel; 12

Control mode; from the online master and slave synchronization, voice, international standard DMX512 signal

Application sites; the official high performing bar, nightclub, Opera House and various venues

9; self-propelled settings or voice-activated programs

First, set the voice or self-propelled procedures

1. Press the "UP" or DOWN 'button several times or once, until the display 'AUdl'

2. Press 'ENTER "OK, use the' UP" or DOWN "keys to select ON or OFF NOTE ON Sound OFF on behalf of program choices on behalf of self-propelled OFF

3. Press ENTER 'button to determine the display AUdl; in press FUNC' return

4. Press "FUNC" key once or several times to display "A001", then "UP" button twice to display "tEst". Press "ENTER" twice to enter program or voice self-propelled self-propelled procedures.

Notes

4. The opening hours do not always see with your eyes light source, so as not to burn the eyes,

5. See the product before use of electricity requirements, to electricity, so as not to burn high-voltage products.

6. In the operation must be based on product instructions.

7. Use ground wire must be connected to ensure the safe use of electricity.

Size:380\*380\*460mm    Weight:5.5kg    CE approve

Lamp-house: 36×3W