

LED Crystal ball

A1	X	Red	X is motor speed
A2	X	green	
A3	X	Blue	
A4	X	R G B mixing	
A5	X	Auto run	
A6	X	Auto run 2	
A7	X	Strobe	
A8	X	Auto run and strobe	
S1	X	Sound strobe	
S2	X	Sound model	
A001		DMX512	

DMX512

CH		Function
CH1	0	nothing
	1-255	Led strobe from slow to fast
CH2	0	Nothing
	1-255	Red dimmer
CH3	0	Nothing
	1-255	Green dimmer
CH4	0	Nothing
	1-255	Blue dimmer
CH5	0-127	motor
	128-191	Motor Clockwise
	192-255	Motor Counterclockwise
CH6	0	CH1-CH5 function
	10-37	Auto run 1
	38-65	Auto run 2
	66-93	Auto run 3
	94-255	Auto run 4

Button :

MEAN

UP

DOEM

ENTER