

# LED Finger Light Manual

**AUTO MODE:** 10 for the set to ON

5, 6, 7, 8 为 for the speed is set to OFF when you are the slowest are the fastest time for the ON 9 for the strobe setting, ON strobe effect from time to time, OFF time no stroboscopic effect 1to 4 for a total of 16 kinds of effects of selection effects 1-4 hours for the ON cycle playback

**voice mode:** 1-8, when 10 is OFF , the host voice

9 for the strobe effect is set for ON strobe effect from time to time, in order to OFF when no stroboscopic effect

**Slave mode :** 1 is ON 2-10 are for the OFF mode when the slave

**DMX mode** 10 is OFF, 1 - 9 is address settings, 12 channels

CH1 for the effects of selection

CH1 (when CH12 (=49) valid)	0-4	no effect
	5-251	15 effects to select / 16
	252-255	Console tone voice effects
CH2 (CH1, CH4-11)	0-255	Approaching slow speed of adjustment
CH3	0-4	no effect

	5-255	Strobe slow adjustment by the approaching
CH4, 5, 6, 7, 8, 9, 10, 11 (CH12 <=49) and (CH1 <=4)	0-35	No effect
	36-49	spillover effects (CH2, CH3 and effective)
	50-255	static effect (CH3 valid)
CH12 ( >=50, the other channels will not work)	0-49	No effect
	50-91	Red
	92-133	Green
	134-175	Blue
	176-218	full-liang

**Note:** When no DMX, within 2 seconds when the lights off. Until DMX signal