



**USER MANUAL OF XLD-D**

**WALK THROUGH METAL DETECTOR**

---

**PLEASE READ THE FOLLOWING INSTRUCTION CAREFULLY  
BEFORE OPERATON**



Regarding to how to how to use the machine correctly and safely, please attention to the following instructions. make sure you have read it before operation.

- 1 . It's available for both indoor and outdoor use, please use canopy to protect it against rain.
2. Choose the smooth and stable installation place, don't touch the detector during security checking to avoid false alarm.
3. Make sure there's no big metal object or strong magnetic field around the detector within 2 meters.
4. Keep the detector far from the power line and communication cable.
5. Detector probe must not install in high temperature or wet circumstance.
6. Do not disassemble the control units except the professional technician.
7. Please wait 1 minute for its self-diagnosing when machine start.
8. We advise to have a power cord on the ceiling, easier to connect to the detector.
9. Follow the user manual and make sure the right wire connection when machine start.

**1**

**【PRODUCT SPECIFICATION】**



XLD digital Walk Through metal detector adopts international advanced digital detection technology, specifically used for detecting and preventing the metal and alloy materials hidden on human body. High security,applicability, and high sensitivity,wide range of detecting and strong anti-interference, can 24-hour intelligence service, sound and light alarm at the same time, quality, effectiveness, technical parameters all reach the world advanced level. The sensitivity can be adjusted, the highest sensitivity could detect the metal size such as paper clips and distinguish the zone where the metal hidden, the user also could reset according to

the size, Measurement, weight of the metal excluded the coin, key, jewelry, belt buckle in case false alarm. For the place where need to prevent losing the precious metal materials, such as industrial and mining enterprises, bank, private mansion etc, and the place where need to prevent the carrying of dangerous goods, such as Airport, prisons, customs and exhibition hall, it'll be your wise choice for installing the SUNLEADER walkthrough metal detector.

## 2

### 【WARRANTY CARD】

1. Please keep this card with reasonableness, and show it when maintaining it.
2. This card will be invalid if without the signature or stamp of the designated dealer.
3. This card will be regarded as invalid if it has not been filled in details three guarantees and acknowledgment of receipt, please confirm whether the data filled in the three guarantees and acknowledgment of receipt is correct or not when purchasing it, and then hand it over to the dealer.
4. This card will not be supplied again if losing it.

Product type	
Product number	
Date acquisition	
User(Liaison)	
Post code	
Address	
User's phone number	
Fax	

Date of maintenance	Record of maintenance	Maintainer
---------------------	-----------------------	------------


## 11

### 【BRIEF MAINTENANCE】

#### 1. Can't Start The Machine

- 1) Check whether power sockets properly.
- 2) Check whether the power switch is on.
- 3) Check the fuse blew out (Only for XLD-A model).

#### 2. Can't Account Passengers

- 1) Don't work in the strong sunlight as it use infrared sensor.
- 2) Check the left and right infrared sensor probe whether in parallel.

#### 3. Alarm Without Metal

- 1) First, exclude all the metal in ourself and go through the detector. Find out which zones alarm and low down the zone sensitivity accordingly until it is not alarm.
- 2) Check whether have interference nearby such as big movable machine, high-power equipment.
- 3) Check whether there are similar products nearby, if so change the frequency(Original frequency show on the package carton box).
- 4) Make sure no big wind and smooth around installation place.

#### 4. With Metal But No Alarm

- 1) Follow the user manual and increase the zone sensitivity and total sensitivity.
- 2) The factory default setting can detect a coin diameter 25mm. Make sure the metal size is bigger, if not adjust the sensitivity accordingly.

#### 5. Single Zone No Alarm

Make higher sensitivity then test again. Change the corresponding zone signal collection card if problem is the same in highest sensitivity.

## 6. Unnormal Communications

- 1) Follow the user manual and confirm whether is the problem of left sensor or right sensor.
- 2 ) When confirmed which door frame have communication problems, pull out its probe and reinsert for several times,then test again. If problem the same, then replace the corresponding signal collection card, main board and wire step by step until confirm the problems.

## 7. Whole Machine Non-inductivity

- 1) Check whether the communication is ok, follow above 6 steps.
  - 2) If communication is ok, replace the mainboard or signal board step by step.
- ## 8. LCD Screen Problems, LED Bar Graph Not Lighting, Buttons Not Working
- 1) Replace the parts from other Walk Through metal detector to find the failure parts

## 【INTERFERENCE】

The interference during the walkthrough metal detector working,are mainly as follow:

### Electronic Jamming

Working frequency for the Walk Through metal detector is 4KHz-8KHz. around the work environment should exclude the electronic products that have the almost similar working frequency such as generator, TV etc.

### Moving metal objects Interference

The Walk Through metal detector will be interfered by the moving metal objects, around the work environment should not have turnstile and from vehicle etc. big moving metal objects.

### Interference Between Products And Products


During using 2 pieces or more Walk Through metal,should avoid using the same frequency(the work frequency can be seen on the packing box),the minimum distance between two doors should be above 0.7m to avoid the mutual interference for the Walk Through metal detectors.

## 3

## 【INSTALLATION INSTRUCTIONS】


### PRODUCT ASSEMBLY

Figure I

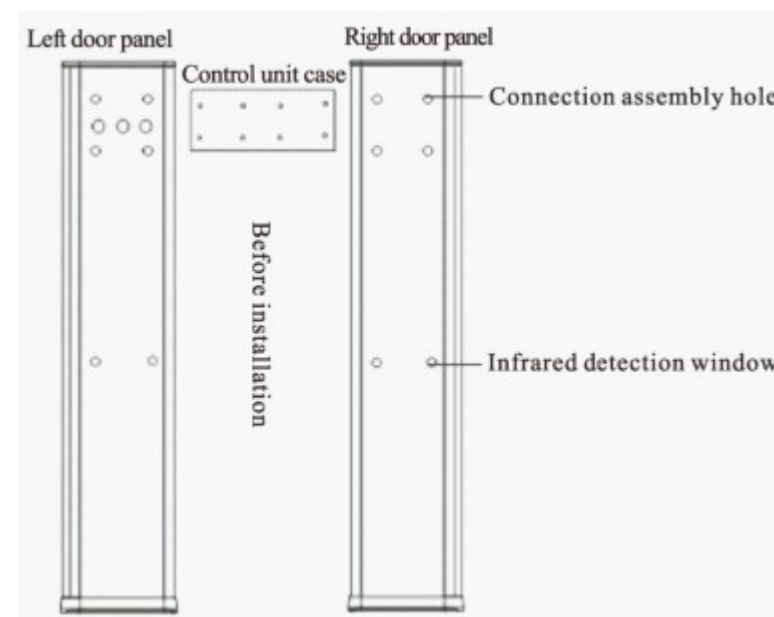


## 【OPTIONAL ACCESSORIES】

## 【PACKING LIST】

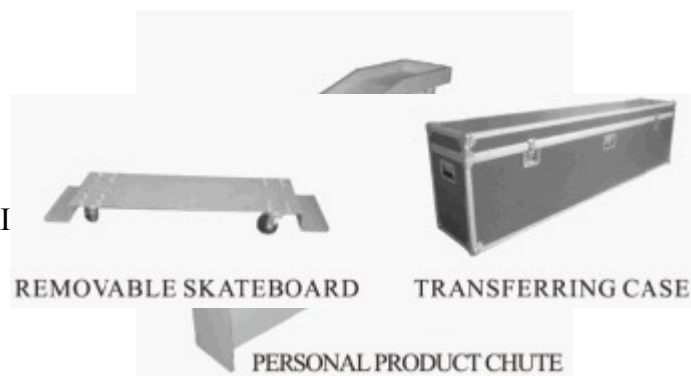

Thanks you very much for buying our Walk Through metal detector.  
Please check and ensure the following parts are complete, if there is anything lost or damaged, please feel free to contact us.

POWER CABLE,SCREWS

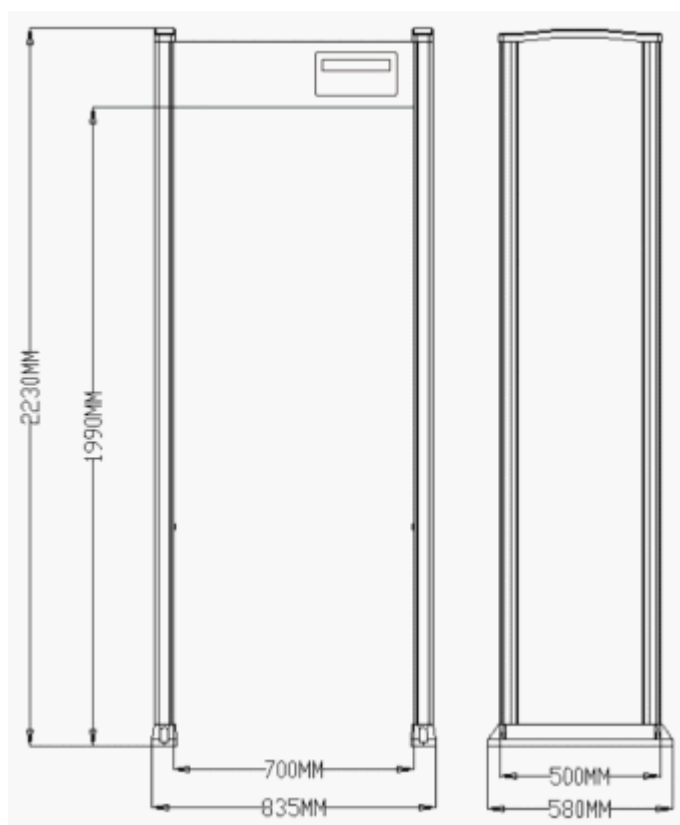

HEXAGON WRENCH  
CERTIFICATION OF QUALITY  
WARRANTY CARD  
WARNING STICKERS  
USER MANUAL

9

## 【TECHNICAL PARAMETERS】

Electric Current: AC85-264V/47.5-60Hz  
Power: < 20W Workplace environment -20°C≈+50°C  
Package: two cartons/unit  
Net Weight: 70kg  
Standard: GB15210-2003,CE  
Inner Dimension: 1990(H)X 700(W)X 500(D)mm  
External Dimension: 2230(H)X 835(W)X 580(D)mm  
(Size is with real products accurate, can be customized)

8

## 【INSTALLATION INSTRUCTION】

Figure II

## 【 INSTALLATION INSTRUCTIONS】

5


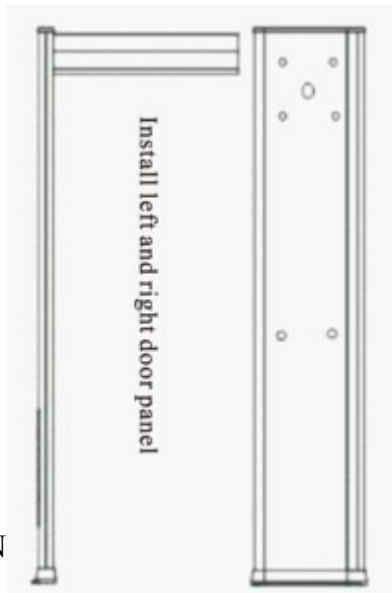


Figure III

As shown above, keep the door panel flat on the bubble, take the joint screws, then first connect the control unit case and the left door panel with screws, and then connect the right door panel with the control unit case, after they are ready, lock the cover of the control

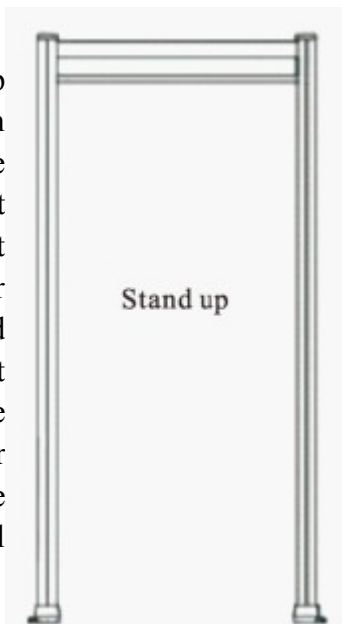

unit case and then make the Walk Through metal detector erected.

6

## 【PRODUCT GUIDE】

Plug the power first, open the switch below the door panel and the switch light shine, said external power supply good. The panel of the control unit case will display the passing times and alarm times as Figure 1.

0000 0000

Figure 1

1. Press ENTER key 3 seconds to set Sensitivity. Then the panel shows 0000 L-90 (Figure 2). L means sensitivity, 90 means the value of sensitivity, the scope is from 0 to 99. The bigger number the higher sensitivity. Press Upward and Downward key to adjust the sensitivity value, after adjusting the sensitivity value, press ENTER key to save.

0000 L-90

Figure 2

2. After setting the sensitivity, press ENTER key to save tge value of sensitivity and enter into the interface of Frequency setting. The panel shows 0000 F-11 (Figure 3). F means Frequency, 11 means the value of Frequency, the scope is from 1-12. Press Upward and Downward key to adjust the frequency value, after adjusting the sensitivity value, press ENTER key to save and exit.

---

**0000 F-11**

Figure 3

7