

MINI AIR COMPRESSOR

Operating instructions

1. Do not run the compressor for more than 10 minutes at a time. If you need to use it for longer, turn it off and let it rest for 10 minutes before starting again.
2. This compressor is not designed for inflating high pressure tyres such as used on trucks, trailers or tractors.
3. When running at more than 75 Psi ,do not operate for more than 7 minutes.
4. When using the compressor, never leave it unattended

To Inflate Tyres

1. Move vehicle so that the valve is on the bottom closest to the ground. Place the air compressor next to the tyre.
2. Plug the power cord into the cigarette lighter receptacle.
3. Place connector on valve stem and push down as far as possible. Close the thumb lock.
4. When the correct pressure is reached, unplug the power cord.
5. Remove adaptor from tyre valve, remove the power cord from the cigarette-lighter.
6. Always leave the thumb lock in the open position when storing the compressor.

For Inflatables



SPORTS
ADAPTER



ADAPTORS FOR INFLATABLES



LOCK VALVE STEM
CONNECTOR

1. Select the suitable adaptor and insert it into the connector. Close thumb lock.
2. Check your owners manual for exact tyre pressures. Others are:-
Footballs 13Psi
Two man boat firm

3. Insert adaptor into article to be inflated.
4. Plug power cord into cigarette lighter receptacle.
5. When correct pressure is reached unplug power cord.
6. Remove adaptor from inflated article. Remove adaptor from connector. Remember to leave thumb lock in open position when storing.
7. Always check item being inflated with correct pressure gauge. Avoid excessive pressure in low pressure objects.

WARNING

Avoid over-inflating. Never exceed the recommended pressure. Items over inflated may burst and cause serious injury.

TROUBLE SHOOTING

COMPRESSOR DOES NOT START/BLOWS FUSES

1. Push the power plug firmly into the receptacle and twist it back and forth.
2. Check receptacle and plug terminals for dirt. particularly tobacco. Use a non-conductive probe, not fingers or metal.
3. Check lighter fuse. This should be 15 amps minimum
4. Power cord unplugged.

COMPRESSOR RUNS BUT: DOES NOT INFLATE

1. Be sure the connector is on the valve stem as far as possible before closing the thumb lock.
2. Check article for leaks
3. Check hose for breaks and leaks at fittings.

COMPRESSOR RUNS SLOWLY

1. Overheated from excessive use. Unplug power cord and leave it to cool for 30 minutes.
2. Voltage too low. Check condition of battery.

CAUTION

1. This compressor is capable of inflating to 250 Psi. To avoid over inflation follow operating instructions as required. Do not exceed recommended pressure at any time. Do not leave unit unattended while operating.
2. The compressor should be kept out of reach of small children.
3. Ensure that the connector is screwed into the valve stem until it locks firmly in place.