


Neat Frame


Personal device user guide
For Zoom



Neat Frame home

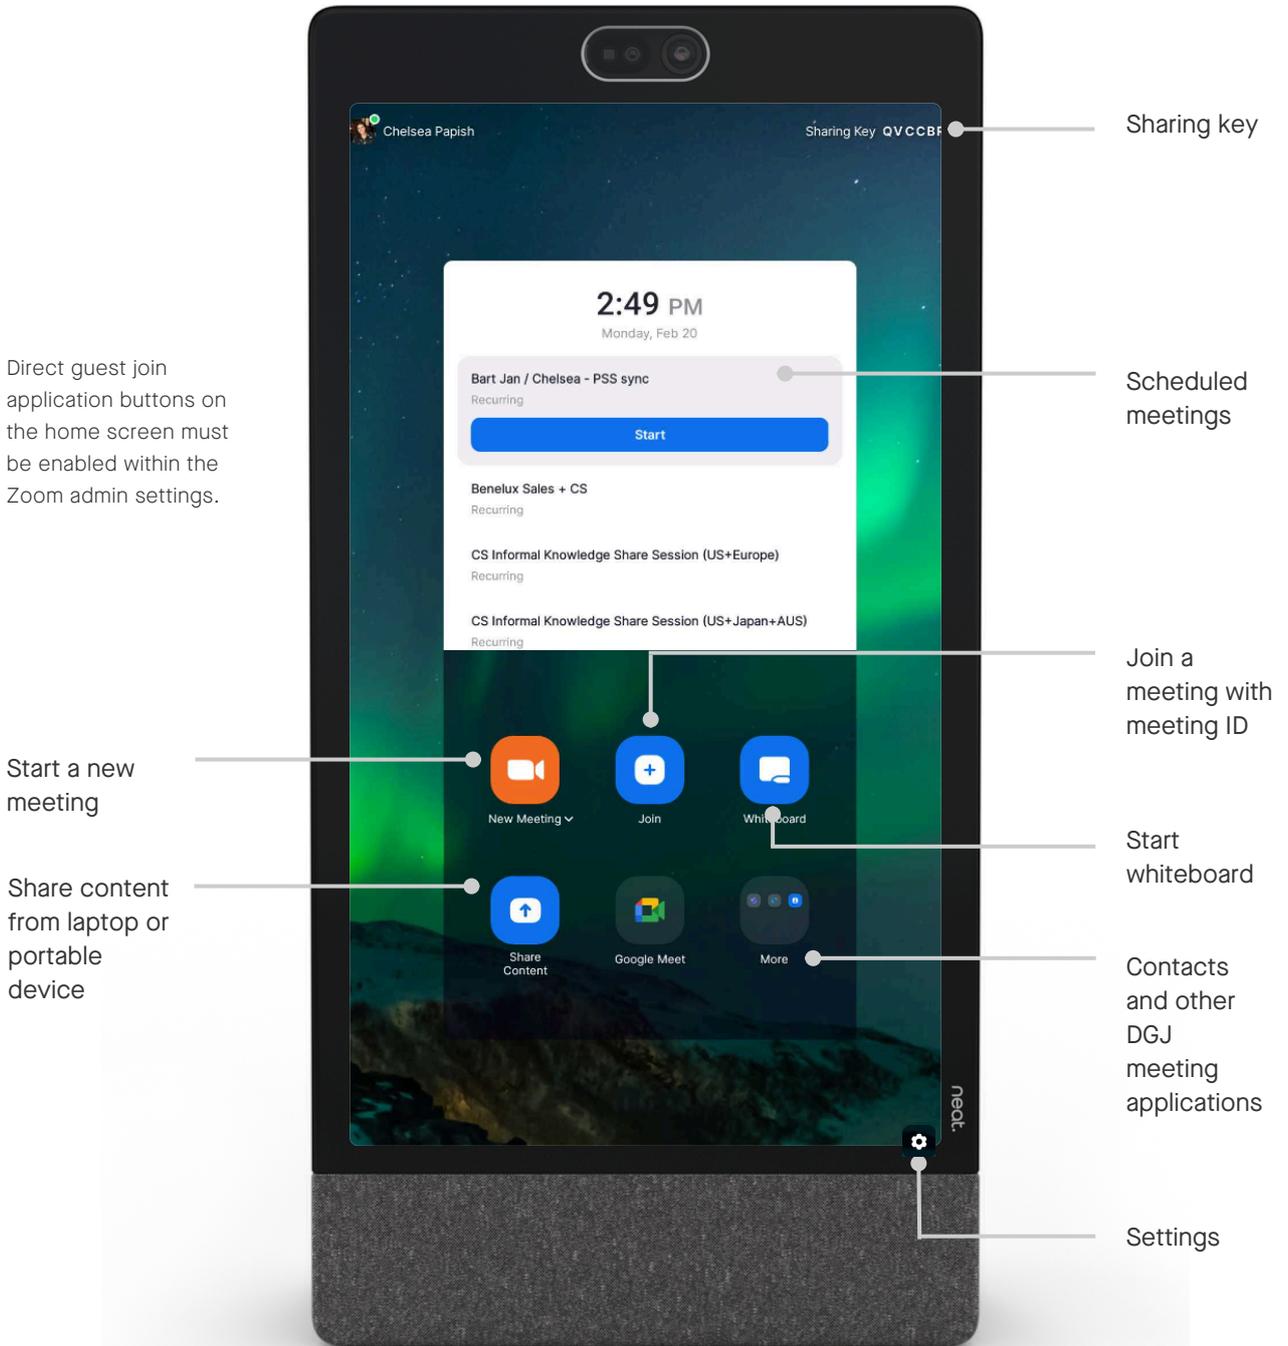

In-meeting

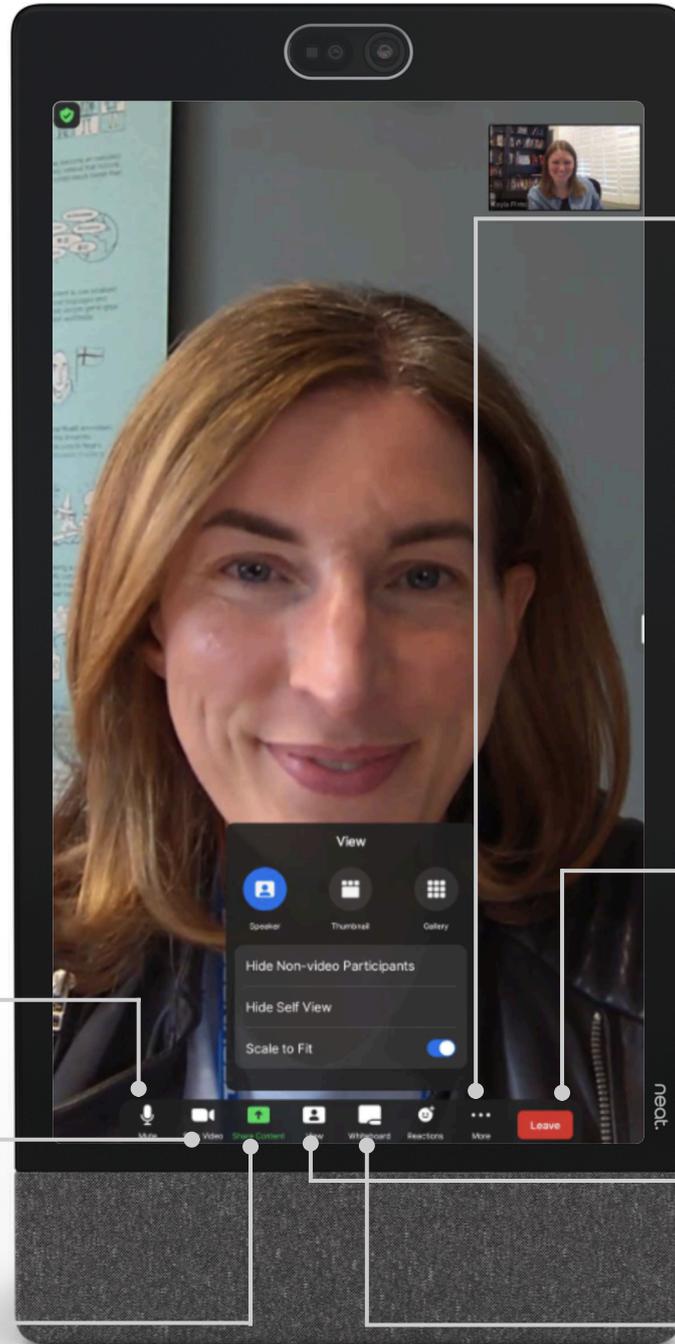

- Tap "More" for
- Raise hand
 - Security
 - Camera control
 - Breakout rooms
 - Virtual background
 - Manage Participants
 - Start/stop Recording
 - Chat
 - Settings
 - Volume

End meeting for all or leave

Change to speaker, thumbnail or gallery view

Start Whiteboard

Mute or unmute in a meeting


Start or stop video

Share content from laptop or portable device

Camera controls




To adjust camera settings and while in a meeting, swipe with one finger from the right side of the Pad towards the left. A slide out will appear with the auto-framing options: Individuals, Group, Off.

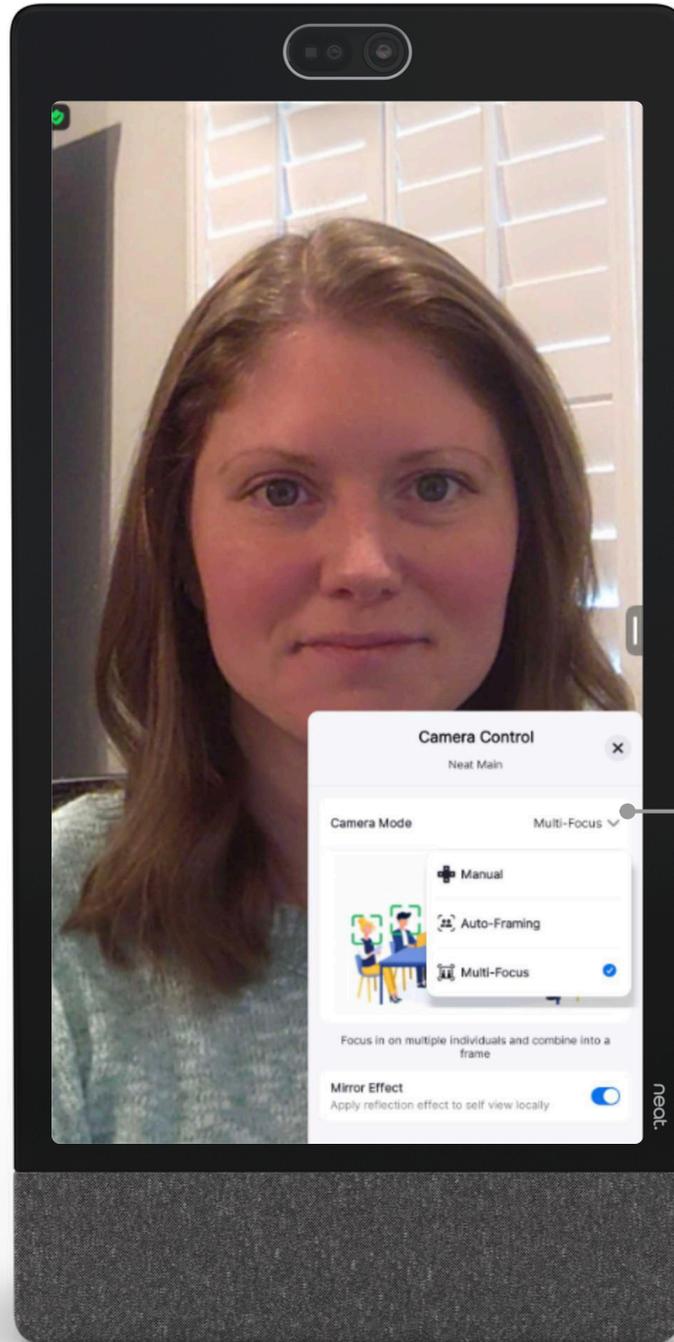

Select camera mode sub menu.
Toggle through the menu to select your preferred camera control option.

Choose between manual, speaker focus, auto-framing, multi-focus, and multi stream.

Tips and tricks

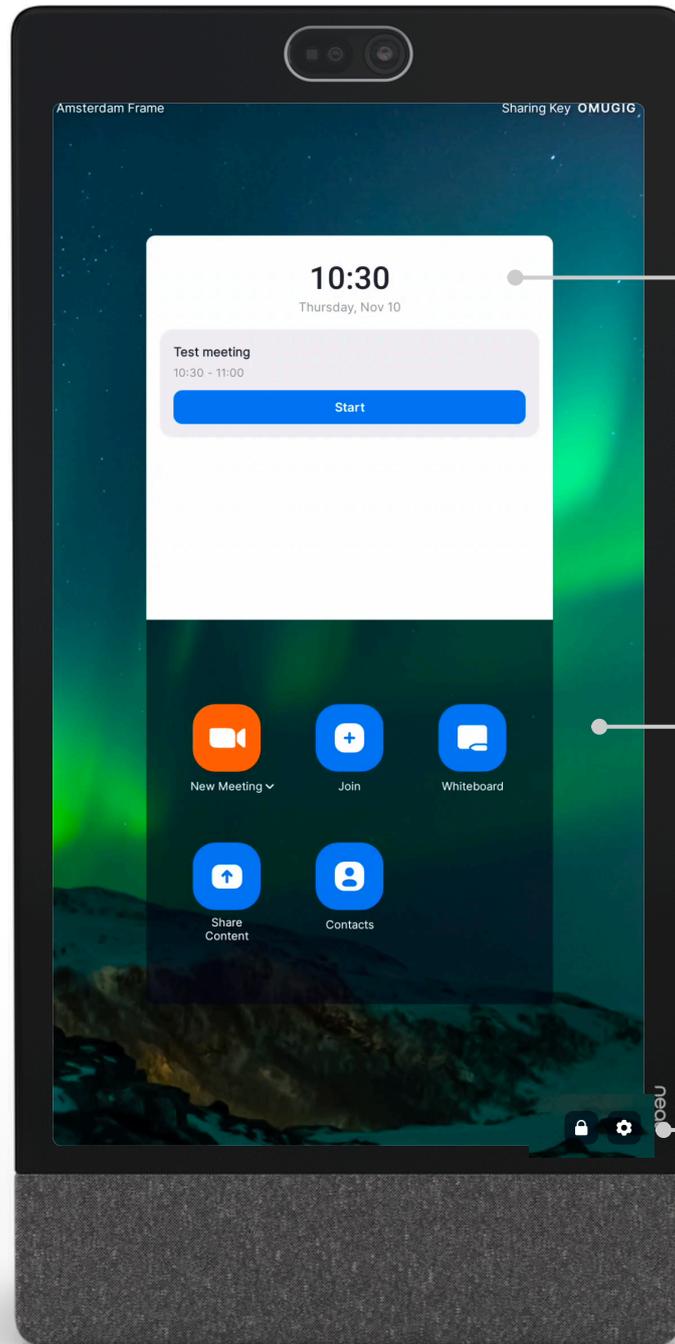

Scroll down to refresh meetings



Tap anywhere outside the pop-up to have the "Lock" and "Settings" icons appear at the bottom right corner.



To enable screen lock, click on "Settings." In "Settings" - "General," scroll down to "Screen Lock." Drag the toggle to the right.

