



CJC1463
3 ROUND PUSH-BUTTONS
24V AC/DC

- 1
- 2
- 3 COMMON SWITCH
- 4 SWITCH 1
- 5 SWITCH 2
- 6 SWITCH 3
- 7
- 8
- 9

