



CJCR1462  
 2 ROUND PUSH BUTTONS  
 24V AC/DC



- 1
- 2
- 3 COMMON SWITCH
- 4 SWITCH 1
- 5 SWITCH 2
- 8
- 9

