



CJC2135

4 + 1 PUSH-BUTTONS SQUARE NO LEDS

Panel 1		Panel 2	
1	7 SWITCH 4	1	7 SWITCH 4
2	8	2	8
3 COMMON SWITCH	9	3 COMMON SWITCH	9
4 SWITCH 1	10	4	10
5 SWITCH 2	11	5	11
6 SWITCH 3		6	

