



CJC1495

4 PUSH BUTTONS SQUARE

24V AC/DC



- 1
- 2
- 3 COMMON SWITCH
- 4 SWITCH 1
- 5 SWITCH 2
- 6 SWITCH 3
- 7 SWITCH 4
- 8
- 9
- 10
- 11

