

[Home](#) > [Additional Pages](#) > [Rental Equip Instructions](#) > [Cotton Candy Machine Instructions](#)



#### Setup & Making Cotton Candy

- Main Switch - Turns motor 'on' or 'off' and supplies current to heat switch.
- Heat Switch - Turns current to the heating element 'on' or 'off'.
- Heat Control Knob - Increases or decreases voltage to ribbon wire heating element using a graduated dial.

1. Setup cotton candy machine on a flat, level surface.
2. Turn both switches to the 'on' position and the heat knob to the highest heat setting.
3. Once the heating switch is turned on the sugar is heated and thrown to the sides of the bowl.
4. Take cone and rotate around the bowl until cotton candy has collected.
5. If the machine starts smoking, check the heat control setting. After warm up, equipment should make good floss at a reduced setting.

\*\* There will be a \$25 cleaning fee charged if the machine is returned dirty. The white plastic net, metal bowl and plastic dome must be cleaned with warm/hot water. We will clean the machine when it is returned. \*\*