

WHITE BLUFF BUILDING SUPPLY 4978 HWY 70 E
WHITE BLUFF, TN 37187
615-797-3111

Search Rental Catalog Search

Home > Additional Pages > Rental Equip Instructions > Popcorn Machine Instructions



Instructions for Popcorn Machine Operation

- Light and warmer switch: Turns on heat to bottom corn pan and light.
- · Kettle motor switch: Turns on motor, which drives kettle agitator shaft.
- · Kettle heat switch: Turns on heat element.
- 1. Turn kettle heat and kettle motor switch 'on'. allow 7-10 minutes for kettle to warm.
- 2. Pour 6 ounces of prepared kernels into kettle.
- 3. When corn has finished popping dump kettle.
- 4. Repeat stepd 2 and 3 again. There is no need to warm kettle after first time.
- 5. Once you have made enough popcorn to fill bottom compartment, turn motor switch and heat switch off. Turn on light and warmer switch to keep popcorn warm.
- 6. CAUTION: Do not touch the kettle while on, it is hot and can cause serious burns.
- 7. Leaving popcorn in kettle too long can cause popcorn to burn.
- 8. If a batch of popcorn has been burned, you must first clean the inside of the kettle before preparing another batch.

Privacy Policy | Mobile Site

© copyright 2021 True Value Company. All rights reserved.