

KEENETIC

TITAN

AC2600 Dual Band Whole Home Wi-Fi Gigabit Fibre Ready Router with Wireless Power Amplifiers, Dual Core CPU, 5-port Managed Switch, SFP slot, Multifunction USB 2.0 and 3.0 Ports

Command Reference Guide

Model	Titan (KN-1810)
OS Version	4.0
Edition	1.143 28.10.2023

Preface

This guide contains Command-Line Interface (CLI) commands to maintain the Titan device. This guide provides a complete listing of all possible commands. The other chapters provide examples of how to implement the most common of these commands, general information on the interrelationships between the commands and the conceptual background of how to use them.

1 Readership

This guide is for the networking or computer technician responsible for configuring and maintaining the Titan on-site. It is also intended for the operator who manages the Titan. This manual cover high-level technical support procedures available to Root administrators and Titan technical support personnel.

2 Organization

This manual covers the following topics:

Introduction to the CLI	Describes how to use the Titan Command-Line Interface (CLI), its hierarchical structure, authorization levels and its help features.
Command Reference	Provides an alphabetical list of the available CLI commands that you can use to configure the Titan device.

3 Document Conventions

Command descriptions use the following conventions:

boldface font	Commands and keywords are in boldface . Must be typed exactly as shown. Bold font is used as a user input in examples.
<i>italic font</i>	Arguments for which you supply values are in <i>italics</i> .
[<i>optional</i>]	Elements in square brackets are optional.
⟨ <i>replaceable</i> ⟩	Elements in angle brackets are replaceable.
(x y z)	Alternative keywords are grouped in round brackets and separated by vertical bars.
[x y z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.

Each command description is broken down into the following sub-sections:

Description	Description of what the command does.
Synopsis	The general format of the command.
Prefix no	The possibility of using no prefix with command.
Change settings	The ability of command to change the settings.
Multiple input	The possibility of multiple input.
Group entry	Name of the group that owns the command. If there is no group, this section does not displayed.
Interface type	Type of interface, which can be managed by the command. The section does not displayed, if this context has no meaning for the command. Interfaces used in the system and the relationships between them are shown in the diagrams below.
Arguments	List of arguments if they exists, and explanations to them.
Example	An illustration of how the command looks when invoked. Because the interface is straightforward, some of the examples are obvious, but they are included for clarity.

Notes, cautionary statements, and safety warnings use these conventions.

Note: Means "reader take note". Notes contain helpful suggestions or references to materials not contained in this manual.

Warning: Means "reader be careful". You are capable of doing something that might result in equipment damage or loss of data.

Contents Overview

Preface	3
Product Overview	31
Introduction to the CLI	33
Command Reference	39
Glossary	673
Interface Hierarchy	687
HTTP API	689
NVOX CLI commands	697
SNMP MIB	785
IPsec Encryption Levels	791

Table of Contents

Preface	3
1 Readership	3
2 Organization	3
3 Document Conventions	3
Table of Contents	5
Chapter 1	
Product Overview	31
1.1 Hardware Configuration	31
Chapter 2	
Introduction to the CLI	33
2.1 Enter commands in the CLI	33
2.1.1 Entering a group	34
2.2 Getting Help and auto-completion	34
2.3 Prefix no	35
2.4 Multiple input	36
2.5 Saving to startup settings	36
2.6 Delayed restart	37
Chapter 3	
Command Reference	39
3.1 Core commands	39
3.1.1 copy	39
3.1.2 erase	39
3.1.3 exit	40
3.1.4 ls	40
3.1.5 mkdir	41
3.1.6 more	42
3.2 access	42
3.3 access-list	43
3.3.1 access-list auto-delete	44
3.3.2 access-list deny	44
3.3.3 access-list permit	47
3.3.4 access-list rule	49
3.4 afp	50
3.4.1 afp automount	50
3.4.2 afp permissive	51

3.4.3	afp share	51
3.5	cifs	52
3.5.1	cifs automount	52
3.5.2	cifs map-hidden	53
3.5.3	cifs master	54
3.5.4	cifs permissive	54
3.5.5	cifs share	55
3.6	cloud control2 security-level	55
3.7	components	56
3.7.1	components auto-update channel	56
3.7.2	components auto-update disable	57
3.7.3	components auto-update schedule	58
3.7.4	components check-update	59
3.7.5	components commit	59
3.7.6	components install	60
3.7.7	components list	60
3.7.8	components preset	61
3.7.9	components preview	62
3.7.10	components remove	63
3.7.11	components validity-period	63
3.8	crypto engine	64
3.9	crypto ike key	64
3.10	crypto ike mtu	65
3.11	crypto ike nat-keepalive	66
3.12	crypto ike policy	67
3.12.1	crypto ike policy lifetime	67
3.12.2	crypto ike policy mode	68
3.12.3	crypto ike policy negotiation-mode	69
3.12.4	crypto ike policy proposal	69
3.13	crypto ike proposal	70
3.13.1	crypto ike proposal aead	71
3.13.2	crypto ike proposal dh-group	71
3.13.3	crypto ike proposal encryption	72
3.13.4	crypto ike proposal integrity	73
3.13.5	crypto ike proposal prf	74
3.14	crypto ipsec incompatible	75
3.15	crypto ipsec profile	76
3.15.1	crypto ipsec profile authentication-local	76
3.15.2	crypto ipsec profile authentication-remote	77
3.15.3	crypto ipsec profile dpd-clear	78
3.15.4	crypto ipsec profile dpd-interval	78
3.15.5	crypto ipsec profile identity-local	79
3.15.6	crypto ipsec profile match-identity-remote	80

3.15.7	crypto ipsec profile mode	81
3.15.8	crypto ipsec profile policy	81
3.15.9	crypto ipsec profile preshared-key	82
3.15.10	crypto ipsec profile xauth	83
3.15.11	crypto ipsec profile xauth-identity	83
3.15.12	crypto ipsec profile xauth-password	84
3.16	crypto ipsec rekey delete-delay	85
3.17	crypto ipsec rekey make-before	86
3.18	crypto ipsec transform-set	86
3.18.1	crypto ipsec transform-set aead	87
3.18.2	crypto ipsec transform-set cypher	87
3.18.3	crypto ipsec transform-set dh-group	88
3.18.4	crypto ipsec transform-set hmac	89
3.18.5	crypto ipsec transform-set lifetime	90
3.19	crypto map	91
3.19.1	crypto map connect	91
3.19.2	crypto map enable	92
3.19.3	crypto map fallback-check-interval	92
3.19.4	crypto map force-encaps	93
3.19.5	crypto map l2tp-server dhcp route	94
3.19.6	crypto map l2tp-server enable	94
3.19.7	crypto map l2tp-server interface	95
3.19.8	crypto map l2tp-server ipv6cp	96
3.19.9	crypto map l2tp-server lcp echo	97
3.19.10	crypto map l2tp-server mru	97
3.19.11	crypto map l2tp-server mtu	98
3.19.12	crypto map l2tp-server multi-login	99
3.19.13	crypto map l2tp-server nat	99
3.19.14	crypto map l2tp-server range	100
3.19.15	crypto map l2tp-server static-ip	101
3.19.16	crypto map nail-up	101
3.19.17	crypto map reauth-passive	102
3.19.18	crypto map set-peer	103
3.19.19	crypto map set-peer-fallback	103
3.19.20	crypto map set-profile	104
3.19.21	crypto map set-tcpmss	105
3.19.22	crypto map set-transform	105
3.19.23	crypto map traffic-selectors	106
3.19.24	crypto map virtual-ip dhcp route	107
3.19.25	crypto map virtual-ip dns-server	108
3.19.26	crypto map virtual-ip enable	109
3.19.27	crypto map virtual-ip multi-login	109
3.19.28	crypto map virtual-ip nat	110

3.19.29	crypto map virtual-ip range	110
3.19.30	crypto map virtual-ip static-ip	111
3.20	dlna	112
3.20.1	dlna container	112
3.20.2	dlna db-directory	113
3.20.3	dlna directory	113
3.20.4	dlna display-name	114
3.20.5	dlna interface	115
3.20.6	dlna port	116
3.20.7	dlna rescan	116
3.20.8	dlna sort	117
3.21	dns-proxy	118
3.21.1	dns-proxy filter assign host preset	118
3.21.2	dns-proxy filter assign host profile	119
3.21.3	dns-proxy filter assign interface preset	120
3.21.4	dns-proxy filter assign interface profile	121
3.21.5	dns-proxy filter engine	122
3.21.6	dns-proxy filter profile	122
3.21.7	dns-proxy filter profile description	123
3.21.8	dns-proxy filter profile dns53 upstream	124
3.21.9	dns-proxy filter profile https upstream	125
3.21.10	dns-proxy filter profile intercept enable	125
3.21.11	dns-proxy filter profile tls upstream	126
3.21.12	dns-proxy https upstream	127
3.21.13	dns-proxy intercept enable	128
3.21.14	dns-proxy max-ttl	129
3.21.15	dns-proxy proceed	130
3.21.16	dns-proxy rebind-protect	130
3.21.17	dns-proxy srr-reset	131
3.21.18	dns-proxy tls upstream	132
3.22	dpn accept	133
3.23	dyndns profile	133
3.23.1	dyndns profile domain	134
3.23.2	dyndns profile password	134
3.23.3	dyndns profile send-address	135
3.23.4	dyndns profile type	136
3.23.5	dyndns profile update-interval	136
3.23.6	dyndns profile url	137
3.23.7	dyndns profile username	138
3.24	easyconfig check	138
3.24.1	easyconfig check exclude-gateway	139
3.24.2	easyconfig check host	139
3.24.3	easyconfig check max-fails	140

3.24.4	easyconfig check period	141
3.25	easyconfig disable	141
3.26	eula accept	142
3.27	igmp-proxy	142
3.27.1	igmp-proxy fast-leave	143
3.27.2	igmp-proxy force	143
3.28	igmp-snooping disable	144
3.29	interface	145
3.29.1	interface atf disable	146
3.29.2	interface atf inbound	146
3.29.3	interface authentication chap	147
3.29.4	interface authentication eap-md5	148
3.29.5	interface authentication eap-mschapv2	148
3.29.6	interface authentication eap-ttls	149
3.29.7	interface authentication identity	150
3.29.8	interface authentication mschap	150
3.29.9	interface authentication mschap-v2	151
3.29.10	interface authentication pap	151
3.29.11	interface authentication password	152
3.29.12	interface authentication peap	153
3.29.13	interface authentication shared	153
3.29.14	interface authentication wpa-psk	154
3.29.15	interface auto-ssid	155
3.29.16	interface backhaul	155
3.29.17	interface band-steering	156
3.29.18	interface band-steering preference	157
3.29.19	interface beamforming explicit	158
3.29.20	interface beamforming implicit	158
3.29.21	interface ccp	159
3.29.22	interface channel	160
3.29.23	interface channel auto-rescan	160
3.29.24	interface channel width	161
3.29.25	interface chilli coaport	162
3.29.26	interface chilli dhcpif	163
3.29.27	interface chilli dns	163
3.29.28	interface chilli lease	164
3.29.29	interface chilli login	165
3.29.30	interface chilli logout	165
3.29.31	interface chilli macauth	166
3.29.32	interface chilli macpasswd	167
3.29.33	interface chilli nasip	167
3.29.34	interface chilli nasmac	168
3.29.35	interface chilli profile	169

3.29.36	interface chilli radius	170
3.29.37	interface chilli radiusacctport	170
3.29.38	interface chilli radiusauthport	171
3.29.39	interface chilli radiuslocationid	172
3.29.40	interface chilli radiuslocationname	172
3.29.41	interface chilli radiusnasid	173
3.29.42	interface chilli radiussecret	174
3.29.43	interface chilli uamallowed	174
3.29.44	interface chilli uamdomain	175
3.29.45	interface chilli uamhomepage	176
3.29.46	interface chilli uamport	177
3.29.47	interface chilli uamsecret	177
3.29.48	interface chilli uamserver	178
3.29.49	interface compatibility	179
3.29.50	interface connect	179
3.29.51	interface country-code	180
3.29.52	interface debug	181
3.29.53	interface description	181
3.29.54	interface down	182
3.29.55	interface downlink-mumimo	182
3.29.56	interface duplex	183
3.29.57	interface dyndns profile	184
3.29.58	interface dyndns update	184
3.29.59	interface encryption anonymous-dh	185
3.29.60	interface encryption disable	186
3.29.61	interface encryption enable	186
3.29.62	interface encryption key	187
3.29.63	interface encryption mppe	188
3.29.64	interface encryption owe	188
3.29.65	interface encryption tkip hold-down	189
3.29.66	interface encryption wpa	190
3.29.67	interface encryption wpa2	190
3.29.68	interface encryption wpa3	191
3.29.69	interface encryption wpa3 suite-b	191
3.29.70	interface flowcontrol	192
3.29.71	interface follow	192
3.29.72	interface ft enable	193
3.29.73	interface ft mdid	194
3.29.74	interface ft otd	195
3.29.75	interface green-ethernet	195
3.29.76	interface hide-ssid	196
3.29.77	interface iapp auto	197
3.29.78	interface iapp key	197

3.29.79	interface idle-timeout	198
3.29.80	interface igmp downstream	198
3.29.81	interface igmp fork	199
3.29.82	interface igmp upstream	200
3.29.83	interface include	200
3.29.84	interface inherit	201
3.29.85	interface ip access-group	202
3.29.86	interface ip address	203
3.29.87	interface ip address dhcp	203
3.29.88	interface ip adjust-ttl rcv	204
3.29.89	interface ip adjust-ttl send	205
3.29.90	interface ip alias	206
3.29.91	interface ip dhcp client broadcast	206
3.29.92	interface ip dhcp client class-id	207
3.29.93	interface ip dhcp client debug	208
3.29.94	interface ip dhcp client displace	208
3.29.95	interface ip dhcp client dns-routes	209
3.29.96	interface ip dhcp client fallback	210
3.29.97	interface ip dhcp client hostname	210
3.29.98	interface ip dhcp client name-servers	211
3.29.99	interface ip dhcp client release	212
3.29.100	interface ip dhcp client renew	212
3.29.101	interface ip dhcp client routes	213
3.29.102	interface ip flow	213
3.29.103	interface ip global	214
3.29.104	interface ip mru	215
3.29.105	interface ip mtu	216
3.29.106	interface ip nat loopback	217
3.29.107	interface ip remote	217
3.29.108	interface ip tcp adjust-mss	218
3.29.109	interface ipcp address	219
3.29.110	interface ipcp default-route	219
3.29.111	interface ipcp dns-routes	220
3.29.112	interface ipcp name-servers	220
3.29.113	interface ipcp vj	221
3.29.114	interface ipsec encryption-level	222
3.29.115	interface ipsec force-encaps	223
3.29.116	interface ipsec ignore	223
3.29.117	interface ipsec ikev2	224
3.29.118	interface ipsec nail-up	225
3.29.119	interface ipsec name-servers	225
3.29.120	interface ipsec preshared-key	226
3.29.121	interface ipsec proposal lifetime	227

3.29.122	interface ipsec proposal local-id	227
3.29.123	interface ipsec proposal remote-id	228
3.29.124	interface ipsec transform-set lifetime	229
3.29.125	interface ipv6 address	229
3.29.126	interface ipv6 name-servers	230
3.29.127	interface ipv6 prefix	231
3.29.128	interface ipv6cp	232
3.29.129	interface lcp acfc	232
3.29.130	interface lcp echo	233
3.29.131	interface lcp pfc	234
3.29.132	interface ldpc	234
3.29.133	interface led wan	235
3.29.134	interface lldp disable	235
3.29.135	interface mac access-list address	236
3.29.136	interface mac access-list type	237
3.29.137	interface mac address	238
3.29.138	interface mac address factory	238
3.29.139	interface mac band	239
3.29.140	interface mac bssid	240
3.29.141	interface mac clone	240
3.29.142	interface mac vht40	241
3.29.143	interface mobile lte disable-band	242
3.29.144	interface mobile name-servers	242
3.29.145	interface mobile operator	243
3.29.146	interface mobile pdp	244
3.29.147	interface mobile roaming	244
3.29.148	interface mobile scan	245
3.29.149	interface mobile umts disable-band	246
3.29.150	interface modem connect	246
3.29.151	interface modem timeout	247
3.29.152	interface openvpn accept-routes	248
3.29.153	interface openvpn connect	248
3.29.154	interface openvpn name-servers	249
3.29.155	interface peer	250
3.29.156	interface peer-isolation	250
3.29.157	interface ping-check profile	251
3.29.158	interface ping-check restart	252
3.29.159	interface pmf	252
3.29.160	interface power	253
3.29.161	interface pppoe service	254
3.29.162	interface pppoe session auto-cleanup	254
3.29.163	interface preamble-short	255
3.29.164	interface proxy connect	255

3.29.165	interface proxy protocol	256
3.29.166	interface proxy socks5-udp	257
3.29.167	interface proxy udpgw-upstream	257
3.29.168	interface proxy upstream	258
3.29.169	interface reconnect-delay	259
3.29.170	interface rekey-interval	260
3.29.171	interface rename	260
3.29.172	interface rf e2p set	261
3.29.173	interface role	262
3.29.174	interface rrm	263
3.29.175	interface schedule	263
3.29.176	interface security-level	264
3.29.177	interface sim pin	265
3.29.178	interface sim slot	266
3.29.179	interface speed	267
3.29.180	interface speed nonegotiate	267
3.29.181	interface ssid	268
3.29.182	interface standby enable	269
3.29.183	interface storm-control disable	269
3.29.184	interface switchport access	270
3.29.185	interface switchport friend	271
3.29.186	interface switchport mode	271
3.29.187	interface switchport trunk	272
3.29.188	interface traffic-counter action disconnect	273
3.29.189	interface traffic-counter action sms-alert message	274
3.29.190	interface traffic-counter action sms-alert phone	274
3.29.191	interface traffic-counter enable	275
3.29.192	interface traffic-counter limit	275
3.29.193	interface traffic-counter monthly	276
3.29.194	interface traffic-counter set	277
3.29.195	interface traffic-counter threshold	277
3.29.196	interface traffic-shape	278
3.29.197	interface tty init	279
3.29.198	interface tty send	280
3.29.199	interface tunnel destination	281
3.29.200	interface tunnel eoip id	281
3.29.201	interface tunnel gre keepalive	282
3.29.202	interface tunnel source	283
3.29.203	interface tx-burst	284
3.29.204	interface tx-queue length	284
3.29.205	interface tx-queue scheduler cake	285
3.29.206	interface tx-queue scheduler fq_codel	285
3.29.207	interface up	286

3.29.208	interface usb acq	286
3.29.209	interface usb apn	287
3.29.210	interface usb device-id	288
3.29.211	interface usb power-cycle	288
3.29.212	interface usb power-fail	289
3.29.213	interface usb wwan-force-connected	290
3.29.214	interface web-api address	290
3.29.215	interface web-api login	291
3.29.216	interface web-api password	291
3.29.217	interface wireguard listen-port	292
3.29.218	interface wireguard peer	293
3.29.219	interface wireguard private-key	297
3.29.220	interface wmm	298
3.29.221	interface wpa-eap radius secret	298
3.29.222	interface wpa-eap radius server	299
3.29.223	interface wps	300
3.29.224	interface wps auto-self-pin	300
3.29.225	interface wps button	301
3.29.226	interface wps peer	301
3.29.227	interface wps self-pin	302
3.30	ip arp	302
3.31	ip dhcp class	303
3.31.1	ip dhcp class option	304
3.32	ip dhcp host	304
3.33	ip dhcp pool	305
3.33.1	ip dhcp pool bind	306
3.33.2	ip dhcp pool bootfile	307
3.33.3	ip dhcp pool class	307
3.33.4	ip dhcp pool debug	309
3.33.5	ip dhcp pool default-router	309
3.33.6	ip dhcp pool dns-server	310
3.33.7	ip dhcp pool domain	310
3.33.8	ip dhcp pool enable	311
3.33.9	ip dhcp pool lease	311
3.33.10	ip dhcp pool next-server	312
3.33.11	ip dhcp pool option	313
3.33.12	ip dhcp pool range	314
3.33.13	ip dhcp pool update-dns	315
3.33.14	ip dhcp pool wpad	315
3.34	ip dhcp relay lan	316
3.35	ip dhcp relay server	316
3.36	ip dhcp relay wan	317
3.37	ip esp alg enable	318

3.38	ip flow-cache timeout active	318
3.39	ip flow-cache timeout inactive	319
3.40	ip flow-export destination	320
3.41	ip flow-export version	320
3.42	ip ftp	321
3.42.1	ip ftp client-charset	321
3.42.2	ip ftp lockout-policy	324
3.42.3	ip ftp permissive	325
3.42.4	ip ftp security-level	325
3.43	ip host	326
3.44	ip hotspot	327
3.44.1	ip hotspot auto-scan interface	327
3.44.2	ip hotspot auto-scan interval	328
3.44.3	ip hotspot auto-scan passive	328
3.44.4	ip hotspot auto-scan timeout	329
3.44.5	ip hotspot default-policy	330
3.44.6	ip hotspot host	331
3.44.7	ip hotspot host priority	332
3.44.8	ip hotspot policy	333
3.44.9	ip hotspot priority	334
3.44.10	ip hotspot wake	335
3.45	ip http lockout-policy	335
3.46	ip http log access	336
3.47	ip http log auth	337
3.48	ip http log webdav	337
3.49	ip http port	338
3.50	ip http proxy	339
3.50.1	ip http proxy auth	339
3.50.2	ip http proxy domain	340
3.50.3	ip http proxy domain ndns	340
3.50.4	ip http proxy force-host	341
3.50.5	ip http proxy preserve-host	342
3.50.6	ip http proxy security-level	342
3.50.7	ip http proxy ssl redirect	343
3.50.8	ip http proxy upstream	344
3.50.9	ip http proxy x-real-ip	345
3.51	ip http security-level	345
3.52	ip http ssl acme ecdsa	346
3.53	ip http ssl acme get	347
3.54	ip http ssl acme revoke	347
3.55	ip http ssl acme list	348
3.56	ip http ssl enable	348
3.57	ip http ssl port	349

3.58	ip http ssl redirect	350
3.59	ip http webdav	350
3.59.1	ip http webdav enable	351
3.59.2	ip http webdav permissive	351
3.59.3	ip http webdav security-level	352
3.60	ip http x-frame-options	352
3.61	ip name-server	353
3.62	ip nat	354
3.63	ip nat full-cone	355
3.64	ip nat restricted-cone	356
3.65	ip nat sstp	356
3.66	ip nat vpn	357
3.67	ip policy	358
3.67.1	ip policy description	358
3.67.2	ip policy multipath	359
3.67.3	ip policy permit	360
3.67.4	ip policy permit auto	360
3.67.5	ip policy rate-limit input	361
3.67.6	ip policy rate-limit output	362
3.68	ip route	363
3.69	ip search-domain	364
3.70	ip sip alg direct-media	365
3.71	ip sip alg port	365
3.72	ip ssh	366
3.72.1	ip ssh cipher	366
3.72.2	ip ssh keygen	367
3.72.3	ip ssh lockout-policy	368
3.72.4	ip ssh port	369
3.72.5	ip ssh security-level	370
3.72.6	ip ssh session timeout	371
3.72.7	ip ssh sftp	371
3.73	ip static	373
3.74	ip static rule	376
3.75	ip telnet	376
3.75.1	ip telnet lockout-policy	377
3.75.2	ip telnet port	378
3.75.3	ip telnet security-level	378
3.75.4	ip telnet session max-count	379
3.75.5	ip telnet session timeout	380
3.76	ip traffic-shape host	381
3.77	ip traffic-shape unknown-host	382
3.78	ipv6 local-prefix	383
3.79	ipv6 name-server	384

3.80	ipv6 pass	385
3.81	ipv6 route	386
3.82	ipv6 static	387
3.83	ipv6 subnet	388
3.83.1	ipv6 subnet bind	388
3.83.2	ipv6 subnet mode	389
3.83.3	ipv6 subnet number	390
3.83.4	ipv6 subnet prefix delegate	391
3.83.5	ipv6 subnet prefix length	391
3.84	isolate-private	391
3.85	kabinet	392
3.85.1	kabinet access-level	393
3.85.2	kabinet interface	393
3.85.3	kabinet password	394
3.85.4	kabinet port	395
3.85.5	kabinet protocol-version	395
3.85.6	kabinet server	396
3.86	known host	397
3.87	mdns	397
3.87.1	mdns reflector disable	398
3.87.2	mdns reflector enforce	398
3.88	mws acquire	399
3.89	mws auto-ap-shutdown	400
3.90	mws backhaul shutdown	400
3.91	mws log stp	401
3.92	mws member	402
3.93	mws member debug	402
3.94	mws member dpn-accept	403
3.95	mws member reboot	403
3.96	mws member update check	404
3.97	mws member update start	405
3.98	mws member update stop	405
3.99	mws reboot	406
3.100	mws revisit	406
3.101	mws update start	407
3.102	mws update stop	407
3.103	mws zone	408
3.104	nextdns	409
3.104.1	nextdns assign	409
3.104.2	nextdns authenticate	410
3.104.3	nextdns authtoken	410
3.104.4	nextdns check-availability	411
3.105	ndns	411

3.105.1	ndns book-name	412
3.105.2	ndns check-name	421
3.105.3	ndns drop-name	422
3.105.4	ndns get-booked	423
3.105.5	ndns get-update	424
3.106	ntce	427
3.106.1	ntce debug	427
3.106.2	ntce memory-watcher	428
3.106.3	ntce qos category priority	428
3.106.4	ntce qos enable	429
3.107	ntp	430
3.108	ntp master	430
3.109	ntp server	431
3.110	ntp sync-period	431
3.111	object-group ip	432
3.111.1	object-group ip exclude	433
3.111.2	object-group ip include	434
3.112	opkg chroot	435
3.113	opkg disk	436
3.114	opkg dns-override	436
3.115	opkg initrc	437
3.116	opkg timezone	438
3.117	ping-check profile	438
3.117.1	ping-check profile host	439
3.117.2	ping-check profile max-fails	440
3.117.3	ping-check profile min-success	441
3.117.4	ping-check profile mode	441
3.117.5	ping-check profile port	442
3.117.6	ping-check profile power-cycle	443
3.117.7	ping-check profile timeout	443
3.117.8	ping-check profile update-interval	444
3.117.9	ping-check profile uri	445
3.118	ppe	445
3.119	pppoe pass	446
3.120	printer	447
3.120.1	printer bidirectional	447
3.120.2	printer debug	448
3.120.3	printer firmware	449
3.120.4	printer name	449
3.120.5	printer port	450
3.120.6	printer status-polling	450
3.120.7	printer type	451
3.121	schedule	451

3.121.1	schedule action	452
3.121.2	schedule description	452
3.121.3	schedule led	453
3.122	service afp	454
3.123	service cifs	454
3.124	service dhcp	455
3.125	service dhcp-relay	455
3.126	service dlna	456
3.127	service dns-proxy	456
3.128	service ftp	457
3.129	service http	457
3.130	service igmp-proxy	458
3.131	service internet-checker	458
3.132	service ipsec	459
3.133	service kabinet	459
3.134	service mdns	460
3.135	service mws	460
3.136	service ntce	461
3.137	service ntp	461
3.138	service snmp	462
3.139	service ssh	462
3.140	service sstp-server	463
3.141	service telnet	463
3.142	service torrent	464
3.143	service udpxy	464
3.144	service upnp	465
3.145	service vpn-server	465
3.146	show	466
3.146.1	show access	466
3.146.2	show acme	467
3.146.3	show afp	467
3.146.4	show associations	468
3.146.5	show button	470
3.146.6	show button bindings	470
3.146.7	show button handlers	472
3.146.8	show chilli profiles	474
3.146.9	show cifs	475
3.146.10	show clock date	476
3.146.11	show clock timezone-list	476
3.146.12	show components status	477
3.146.13	show configurator status	478
3.146.14	show credits	479
3.146.15	show crypto ike key	487

3.146.16	show crypto map	487
3.146.17	show defaults	489
3.146.18	show dlna	490
3.146.19	show dns-proxy	490
3.146.20	show dns-proxy filter presets	492
3.146.21	show dns-proxy filter profiles	494
3.146.22	show dpn document	494
3.146.23	show dpn list	495
3.146.24	show dot1x	497
3.146.25	show drivers	498
3.146.26	show dyndns updaters	499
3.146.27	show easyconfig status	500
3.146.28	show eula document	500
3.146.29	show eula list	502
3.146.30	show interface	503
3.146.31	show interface antennas	504
3.146.32	show interface bands	505
3.146.33	show interface bridge	506
3.146.34	show interface cells	507
3.146.35	show interface channel-utilization rrd	508
3.146.36	show interface channels	510
3.146.37	show interface chilli	512
3.146.38	show interface country-codes	512
3.146.39	show interface mac	514
3.146.40	show interface name-server	515
3.146.41	show interface operators	516
3.146.42	show interface rf e2p	518
3.146.43	show interface rrd	519
3.146.44	show interface spectrum rrd	521
3.146.45	show interface stat	523
3.146.46	show interface traffic-counter	524
3.146.47	show interface wps pin	525
3.146.48	show interface wps status	525
3.146.49	show internet status	526
3.146.50	show ip arp	527
3.146.51	show ip dhcp bindings	528
3.146.52	show ip dhcp pool	529
3.146.53	show ip ftp	529
3.146.54	show ip hotspot	530
3.146.55	show ip hotspot rrd	531
3.146.56	show ip hotspot summary	534
3.146.57	show ip http proxy	536
3.146.58	show ip http webdav	536

3.146.59	show ip name-server	537
3.146.60	show ip nat	538
3.146.61	show ip neighbour	539
3.146.62	show ip policy	540
3.146.63	show ip route	543
3.146.64	show ip service	546
3.146.65	show ipsec	547
3.146.66	show ipv6 addresses	548
3.146.67	show ipv6 dhcp bindings	548
3.146.68	show ipv6 prefixes	549
3.146.69	show ipv6 route	550
3.146.70	show kabinet status	551
3.146.71	show last-change	552
3.146.72	show led	552
3.146.73	show led bindings	553
3.146.74	show led controls	556
3.146.75	show log	559
3.146.76	show media	560
3.146.77	show mws associations	561
3.146.78	show mws candidate	562
3.146.79	show mws log	563
3.146.80	show mws member	564
3.146.81	show ndns	565
3.146.82	show netfilter	566
3.146.83	show nextdns availability	566
3.146.84	show nextdns profiles	566
3.146.85	show ntce applications	567
3.146.86	show ntce attributes	569
3.146.87	show ntce groups	573
3.146.88	show ntce groupsets	578
3.146.89	show ntce hosts	580
3.146.90	show ntce oses	584
3.146.91	show ntce status	586
3.146.92	show ntp status	587
3.146.93	show ping-check	587
3.146.94	show printers	588
3.146.95	show processes	589
3.146.96	show running-config	590
3.146.97	show schedule	593
3.146.98	show self-test	594
3.146.99	show site-survey	594
3.146.100	show ssh fingerprint	595
3.146.101	show ssh sftp	596

3.146.102	show sstp-server	597
3.146.103	show system	597
3.146.104	show system country	598
3.146.105	show system cpustat	599
3.146.106	show system zram	600
3.146.107	show tags	601
3.146.108	show threads	602
3.146.109	show torrent status	603
3.146.110	show upnp redirect	603
3.146.111	show usb	604
3.146.112	show version	605
3.146.113	show vpn-server	606
3.147	sms	606
3.147.1	sms delete	607
3.147.2	sms list	607
3.147.3	sms read	610
3.147.4	sms send	611
3.148	snmp community	611
3.149	snmp contact	612
3.150	snmp location	612
3.151	sstp-server	613
3.151.1	sstp-server allow-bridging	613
3.151.2	sstp-server dhcp route	614
3.151.3	sstp-server interface	615
3.151.4	sstp-server ipv6cp	616
3.151.5	sstp-server lcp echo	616
3.151.6	sstp-server lcp force-pap	617
3.151.7	sstp-server mru	617
3.151.8	sstp-server mtu	618
3.151.9	sstp-server multi-login	619
3.151.10	sstp-server pool-range	619
3.151.11	sstp-server static-ip	620
3.152	system	620
3.152.1	system button	621
3.152.2	system caption	622
3.152.3	system clock date	623
3.152.4	system clock timezone	623
3.152.5	system configuration factory-reset	624
3.152.6	system configuration fail-safe commit	624
3.152.7	system configuration fail-safe keep-alive	625
3.152.8	system configuration fail-safe rollback	625
3.152.9	system configuration fail-safe timer	626
3.152.10	system configuration save	626

3.152.11	system country	627
3.152.12	system debug	627
3.152.13	system description	628
3.152.14	system domainname	629
3.152.15	system eject	630
3.152.16	system hostname	630
3.152.17	system led	631
3.152.18	system led power schedule	632
3.152.19	system led power shutdown	633
3.152.20	system log clear	633
3.152.21	system log reduction	634
3.152.22	system log server	634
3.152.23	system log suppress	635
3.152.24	system mode	636
3.152.25	system mount	636
3.152.26	system ndss dump-report disable	637
3.152.27	system reboot	637
3.152.28	system set	638
3.152.29	system swap	639
3.152.30	system trace lock threshold	640
3.152.31	system usb power schedule	641
3.152.32	system usb power shutdown	641
3.152.33	system zram	642
3.153	tools	643
3.153.1	tools arping	643
3.153.2	tools ping	644
3.153.3	tools ping6	645
3.153.4	tools traceroute	646
3.154	torrent	647
3.154.1	torrent directory	648
3.154.2	torrent peer-port	648
3.154.3	torrent policy	649
3.154.4	torrent reset	649
3.154.5	torrent rpc-port	650
3.155	udpxy	650
3.155.1	udpxy buffer-size	651
3.155.2	udpxy buffer-timeout	651
3.155.3	udpxy interface	652
3.155.4	udpxy port	653
3.155.5	udpxy renew-interval	653
3.155.6	udpxy timeout	654
3.156	upnp forward	655
3.157	upnp lan	655

3.158	upnp redirect	656
3.159	user	657
3.159.1	user home	658
3.159.2	user password	658
3.159.3	user tag	659
3.160	uszd send	662
3.161	vpn-server	662
3.161.1	vpn-server dhcp route	663
3.161.2	vpn-server interface	663
3.161.3	vpn-server ipv6cp	664
3.161.4	vpn-server lcp echo	665
3.161.5	vpn-server lockout-policy	666
3.161.6	vpn-server mppe	667
3.161.7	vpn-server mppe-optional	667
3.161.8	vpn-server mru	668
3.161.9	vpn-server mtu	668
3.161.10	vpn-server multi-login	669
3.161.11	vpn-server pool-range	669
3.161.12	vpn-server static-ip	670
	Glossary	673
	Appendix A	
	Interface Hierarchy	687
	Appendix B	
	HTTP API	689
B.1	REST Core Interface	689
B.1.1	Resource Location	689
B.1.2	Methods	689
B.1.3	Data Format	690
B.2	XML Core Interface	693
B.2.1	Command Request	694
B.2.2	Configuration Request	695
B.2.3	Request Packet	695
	Appendix C	
	NVOX CLI commands	697
C.1	nvox	698
C.2	nvox call-history clear	698
C.3	nvox call-history delete-call	699
C.4	nvox call-history directory	699
C.5	nvox call-history dump	700
C.6	nvox call-history filter	700
C.7	nvox call-history length	701
C.8	nvox fxs	702

C.8.1	nvox fxs country	702
C.8.2	nvox fxs echo-canc-mode	704
C.8.3	nvox fxs echo-canc-thresholds	705
C.8.4	nvox fxs force-calibration	705
C.8.5	nvox fxs init-timer	706
C.8.6	nvox fxs led-blinking-timer	707
C.8.7	nvox fxs port-paging	707
C.8.8	nvox fxs pulse-dial-mode	708
C.8.9	nvox fxs unmute-timer	709
C.9	nvox parallel accept	709
C.10	nvox parallel disable	710
C.11	nvox parallel call-external	711
C.12	nvox parallel call-internal	711
C.13	nvox parallel hold-resume	712
C.14	nvox parallel intercept	713
C.15	nvox parallel reject	714
C.16	nvox parallel release-active	714
C.17	nvox parallel release-passive	715
C.18	nvox parallel toggle	716
C.19	nvox parallel transfer	716
C.20	nvox phone	717
C.20.1	nvox phone cadence	718
C.20.2	nvox phone dial-digit-timer	719
C.20.3	nvox phone intercom-cadence	720
C.20.4	nvox phone offhook-timer	720
C.20.5	nvox phone paging-cadence	721
C.21	nvox postdial key	722
C.22	nvox postdial mid-timer	722
C.23	nvox postdial post-timer	723
C.24	nvox postdial pre-timer	724
C.25	nvox sip	724
C.25.1	nvox sip audio-protocol	725
C.25.2	nvox sip cadence	726
C.25.3	nvox sip cadence-rule	726
C.25.4	nvox sip codec	727
C.25.5	nvox sip deny-interception	728
C.25.6	nvox sip deny-pickup	729
C.25.7	nvox sip digit-map	729
C.25.8	nvox sip disable	730
C.25.9	nvox sip disable-extended-keepalive	731
C.25.10	nvox sip disable-force-registration-retry	731
C.25.11	nvox sip disable-stun	732
C.25.12	nvox sip display-name	732

C.25.13	nvox sip dnd	733
C.25.14	nvox sip dnd-schedule	734
C.25.15	nvox sip domain	734
C.25.16	nvox sip dtmf-flash-signal	735
C.25.17	nvox sip dtmf-mode	736
C.25.18	nvox sip forward	736
C.25.19	nvox sip forward-if-busy	737
C.25.20	nvox sip forward-if-busy-schedule	738
C.25.21	nvox sip forward-if-timeout	738
C.25.22	nvox sip forward-if-timeout-schedule	739
C.25.23	nvox sip forward-schedule	740
C.25.24	nvox sip identity	740
C.25.25	nvox sip incoming-mask	741
C.25.26	nvox sip keepalive	742
C.25.27	nvox sip lock-codec	743
C.25.28	nvox sip login	743
C.25.29	nvox sip name	744
C.25.30	nvox sip outgoing-mask	744
C.25.31	nvox sip password	745
C.25.32	nvox sip priority	746
C.25.33	nvox sip proxy	747
C.25.34	nvox sip reg-timeout	747
C.25.35	nvox sip registration-first-retry	748
C.25.36	nvox sip registration-retry	749
C.25.37	nvox sip registration-uri	749
C.25.38	nvox sip sdp-nat-rewrite	750
C.25.39	nvox sip selection-id	751
C.25.40	nvox sip session-timer	751
C.25.41	nvox sip session-timer-mode	752
C.25.42	nvox sip substitute	753
C.25.43	nvox sip tls-security-mode	754
C.25.44	nvox sip transport	755
C.26	nvox sip-common	756
C.26.1	nvox sip-common 100rel	756
C.26.2	nvox sip-common agent	757
C.26.3	nvox sip-common disable-dns-srv	757
C.26.4	nvox sip-common disable-tls-validation	758
C.26.5	nvox sip-common g726-dynamic-payload	759
C.26.6	nvox sip-common outbound-proxy	759
C.26.7	nvox sip-common qos	760
C.26.8	nvox sip-common rtp-port	764
C.26.9	nvox sip-common sdp rtcp	764
C.26.10	nvox sip-common sdp tias	765

C.26.11	nvox sip-common stun-server	765
C.26.12	nvox sip-common tcp-keepalive	766
C.26.13	nvox sip-common tcp-port	767
C.26.14	nvox sip-common td-timeout	768
C.26.15	nvox sip-common tls-keepalive	768
C.26.16	nvox sip-common tls-port	769
C.26.17	nvox sip-common udp-port	770
C.26.18	nvox sip-common unescape-hash-char	771
C.27	show nvox active-calls	771
C.28	show nvox cadences	772
C.29	show nvox call-history	774
C.30	show nvox fxs	776
C.31	show nvox fxs-ports	777
C.32	show nvox info	778
C.33	show nvox license	778
C.34	show nvox sip-lines	779
C.35	show nvox sip-profiles	780
C.36	show nvox try-dial	782
C.37	show nvox try-dial-ext	783
Appendix D		
SNMP MIB		785
D.1	SNMPv2-MIB	785
D.2	IF-MIB	785
D.3	IP-MIB	787
D.4	UDP-MIB	788
D.5	HOST-RESOURCES-MIB	788
D.6	UCD-SNMP-MIB	788
Appendix E		
IPsec Encryption Levels		791
E.1	weak	791
E.2	weak-pfs	792
E.3	normal	794
E.4	normal-pfs	795
E.5	normal-3des	796
E.6	normal-3des-pfs	797
E.7	high	798
E.8	strong	799
E.9	strong-aead	800
E.10	strong-aead-pfs	800

Product Overview

1.1 Hardware Configuration

CPU MediaTek MT7621AT MIPS® 1004Kc 880 MHz, 2 cores / 4 threads

RAM 256MB DDR3: Nanya NT5CC128M16IP-DI 256MB DDR3-1600, Nanya NT5CC128M16JR-EK

Flash 128MB NAND: Spansion S34ML01G200TF100 128MB NAND, Macronix MX30LF1G18AC-TI

Ethernet

Ports	Chipset	Notes
5	RTL8211FS	

Label	Speed	Notes
0	1000 Mbps	WAN and SFP combo port GPHY
1	1000 Mbps	
2	1000 Mbps	
3	1000 Mbps	
4	1000 Mbps	

USB

Label	Speed	Notes
1	USB 2.0	
2	USB 3.0	

Wi-Fi

Band	Chipset	Notes
2.4 GHz	MediaTek MT7615N	802.11bgn 4x4, QAM256, BF
5 GHz		802.11an+ac 4x4, BF, MU-MIMO, BW160

Introduction to the CLI

This chapter describes how to use the Titan Command-Line Interface (CLI), its hierarchical structure, authorization levels and its help features.

The primary tool for managing the Titan router is the command line interface (*CLI*). System settings can be defined as a sequence of commands, which can be executed to bring the device to the specified condition.

Titan has three types of settings:

Current settings	<i>running config</i> is a set of commands describing the current status of the system. Current settings are stored in RAM and reflect every change of the system settings. However, the content of RAM is lost when the device is turned off. To restore the settings after reboot, they must be saved in non-volatile memory.
Startup configuration	<i>startup config</i> is a sequence of commands, which is stored in a specific partition of the non-volatile memory. It is used to initialize the system immediately after startup.
Default settings	<i>default config</i> contains factory default settings of Titan. RESET button is used to reset startup configuration to the factory default.

Files `startup-config` and `running-config` can be edited manually, without participation of the command line. It should be remembered that the lines with `!` in the beginning are ignored by the parser and the arguments which contain spaces must be enclosed in double quotes (for example, `ssid "Free Wi-Fi"`). Quotes themselves are ignored by the parser.

Responsibility for the accuracy of the changes rests with their author.

2.1 Enter commands in the CLI

Command line interpreter in Titan is designed for beginners as well as experts. All command names and options are clear and easy to remember.

Commands are divided into groups and arranged in a hierarchy. Thus, to do a setting, the operator needs to enter a sequence of nested command group names (node commands), and then enter the final command with parameters.

For example, IP-address of the GigabitEthernet1 network interface is set using the **address** command, which is located in the **interface** → **ip** group:

```
(config)>interface GigabitEthernet1 ip address 192.168.15.43/24
Network address saved.
```

2.1.1 Entering a group

Some of the node commands (containing a group of child commands) can be “entered” to allow direct executing of the child commands without typing the node name as prefix. In this case the prompt is changed to indicate the entered group.

The **exit** command or [Ctrl]+[D] key combination can be used to exit a group.

For example, after entering the interface group the command line prompt is changed to (config-if):

```
(config)>interface GigabitEthernet1
(config-if)>ip address 192.168.15.43/24
Network address saved.
(config-if)>[Ctrl]+[D]
(config)>
```

2.2 Getting Help and auto-completion

To make the configuring process as comfortable as possible, the CLI provides auto-completion of commands and parameters, hinting the operator, which commands are available at the current level of nesting. Auto-completion works by pressing [Tab]. Example:

```
(config)>in[Tab]

interface - network interface configuration

(config)> interface Gi[Tab]

Usage template:
interface {name}

Variants:
GigabitEthernet0
GigabitEthernet0/Vlan1
GigabitEthernet1

(config)> interface GigabitEthernet0[Tab]

Usage template:
interface {name}

Variants:
GigabitEthernet0/Vlan1
GigabitEthernet1

(config)> interface GigabitEthernet0[Enter]
(config-if)> ip[Tab]

address - set interface IP address
alias - add interface IP alias
dhcp - enable dhcp client
```

```

        mtu - set Maximum Transmit Unit size
        mru - set Maximum Receive Unit size
    access-group - bind access-control rules
        apn - set 3G access point name

(config-if)> ip ad[Tab]

        address - set interface IP address

(config-if)> ip address[Tab]

Usage template:
address {address} {mask}

(config-if)> ip address 192.168.15.43[Enter]
Configurator error[852002]: address: argument parse error.
(config-if)> ip address 192.168.15.43/24[Enter]
Network address saved.
(config-if)>

```

Hint for the current command can always be displayed by pressing [Tab]. Example:

```

(config)> interface GigabitEthernet1 [Tab]

        description - set interface description
            alias - add interface name alias
        mac-address - set interface MAC address
            dyndns - DynDns updates
    security-level - assign security level
    authentication - configure authentication
        ip - set interface IP parameters
        igmp - set interface IGMP parameters
        up - enable interface
        down - disable interface

(config)> interface GigabitEthernet1

```

2.3 Prefix no

Prefix **no** is used to negate a command.

For example, the command **interface** is responsible for creating a network interface with the given name. When used with this command, prefix **no** causes the opposite action — removing of the interface:

```
(config)> no interface PPPoE0
```

If the command is composite, **no** can be placed in front of any member. For example, **service dhcp** enables the *DHCP* service. It consists of two parts: **service** — the group name in the hierarchy of commands, and **dhcp** — the final command. Prefix **no** can be placed either at the beginning, or in the middle. The action is the same in both cases: stopping of the service.

```
(config)> no service dhcp
(config)> service no dhcp
```

2.4 Multiple input

Many commands have the property of *idempotence*, which means that multiple input of a command has the same effect as the single input. For example, entering **service http** adds a single line “service http” to the current settings, and re-entering does not change anything.

However, some of the commands allow you to add not a single, but multiple records, if they are entered with different arguments. For example, static routing table entries **ip route** or filters **access-list** are added sequentially and appear in the settings as a list:

Example 2.1. Using a command with multiple input

```
(config)> ip route 1.1.1.0/24 PPTP0
Network::RoutingTable: Added static route: 1.1.1.0/24 via PPTP0.
(config)> ip route 1.1.2.0/24 PPTP0
Network::RoutingTable: Added static route: 1.1.2.0/24 via PPTP0.
(config)> ip route 1.1.3.0/24 PPTP1
Network::RoutingTable: Added static route: 1.1.3.0/24 via PPTP1.
(config)> show running-config
...
ip route 1.1.1.0 255.255.255.0 PPTP0
ip route 1.1.2.0 255.255.255.0 PPTP0
ip route 1.1.3.0 255.255.255.0 PPTP1
...
```

Records from such tables can be removed one by one, using prefix **no** and arguments to identify the record you want to remove:

```
(config)> no ip route 1.1.2.0/24
Network::RoutingTable: Deleted static route: 1.1.2.0/24 via PPTP0.
(config)> show running-config
...
ip route 1.1.1.0 255.255.255.0 PPTP0
ip route 1.1.3.0 255.255.255.0 PPTP1
...
```

2.5 Saving to startup settings

Current and startup settings are stored in the files `running-config` and `startup-config`, respectively. To save the current settings in the non-volatile memory, copy them as shown below:

```
(config)> copy running-config startup-config
Copied: running-config -> startup-config
```

2.6 Delayed restart

If Titan device is located away from the operator and is managed remotely, there is a risk to lose control over it because of a misoperation. In this case it will be difficult to reboot and return to the saved settings.

The **system reboot** command lets you set a delayed restart timer, perform “risky” settings, then turn off the timer and save the changes. If connection to the device is lost during configuration, the operator will be enough to wait for automatic reboot and connect to the device again.

Command Reference

3.1 Core commands

Core commands are used to manage files on your device.

3.1.1 copy

Description Copy the contents of one file to another. Used for the firmware updating, saving the current settings, resetting to factory, etc.

Prefix no No

Change settings No

Multiple input No

Synopsis `(config)> copy <source> <destination>`

Arguments

Argument	Value	Description
source	<i>Filename</i>	Full path to the file to be copied in <file system>:<path> format
destination	<i>Filename</i>	Full path to the directory for the new file.

Example

Current settings can be saved as follows:

```
(config)> copy running-config startup-config
```

```
(config)> copy log MyPassport:/log.txt
```

File names in this example are aliases. Full names of the configuration files are system:running-config and flash:startup-config, respectively.

History

Version	Description
2.00	The copy command has been introduced.

3.1.2 erase

Description Delete a file from the Titan device.

Prefix no No

Change settings Yes**Multiple input** Yes**Synopsis** `(config)> erase <filename>`

Argument	Value	Description
filename	<i>Filename</i>	Specifies the file to be removed.

Example

```
(config)> erase ext-opkg:/.dlna_files.db
FileSystem::Repository: "ext-opkg:/.dlna_files.db" erased.
```

Version	Description
2.00	The erase command has been introduced.

3.1.3 exit

Description Leave the command node.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** `(config)> exit`

Example

```
(show)> exit
Core::Configurator: Done.
(config)>
```

Version	Description
2.00	The exit command has been introduced.

3.1.4 ls

Description Display list of files from the specified directory.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** `(config)> ls [<directory>]`

Arguments

Argument	Value	Description
directory	<i>String</i>	Path to the directory. Must contain the name of the file system and path to the folder directly in the following format <file system>:<path>. Examples of file systems — flash, temp, proc, usb. etc.

Example

```
(config)> ls FILES:

      rel: FILES:

      entry, type = D:
          name: com

      entry, type = R:
          name: IMAX.mkv
          size: 1886912512

      entry, type = D:
          name: speedfan

      entry, type = D:
          name: portable

      entry, type = D:
          name: video

      entry, type = D:
          name: Новая папка
```

History

Version	Description
2.00	The ls command has been introduced.

3.1.5 mkdir

Description

Create a new directory.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(config)> mkdir <directory>
```

Arguments

Argument	Value	Description
directory	<i>String</i>	Path to the directory.

Example

```
(config)> mkdir SANDSK:/test
FileSystem::Repository: "SANDSK:/test" created.
```

```
(config)> mkdir SANDSK:/test/onetest
FileSystem::Repository: "SANDSK:/test/onetest" created.
```

History

Version	Description
2.12	The mkdir command has been introduced.

3.1.6 more

Description

Display the contents of a text file line by line.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(config)> more <filename>
```

Arguments

Argument	Value	Description
filename	<i>Filename</i>	Full path to the file or alias.

Example

```
(config)> more temp:/resolv.conf
nameserver 127.0.0.1
options timeout:1 attempts:1 rotate
```

History

Version	Description
2.00	The more command has been introduced.

3.2 access

Description

Set user access for directory on USB storage.

Command with **no** prefix denies access to the directory.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(config)> access <directory> <user> <mode> [ recursive ]
```

```
(config)> no access <directory> <user> [ recursive ]
```

Arguments

Argument	Value	Description
directory	<i>String</i>	Name of directory on USB storage.
user	<i>String</i>	User name.
mode	forbidden	Access denied.
	read	Read-only access.
	write	Write-only access.
	read/write	Access to reading and writing.
	inherited	Access rights are inherited from a parent folder.
recursive	<i>Keyword</i>	Access rights applies to all subfolders.

Example

```
(config)> access 0D5F-1DB6:Downloads test read/write
```

```
(config)> no access 0D5F-1DB6:Downloads test
```

History

Version	Description
2.00	The access command has been introduced.

3.3 access-list

Description

Access to a group of commands to configure the selected list of packet filtering rules. If the list is not found, the command tries to create it. Such a list can be assigned to a network interface using [interface ip access-group](#) command.

Command with **no** prefix removes the list of rules.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Group entry

(config-acl)

Synopsis

```
(config)> access-list <name>
```

```
(config)> no access-list <name>
```

Arguments

Argument	Value	Description
name	<i>String</i>	Filtering rules list name (Access Control List , ACL).

Example

```
(config)> access-list test_acl
Network::Acl: "test_acl" access list created.
(config-acl)>
```

```
(config)> no access-list test_acl
Network::Acl: "test_acl" access list removed.
```

History

Version	Description
2.00	The access-list command has been introduced.

3.3.1 access-list auto-delete

Description

Enable automatic deletion of the [ACL](#) rules when deleting an interface. The command is forced on access lists with the `_WEBADMIN_` prefix.

The command cannot be enabled if there are no bound interfaces. The exception is reading the startup-config.

Command with **no** prefix disables automatic deletion.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-acl)> auto-delete
```

```
(config-acl)> no auto-delete
```

Example

```
(config-acl)> auto-delete
Network::Acl: Enabled auto-deletion for "_WEBADMIN_Home" access ►
group.
```

```
(config-acl)> no auto-delete
Network::Acl: Disabled auto-deletion for "_WEBADMIN_Home" access ►
group.
```

History

Version	Description
3.09	The access-list auto-delete command has been introduced.

3.3.2 access-list deny

Description

Add a packet filtering deny rule into a specified [ACL](#).

Command with **no** prefix removes the rule.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(config-acl)> deny (tcp | udp) <source> <source-mask>
[ port( ( <src-port-operator> <source-port> ) |
( range <source-port> <source-end-port> ) )]
<destination> <destination-mask>
[ port( ( <dst-port-operator> <destination-port> ) |
( range <destination-port> <destination-end-port> ) )]

(config-acl)> deny (icmp | esp | gre | ipip | ip) <source> <source-mask>
<destination> <destination-mask>

(config-acl)> no deny (tcp | udp) <source> <source-mask>
[ port( ( <src-port-operator> <source-port> ) |
( range <source-port> <source-end-port> ) )]
<destination> <destination-mask>
[ port( ( <dst-port-operator> <destination-port> ) |
( range <destination-port> <destination-end-port> ) )]

(config-acl)> no deny (icmp | esp | gre | ipip | ip) <source> <source-mask>
<destination> <destination-mask>
```

Arguments

Argument	Value	Description
tcp	Keyword	TCP protocol.
udp	Keyword	UDP protocol.
icmp	Keyword	ICMP protocol.
esp	Keyword	ESP protocol.
gre	Keyword	GRE protocol.
ipip	Keyword	IP in IP protocol.
ip	Keyword	IP protocol (include TCP, UDP, ICMP and other).
source	IP address	The source address in the header of IP-packet.
source-mask	IP-mask	Mask to be applied to the source address in the header of IP-packet before comparison with <i>source</i> . There are two ways to enter the mask: the canonical form (for example, 255.255.255.0) and the form of prefix bit length (for example, /24).
source-port	Integer	Source port in the TCP or UDP header.
source-end-port	Integer	The end of the source range of ports.
src-port-operator	lt	Operator "less" to compare the port with the specified <i>source-port</i> .

Argument	Value	Description
	eq	Operator “equal” to compare the port with the specified <i>source-port</i> .
	gt	Operator “greater” to compare the port with the specified <i>source-port</i> .
destination	<i>IP address</i>	The destination address in the header of IP-packet.
destination-mask	<i>IP-mask</i>	Mask to be applied to the destination address in the header of IP-packet before comparison with <i>destination</i> . There are two ways to enter the mask: in the canonical form (for example, 255.255.255.0) and in the form of prefix with bit length (for example, /24).
destination-port	<i>Integer</i>	Destination port in the <i>TCP</i> or <i>UDP</i> header.
destination-end-port	<i>Integer</i>	The end of the destination range of ports.
dst-port-operator	lt	Operator “less” to compare the port with the specified <i>destination-port</i> .
	eq	Operator “equal” to compare the port with the specified <i>destination-port</i> .
	gt	Operator “greater” to compare the port with the specified <i>destination-port</i> .

Example

```
(config-acl)> deny tcp 0.0.0.0/24 port eq 80 0.0.0.0/24 port ►
range 18 88
Network::Acl: Rule accepted.
```

```
(config-acl)> deny icmp 192.168.0.0 255.255.255.0 192.168.1.1 ►
255.255.255.0
Network::Acl: Rule accepted.
```

```
(config-acl)> no deny tcp 0.0.0.0/24 port eq 80 0.0.0.0/24 port ►
range 18 88
Network::Acl: Rule deleted.
```

```
(config-acl)> no deny icmp 192.168.0.0 255.255.255.0 192.168.1.1 ►
255.255.255.0
Network::Acl: Rule deleted.
```

History

Version	Description
2.00	The access-list deny command has been introduced.
2.06	New value ip was added to the protocol argument.
2.08	New protocols esp, gre and ipip were added.
2.09.A.2.1	Port ranges were added.

3.3.3 access-list permit

Description Add a packet filtering permit rule into a specified [ACL](#).

Command with **no** prefix removes the rule.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config-acl)> permit (tcp | udp) <source> <source-mask>
[ port(( <src-port-operator> <source-port> )|
( range <source-port> <source-end-port> ))]
<destination> <destination-mask>
[ port(( <dst-port-operator> <destination-port> )|
( range <destination-port> <destination-end-port> ))]
```

```
(config-acl)> permit (icmp | esp | gre | ipip | ip) <source> <source-mask>
<destination> <destination-mask>
```

```
(config-acl)> no permit (tcp | udp) <source> <source-mask>
[ port(( <src-port-operator> <source-port> )|
( range <source-port> <source-end-port> ))]
<destination> <destination-mask>
[ port(( <dst-port-operator> <destination-port> )|
( range <destination-port> <destination-end-port> ))]
```

```
(config-acl)> no permit (icmp | esp | gre | ipip | ip) <source> <source-mask>
<destination> <destination-mask>
```

Arguments

Argument	Value	Description
tcp	Keyword	TCP protocol.
udp	Keyword	UDP protocol.
icmp	Keyword	ICMP protocol.
esp	Keyword	ESP protocol.
gre	Keyword	GRE protocol.
ipip	Keyword	IP in IP protocol.
ip	Keyword	IP protocol (include TCP, UDP, ICMP and other).
source	IP address	The source address in the header of IP-packet.
source-mask	IP-mask	Mask to be applied to the source address in the header of IP-packet before comparison with <i>source</i> . There are two ways to enter the mask: the

Argument	Value	Description
		canonical form (for example, 255.255.255.0) and the form of prefix bit length (for example, /24).
source-port	<i>Integer</i>	Source port in the <i>TCP</i> or <i>UDP</i> header.
source-end-port	<i>Integer</i>	The end of the source range of ports.
src-port-operator	lt	Operator “less” to compare the port with the specified <i>source-port</i> .
	eq	Operator “equal” to compare the port with the specified <i>source-port</i> .
	gt	Operator “greater” to compare the port with the specified <i>source-port</i> .
destination	<i>IP address</i>	The destination address in the header of IP-packet.
destination-mask	<i>IP-mask</i>	Mask to be applied to the destination address in the header of IP-packet before comparison with <i>destination</i> . There are two ways to enter the mask: in the canonical form (for example, 255.255.255.0) and in the form of prefix with bit length (for example, /24).
destination-port	<i>Integer</i>	Destination port in the <i>TCP</i> or <i>UDP</i> header.
destination-end-port	<i>Integer</i>	The end of the destination range of ports.
dst-port-operator	lt	Operator “less” to compare the port with the specified <i>destination-port</i> .
	eq	Operator “equal” to compare the port with the specified <i>destination-port</i> .
	gt	Operator “greater” to compare the port with the specified <i>destination-port</i> .

Example

```
(config-acl)> permit icmp 192.168.0.0 255.255.255.0 192.168.1.1 ►
255.255.255.0
Network::Acl: Rule accepted.
```

```
(config-acl)> permit tcp 0192.168.1.0/24 port eq 443 0.0.0.0/24 ►
port range 8080 9090
Network::Acl: Rule accepted.
```

```
(config-acl)> no permit icmp 192.168.0.0 255.255.255.0 ►
192.168.1.1 255.255.255.0
Network::Acl: Rule deleted.
```

```
(config-acl)> no permit tcp 0192.168.1.0/24 port eq 443 ►
0.0.0.0/24 port range 8080 9090
Network::Acl: Rule deleted.
```


History

Version	Description
2.00	The access-list permit command has been introduced.
2.06	New value <code>ip</code> was added to the <code>protocol</code> argument.
2.08	New protocols <code>esp</code> , <code>gre</code> and <code>ipip</code> were added.
2.09.A.2.1	Port ranges were added.

3.3.4 access-list rule

Description

Disable, set operation time by schedule, change the order or set description for the [ACL](#) rule.

Command with **no** prefix enables the rule, removes schedule and description for [ACL](#) rule.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(config-acl)> rule <index> (disable | schedule <schedule> | order
<new-index> | description <description>)
```

```
(config-acl)> no rule <index> (disable | schedule | description)
```

Arguments

Argument	Value	Description
<code>index</code>	<i>Integer</i>	The ACL rule number.
<code>disable</code>	<i>Keyword</i>	Disable the ACL rule.
<code>schedule</code>	<i>Schedule</i>	The name of the schedule that was created with schedule group of commands.
<code>order</code>	<i>Integer</i>	New position of the ACL rule in the list.
<code>description</code>	<i>String</i>	The ACL rule description.

Example

```
(config-acl)> rule 0 disable
Network::Acl: Rule disabled.
```

```
(config-acl)> rule 0 schedule acl_schedule
Network::Acl: Rule schedule set to "acl_schedule".
```

```
(config-acl)> rule 0 description myacl
Network::Acl: Rule description set to "myacl".
```

```
(config-acl)> rule 0 order 1
Network::Acl: Rule 0 moved to position 1.
```

```
(config-acl)> no rule 0 disable
Network::Acl: Rule enabled.
```

```
(config-acl)> no rule 0 schedule
Network::Acl: Rule schedule removed.
```

```
(config-acl)> no rule 0 description
Network::Acl: Rule description removed.
```

History

Version	Description
2.08	The access-list rule command has been introduced.

3.4 afp

Description Access to a group of commands to manage [AFP](#) server service.

Prefix no No

Change settings No

Multiple input No

Group entry (config-afp)

Synopsis | (config)> **afp**

Example (config)> **afp**
Core::Configurator: Done.
(config-afp)>

History

Version	Description
2.06	The afp command has been introduced.

3.4.1 afp automount

Description Enable automounting of USB storages to access via [AFP](#). By default, the function is enabled.

Command with **no** prefix disables the automounting function.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis | (config-afp)> **automount**

| (config-afp)> **no automount**

Example (config-afp)> **automount**
Afp::Server: Automount enabled.

(config-afp)> **no automount**
Afp::Server: Automount disabled.

History

Version	Description
2.06	The afp automount command has been introduced.

3.4.2 afp permissive

Description Enable permissive mode, when all users can access the files on USB storage. By default, the setting is disabled.

Command with **no** prefix disables permissive mode, so access to the files have only users with "afp" tag.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-afp)> permissive
```

```
(config-afp)> no permissive
```

Example (config-afp)> **permissive**
Afp::Server: Permissive mode enabled.

(config-afp)> **no permissive**
Afp::Server: Permissive mode disabled.

History

Version	Description
2.06	The afp permissive command has been introduced.

3.4.3 afp share

Description Share directory on USB storage.

Command with **no** prefix removes share. If you use no argument, the entire list of shares will be removed.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config-afp)> share <label> <mount> [timemachine] [description ]
(config-afp)> no share [label ]
```

Arguments

Argument	Value	Description
label	<i>String</i>	Share name for users.
mount	<i>String</i>	Name of directory to share.
timemachine	<i>Keyword</i>	Access for Time Machine application.
description	<i>String</i>	Description of share.

Example

```
(config-afp)> share AFP C253-062D:/FOR_AFP timemachine
Afp::Server: Added share "AFP".
```

```
(config-afp)> no share AFP
Afp::Server: Removed share "AFP".
```

History

Version	Description
2.06	The afp share command has been introduced.

3.5 cifs

Description

Access to a group of commands to manage *CIFS* service.

Prefix no

No

Change settings

No

Multiple input

No

Group entry

(config-cifs)

Synopsis

```
(config)> cifs
```

Example

```
(config)> cifs
Core::Configurator: Done.
(config-cifs)>
```

History

Version	Description
2.00	The cifs command has been introduced.

3.5.1 cifs automount

Description

Enable automounting of USB storages to access via *CIFS*. By default, the function is enabled.

Command with **no** prefix disables the automounting function.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-cifs)> automount
(config-cifs)> no automount
```

Example

```
(config-cifs)> automount
Cifs::ServerT smb: Automount enabled.
```

```
(config-cifs)> no automount
Cifs::ServerT smb: Automount disabled.
```

History

Version	Description
2.00	The cifs automount command has been introduced.

3.5.2 cifs map-hidden

Description Enable [ACL](#) and hidden files support for [CIFS](#). By default, the feature is disabled.
Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-cifs)> map-hidden
(config-cifs)> no map-hidden
```

Example

```
(config-cifs)> map-hidden
Cifs::ServerT smb: Map hidden enabled.
```

```
(config-cifs)> no map-hidden
Cifs::ServerT smb: Map hidden enabled.
```

History

Version	Description
2.14	The cifs map-hidden command has been introduced.

3.5.3 cifs master

Description Enable *Master Browser* function for TSMB server. By default, the setting is enabled.

Command with **no** prefix disables *Master Browser* function.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-cifs)> master
(config-cifs)> no master
```

Example

```
(config-cifs)> master
Cifs::ServerTsmc: Master browser enabled.
```

```
(config-cifs)> no master
Cifs::ServerTsmc: Master browser disabled.
```

History

Version	Description
2.00	The cifs master command has been introduced.
2.04	The cifs master command was removed as obsolete.
3.03	The cifs master command has been returned.

3.5.4 cifs permissive

Description Enable permissive mode, when all users can access the files on USB storage. By default, the setting is disabled.

Command with **no** prefix disables permissive mode, so access to the files have only users with "cifs" tag.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-cifs)> permissive
(config-cifs)> no permissive
```

Example

```
(config-cifs)> permissive
Cifs::ServerTsmc: Permissive mode enabled.
```

```
(config-cifs)> no permissive
Cifs::ServerTsmB: Permissive mode disabled.
```

History

Version	Description
2.00	The cifs permissive command has been introduced.

3.5.5 cifs share

Description

Share directory on USB storage.

Command with **no** prefix removes share. If you use no argument, the entire list of shares will be removed.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(config-cifs)> share <label> <mount> [ <description> ]
```

```
(config-cifs)> no share [ <label> ]
```

Arguments

Argument	Value	Description
label	<i>String</i>	Share name, that users will see.
mount	<i>String</i>	Name of directory to share.
description	<i>String</i>	Description of share.

Example

```
(config-cifs)> share MYHOME1 10A0CDE9A0CDD4FE:/
Cifs::ServerTsmB: Added share "MYHOME1".
```

```
(config-cifs)> share MYHOME 10A0CDE9A0CDD4FE:/Video/
Cifs::ServerTsmB: Added share "MYHOME".
```

```
(config-cifs)> no share MYHOME1
Cifs::ServerTsmB: Removed share "MYHOME1".
```

History

Version	Description
2.00	The cifs share command has been introduced.

3.6 cloud control2 security-level

Description

Set Cloud Control2 service security level for Keenetic mobile application. By default, public value is set.

Prefix no No**Change settings** Yes**Multiple input** No**Synopsis** `(config)> cloud control2 security-level (public | private)`**Arguments**

Argument	Value	Description
public	<i>Keyword</i>	Access to the Cloud Control2 is allowed for public, private and protected interfaces.
private	<i>Keyword</i>	Access to the Cloud Control2 is allowed for private interfaces only.

Example

```
(config)> cloud control2 security-level public
CloudControl2::Agent: Security level changed to public.
```

```
(config)> cloud control2 security-level private
CloudControl2::Agent: Security level changed to private.
```

History

Version	Description
3.05	The cloud control2 security-level command has been introduced.

3.7 components

Description Access to a group of commands to manage firmware components.**Prefix no** No**Change settings** No**Multiple input** No**Group entry** (config-comp)**Synopsis** `(config)> components`**History**

Version	Description
2.00	The components command has been introduced.

3.7.1 components auto-update channel

Description Set source of components for auto-update feature. By default, value stable is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-comp)> auto-update channel <channel>
(config-comp)> no auto-update channel
```

Arguments

Argument	Value	Description
channel	stable	Components have been fully tested and recommended for installation. The web interface specifies this channel as Main.
	preview	Components contain the latest features and enhancements, but have not been fully tested yet. The web interface specifies this channel as Preview.
	draft	The components contain the latest features and are used for testing. The web interface specifies this channel as Dev.

Example

```
(config-comp)> auto-update channel preview
Components::Manager: Auto-update channel is "preview".
```

```
(config-comp)> no auto-update channel
Components::Manager: Reset an auto-update channel to default.
```

History

Version	Description
3.01	The components auto-update channel command has been introduced.

3.7.2 components auto-update disable

Description Components auto-update function. By default, automatic update is enabled.

Command with **no** prefix enables auto-update.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config-comp)> auto-update disable
```

```
(config-comp)> no auto-update disable
```

Example

```
(config-comp)> auto-update disable
Components::Manager: Components auto-update disabled.
```

```
(config-comp)> no auto-update disable
Components::Manager: Components auto-update enabled.
```

History

Version	Description
2.09	The components auto-update disable command has been introduced.

3.7.3 components auto-update schedule

Description

Assign a schedule for the auto-update operation. Schedule must be created and customized with [schedule action](#) command before execution.

Command with **no** prefix unbinds the schedule.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-comp)> auto-update schedule <schedule>
```

```
(config-comp)> no auto-update schedule
```

Arguments

Argument	Value	Description
schedule	<i>Schedule</i>	The name of the schedule that was created with schedule group of commands.

Example

```
(config-comp)> auto-update schedule Update
Components::Manager: Set auto-update schedule "Update".
```

```
(config-comp)> no auto-update schedule
Components::Manager: Schedule disabled.
```

History

Version	Description
3.03	The components auto-update schedule command has been introduced.

3.7.4 components check-update

Description Check the firmware updates for the candidate or member of Modular Wi-Fi System.

Prefix no No

Change settings No

Multiple input No

Synopsis `(config-comp)> check-update [force]`

Arguments

Argument	Value	Description
force	<i>Keyword</i>	Check for updates constantly.

Example

```
(config-comp)> check-update
release: 2.15.A.3.0-2
  sandbox: draft
  timestamp: Dec 17 18:58:55
  valid: no
```

```
(config-comp)> check-update force
release: 2.15.A.3.0-2
  sandbox: draft
  timestamp: Dec 17 18:58:55
  valid: no
```

History

Version	Description
2.14	The components check-update command has been introduced.

3.7.5 components commit

Description Apply the changes made by [components install](#) and [components remove](#) commands.

Prefix no No

Change settings Yes

Multiple input No

Synopsis `(config-comp)> commit`

History

Version	Description
2.00	The components commit command has been introduced.

3.7.6 components install

Description Mark component to install. Final installation carried out with **components commit** command.

Prefix no No

Change settings Yes

Multiple input Yes

Synopsis

```
(config-comp)> install <component>
```

Arguments

Argument	Value	Description
component	<i>String</i>	Component name. List of available components for installation can be displayed with the components list command.

Example

```
(config-comp)> install ntfs  
Components::Manager: Component "ntfs" is queued for installation.
```

History

Version	Description
2.00	The components install command has been introduced.

3.7.7 components list

Description Switch to the selected sandbox and mark for installation all the components that require changes to match the version in the sandbox. If you use no argument, the entire list of all components for current sandbox (installed and available) will be displayed. If there is no Internet connection, only the list of installed components will be displayed.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(config-comp)> list [ sandbox ]
```

Arguments

Argument	Value	Description
sandbox	<i>String</i>	Remote sandbox, such as stable or beta.

Example

```
(config-comp)> list

  firmware:
    version: 2.13.C.0.0-1

  sandbox: stable

  local:
    sandbox: beta

  component:
    name: base

  priority: optional
  size: 35233
  version: 2.13.C.0.0-1
  hash: f65428af2a6fd636db779370deb58f40
  installed: 2.13.B.1.0-1

  preset: minimal
  preset: recommended
  queued: yes

  ...
```

History

Version	Description
2.00	The components list command has been introduced.
2.06.A.6	The <i>sandbox</i> parameter has been introduced. The command components list should be used in favour of components sync .

3.7.8 components preset

Description

Select a predefined set of components. Installation of preset is carried out with **components commit** command.

Before preset installation check the latest versions of components on the update server with **components list** command. Internet connection is required.

Prefix no

No

Change settings

Yes

Multiple input

No

Synopsis

```
(config-comp)> preset <preset>
```

Arguments

Number and names of presets can be changed, so check the list of available presets with help of **preset [Tab]** command.

Argument	Value	Description
preset	minimal	Minimal set of components will be marked.
	recommended	Recommended set of components will be marked for installation.

Example

```
(config-comp)> preset [Tab]

Usage template:
  preset {preset}

Choose:
  minimal
  recommended

(config-comp)> preset recommended
lib::libndmComponents error[268369922]: updates are available ►
for this system.
(config-comp)> commit
Components::Manager: Update task started.
```

History

Version	Description
2.00	The components preset command has been introduced.

3.7.9 components preview

Description Show size of firmware as current set of components selected with **components install** command.

Prefix no No

Change settings Yes

Multiple input No

Synopsis (config-comp)> **preview**

Example (config-comp)> **preview**

```
preview:
  size: 7733308
```

History

Version	Description
2.06	The components preview command has been introduced.

3.7.10 components remove

Description Mark component to remove. Final removal carried out with [components commit](#) command.

Prefix no No

Change settings Yes

Multiple input Yes

Synopsis `(config-comp)> remove <component>`

Arguments

Argument	Value	Description
component	<i>String</i>	Component name. List of available components for removal can be displayed with the components list command.

Example `(config-comp)> remove ntfs`
 Components::Manager: Component "ntfs" is queued for removal.

History

Version	Description
2.00	The components remove command has been introduced.

3.7.11 components validity-period

Description Set a validity period of a local component list. After this time the command [components list](#) will be automatically executed to get actual list of components from update server. By default, value 1800 is used.

Command with **no** prefix resets period to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis `(config-comp)> validity-period <seconds>`

`(config-comp)> no validity-period`

Arguments

Argument	Value	Description
seconds	<i>Integer</i>	Validity period of a local component list in seconds. Can take values in the range from 0 to 604800 inclusively.

Example

```
(config-comp)> validity-period 500
Components::Manager: Validity period set to 500 seconds.
```

```
(config-comp)> no validity-period
Components::Manager: Validity period reset to 1800 seconds.
```

History

Version	Description
2.03	The components validity-period command has been introduced.

3.8 crypto engine

Description

Select the type of *ESP* packets processing with *IPsec*. By default, the hardware mode is used.

Command with **no** prefix disables the feature.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> crypto engine <type>
```

```
(config)> no crypto engine
```

Arguments

Argument	Value	Description
type	software	Software mode.
	hardware	Hardware mode.

Example

```
(config)> crypto engine software
IpSec::CryptoEngineManager: IPsec crypto engine set to "software".
```

```
(config)> no crypto engine
IpSec::CryptoEngineManager: IPsec crypto engine was disabled.
```

History

Version	Description
2.06	The crypto engine command has been introduced.

3.9 crypto ike key

Description

Add *IKE* key with remote side ID.

Command with **no** prefix removes specified key.

Prefix no	Yes
Change settings	Yes
Multiple input	Yes

Synopsis

```
(config)> crypto ike key <name> <psk> ( <type> <id> | any )
```

```
(config)> no crypto ike key <name>
```

Arguments

Argument	Value	Description
name	<i>String</i>	Name of the key. Latin letters, numbers, dots, hyphens and underscores are acceptable.
psk	<i>String</i>	Password for authentication. Password length can be from 6 to 96 characters.
type	address	ID type is IP address.
	fqdn	ID type is full domain name.
	dn	ID type is domain name.
	email	ID type is e-mail address.
id	<i>String</i>	Value of the remote side ID.
any	<i>Keyword</i>	Allow the key usage for any remote side.

Example

```
(config)> crypto ike key VirtualIPServer ▶  
aDjs0C1gvWCs0iE4Ijhs+HRnNPiheGA478 any  
IpSec::Manager: "VirtualIPServer": crypto ike key successfully ▶  
added.
```

```
(config)> crypto ike key VirtualIPServer ▶  
aDjs0C1gvWCs0iE4Ijhs+HRnNPiheGA478R4M6d4+054LLihe any  
IpSec::Manager: "VirtualIPServer": crypto ike key successfully ▶  
updated.
```

```
(config)> no crypto ike key VirtualIPServer  
IpSec::Manager: "VirtualIPServer": crypto ike key successfully ▶  
removed.
```

History

Version	Description
2.06	The crypto ike key command has been introduced.

3.10 crypto ike mtu

Description

Set the *MTU* value to be transmitted to *IKE*. By default, the *MTU* value is inherited from the interface through which the Internet is accessed.

Command with **no** prefix resets the *MTU* value to default.

Prefix no Yes**Change settings** Yes**Multiple input** No

Synopsis

```
(config)> crypto ike mtu value
```

```
(config)> no crypto ike mtu
```

Arguments

Argument	Value	Description
value	<i>Integer</i>	<i>MTU</i> value. Can take values in the range from 576 to 1500 inclusively.

Example

```
(config)> crypto ike mtu 1400  
IpSec::Manager: IKE MTU value is set to 1400.
```

```
(config)> no crypto ipsec mtu  
IpSec::Manager: Reset IKE MTU value.
```

History

Version	Description
3.08	The crypto ike mtu command has been introduced.

3.11 crypto ike nat-keepalive

Description Set the timeout between keepalive packets in case of NAT between the client and server *IPsec*. By default, 20 value is set.

Command with **no** prefix resets setting to default.

Prefix no Yes**Change settings** Yes**Multiple input** No

Synopsis

```
(config)> crypto ike nat-keepalive <nat-keepalive>
```

```
(config)> no crypto ike nat-keepalive
```

Arguments

Argument	Value	Description
nat-keepalive	<i>Integer</i>	Timeout between keepalive packets in seconds. Can take values in the range from 5 to 3600 inclusively.

Example

```
(config)> crypto ike nat-keepalive 90  
IpSec::Manager: Set crypto ike nat-keepalive timeout to 90 s.
```

```
(config)> no crypto ike nat-keepalive
IpSec::Manager: Reset crypto ike nat-keepalive timeout to 20 s.
```

History

Version	Description
2.06	The crypto ike nat-keepalive command has been introduced.

3.12 crypto ike policy

Description

Access to a group of commands to configure selected *IKE* policy. If *IKE* policy is not found, the command tries to create it.

Command with **no** prefix removes *IKE* policy. At the same time references to this *IKE* policy are automatically deleted from all *IPsec* profiles.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Group entry

(config-ike-policy)

Synopsis

```
(config)> crypto ike policy <name>
```

```
(config)> no crypto ike policy <name>
```

Arguments

Argument	Value	Description
name	<i>String</i>	<i>IKE</i> policy name. Latin letters, numbers, dots, hyphens and underscores are acceptable.

Example

```
(config)> crypto ike policy test
IpSec::Manager: "test": crypto ike policy successfully created.
```

```
(config)> no crypto ike policy test
IpSec::Manager: Crypto ike policy "test" removed.
```

History

Version	Description
2.06	The crypto ike policy command has been introduced.

3.12.1 crypto ike policy lifetime

Description

Set lifetime of *IPsec IKE* association. By default, the value 86400 is used.

Command with **no** prefix resets setting to default.

Prefix no Yes**Change settings** Yes**Multiple input** No

Synopsis

```
(config-ike-policy)> lifetime <lifetime>
```

```
(config-ike-policy)> no lifetime
```

Arguments

Argument	Value	Description
lifetime	Integer	Lifetime of <i>IPsec IKE</i> association in seconds. Can take values in the range from 60 to 2147483647.

Example

```
(config-ike-policy)> lifetime 3600
```

```
IpSec::Manager: "test": crypto ike policy lifetime set to 3600 s.
```

```
(config-ike-policy)> no lifetime
```

```
IpSec::Manager: "test": crypto ike policy lifetime reset.
```

History

Version	Description
2.06	The crypto ike policy lifetime command has been introduced.

3.12.2 crypto ike policy mode

Description Set *IKE* protocol version. By default, the value *ikev1* is used.Command with **no** prefix resets setting to default.**Prefix no** Yes**Change settings** Yes**Multiple input** No

Synopsis

```
(config-ike-policy)> mode <mode>
```

```
(config-ike-policy)> no mode
```

Arguments

Argument	Value	Description
mode	ikev1	Protocol version IKEv1.
	ikev2	Protocol version IKEv2.

Example

```
(config-ike-policy)> mode ikev2
```

```
IpSec::Manager: "test": crypto ike policy mode set to "ikev2".
```

```
(config-ike-policy)> no mode
IpSec::Manager: "test": crypto ike policy mode reset.
```

History

Version	Description
2.06	The crypto ike policy mode command has been introduced.

3.12.3 crypto ike policy negotiation-mode

Description Set exchange mode for IKEv1 (see [crypto ike policy mode](#) command). By default, the value main is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-ike-policy)> negotiation-mode <negotiation-mode>
```

```
(config-ike-policy)> no negotiation-mode
```

Arguments

Argument	Value	Description
negotiation-mode	main	Main mode, protects the identity of the peers.
	aggressive	Aggressive mode, does not protect the identity of the peers.

Example

```
(config-ike-policy)> negotiation-mode aggressive
IpSec::Manager: "test": crypto ike policy negotiation-mode set ►
to "aggressive".
```

```
(config-ike-policy)> no negotiation-mode
IpSec::Manager: "test": crypto ike policy negotiation-mode reset.
```

History

Version	Description
2.06	The crypto ike policy negotiation-mode command has been introduced.

3.12.4 crypto ike policy proposal

Description Add reference on existing *IKE* proposal to *IKE* policy. The order of adding has a value for data exchange on the *IKE* protocol.

Command with **no** prefix removes reference on *IKE* proposal.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config-ike-policy)> proposal <proposal>
```

```
(config-ike-policy)> no proposal <proposal>
```

Arguments

Argument	Value	Description
proposal	String	<i>IKE</i> proposal name. Latin letters, numbers, dots, hyphens and underscores are acceptable.

Example

```
(config-ike-policy)> proposal test
```

IpSec::Manager: "test": crypto ike proposal "test" successfully added.

```
(config-ike-policy)> no proposal
```

IpSec::Manager: "test": crypto ike policy proposal "test" successfully removed.

History

Version	Description
2.06	The crypto ike policy proposal command has been introduced.

3.13 crypto ike proposal

Description

Access to a group of commands to configure selected *IKE* proposal. If *IKE* proposal is not found, the command tries to create it.

A full list of encryption algorithms implemented in the system is provided in the [Appendix](#).

Command with **no** prefix removes *IKE* proposal. At the same time references to this *IKE* proposal are automatically deleted from all *IKE* policy.

Prefix no Yes

Change settings Yes

Multiple input Yes

Group entry (config-ike-proposal)

Synopsis

```
(config)> crypto ike proposal <name>
```

```
(config)> no crypto ike proposal <name>
```

Arguments

Argument	Value	Description
name	<i>String</i>	<i>IKE</i> proposal name. Latin letters, numbers, dots, hyphens and underscores are acceptable.

Example

```
(config)> crypto ike proposal test
IpSec::Manager: "test": crypto ike proposal successfully created.
```

```
(config)> no crypto ike proposal test
IpSec::Manager: Crypto ike proposal "test" removed.
```

History

Version	Description
2.06	The crypto ike proposal command has been introduced.

3.13.1 crypto ike proposal aead

Description Enable *AEAD* cypher mode on *IKE* proposal.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(config-ike-proposal)> aead
```

Example

```
(config-ike-proposal)> aead
IpSec::Manager: "TEST": crypto ike proposal "TEST" enabled AEAD mode.
```

History

Version	Description
3.05	The crypto ike proposal aead command has been introduced.

3.13.2 crypto ike proposal dh-group

Description Add the selected *DH* group to *IKE* proposal to work in the *PFS* mode. The order of adding has a value for data exchange on the *IKE* protocol.

Command with **no** prefix removes the selected group.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config-ike-proposal)> dh-group <dh-group>
(config-ike-proposal)> no dh-group <dh-group>
```

Arguments

Argument	Value	Description
dh-group	1	<i>DH</i> group to work in the <i>PFS</i> mode.
	2	
	5	
	14	
	15	
	16	
	17	
	18	
	19	
	20	
	21	
	25	
	26	
	31	
	32	

Example

```
(config-ike-proposal)> dh-group 14
IpSec::Manager: "test": crypto ike proposal DH group "14" ►
successfully added.
```

```
(config-ike-proposal)> no dh-group 14
IpSec::Manager: "test": crypto ike proposal "test" group type ►
successfully removed.
```

History

Version	Description
2.06	The crypto ike proposal dh-group command has been introduced.

3.13.3 crypto ike proposal encryption

Description

Add the selected type of encryption to *IKE* proposal. The order of adding has a value for data exchange on the *IKE* protocol.

Command with **no** prefix removes the selected type of encryption.

Prefix no Yes**Change settings** Yes**Multiple input** Yes

Synopsis

```
(config-ike-proposal)> encryption <encryption>
```

```
(config-ike-proposal)> no encryption <encryption>
```

Arguments

Argument	Value	Description
encryption	des	Type of <i>IKE</i> encryption.
	3des	
	aes-cbc-128	
	aes-cbc-192	
	aes-cbc-256	
	aes-ctr-128	
	aes-ctr-192	
	aes-ctr-256	

Example

```
(config-ike-proposal)> encryption des
```

```
IpSec::Manager: "test": crypto ike proposal encryption algorithm ►
```

```
"des" added.
```

```
(config-ike-proposal)> no encryption des
```

```
IpSec::Manager: "test": crypto ike proposal "test" encryption ►
```

```
type successfully removed.
```

History

Version	Description
2.06	The crypto ike proposal encryption command has been introduced.

3.13.4 crypto ike proposal integrity

Description Add the selected value of *HMAC* signature algorithm to *IKE* proposal. The order of adding has a value for data exchange on the *IKE* protocol.

Command with **no** prefix removes the selected algorithm.

Prefix no Yes**Change settings** Yes**Multiple input** Yes

Synopsis

```
(config-ike-proposal)> integrity <integrity>
```

```
(config-ike-proposal)> no integrity <integrity>
```

Arguments

Argument	Value	Description
integrity	md5	<i>HMAC</i> signature algorithm of <i>IKE</i> messages.
	sha1	
	sha256	
	sha384	
	sha512	

Example

```
(config-ike-proposal)> integrity sha256
IpSec::Manager: "test": crypto ike proposal integrity algorithm ►
"sha256" successfully added.
```

```
(config-ike-proposal)> no integrity sha256
IpSec::Manager: "test": crypto ike proposal "test" integrity ►
type successfully removed.
```

History

Version	Description
2.06	The crypto ike proposal integrity command has been introduced.

3.13.5 crypto ike proposal prf

Description

Add the selected *PRF* group to *IKE* proposal.

Command with **no** prefix removes the selected algorithm.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(config-ike-proposal)> prf <prf>
```

```
(config-ike-proposal)> no prf <prf>
```

Arguments

Argument	Value	Description
prf	md5	<i>HMAC</i> signature algorithm of <i>IKE</i> messages.
	sha1	
	aes-xcbc	
	sha256	

Argument	Value	Description
	sha384	
	sha512	
	aes-cmac	

Example

```
(config-ike-proposal)> prf sha256
IpSec::Manager: "TEST": crypto ike proposal prf algorithm ►
"sha256" successfully added.
```

```
(config-ike-proposal)> no prf sha256
IpSec::Manager: "TEST": crypto ike proposal "TEST" prf type ►
successfully removed.
```

History

Version	Description
3.05	The crypto ike proposal prf command has been introduced.

3.14 crypto ipsec incompatible

Description

Disable *IPsec* tunnels compatibility checking. By default, the setting is disabled.

Command with **no** prefix enables the checking back.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> crypto ipsec incompatible
```

```
(config)> no crypto ipsec incompatible
```

Example

```
(config)> crypto ipsec incompatible
IpSec::Manager: Compatibility checks is disabled.
```

```
(config)> no crypto ipsec incompatible
IpSec::Manager: Compatibility checks is enabled.
```

History

Version	Description
2.10	The crypto ipsec incompatible command has been introduced.

3.15 crypto ipsec profile

Description Access to a group of commands to configure selected *IPsec* profile. If profile is not found, the command tries to create it.

Command with **no** prefix removes profile. At the same time references to this profile are automatically deleted from all *IPsec* crypto maps.

Prefix no Yes

Change settings Yes

Multiple input Yes

Group entry (config-ipsec-profile)

Synopsis

```
(config)> crypto ipsec profile <name>
```

```
(config)> no crypto ipsec profile <name>
```

Arguments

Argument	Value	Description
name	<i>String</i>	<i>IPsec</i> profile name. Latin letters, numbers, dots, hyphens and underscores are acceptable.

Example

```
(config)> crypto ipsec profile test
IpSec::Manager: "test": crypto ipsec profile successfully created.
```

```
(config)> no crypto ipsec profile test
IpSec::Manager: Crypto ipsec profile "test" removed.
```

History

Version	Description
2.06	The crypto ipsec profile command has been introduced.

3.15.1 crypto ipsec profile authentication-local

Description Set authentication type for local host. By default, value pre-share is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-ipsec-profile)> authentication-local <auth>
```

```
(config-ipsec-profile)> no authentication-local
```

Arguments

Argument	Value	Description
auth	pre-share	A single available type of authorization for now.

Example

```
(config-ipsec-profile)> authentication-local pre-share
IpSec::Manager: "test": crypto ipsec profile authentication-local ►
type "pre-share" is set.
```

```
(config-ipsec-profile)> no authentication-local
IpSec::Manager: "test": crypto ipsec profile authentication-local ►
reset.
```

History

Version	Description
2.06	The crypto ipsec profile authentication-local command has been introduced.

3.15.2 crypto ipsec profile authentication-remote

Description

Set authentication type for remote host. By default, value pre-share is used.

Command with **no** prefix resets setting to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-ipsec-profile)> authentication-remote <auth>
```

```
(config-ipsec-profile)> no authentication-remote
```

Arguments

Argument	Value	Description
auth	pre-share	A single available type of authorization for now.

Example

```
(config-ipsec-profile)> authentication-remote pre-share
IpSec::Manager: "test": crypto ipsec profile ►
authentication-remote type "pre-share" is set.
```

```
(config-ipsec-profile)> no authentication-remote
IpSec::Manager: "test": crypto ipsec profile ►
authentication-remote reset.
```

History

Version	Description
2.06	The crypto ipsec profile authentication-remote command has been introduced.

3.15.3 crypto ipsec profile dpd-clear

Description

Set method of action when detecting a dead *IKE* peer. By default, the setting is enabled, which means deleting peer information.

Command with **no** prefix set action to restart.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-ipsec-profile)> dpd-clear
```

```
(config-ipsec-profile)> no dpd-clear
```

Example

```
(config-ipsec-profile)> dpd-clear
```

```
IpSec::Manager: "VPNLT2PServer": crypto ipsec profile DPD action ►  
set to "clear".
```

```
(config-ipsec-profile)> no dpd-clear
```

```
IpSec::Manager: "VPNLT2PServer": crypto ipsec profile DPD action ►  
set to "restart".
```

History

Version	Description
2.11	The crypto ipsec profile dpd-clear command has been introduced.

3.15.4 crypto ipsec profile dpd-interval

Description

Set parameters of method to detect a dead *IKE* peer. By default, `interval` is set to 30, `retry-count` is set to 3.

Command with **no** prefix resets settings to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-ipsec-profile)> dpd-interval <interval> [retry-count]
```

```
(config-ipsec-profile)> no dpd-interval
```

Arguments

Argument	Value	Description
interval	<i>Integer</i>	The interval of sending <i>DPD</i> packets in seconds. Can take values in the range from 2 to 3600.
retry-count	<i>Integer</i>	Number of attempts to send <i>DPD</i> packets. Can take values in the range from 3 to 60.

Example

```
(config-ipsec-profile)> dpd-interval 5 30
IpSec::Manager: "test": crypto ipsec profile dpd retry count is ►
set to 30.
```

```
(config-ipsec-profile)> no dpd-interval
IpSec::Manager: "test": crypto ipsec profile dpd retry count ►
reset.
```

History

Version	Description
2.06	The crypto ipsec profile dpd-interval command has been introduced.

3.15.5 crypto ipsec profile identity-local

Description

Set a local identifier of *IPsec* profile.

Command with **no** prefix removes the local identifier.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-ipsec-profile)> identity-local <type> <id>
```

```
(config-ipsec-profile)> no identity-local
```

Arguments

Argument	Value	Description
type	address	ID type is IP address.
	fqdn	ID type is full domain name.
	dn	ID type is domain name.
	email	ID type is e-mail address.
id	<i>String</i>	Local ID value.

Example

```
(config-ipsec-profile)> identity-local address 10.10.10.5
IpSec::Manager: "test": crypto ipsec profile identity-local is ►
set to "10.10.10.5" with type "address".
```

```
(config-ipsec-profile)> no identity-local
IpSec::Manager: "test": crypto ipsec profile identity-local reset.
```

History

Version	Description
2.06	The crypto ipsec profile identity-local command has been introduced.

3.15.6 crypto ipsec profile match-identity-remote

Description

Set remote host identifier for *IPsec* profile.

Command with **no** prefix removes remote host ID.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-ipsec-profile)> match-identity-remote (<type> <id> | any)
```

```
(config-ipsec-profile)> no match-identity-remote
```

Arguments

Argument	Value	Description
type	address	ID type is IP address.
	fqdn	ID type is full domain name.
	dn	ID type is domain name.
	email	ID type is e-mail address.
id	<i>String</i>	Remote host ID value.
any	<i>Keyword</i>	Allow usage of any remote host.

Example

```
(config-ipsec-profile)> match-identity-remote any
IpSec::Manager: "test": crypto ipsec profile ►
match-identity-remote is set to any.
```

```
(config-ipsec-profile)> no match-identity-remote
IpSec::Manager: "test": crypto ipsec profile ►
match-identity-remote reset.
```

History

Version	Description
2.06	The crypto ipsec profile match-identity-remote command has been introduced.

3.15.7 crypto ipsec profile mode

Description Set the mode of operation *IPsec*. By default, tunnel value is set.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-ipsec-profile)> mode <mode>
(config-ipsec-profile)> no mode
```

Arguments

Argument	Value	Description
mode	tunnel	Tunnel mode, when the entire IP packet is encrypted and/or authenticated.
	transport	Transport mode, when only the payload of the IP packet is encrypted and/or authenticated.

Example

```
(config-ipsec-profile)> mode transport
IpSec::Manager: "test": crypto ipsec profile mode set to ►
"transport".
```

```
(config-ipsec-profile)> no mode
IpSec::Manager: "test": crypto ipsec profile mode reset.
```

History

Version	Description
2.06	The crypto ipsec profile mode command has been introduced.

3.15.8 crypto ipsec profile policy

Description Set the reference to existing *IKE* policy (see [crypto ike policy](#) command).

Command with **no** prefix removes the reference.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-ipsec-profile)> policy <policy>
```

```
(config-ipsec-profile)> no policy
```

Arguments

Argument	Value	Description
policy	<i>String</i>	<i>IKE</i> policy name. You can see the list of available policies with help of policy [Tab] command.

Example

```
(config-ipsec-profile)> policy [Tab]
Usage template:
    policy {name: {A-Z, a-z, 0-9, ., _, -}}
```

```
Choose:
VirtualIPServer
VPNL2TPServer
```

```
(config-ipsec-profile)> policy VirtualIPServer
IpSec::Manager: "TEST": crypto ipsec profile policy set to ►
"VirtualIPServer".
```

```
(config-ipsec-profile)> no policy
IpSec::Manager: "test": crypto ipsec profile policy reset.
```

History

Version	Description
2.06	The crypto ipsec profile policy command has been introduced.

3.15.9 crypto ipsec profile preshared-key

Description

Set pre-shared key for *IPsec* profile.

Command with **no** prefix removes pre-shared key.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-ipsec-profile)> preshared-key <preshare-key>
```

```
(config-ipsec-profile)> no preshared-key
```

Arguments

Argument	Value	Description
preshare-key	<i>String</i>	Pre-shared key value.

Example

```
(config-ipsec-profile)> preshared-key testkey
IpSec::Manager: "test": crypto ipsec profile preshared key was ►
set.
```

```
(config-ipsec-profile)> no preshared-key
IpSec::Manager: "test": crypto ipsec profile preshared key reset.
```

History

Version	Description
2.06	The crypto ipsec profile preshared-key command has been introduced.

3.15.10 crypto ipsec profile xauth

Description Enable additional authentication *XAuth* for IKEv1 mode. By default, function is disabled.

Command with **no** prefix disables additional authentication.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-ipsec-profile)> xauth <type>
```

```
(config-ipsec-profile)> no xauth
```

Arguments

Argument	Value	Description
type	client	Client mode.
	server	Server mode.

Example

```
(config-ipsec-profile)> xauth client
IpSec::Manager: "test": crypto ipsec profile xauth set to ►
"client".
```

```
(config-ipsec-profile)> no xauth
IpSec::Manager: "test": crypto ipsec profile xauth is disabled.
```

History

Version	Description
2.06	The crypto ipsec profile xauth command has been introduced.

3.15.11 crypto ipsec profile xauth-identity

Description Set login for additional authentication *XAuth* in client mode.

Command with **no** prefix removes the login.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-ipsec-profile)> xauth-identity <identity>
(config-ipsec-profile)> no xauth-identity
```

Arguments

Argument	Value	Description
identity	String	Login for <i>XAuth</i> client mode.

Example

```
(config-ipsec-profile)> xauth-identity ident
IpSec::Manager: "test": crypto ipsec profile xauth-identity is ►
set to "ident".
```

```
(config-ipsec-profile)> no xauth-identity
IpSec::Manager: "test": crypto ipsec profile xauth identity is ►
deleted.
```

History

Version	Description
2.06	The crypto ipsec profile xauth-identity command has been introduced.

3.15.12 crypto ipsec profile xauth-password

Description Set password for additional authentication *XAuth* in client mode.

Command with **no** prefix removes the password.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-ipsec-profile)> xauth-password <password>
(config-ipsec-profile)> no xauth-password
```

Arguments

Argument	Value	Description
password	String	Password for <i>XAuth</i> client mode.

Example

```
(config-ipsec-profile)> xauth-password password
IpSec::Manager: "test": crypto ipsec profile xauth-password is ►
set.
```

```
(config-ipsec-profile)> no xauth-password
IpSec::Manager: "test": crypto ipsec profile xauth password is ►
deleted.
```

History

Version	Description
2.06	The crypto ipsec profile xauth-password command has been introduced.

3.16 crypto ipsec rekey delete-delay

Description Set interval before removing the IKE SA after receiving the DELETE command from the remote side. By default, the 10 value is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> crypto ipsec rekey delete-delay <delay>
```

```
(config)> no crypto ipsec rekey delete-delay
```

Arguments

Argument	Value	Description
delay	<i>Integer</i>	Delay value in seconds. Can take value in the range from 1 to 60.

Example

```
(config)> crypto ipsec rekey delete-delay 1
IpSec::Manager: Rekey delete-delay value is set to 1.
```

```
(config)> no crypto ipsec rekey delete-delay
IpSec::Manager: Rekey delete-delay value is set to 10.
```

History

Version	Description
2.11	The crypto ipsec rekey delete-delay command has been introduced.

3.17 crypto ipsec rekey make-before

Description Set the mode when new IKE SA creates before the breaking the old one. By default, the feature is disabled.

Command with **no** prefix disables the mode.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> crypto ipsec rekey make-before
(config)> no crypto ipsec rekey make-before
```

Example

```
(config)> crypto ipsec rekey make-before
IpSec::Manager: Enable make-before-brake scheme for IKEv2 rekey.
```

```
(config)> no crypto ipsec rekey make-before
IpSec::Manager: Disable make-before-brake scheme for IKEv2 rekey.
```

History

Version	Description
2.11	The crypto ipsec rekey make-before command has been introduced.

3.18 crypto ipsec transform-set

Description Access to a group of commands to configure selected *IPsec ESP* transformation during Phase 2. If transformation is not found, the command tries to create it.

Command with **no** prefix removes transformation. At the same time references to this transformation are automatically deleted from all *IPsec* crypto maps.

Prefix no Yes

Change settings Yes

Multiple input Yes

Group entry (config-ipsec-transform)

Synopsis

```
(config)> crypto ipsec transform-set <name>
(config)> no crypto ipsec transform-set <name>
```

Argument	Value	Description
name	<i>String</i>	<i>IPsec</i> transformation name. Latin letters, numbers, dots, hyphens and underscores are acceptable.

Example

```
(config)> crypto ipsec transform-set test
IpSec::Manager: "test": crypto ipsec transform-set successfully ►
created.
```

```
(config)> no crypto ipsec transform-set test
IpSec::Manager: Crypto ipsec transform-set "test" removed.
```

Version	Description
2.06	The crypto ipsec transform-set command has been introduced.

3.18.1 crypto ipsec transform-set aead

Description Enable *AEAD* cypher mode on *IPsec*.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(config-ipsec-transform)> aead
```

Example

```
(config-ipsec-transform)> dh-group 14
IpSec::Manager: "TEST": crypto ipsec transform-set "TEST" enabled ►
AEAD mode.
```

Version	Description
3.05	The crypto ipsec transform-set aead command has been introduced.

3.18.2 crypto ipsec transform-set cypher

Description Add the selected type of encryption to *IPsec* transformation. The order of adding has a value for data exchange on the *IKE* protocol.

Command with **no** prefix removes the selected type of encryption.

Prefix no Yes

Change settings Yes

Multiple input Yes**Synopsis**

```
(config-ipsec-transform)> cypher <cypher>
```

```
(config-ipsec-transform)> no cypher <cypher>
```

Arguments

Argument	Value	Description
cypher	esp-des	Type of <i>IPsec ESP</i> encryption.
	esp-3des	
	esp-aes-128	
	esp-aes-192	
	esp-aes-256	

Example

```
(config-ipsec-transform)> cypher esp-3des
IpSec::Manager: "test": crypto ipsec transform-set cypher ►
"esp-3des" successfully added.
```

```
(config-ipsec-transform)> no cypher esp-3des
IpSec::Manager: "test": crypto ipsec transform-set "test" cypher ►
successfully removed.
```

History

Version	Description
2.06	The crypto ipsec transform-set cypher command has been introduced.

3.18.3 crypto ipsec transform-set dh-group

Description

Add the selected *DH* group to *IPsec* transformation to work in the *PFS* mode. The order of adding has a value for data exchange on the *IKE* protocol.

Command with **no** prefix removes the selected group.

Prefix no Yes**Change settings** Yes**Multiple input** Yes**Synopsis**

```
(config-ipsec-transform)> dh-group <dh-group>
```

```
(config-ipsec-transform)> no dh-group <dh-group>
```

Arguments

Argument	Value	Description
dh-group	1	<i>DH</i> group to work in the <i>PFS</i> mode.
	2	

Argument	Value	Description
	5	
	14	
	15	
	16	
	17	
	18	

Example

```
(config-ipsec-transform)> dh-group 14
IpSec::Manager: "test": crypto ipsec transform-set dh-group "14" ►
successfully added.
```

```
(config-ipsec-transform)> no dh-group 14
IpSec::Manager: "test": crypto ipsec transform-set "test" ►
dh-group successfully removed.
```

History

Version	Description
2.06	The crypto ipsec transform-set dh-group command has been introduced.

3.18.4 crypto ipsec transform-set hmac

Description

Add the selected value of *HMAC* signature algorithm to *IPsec* transformation. The order of adding has a value for data exchange on the *IKE* protocol.

Command with **no** prefix removes the selected algorithm.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(config-ipsec-transform)> hmac <hmac>
```

```
(config-ipsec-transform)> no hmac <hmac>
```

Arguments

Argument	Value	Description
hmac	esp-md5-hmac	<i>HMAC</i> signature algorithm of <i>IPsec ESP</i> transformation.
	esp-sha1-hmac	
	esp-sha256-hmac	

Example

```
(config-ipsec-transform)> hmac esp-sha1-hmac
IpSec::Manager: "test": crypto ipsec transform-set hmac ►
"esp-sha1-hmac" successfully added.
```

```
(config-ipsec-transform)> no hmac esp-sha1-hmac
IpSec::Manager: "test": crypto ipsec transform-set "test" hmac ►
successfully removed.
```

History

Version	Description
2.06	The crypto ipsec transform-set hmac command has been introduced.

3.18.5 crypto ipsec transform-set lifetime

Description

Set lifetime of selected *IPsec* transformation. By default, the value 3600 is used.

Command with **no** prefix resets setting to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-ipsec-transform)> lifetime <lifetime>
```

```
(config-ipsec-transform)> no lifetime
```

Arguments

Argument	Value	Description
lifetime	<i>Integer</i>	Lifetime of <i>IPsec</i> transformation in seconds. Can take values in the range from 60 to 2147483647.

Example

```
(config-ipsec-transform)> lifetime 8640
IpSec::Manager: "test": crypto ipsec transform-set lifetime set ►
to 8640 s.
```

```
(config-ipsec-transform)> no lifetime
IpSec::Manager: "test": crypto ipsec transform-set lifetime reset.
```

History

Version	Description
2.06	The crypto ipsec transform-set lifetime command has been introduced.

3.19 crypto map

Description Access to a group of commands to configure selected *IPsec* crypto map. If crypto map is not found, the command tries to create it.

Command with **no** prefix removes crypto map.

Prefix no Yes

Change settings Yes

Multiple input Yes

Group entry (config-crypto-map)

Synopsis

```
(config)> crypto map <name>
(config)> no crypto map <name>
```

Arguments

Argument	Value	Description
name	<i>String</i>	<i>IPsec</i> crypto map name. Latin letters, numbers, dots, hyphens and underscores are acceptable.

Example

```
(config)> crypto map test
IpSec::Manager: "test": crypto map successfully created.
```

```
(config)> no crypto map test
IpSec::Manager: Crypto map profile "test" removed.
```

History

Version	Description
2.06	The crypto map command has been introduced.

3.19.1 crypto map connect

Description Enable automatic unconditional *IPsec* connection to the remote host. Setting has no meaning if basic remote host was set to any (see **crypto map set-peer** command). By default, setting is disabled and connection is established when attempting to transmit traffic through the *IPsec ESP* transformation.

Command with **no** prefix disables automatic unconditional connection.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis | (config-crypto-map)> **connect**

| (config-crypto-map)> **no connect**

Example (config-crypto-map)> **connect**
IpSec::Manager: "test": crypto map autoconnect enabled.

(config-crypto-map)> **no connect**
IpSec::Manager: "test": crypto map autoconnect disabled.

History

Version	Description
2.06	The crypto map connect command has been introduced.

3.19.2 crypto map enable

Description Enable selected *IPsec* crypto map. By default, setting is enabled.

Command with **no** prefix disables crypto map.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis | (config-crypto-map)> **enable**

| (config-crypto-map)> **no enable**

Example (config-crypto-map)> **enable**
IpSec::Manager: "test": crypto map enabled.

(config-crypto-map)> **no enable**
IpSec::Manager: "test": crypto map disabled.

History

Version	Description
2.06	The crypto map enable command has been introduced.

3.19.3 crypto map fallback-check-interval

Description Enable periodic checking of basic host availability and return to it in case of presence basic and backup remote hosts both. By default, setting is disabled.

Command with **no** prefix disables checking.

Prefix no Yes

Change settings Yes

Multiple input	No						
Synopsis	<pre>(config-crypto-map)> fallback-check-interval <interval-value></pre> <pre>(config-crypto-map)> no fallback-check-interval</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>interval-value</td> <td><i>Integer</i></td> <td>Period of checking in seconds. Can take values in the range from 60 to 86400.</td> </tr> </tbody> </table>	Argument	Value	Description	interval-value	<i>Integer</i>	Period of checking in seconds. Can take values in the range from 60 to 86400.
Argument	Value	Description					
interval-value	<i>Integer</i>	Period of checking in seconds. Can take values in the range from 60 to 86400.					
Example	<pre>(config-crypto-map)> fallback-check-interval 120</pre> <pre>IpSec::Manager: "test": crypto map fallback check interval is ►</pre> <pre>set to 120.</pre> <pre>(config-crypto-map)> no fallback-check-interval</pre> <pre>IpSec::Manager: "test": crypto map fallback check interval is ►</pre> <pre>cleared.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.06</td> <td>The crypto map fallback-check-interval command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.06	The crypto map fallback-check-interval command has been introduced.		
Version	Description						
2.06	The crypto map fallback-check-interval command has been introduced.						

3.19.4 crypto map force-encaps

Description	Enforce the <i>ESP</i> packet wrapping mode in <i>UDP</i> to bypass the firewall and NAT. Command with no prefix disables the mode.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	<pre>(config-crypto-map)> force-encaps</pre> <pre>(config-crypto-map)> no force-encaps</pre>
Example	<pre>(config-crypto-map)> force-encaps</pre> <pre>IpSec::Manager: "test": crypto map force ESP in UDP encapsulation ►</pre> <pre>enabled.</pre> <pre>(config-crypto-map)> no force-encaps</pre> <pre>IpSec::Manager: "test": crypto map force ESP in UDP encapsulation ►</pre> <pre>disabled.</pre>

History

Version	Description
2.08	The crypto map force-encaps command has been introduced.

3.19.5 crypto map l2tp-server dhcp route

Description

Assign a route which is transmitted in DHCP INFORM messages to the [L2TP](#) server clients.

Command with **no** prefix cancels the specified route. If you use no arguments, the entire list of routes will be cleared.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(config-crypto-map)> l2tp-server dhcp route <address> <mask>
```

```
(config-crypto-map)> no l2tp-server dhcp route [ <address> <mask> ]
```

Arguments

Argument	Value	Description
address	<i>IP address</i>	Network client address.
mask	<i>IP-mask</i>	Network client mask. There are two ways to enter the mask: the canonical form (for example, 255.255.255.0) and the form of prefix bit length (for example, /24).

Example

```
(config-crypto-map)> l2tp-server dhcp route 192.168.2.0/24  
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►  
added DHCP INFORM route to 192.168.2.0/255.255.255.0.
```

```
(config-crypto-map)> l2tp-server no dhcp route  
IpSec::Manager: "VPNL2TPServer": Cleared DHCP INFORM routes.
```

History

Version	Description
2.12	The crypto map l2tp-server dhcp route command has been introduced.

3.19.6 crypto map l2tp-server enable

Description

Enable [L2TP](#) server on [IPsec](#) crypto map. By default, the setting is enabled.

Command with **no** prefix disables the setting.

Prefix no

Yes

Change settings Yes**Multiple input** No

Synopsis

```
(config-crypto-map)> l2tp-server enable
```

```
(config-crypto-map)> no l2tp-server enable
```

Example

```
(config-crypto-map)> l2tp-server enable
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►
enabled.
```

```
(config-crypto-map)> no l2tp-server enable
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►
disabled.
```

History

Version	Description
2.11	The crypto map l2tp-server enable command has been introduced.

3.19.7 crypto map l2tp-server interface

Description Bind *L2TP* server to the specified interface.Command with **no** prefix unbinds the server.**Prefix no** Yes**Change settings** Yes**Multiple input** No

Synopsis

```
(config-crypto-map)> l2tp-server interface <interface>
```

```
(config-crypto-map)> no l2tp-server interface
```

Arguments

Argument	Value	Description
interface	<i>Interface</i>	Full name or an alias of the interface. You can see the list of available interfaces with help of l2tp-server interface [Tab] command.

Example

```
(config-crypto-map)> l2tp-server interface [Tab]
```

```
Usage template:
  interface {interface}
```

```
Choose:
  GigabitEthernet1
```

```

ISP
WifiMaster0/AccessPoint2
WifiMaster1/AccessPoint1
WifiMaster0/AccessPoint3
WifiMaster0/AccessPoint0
    AccessPoint
WifiMaster1/AccessPoint2
WifiMaster0/AccessPoint1
    GuestWiFi

```

```

(config-crypto-map)> l2tp-server interface ISP
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►
is bound to ISP.

```

```

(config-crypto-map)> no l2tp-server interface ISP
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►
is unbound.

```

History

Version	Description
2.11	The crypto map l2tp-server interface command has been introduced.

3.19.8 crypto map l2tp-server ipv6cp

Description Enable IPv6 support. DHCP IPv6 pools are created for each *L2TP* server. By default, the setting is disabled.

Command with **no** prefix disables IPv6 support.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis | (config-crypto-map)> **l2tp-server ipv6cp**

| (config-crypto-map)> **no l2tp-server ipv6cp**

Example (config-crypto-map)> **l2tp-server ipv6cp**
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►
IPv6CP is enabled.

```

(config-crypto-map)> no l2tp-server ipv6cp
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►
IPv6CP is disabled.

```

History

Version	Description
3.00	The crypto map l2tp-server ipv6cp command has been introduced.

3.19.9 crypto map l2tp-server lcp echo

Description Specify the testing rules of the *L2TP* server connections with *LCP* echo tools.
Command with **no** prefix disables *LCP* echo.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-crypto-map)> l2tp-server lcp echo <interval> <count>
(config-crypto-map)> no l2tp-server lcp echo
```

Arguments

Argument	Value	Description
interval	<i>Integer</i>	Interval between sending <i>LCP</i> echo, in seconds. If within the specified time interval there is no <i>LCP</i> echo request from the remote location, the same request will be sent there asking for response <i>LCP</i> reply.
count	<i>Integer</i>	The number of consecutive requests <i>LCP</i> echo sent, for which no response <i>LCP</i> reply was received. If count of <i>LCP</i> echo requests goes unanswered, the connection is terminated.

Example

```
(config-crypto-map)> l2tp-server lcp echo 5 3
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►
set LCP echo to "5" : "3".
```

```
(config-crypto-map)> no l2tp-server lcp echo
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►
LCP echo disabled.
```

History

Version	Description
2.11	The crypto map l2tp-server lcp echo command has been introduced.

3.19.10 crypto map l2tp-server mru

Description Set *MRU* value to be transmitted to *L2TP* server. By default, 1200 value is used.
Command with **no** prefix resets value to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-crypto-map)> l2tp-server mru <mr>
(config-crypto-map)> no l2tp-server mru
```

Arguments

Argument	Value	Description
mru	<i>Integer</i>	<i>MRU</i> value. Can take values in the range from 128 to 1500 inclusively.

Example

```
(config-crypto-map)> l2tp-server mru 1500
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►
set MRU to "1500".
```

```
(config-crypto-map)> no l2tp-server mru
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►
MRU reset to default.
```

History

Version	Description
2.11	The crypto map l2tp-server mru command has been introduced.

3.19.11 crypto map l2tp-server mtu

Description Set *MTU* value to be transmitted to *L2TP* server. By default, 1400 value is used. Command with **no** prefix resets value to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-crypto-map)> l2tp-server mtu <mt>
(config-crypto-map)> no l2tp-server mtu
```

Arguments

Argument	Value	Description
mtu	<i>Integer</i>	<i>MTU</i> value. Can take values in the range from 576 to 1500 inclusively.

Example

```
(config-crypto-map)> l2tp-server mtu 1400
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►
set MTU to "1400".
```

```
(config-crypto-map)> no l2tp-server mtu
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►
MTU reset to default.
```

History

Version	Description
2.11	The crypto map l2tp-server mtu command has been introduced.

3.19.12 crypto map l2tp-server multi-login

Description Allow connection to [L2TP](#) server for multiple users from one account.

Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-crypto-map)> l2tp-server multi-login
```

```
(config-crypto-map)> no l2tp-server multi-login
```

Example

```
(config-crypto-map)> l2tp-server multi-login
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►
multiple login is enabled.
```

```
(config-crypto-map)> no l2tp-server multi-login
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►
multiple login is disabled.
```

History

Version	Description
2.11	The crypto map l2tp-server multi-login command has been introduced.

3.19.13 crypto map l2tp-server nat

Description Enable translation of addresses for [L2TP](#) server.

Command with **no** prefix disables the translation.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-crypto-map)> l2tp-server nat
```

```
(config-crypto-map)> no l2tp-server nat
```

Example

```
(config-crypto-map)> l2tp-server nat  
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►  
SNAT is enabled.
```

```
(config-crypto-map)> no l2tp-server nat  
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►  
SNAT is disabled.
```

History

Version	Description
2.11	The crypto map l2tp-server nat command has been introduced.

3.19.14 crypto map l2tp-server range

Description

Assign a pool of addresses for the clients of [L2TP](#) server. By default, size 100 is used.

Command with **no** prefix removes a pool.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-crypto-map)> l2tp-server range <begin> <end> | <size>
```

```
(config-crypto-map)> no l2tp-server range
```

Arguments

Argument	Value	Description
begin	<i>IP address</i>	Start address of pool.
end	<i>IP address</i>	End address of pool.
size	<i>Integer</i>	Pool size.

Example

```
(config-crypto-map)> l2tp-server range 172.16.2.33 172.16.2.38  
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►  
pool range set from "172.16.2.33" to "172.16.2.38".
```

```
(config-crypto-map)> l2tp-server range 172.16.2.33 100  
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►  
pool range set from "172.16.2.33" to "172.16.2.132".
```

```
(config-crypto-map)> no l2tp-server range
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►
pool range deleted.
```

History

Version	Description
2.11	The crypto map l2tp-server range command has been introduced.

3.19.15 crypto map l2tp-server static-ip

Description Bind IP address to the user. User account must have ipsec-l2tp tag.

Command with **no** prefix removes binding.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-crypto-map)> static-ip <user> <address>
```

```
(config-crypto-map)> no static-ip <user>
```

Arguments

Argument	Value	Description
user	<i>String</i>	Username.
address	<i>IP address</i>	IP address to bind.

Example

```
(config-crypto-map)> l2tp-server static-ip admin 172.16.2.33
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►
static IP "172.16.2.33" assigned to user "admin".
```

```
(config-crypto-map)> no l2tp-server static-ip admin
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►
static IP removed for user "admin".
```

History

Version	Description
2.11	The crypto map l2tp-server static-ip command has been introduced.

3.19.16 crypto map nail-up

Description Enable automatic renegotiation of *IPsec ESP* transformations at their obsolescence. By default, setting is disabled.

Command with **no** prefix disables automatic renegotiation.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-crypto-map)> nail-up
(config-crypto-map)> no nail-up
```

Example

```
(config-crypto-map)> nail-up
IpSec::Manager: "test": crypto map SA renegotiation enabled.
```

```
(config-crypto-map)> no nail-up
IpSec::Manager: "test": crypto map SA renegotiation disabled.
```

History

Version	Description
2.06	The crypto map nail-up command has been introduced.

3.19.17 crypto map reauth-passive

Description Enable passive reauthentication of *IPsec* crypto map. By default, setting is disabled.

Command with **no** prefix disables passive reauthentication.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-crypto-map)> reauth-passive
(config-crypto-map)> no reauth-passive
```

Example

```
(config-crypto-map)> reauth-passive
IpSec::Manager: "VPNL2TPServer": crypto map SA passive ►
reauthentication enabled.
```

```
(config-crypto-map)> no reauth-passive
IpSec::Manager: "VPNL2TPServer": crypto map SA passive ►
reauthentication disabled.
```

History

Version	Description
2.11	The crypto map reauth-passive command has been introduced.

3.19.18 crypto map set-peer

Description Set basic remote host for *IPsec* connection.
Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-crypto-map)> set-peer <remote-ip>
(config-crypto-map)> no set-peer
```

Arguments

Argument	Value	Description
remote-ip	<i>String</i>	IP address or domain name of remote host.
	any	Accept any incoming connections.

Example

```
(config-crypto-map)> set-peer ipsec.test.com
IpSec::Manager: "test": crypto map primary remote peer is set ►
to "ipsec.test.com".
```

```
(config-crypto-map)> no set-peer
IpSec::Manager: "test": crypto map remote primary and fallback ►
peer reset.
```

History

Version	Description
2.06	The crypto map set-peer command has been introduced.

3.19.19 crypto map set-peer-fallback

Description Set backup remote host for *IPsec* connection. This setting can be made after assignment of basic host (see [crypto map set-peer](#) command).

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-crypto-map)> set-peer-fallback <remote-ip>
(config-crypto-map)> no set-peer-fallback
```

Arguments

Argument	Value	Description
remote-ip	<i>String</i>	IP address or domain name of remote host.

Example

```
(config-crypto-map)> set-peer-fallback test.com
IpSec::Manager: "test": crypto map fallback remote peer cannot ►
be set without primary peer.
```

```
(config-crypto-map)> no set-peer-fallback
IpSec::Manager: "test": crypto map fallback remote peer reset.
```

History

Version	Description
2.06	The crypto map set-peer-fallback command has been introduced.

3.19.20 crypto map set-profile

Description

Set the reference to existing *IPsec* profile (see [crypto ipsec profile](#) command).
Command with **no** prefix removes the reference.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-crypto-map)> set-profile <profile>
```

```
(config-crypto-map)> no set-profile
```

Arguments

Argument	Value	Description
profile	<i>String</i>	<i>IPsec</i> profile name. You can see the list of available profiles with help of set-profile [Tab] command.

Example

```
(config-crypto-map)> set-profile [Tab]
```

```
Usage template:
  set-profile {name: {A-Z, a-z, 0-9, ., _, -}}
```

```
Choose:
```

```
    TEST
    MMY
```

```
VirtualIPServer
VPLN2TPServer
```

```
(config-crypto-map)> set-profile test
IpSec::Manager: "test": crypto map ipsec profile is set to "test".
```



```
(config-crypto-map)> no set-profile
IpSec::Manager: "test": crypto map ipsec profile reset.
```

History

Version	Description
2.06	The crypto map set-profile command has been introduced.

3.19.21 crypto map set-tcpmss

Description

Set the limit on the segment size of outgoing *TCP* sessions within *IPsec* tunnel. If the *MSS* value, which is transmitted in the header of SYN-packets, exceeds the specified limit, command changes it. Path MTU Discovery mode allows automatically identify *MSS* limit.

Command with **no** prefix removes all limits from *MSS*.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-crypto-map)> set-tcpmss <mss-value>
```

```
(config-crypto-map)> no set-tcpmss
```

Arguments

Argument	Value	Description
mss-value	<i>Integer</i>	<i>MSS</i> upper limit. Can take values in the range from 576 to 1500.
	pmtu	Enable Path MTU Discovery mode.

Example

```
(config-crypto-map)> set-tcpmss 1280
IpSec::Manager: "test": crypto map tcpmss set to 1280.
```

```
(config-crypto-map)> no set-tcpmss
IpSec::Manager: "test": crypto map tcpmss reset.
```

History

Version	Description
2.06	The crypto map set-tcpmss command has been introduced.

3.19.22 crypto map set-transform

Description

Set the reference to existing *IPsec ESP* transformation (see **crypto ipsec transform-set** command).

Command with **no** prefix removes the reference.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-crypto-map)> set-transform <transform-set>
(config-crypto-map)> no set-transform
```

Arguments

Argument	Value	Description
transform-set	String	IPsec transformation name. You can see the list of available transformations with help of set-transform [Tab] command.

Example

```
(config-crypto-map)> set-transform [Tab]
Usage template:
  set-transform {name: {A-Z, a-z, 0-9, ., _, -}}

Choose:
VirtualIPServer
VPNL2TPServer
```

```
(config-crypto-map)> set-transform test
IpSec::Manager: "test": crypto map ipsec transform-set is set ►
to "test".
```

```
(config-crypto-map)> no set-transform
IpSec::Manager: "test": crypto map ipsec transform-set reset.
```

History

Version	Description
2.06	The crypto map set-transform command has been introduced.

3.19.23 crypto map traffic-selectors

Description Assign an object group as *IPsec* Phase 2 selectors.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-crypto-map)> traffic-selectors <local> <remote>
```

```
(config-crypto-map)> no traffic-selectors
```

Arguments

Argument	Value	Description
local	<i>String</i>	Name of local object group.
remote	<i>String</i>	Name of remote object group.

Example

```
(config-crypto-map)> traffic-selectors ►
 WEBADMIN_IPSEC_VPNL2TPServer-local ►
 WEBADMIN_IPSEC_VPNL2TPServer-remote
IpSec::Config::CryptoMap: "test": set traffic-selectors to ►
 "_WEBADMIN_IPSEC_VPNL2TPServer-local": ►
 "_WEBADMIN_IPSEC_VPNL2TPServer-remote".
```

```
(config-crypto-map)> no traffic-selectors
IpSec::Config::CryptoMap: "test": reset traffic-selectors.
```

History

Version	Description
4.00	The crypto map traffic-selectors command has been introduced.

3.19.24 crypto map virtual-ip dhcp route

Description

Assign a route which is transmitted in DHCP INFORM messages to the Virtual IP server clients.

Command with **no** prefix deletes the specified route. If you use no arguments, the entire list of routes will be cleared.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(config-crypto-map)> virtual-ip dhcp route <address> <mask>
```

```
(config-crypto-map)> no virtual-ip dhcp route [ <address> <mask> ]
```

Arguments

Argument	Value	Description
address	<i>IP address</i>	Network client address.
mask	<i>IP-mask</i>	Network client mask. There are two ways to enter the mask: the canonical form (for example, 255.255.255.0) and the form of prefix bit length (for example, /24).

Example

```
(config-crypto-map)> virtual-ip dhcp route 192.168.2.0/24
IpSec::ManagerVirtualIp: "VirtualIPServerIKE2": crypto map ►
Virtual IP server added DHCP INFORM route to ►
192.168.2.0/255.255.255.0.
```

```
(config-crypto-map)> no virtual-ip dhcp route 192.168.2.0/24
IpSec::ManagerVirtualIp: "VirtualIPServerIKE2": crypto map ►
Virtual IP server DHCP INFORM route to 192.168.2.0/255.255.255.0 ►
removed.
```

```
(config-crypto-map)> no virtual-ip dhcp route
IpSec::ManagerVirtualIp: "VirtualIPServerIKE2": crypto map ►
Virtual IP server DHCP INFORM routes cleared.
```

History

Version	Description
3.06	The crypto map virtual-ip dhcp route command has been introduced.

3.19.25 crypto map virtual-ip dns-server

Description

Set *DNS* server issued to clients in Virtual IP server mode.

Command with **no** prefix deletes the address.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-crypto-map)> virtual-ip dns-server <address>
```

```
(config-crypto-map)> no virtual-ip dns-server
```

Arguments

Argument	Value	Description
address	<i>IP address</i>	IP address of <i>DNS</i> server.

Example

```
(config-crypto-map)> virtual-ip dns-server 10.5.5.5
IpSec::Manager: "test": crypto map Virtual IP DNS server set to ►
"10.5.5.5".
```

```
(config-crypto-map)> no virtual-ip dns-server
IpSec::Manager: "test": crypto map Virtual IP DNS server deleted.
```

History

Version	Description
2.08	The crypto map virtual-ip dns-server command has been introduced.

3.19.26 crypto map virtual-ip enable

Description	Enable Virtual IP server mode, when clients receive addresses from a given range. The value of a remote subnet, specified in the corresponding access-list, will be ignored. By default, the setting is disabled. Command with no prefix disables the setting.				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Synopsis	<pre>(config-crypto-map)> virtual-ip enable</pre> <pre>(config-crypto-map)> no virtual-ip enable</pre>				
Example	<pre>(config-crypto-map)> virtual-ip enable</pre> <pre>IpSec::Manager: "test": crypto map Virtual IP mode enabled.</pre> <pre>(config-crypto-map)> no virtual-ip enable</pre> <pre>IpSec::Manager: "test": crypto map Virtual IP mode disabled.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.08</td> <td>The crypto map virtual-ip enable command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.08	The crypto map virtual-ip enable command has been introduced.
Version	Description				
2.08	The crypto map virtual-ip enable command has been introduced.				

3.19.27 crypto map virtual-ip multi-login

Description	Allow connection to Virtual IP server for multiple users from one account. Command with no prefix disables the feature.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	<pre>(config-crypto-map)> virtual-ip multi-login</pre> <pre>(config-crypto-map)> no virtual-ip multi-login</pre>
Example	<pre>(config-crypto-map)> virtual-ip multi-login</pre> <pre>IpSec::Manager: "VirtualIPServer": crypto map Virtual IP server ▶ multiple login is enabled.</pre> <pre>(config-crypto-map)> no virtual-ip multi-login</pre> <pre>IpSec::Manager: "VirtualIPServer": crypto map Virtual IP server ▶ multiple login is disabled.</pre>

History

Version	Description
3.05	The crypto map virtual-ip multi-login command has been introduced.

3.19.28 crypto map virtual-ip nat

Description

Enable translation for remote network of Virtual IP extension server.

Command with **no** prefix removes the rule.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-crypto-map)> virtual-ip nat
```

```
(config-crypto-map)> no virtual-ip nat
```

Example

```
(config-crypto-map)> virtual-ip nat
```

```
IpSec::Manager: "test": crypto map Virtual IP remote pool SNAT ►  
is enabled.
```

```
(config-crypto-map)> no virtual-ip nat
```

```
IpSec::Manager: "test": crypto map Virtual IP remote pool SNAT ►  
is disabled.
```

History

Version	Description
2.08	The crypto map virtual-ip nat command has been introduced.

3.19.29 crypto map virtual-ip range

Description

Configure the range of addresses issued to clients in Virtual IP server mode.

Command with **no** prefix removes the range.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-crypto-map)> virtual-ip range <begin> (<end> | <size>)
```

```
(config-crypto-map)> no virtual-ip range
```

Argument	Value	Description
begin	<i>IP address</i>	The beginning of the address range.
end	<i>IP address</i>	The end of the address range.
size	<i>Integer</i>	Address range size.

Example

```
(config-crypto-map)> virtual-ip range 10.5.0.0 20
IpSec::Manager: "test": crypto map Virtual IP pool range set ►
from "10.5.0.0" to "10.5.0.19" (CIDR 10.5.0.0/27).
```

```
(config-crypto-map)> no virtual-ip range
IpSec::Manager: "test": crypto map Virtual IP pool range deleted.
```

Version	Description
2.08	The crypto map virtual-ip range command has been introduced.

3.19.30 crypto map virtual-ip static-ip

Description Bind IP address to the user. User account must have ipsec-xauth tag.

Command with **no** prefix removes binding.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config-crypto-map)> virtual-ip static-ip <user> <address>
(config-crypto-map)> no virtual-ip static-ip <user>
```

Argument	Value	Description
user	<i>String</i>	Username.
address	<i>IP address</i>	IP address to bind.

Example

```
(config-crypto-map)> virtual-ip static-ip admin 172.20.0.1
IpSec::ManagerVirtualIp: "VirtualIPServer": crypto map Virtual ►
IP server static address "172.20.0.1" assigned to user "admin".
```

```
(config-crypto-map)> no virtual-ip static-ip admin
IpSec::ManagerVirtualIp: "VirtualIPServer": crypto map Virtual ►
IP server static address removed for user "admin".
```

History

Version	Description
3.05	The crypto map virtual-ip static-ip command has been introduced.

3.20 dlna

Description

Access to a group of commands to manage [DLNA](#) service.

Prefix no

No

Change settings

No

Multiple input

No

Group entry

(config-dlna)

Synopsis

```
(config)> dlna
```

Example

```
(config)> dlna
Core::Configurator: Done.
(config-dlna)>
```

History

Version	Description
2.00	The dlna command has been introduced.

3.20.1 dlina container

Description

Set default container for [DLNA](#) service.

Command with **no** prefix resets the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-dlna)> container <container>
```

```
(config-dlna)> no container
```

Arguments

Argument	Value	Description
container	browse	Show the content of browse container by default.
	music	Show the content of music container by default.
	video	Show the content of video container by default.
	images	Show the content of images container by default.

Example

```
(config-dlna)> container browse
Dlna::Server: Set default container to "browse".
```

```
(config-dlna)> no container
Dlna::Server: Reset default container.
```

Version	Description
2.11	The dlna container command has been introduced.

3.20.2 dlna db-directory

Description Specify the directory with database of multimedia content.
Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-dlna)> db-directory <directory>
```

```
(config-dlna)> no db-directory
```

Argument	Value	Description
directory	<i>String</i>	Name of the directory with database.

Example

```
(config-dlna)> db-directory 46E243F4E243E6B1:/components/dlna/
Dlna::Server: DB directory set.
```

```
(config-dlna)> no db-directory
Dlna::Server: DB directory removed.
```

Version	Description
2.06	The dlna db-directory command has been introduced.

3.20.3 dlna directory

Description Specify the directory with media content.
Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input Yes**Synopsis**

```
(config-dlna)> directory <directory> [ media-type ]
```

```
(config-dlna)> no directory <directory>
```

Arguments

Argument	Value	Description
directory	String	Name of the directory with media content.
media-type	audio	Content type is audio.
	video	Content type is video.
	images	Content type is images.

Example

```
(config-dlna)> directory ►
46E243F4E243E6B1:/components/transmission/download/
Dlna::Server: ►
"46E243F4E243E6B1:/components/transmission/download/" directory ►
added.
```

```
(config-dlna)> no directory ►
46E243F4E243E6B1:/components/transmission/download/
Dlna::Server: ►
"46E243F4E243E6B1:/components/transmission/download/" directory ►
removed.
```

History

Version	Description
2.00	The dlna directory command has been introduced.
2.06	Parameter media-type was added.

3.20.4 dlna display-name

DescriptionAssign custom name to [DLNA](#) server.Command with **no** prefix removes the setting.**Prefix no**

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-dlna)> display-name <display-name>
```

```
(config-dlna)> no display-name
```

Arguments

Argument	Value	Description
display-name	String	Server name to assign.

Example (config-dlna)> **display-name MYDLNA**
Dlna::Server: Set a display name.

History

Version	Description
2.12	The dlna display-name command has been introduced.

3.20.5 dlna interface

Description

Set the router interface through which media content will be transmitted. You can enter up to 16 interfaces.

Command with **no** prefix removes the defined interface from the list. If you use no argument, the entire list of interfaces will be removed.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type IP

Synopsis

```
(config-dlna)> interface <interface>
```

```
(config-dlna)> no interface <interface>
```

Arguments

Argument	Value	Description
interface	<i>Interface</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(config-dlna)> interface [Tab]
```

```
Usage template:
  interface {interface}
```

```
Choose:
  GigabitEthernet1
  ISP
```

```
WifiMaster0/AccessPoint2
WifiMaster1/AccessPoint1
WifiMaster0/AccessPoint3
WifiMaster0/AccessPoint0
  AccessPoint
WifiMaster1/AccessPoint2
WifiMaster0/AccessPoint1
  GuestWiFi
```

```
(config-dlna)> interface GigabitEthernet0/Vlan1
```

```
(config-dlna)> no interface GigabitEthernet0/Vlan1
```

History

Version	Description
2.00	The dlna interface command has been introduced.

3.20.6 dlna port

Description

Set DLNA server port for HTTP (descriptions, SOAP, media transfer) traffic. By default, value 8200 is used.

Command with **no** prefix resets port to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-dlna)> port <port>
```

```
(config-dlna)> no port
```

Arguments

Argument	Value	Description
port	<i>Integer</i>	The port number.

Example

```
(config-dlna)> port 8999
Dlna::Server: Port changed to 8999.
```

```
(config-dlna)> no port
Dlna::Server: Port reset to 8200.
```

History

Version	Description
2.00	The dlna port command has been introduced.

3.20.7 dlna rescan

Description

Renew info about files in the directory with media content.

Note:

If keyword **full** is specified, deleting and recreating of the content database happens. This may take a long time, so it is recommended to do this when the content database structure is damaged.

Prefix no

No

Change settings

No

Multiple input No

Synopsis `(config-dlna)> rescan [full]`

Arguments

Argument	Value	Description
full	<i>Keyword</i>	Specifies if rebuilding of database content is needed.

Example

```
(config-dlna)> rescan
```

```
(config-dlna)> rescan full
```

History

Version	Description
2.00	The dlna rescan command has been introduced.

3.20.8 dlna sort

Description Set the sort criteria for *DLNA* server files.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis `(config-dlna)> sort <key> [<order>]`

```
(config-dlna)> no sort
```

Arguments

Argument	Value	Description
key	class	Sort by class of media content (audio, video, images).
	title	Sort by title.
	date	Sort by date.
	track	Sort by track.
	album	Sort by album.
order	ascending	Sort files in ascending order. The parameter is used by default.
	descending	Sort files in descending order.

Example

```
(config-dlna)> sort date
Dlna::Server: "date by ascending" sort criterion appended.
```

```
(config-dlna)> sort date ascending
Dlna::Server: "date by ascending" sort criterion appended.
```

```
(config-dlna)> no sort
Dlna::Server: Sort criteria removed.
```

History

Version	Description
2.11	The dlna sort command has been introduced.

3.21 dns-proxy

Description Access to a group of commands to manage DNS proxy service.

Prefix no No

Change settings No

Multiple input No

Group entry (config-dnspx)

Synopsis | (config)> **dns-proxy**

Example (config)> **dns-proxy**
Core::Configurator: Done.
(config-dnspx)>

History

Version	Description
2.04	The dns-proxy command has been introduced.

3.21.1 dns-proxy filter assign host preset

Description Assign a filtering preset to a network device.

See the list of presets you can with help of [show dns-proxy filter presets](#) command.

Command with **no** prefix removes the defined preset for host. If you use no argument, the entire list of presets will be cleared for hosts.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis | (config-dnspx)> **filter assign host preset** *<host>* *<preset>*

```
(config-dnspx)> no filter assign host preset [<host>]
```

Arguments

Argument	Value	Description
host	<i>MAC address</i>	Network device MAC address.
preset	<i>String</i>	Preset name.

Example

```
(config-dnspx)> filter assign host preset 04:d4:c1:51:b1:59 ►
opendns-family
Dns::Filter::Public: Associated host "04:d4:c1:51:b1:59" with ►
preset "opendns-family".
```

```
(config-dnspx)> no filter assign host preset 04:d4:c1:51:b1:59
Dns::Filter::Public: Removed preset for host "04:d4:c1:51:b1:59".
```

```
(config-dnspx)> no filter assign host preset
Dns::Filter::Public: Removed presets for hosts.
```

History

Version	Description
3.08	The dns-proxy filter assign host preset command has been introduced.

3.21.2 dns-proxy filter assign host profile

Description

Assign a filtering profile to a network device.

Add new profile you can with help of [dns-proxy filter profile](#) command.

See the list of profiles you can with help of [show dns-proxy filter profiles](#) command.

Command with **no** prefix removes the defined profile for host. If you use no argument, the entire list of profiles will be cleared for hosts.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(config-dnspx)> filter assign host profile <host> <profile>
```

```
(config-dnspx)> no filter assign host profile [<host>]
```

Arguments

Argument	Value	Description
host	<i>MAC address</i>	Network device MAC address.
profile	<i>String</i>	Profile name.

Example (config-dnspx)> **filter assign host profile 00:d2:c1:54:bc:59 test**
 Dns::Filter::Public: Associated host "00:d2:c1:54:bc:59" with profile "test".

```
(config-dnspx)> no filter assign host profile 00:d2:c1:54:bc:59
Dns::Filter::Public: Removed profile for host "00:d2:c1:54:bc:59".
```

```
(config-dnspx)> no filter assign host profile
Dns::Filter::Public: Removed profiles for hosts.
```

History

Version	Description
3.08	The dns-proxy filter assign host profile command has been introduced.

3.21.3 dns-proxy filter assign interface preset

Description Assign a filtering preset to all devices on segment (exclude ones with already assigned profiles/presets).

See the list of presets you can with help of [show dns-proxy filter presets](#) command.

Command with **no** prefix removes the defined preset for interface. If you use no argument, the entire list of presets for interfaces will be cleared.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config-dnspx)> filter assign interface preset <interface> <preset>
(config-dnspx)> no filter assign interface preset [ <interface> ]
```

Arguments

Argument	Value	Description
interface	<i>Interface</i>	Network interface name. Must have a private or protected security level.
preset	<i>String</i>	Preset name.

Example (config-dnspx)> **filter assign interface preset Bridge0 quad9-security**
 Dns::Filter::Public: Associated interface "Bridge0" with preset "quad9-security".

```
(config-dnspx)> no filter assign interface preset Bridge0
Dns::Filter::Public: Removed preset for interface "Bridge0".
```

```
(config-dnspx)> no filter assign interface preset
Dns::Filter::Public: Removed presets for interfaces.
```


History	Version	Description
	3.08	The dns-proxy filter assign interface preset command has been introduced.

3.21.4 dns-proxy filter assign interface profile

Description Assign a filtering profile to all devices on segment (exclude ones with already assigned profiles/presets).

Add new profile you can with help of **dns-proxy filter profile** command.

See the list of profiles you can with help of **show dns-proxy filter profiles** command.

Command with **no** prefix removes the defined profile for interface. If you use no argument, the entire list of profiles for interfaces will be cleared.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config-dnspx)> filter assign interface profile <interface> <profile>
(config-dnspx)> no filter assign interface profile [ <interface> ]
```

Arguments	Argument	Value	Description
	interface	<i>Interface</i>	Network interface name. Must have a private or protected security level.
	profile	<i>String</i>	Profile name.

Example

```
(config-dnspx)> filter assign interface profile ►
GigabitEthernet0/Vlan1 DnsProfile0
Dns::Filter::Public: Associated interface ►
"GigabitEthernet0/Vlan1" with profile "DnsProfile0".

(config-dnspx)> no filter assign interface profile ►
GigabitEthernet0/Vlan1
Dns::Filter::Public: Removed profile for interface ►
"GigabitEthernet0/Vlan1".

(config-dnspx)> no filter assign interface profile
Dns::Filter::Public: Removed profiles for interfaces.
```

History	Version	Description
	3.08	The dns-proxy filter assign interface profile command has been introduced.

3.21.5 dns-proxy filter engine

Description	Selects DNS engine. Command with no prefix disables the feature. Config request will return empty value in case of disabled filter.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	<pre>(config-dnspx)> filter engine <engine></pre> <pre>(config-dnspx)> no filter engine</pre>

Arguments

Argument	Value	Description
engine	interceptor	One of available DNS filtering engines.
	public	
	nextdns	
	opkg	
	skydns	

Example

```
(config-dnspx)> filter engine interceptor  
Dns::Filter::Interceptor: Enabled.
```

```
(config-dnspx)> no filter engine  
Dns::Manager: Disabled filter engine.
```

History

Version	Description
3.08	The dns-proxy filter engine command has been introduced.

3.21.6 dns-proxy filter profile

Description	Create a user-defined DNS filtering profile. Command with no prefix removes profile.
Prefix no	Yes
Change settings	Yes
Multiple input	Yes
Synopsis	<pre>(config-dnspx)> filter profile <name></pre>

```
(config-dnsp) > no filter profile <name>
```

Arguments

Argument	Value	Description
name	<i>String</i>	Profile name in reduced form, not more than 32 characters. The maximum number of profiles is 8.

Example

```
(config-dnsp) > filter profile test
Dns::Filter::Public: Created profile "test".
```

```
(config-dnsp) > no filter profile test
Dns::Filter::Public: Removed profile "test".
```

History

Version	Description
3.08	The dns-proxy filter profile command has been introduced.

3.21.7 dns-proxy filter profile description

Description

Assign description for DNS filtering profile.

Command with **no** prefix deletes the profile description.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-dnsp) > filter profile <name>description <description>
```

```
(config-dnsp) > no filter profile <name>description <description>
```

Arguments

Argument	Value	Description
name	<i>String</i>	Profile name.
description	<i>String</i>	Arbitrary description of the profile.

Example

```
(config-dnsp) > filter profile test description MyProfile1
Dns::Filter::Public: Set description to profile "test".
```

```
(config-dnsp) > no filter profile test description
Dns::Filter::Public: Cleared description of profile "test".
```

History

Version	Description
3.08	The dns-proxy filter profile description command has been introduced.

3.21.8 dns-proxy filter profile dns53 upstream

Description

Add IP address of the DNS server to user-defined filtering profile. Number of servers are limited to 6.

Command with **no** prefix removes the defined server from the list. If you use no argument, the entire list of servers will be cleared.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(config-dnspx)> filter profile <name>dns53 upstream <address>[:<port>]
```

```
(config-dnspx)> no filter profile <name>dns53 description [ <address>
[:<port>]]
```

Arguments

Argument	Value	Description
name	<i>String</i>	Profile name.
address	<i>IP address</i>	IP address of the server.
port	<i>Integer</i>	The server port.

Example

```
(config-dnspx)> filter profile test dns53 upstream 1.1.1.1
Dns::Filter::Public: Added DNS name server 1.1.1.1 to profile ►
"test".
```

```
(config-dnspx)> no filter profile test dns53 upstream
Dns::Filter::Public: Removed DNS name server from profile "test".
```

```
(config-dnspx)> no filter profile test dns53 upstream 1.1.1.1
Dns::Filter::Public: Removed DNS name server 1.1.1.1 from profile ►
"test".
```

History

Version	Description
3.08	The dns-proxy filter profile dns53 upstream command has been introduced.

3.21.9 dns-proxy filter profile https upstream

Description Add *DNS over HTTPS* server to user-defined filtering profile. Number of servers are limited to 6.

Command with **no** prefix removes the defined server from the list. If you use no argument, the entire list of servers will be cleared.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config-dnspx)> filter profile <name>https upstream <url> [ spki <hash> ]
(config-dnspx)> no filter profile <name>https description [ <url> ]
```

Arguments

Argument	Value	Description
name	<i>String</i>	Profile name.
url	<i>String</i>	URL of DNS service.
hash	<i>String</i>	Hash TLS certificate.

Example

```
(config-dnspx)> filter profile test https upstream ▶
https://dns.google/resolve
Dns::Filter::Public: Added DNS-over-HTTPS name server ▶
https://dns.google/resolve to profile "test".
```

```
(config-dnspx)> no filter profile test https upstream ▶
https://dns.google/resolve
Dns::Filter::Public: Removed DNS-over-HTTPS name server ▶
https://dns.google/resolve from profile "test".
```

```
(config-dnspx)> no filter profile test https upstream
Dns::Filter::Public: Removed DNS-over-HTTPS name server from ▶
profile "test".
```

History

Version	Description
3.08	The dns-proxy filter profile https upstream command has been introduced.

3.21.10 dns-proxy filter profile intercept enable

Description Enable transit DNS requests interception for filtering profile. By default, the interception is disabled.

Command with **no** prefix disables the interception for filtering profile.

Prefix no Yes**Change settings** Yes**Multiple input** Yes

Synopsis

```
(config-dnspx)> filter profile <name>intercept enable
(config-dnspx)> no filter profile <name>intercept enable
```

Arguments

Argument	Value	Description
name	<i>String</i>	Filtering profile name.

Example

```
(config-dnspx)> filter profile DnsProfile0 intercept enable
Dns::Filter::Public: Enabled intercept in profile "DnsProfile0".
```

```
(config-dnspx)> no filter profile DnsProfile0 intercept enable
Dns::Filter::Public: Disabled intercept in profile "DnsProfile0".
```

History

Version	Description
3.09	The dns-proxy filter profile intercept enable command has been introduced.

3.21.11 dns-proxy filter profile tls upstream

Description Add [DNS over TLS](#) server to user-defined filtering profile. Number of servers are limited to 6.

Command with **no** prefix removes the defined server from the list. If you use no argument, the entire list of servers will be cleared.

Prefix no Yes**Change settings** Yes**Multiple input** Yes

Synopsis

```
(config-dnspx)> filter profile <name>tls upstream <address> [ <port> ]
[ sni <fqdn> ] [ spki <hash> ]
(config-dnspx)> no filter profile <name>tls description [ <address> ] [ <port> ]
```

Arguments

Argument	Value	Description
name	<i>String</i>	Profile name.
address	<i>IP address</i> <i>FQDN</i>	Address of the server.

Argument	Value	Description
port	<i>Integer</i>	The server port.
fqdn	<i>String</i>	Full domain name.
hash	<i>String</i>	Hash TLS certificate.

Example

```
(config-dnspx)> filter profile test tls upstream 1.1.1.1 8853 ▶
sni cloudflare-dns.com
Dns::Filter::Public: Added DNS-over-TLS name server 1.1.1.1 to ▶
profile "test".
```

```
(config-dnspx)> no filter profile test tls upstream 1.1.1.1 8853
Dns::Filter::Public: Removed DNS-over-TLS name server 1.1.1.1 ▶
from profile "test".
```

```
(config-dnspx)> no filter profile test tls upstream
Dns::Filter::Public: Removed DNS-over-TLS name server from ▶
profile "test".
```

History

Version	Description
3.08	The dns-proxy filter profile tls upstream command has been introduced.

3.21.12 dns-proxy https upstream

Description Add [DNS over HTTPS](#) server.

Command with **no** prefix removes the defined server from the list. If you use no argument, the entire list of servers will be cleared.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config-dnspx)> https upstream <url> [ <format> ] [ sni <hash> ] [ on
<interface> ] [ domain <domain> ]
```

```
(config-dnspx)> no https upstream [ <url> ]
```

Arguments

Argument	Value	Description
url	<i>String</i>	Custom URL of DNS service.
format	dnsm	The format to represent DNS data.
	json	
hash	<i>String</i>	Hash TLS certificate.
interface	<i>Interface</i>	Interface name to configure.

Argument	Value	Description
domain	<i>String</i>	The domain name.

Example

```
(config-dnspx)> https upstream ▶
https://cloudflare-dns.com/dns-query?ct=application/dns-json json
Dns::Secure::ManagerDoh: DNS-over-HTTPS name server ▶
"https://cloudflare-dns.com/dns-query?ct=application/dns-json" ▶
(json) added.
```

```
(config-dnspx)> https upstream https://dns.adguard.com/dns-query ▶
dnsm
Dns::Secure::ManagerDoh: DNS-over-HTTPS name server ▶
"https://dns.adguard.com/dns-query" (dnsm) added.
```

```
(config-dnspx)> https upstream https://dns.adguard.com/dns-query ▶
dnsm on ISP
Dns::Secure::ManagerDoh: DNS-over-HTTPS name server ▶
"https://dns.adguard.com/dns-query" (dnsm) added.
```

```
(config-dnspx)> https upstream https://my.domain.com/dns-query ▶
dnsm domain my.lib
Dns::Secure::ManagerDoh: DNS-over-HTTPS name server ▶
"https://my.domain.com/dns-query" (dnsm) added.
```

```
(config-dnspx)> no https upstream ▶
https://dns.adguard.com/dns-query
Dns::Secure::ManagerDoh: DNS-over-HTTPS name server ▶
"https://dns.adguard.com/dns-query" deleted.
```

```
(config-dnspx)> no https upstream
Dns::Secure::ManagerDoh: DNS-over-HTTPS name servers cleared.
```

History

Version	Description
3.01	The dns-proxy https upstream command has been introduced.
3.08	The domain argument was added.

3.21.13 dns-proxy intercept enable

Description Enable transit DNS requests interception for system profile. By default, the interception is disabled.

Command with **no** prefix disables the interception for system profile.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-dnsp) > intercept enable
(config-dnsp) > no intercept enable
```

Example

```
(config-dnsp) > intercept enable
Dns::Filter::Filter: Enable intercept for system profile.
(config-dnsp) > no intercept enable
Dns::Filter::Filter: Disable intercept for system profile.
```

History

Version	Description
3.06	The dns-proxy intercept enable command has been introduced.
3.08	The dns-proxy intercept enable command was removed as obsolete.
3.09	The dns-proxy intercept enable command has been added again.

3.21.14 dns-proxy max-ttl

Description Set maximum TTL for DNS proxy cached entries.
Command with **no** prefix removes maximum TTL value.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-dnsp) > max-ttl <max-ttl>
(config-dnsp) > no max-ttl
```

Arguments

Argument	Value	Description
max-ttl	<i>Integer</i>	The maximum value of TTL. Can take values in the range from 1 to 604800000 milliseconds (1 week).

Example

```
(config-dnsp) > max-ttl 10000
Dns::Proxy: Dns-proxy set max-ttl to 10000.
```

```
(config-dnsp) > no max-ttl
Dns::Proxy: Dns-proxy max-ttl cleared.
```

History

Version	Description
2.05	The dns-proxy max-ttl command has been introduced.

3.21.15 dns-proxy proceed

Description Set interval between concurrent requests, which is sent by DNS proxy to multiple DNS servers. By default, 500 value is used.

Command with **no** prefix resets proceed to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-dnspx)> proceed <proceed>
(config-dnspx)> no proceed
```

Arguments

Argument	Value	Description
proceed	<i>Integer</i>	The value of DNS proxy proceed in milliseconds. Can take values in the range from 1 to 50000.

Example

```
(config-dnspx)> proceed 600
Dns::Proxy: Dns-proxy set 600 msec. proceed.
```

```
(config-dnspx)> no proceed
Dns::Proxy: Dns-proxy proceed timeout reset.
```

History

Version	Description
2.04	The dns-proxy proceed command has been introduced.

3.21.16 dns-proxy rebind-protect

Description Enable protect against *DNS rebinding* attacks. By default, auto mode is used.

Command with **no** prefix disables protection.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-dnspx)> rebind-protect (auto | strict)
(config-dnspx)> no rebind-protect
```

Argument	Value	Description
auto	<i>Keyword</i>	Protect subnets for private interfaces.
strict	<i>Keyword</i>	Protect subnets from list IANA IPv4 Special-Purpose Address Registry ¹ .

Example

```
(config-dnsp) > rebind-protect auto
Dns::Manager: Enabled rebind protection.
(config-dnsp) > no rebind-protect
Dns::Manager: Disabled rebind protection.
```

Version	Description
3.04	The dns-proxy rebind-protect command has been introduced.

3.21.17 dns-proxy srr-reset

Description Set DNS proxy send-response rating reset time. By default, value 600000 is used.

Command with **no** prefix resets time reset to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-dnsp) > srr-reset <srr-reset>
(config-dnsp) > no srr-reset
```

Argument	Value	Description
srr-reset	<i>Integer</i>	The value of time reset in milliseconds. Can take values in the range from 0 to 600000.

Example

```
(config-dnsp) > srr-reset 111
Dns::Manager: Set send-response rating reset time to 111 ms.

(config-dnsp) > no srr-reset
Dns::Manager: Reset send-response rating reset time to default.
```

Version	Description
2.12	The dns-proxy srr-reset command has been introduced.

¹ <https://www.iana.org/assignments/iana-ipv4-special-registry/iana-ipv4-special-registry.xhtml>

3.21.18 dns-proxy tls upstream

Description	Add <i>DNS over TLS</i> server. Command with no prefix removes the defined server from the list. If you use no argument, the entire list of servers will be cleared.
Prefix no	Yes
Change settings	Yes
Multiple input	Yes

Synopsis

```
(config-dnspx)> tls upstream <address> [<port>] [sni <fqdn>] [spki
<hash>] [on <interface>] [domain <domain>]
```

```
(config-dnspx)> no tls upstream [<address>] [<port>]
```

Arguments

Argument	Value	Description
address	<i>IP address</i>	IP address of the server.
port	<i>Integer</i>	The server port.
fqdn	<i>String</i>	Full domain name.
hash	<i>String</i>	Hash TLS certificate.
interface	<i>Interface</i>	Interface name to configure.
domain	<i>String</i>	The domain name.

Example

```
(config-dnspx)> tls upstream 1.1.1.1 853 sni cloudflare-dns.com
Dns::Secure::ManagerDot: DNS-over-TLS name server 1.1.1.1:853 ►
added.
```

```
(config-dnspx)> tls upstream 1.1.1.1 853 sni cloudflare-dns.com ►
on ISP
Dns::Secure::ManagerDot: DNS-over-TLS name server 1.1.1.1:853 ►
added.
```

```
(config-dnspx)> tls upstream 144.144.144.143 853 sni ►
my.domain.com domain my.lib
Dns::Secure::ManagerDot: DNS-over-TLS name server ►
144.144.144.143:853 added.
```

```
(config-dnspx)> no tls upstream 1.1.1.1 853
Dns::Secure::ManagerDot: DNS-over-TLS name server 1.1.1.1:853 ►
deleted.
```

```
(config-dnspx)> no tls upstream
Dns::Secure::ManagerDot: DNS-over-TLS name servers cleared.
```

History	Version	Description
	3.01	The dns-proxy tls upstream command has been introduced.
	3.08	The domain argument was added.

3.22 dpn accept

Description Accept user agreement *DPN*. Until the license is accepted, the configurator does not accept any command except READ_ONLY.

Prefix no No

Change settings No

Multiple input No

Synopsis `(config)> dpn accept`

Example `(config)> dpn accept`
 Core::Legal: Accepted dpn version 20200330.

History	Version	Description
	3.05	The dpn accept command has been introduced.

3.23 dyndns profile

Description Access to a group of commands to configure DynDns profile. If the profile is not found, the command tries to create it. You can enter up to 32 profiles.

Command with **no** prefix removes DynDns profile.

Prefix no Yes

Change settings Yes

Multiple input Yes

Group entry (config-dyndns)

Synopsis `(config)> dyndns profile <name>`

`(config)> no dyndns profile <name>`

Arguments	Argument	Value	Description
	name	<i>String</i>	The profile name. Maximum name length is 64 characters.

Example

```
(config)> dyndns profile _WEBADMIN
Core::Configurator: Done.
(config-dyndns)>
```

History

Version	Description
2.00	The dyndns profile command has been introduced.

3.23.1 dyndns profile domain

Description Assign permanent domain name to the computer. You need to register this domain name on the site [dyndns.com](http://www.dyndns.com)² or [no-ip.com](http://www.no-ip.com)³ before execution.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-dyndns)> domain <domain>
```

```
(config-dyndns)> no domain
```

Arguments

Argument	Value	Description
domain	<i>String</i>	The domain name. Maximum domain name length is 254 characters.

Example

```
(config-dyndns)> domain support.ddns.net
DynDns::Profile: "_WEBADMIN": domain saved..
```

```
(config-dyndns)> no domain
ynDns::Profile: "_WEBADMIN" domain cleared.
```

History

Version	Description
2.00	The dyndns profile domain command has been introduced.

3.23.2 dyndns profile password

Description Set password for access via DynDns.

Prefix no Yes

² <http://www.dyndns.com>
³ <http://www.no-ip.com>

Change settings Yes

Multiple input No

Synopsis

```
(config-dyndns)> password <password>
(config-dyndns)> no password
```

Arguments

Argument	Value	Description
password	<i>String</i>	The password for authentication. Maximum password length is 64 characters.

Example

```
(config-dyndns)> password 123456789
DynDns::Profile: "_WEBADMIN": password saved.
```

```
(config-dyndns)> no password
DynDns::Profile: "_WEBADMIN" password cleared.
```

History

Version	Description
2.00	The dyndns profile password command has been introduced.

3.23.3 dyndns profile send-address

Description Enable the necessity of connection IP address indication in DynDns request. Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-dyndns)> send-address
(config-dyndns)> no send-address
```

Example

```
(config-dyndns)> send-address
DynDns::Profile: Send address is enabled.
```

```
(config-dyndns)> no send-address
DynDns::Profile: Send address is disabled.
```

History

Version	Description
2.03	The dyndns profile send-address command has been introduced.

3.23.4 dyndns profile type

Description Set DynDns type depending on the site where the domain name was registered.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-dyndns)> type <type>
```

```
(config-dyndns)> no type
```

Arguments

Argument	Value	Description
type	dyndns	Used if the domain name was registered on the dyndns.com ⁴ site.
	noip	Used if the domain name was registered on the no-ip.com ⁵ site.
	custom	Used if the domain name was registered on the other site (defined with dyndns profile url command).

Example

```
(config-dyndns)> type noip  
DynDns::Profile: "_WEBADMIN": type saved.
```

```
(config-dyndns)> no type  
DynDns::Profile: "_WEBADMIN" type cleared.
```

History

Version	Description
2.00	The dyndns profile type command has been introduced.

3.23.5 dyndns profile update-interval

Description Set the address update interval for DynDns.

Command with **no** prefix cancels the ability to update.

Prefix no Yes

Change settings Yes

Multiple input No

⁴ <http://www.dyndns.com>

⁵ <http://www.no-ip.com>

Synopsis

```
(config-dyndns)> update-interval <days> days [ <hours> hours ]
[ <minutes> minutes ] [ <seconds> seconds ]

(config-dyndns)> no update-interval
```

Arguments

Argument	Value	Description
days	<i>Integer</i>	Interval time in days.
hours	<i>Integer</i>	Interval time in hours.
minutes	<i>Integer</i>	Interval time in minutes.
seconds	<i>Integer</i>	Interval time in seconds.

Example

```
(config-dyndns)> update-interval 5 days 5 hours 5 minutes 5 seconds
DynDns::Profile: Interval is set to 450305 seconds.

(config-dyndns)> update-interval 5 days
DynDns::Profile: Interval is set to 432000 seconds.

(config-dyndns)> no update-interval
DynDns::Profile: Periodic registration disabled.
```

History

Version	Description
2.03	The dyndns profile update-interval command has been introduced.

3.23.6 dyndns profile url

Description

Set dynamic DNS service custom URL.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-dyndns)> url <url>

(config-dyndns)> no url
```

Arguments

Argument	Value	Description
url	<i>String</i>	Custom URL of DNS service.

Example

```
(config-dyndns)> url http://members.dyndns.org/nic/update
DynDns::Profile: "_WEBADMIN": URL saved.
```

```
(config-dyndns)> no url
DynDns::Profile: "_WEBADMIN" URL cleared.
```

History

Version	Description
2.05	The dyndns profile url command has been introduced.

3.23.7 dyndns profile username

Description Set username for access via DynDns.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-dyndns)> username <username>
```

```
(config-dyndns)> no username
```

Arguments

Argument	Value	Description
username	<i>String</i>	Username for authentication. Maximum name length is 64 characters.

Example

```
(config-dyndns)> username test@gmail.com
DynDns::Profile: "_WEBADMIN": username saved.
```

```
(config-dyndns)> no username
DynDns::Profile: "_WEBADMIN" username cleared.
```

History

Version	Description
2.00	The dyndns profile username command has been introduced.

3.24 easyconfig check

Description Access to a group of commands to configure Internet access check. To check Internet access, first requests to the default gateway are sent. If the answer is received, then the remote hosts specified in the settings are polled. The duration and frequency of requests are also specified in the settings. If all the checks have been passed, then the Internet access is provided.

Prefix no No

Change settings No

Multiple input	No				
Group entry	(ezconfig-check)				
Synopsis	(config)> easyconfig check				
Example	(config)> easyconfig check (ezconfig-check)>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.00</td> <td>The easyconfig check command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.00	The easyconfig check command has been introduced.
Version	Description				
2.00	The easyconfig check command has been introduced.				

3.24.1 easyconfig check exclude-gateway

Description	Disable default gateway check. By default, the setting is enabled. Command with no prefix enables the check back.				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Synopsis	(ezconfig-check)> exclude-gateway (ezconfig-check)> no exclude-gateway				
Example	(ezconfig-check)> exclude-gateway Network::InternetChecker: Gateway checking disabled. (ezconfig-check)> no exclude-gateway Network::InternetChecker: Gateway checking enabled.				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.05</td> <td>The easyconfig check exclude-gateway command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.05	The easyconfig check exclude-gateway command has been introduced.
Version	Description				
2.05	The easyconfig check exclude-gateway command has been introduced.				

3.24.2 easyconfig check host

Description	Specify the hostnames used to send requests for Internet access detection. By default, host address is google.com. Command with no prefix resets hostnames to default.
Prefix no	Yes
Change settings	Yes

Multiple input Yes**Synopsis**

```
(ezconfig-check)> host <host>
```

```
(ezconfig-check)> no host [ <host> ]
```

Arguments

Argument	Value	Description
host	<i>String</i>	Remote host name.

Example

```
(ezconfig-check)> host google.com
Network::InternetChecker: "google.com" name added.
```

```
(ezconfig-check)> no host google.com
Network::InternetChecker: "google.com" name removed.
```

```
(ezconfig-check)> no host
Network::InternetChecker: Domain name set reset to default.
```

History

Version	Description
2.00	The easyconfig check host command has been introduced.

3.24.3 easyconfig check max-fails

Description

Specify the number of consecutive failed requests to the hostnames determined with **easyconfig check host** command. By default, value 3 is used.

Command with **no** prefix resets setting to default.

Prefix no Yes**Change settings** Yes**Multiple input** No**Synopsis**

```
(ezconfig-check)> max-fails <count>
```

```
(ezconfig-check)> no max-fails
```

Arguments

Argument	Value	Description
count	<i>Integer</i>	Amount of failed requests. Can take values in the range from 2 to 8 inclusively.

Example

```
(ezconfig-check)> max-fails 5
Network::InternetChecker: A new maximum fail count set to 5.
```

```
(ezconfig-check)> no max-fails
Network::InternetChecker: The maximum fail count reset to the ►
default value (3).
```

History

Version	Description
2.00	The easyconfig check max-fails command has been introduced.

3.24.4 easyconfig check period

Description Set a period of checking. By default, the value 15 is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(ezconfig-check)> period <period>
```

```
(ezconfig-check)> no period
```

Arguments

Argument	Value	Description
period	<i>Integer</i>	Check interval in seconds. Can take values in the range from 10 to 60 inclusively.

Example

```
(ezconfig-check)> period 20
Network::InternetChecker: A new check period set to 20 seconds.
```

```
(ezconfig-check)> no period
Network::InternetChecker: Check period reset to default (15 ►
seconds).
```

History

Version	Description
2.00	The easyconfig check period command has been introduced.

3.25 easyconfig disable

Description Disable initial setup wizard. By default, the setting is enabled.

Command with **no** prefix enables initial setup wizard.

Prefix no Yes

Change settings Yes**Multiple input** No

Synopsis

```
(config)> easyconfig disable
```

```
(config)> no easyconfig disable
```

Example

```
(config)> easyconfig disable
EasyConfig::Manager: Disabled.
```

```
(config)> no easyconfig disable
EasyConfig::Manager: Enabled.
```

History

Version	Description
3.01	The easyconfig disable command has been introduced.

3.26 eula accept

Description Accept user agreement [EULA](#). Until the license is accepted, the configurator does not accept any command except READ_ONLY.

Prefix no No**Change settings** No**Multiple input** No

Synopsis

```
(config)> eula accept
```

Example

```
(config)> eula accept
Core::Eula: "20181001" license accepted.
```

History

Version	Description
2.15	The eula accept command has been introduced.

3.27 igmp-proxy

Description Access to a group of commands to configure [IGMP](#).

Prefix no No**Change settings** No**Multiple input** No**Group entry** (igmp-proxy)

Synopsis | (config)> **igmp-proxy**

Example (config)> **igmp-proxy**
(igmp-proxy)>

Version	Description
2.06	The igmp-proxy command has been introduced.

3.27.1 igmp-proxy fast-leave

Description Enable the *IGMP* fast-leave to immediately remove a port from the forwarding entry for a multicast group when the port receives a leave message.

Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis | (igmp-proxy)> **fast-leave**

| (igmp-proxy)> **no fast-leave**

Example (igmp-proxy)> **fast-leave**
Igmp::Proxy: Enabled Fast Leave.

(igmp-proxy)> **no fast-leave**
Igmp::Proxy: Disabled Fast Leave.

Version	Description
3.09	The igmp-proxy fast-leave command has been introduced.

3.27.2 igmp-proxy force

Description Force old version of *IGMP*. By default, the setting is disabled and the protocol version is selected in automatic mode.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(igmp-proxy)> force <protocol>
```

```
(igmp-proxy)> no force
```

Arguments

Argument	Value	Description
protocol	igmp-v1	Apply filtering to incoming packets.
	igmp-v2	Apply filtering to outgoing packets.

Example

```
(igmp-proxy)> force igmp-v1
Igmp::Proxy: Forced protocol: igmp-v1.
```

```
(igmp-proxy)> no force
Igmp::Proxy: Enabled IGMP auto-detect.
```

History

Version	Description
2.08	The igmp-proxy force command has been introduced.

3.28 igmp-snooping disable

Description

Disable IGMP snooping. Command is available in Client, Repeater or AP modes only.

Command with **no** prefix enables IGMP snooping.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> igmp-snooping disable
```

Example

```
(config)> igmp-snooping disable
Igmp::Snooping: Disabled.
```

```
(config)> no igmp-snooping disable
Igmp::Snooping: Enabled.
```

History

Version	Description
2.12	The igmp-snooping disable command has been introduced.

3.29 interface

Description Access to a group of commands to configure the selected interface. If the interface is not found, the command tries to create it.

The interface name specifies its class that inherits certain properties, see the diagrams in the [Appendix](#). The commands work in relation to classes. The corresponding interface class is specified in the command description.

Command with **no** prefix deletes the interface.

Prefix no Yes

Change settings Yes

Multiple input Yes

Group entry (config-if)

Synopsis

```
(config)> interface <name>
(config)> no interface <name>
```

Arguments

Argument	Value	Description
name	<i>Interface</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(config)> interface [Tab]
```

Usage template:

```
interface {name}
```

Choose:

```

          Pvc
          Vlan
          CdcEthernet
          UsbModem
          RealtekEthernet
          AsixEthernet
          Davicom
          UsbQmi
          UsbLte
          Yota
          Bridge
          PPPoE
          SSTPEthernet
          SSTP
          PPTP
          L2TP
          Wireguard
          Proxy
```

```

OpenVPN
IPIP
TunnelSixInFour
IKE
Gre
EoIP
MapT
DsLite

```

History

Version	Description
2.00	The interface command has been introduced.

3.29.1 interface atf disable

Description Disable [ATF](#) for AP 2,4 GHz and 5 GHz. By default, the setting is disabled.

Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type WiFiMaster

Synopsis (config-if)> **atf disable**

(config-if)> **no atf disable**

Example

```
(config-if)> atf disable
Network::Interface::Rtx::WifiMaster: "WifiMaster1": Airtime ►
Fairness disabled.
```

```
(config-if)> no atf disable
Network::Interface::Rtx::WifiMaster: "WifiMaster1": Airtime ►
Fairness enabled.
```

History

Version	Description
3.02	The interface atf disable command has been introduced.

3.29.2 interface atf inbound

Description Enable [ATF](#) for transferring inbound packets only for AP 2,4 GHz and 5 GHz. By default, the setting is disabled.

Command with **no** prefix disables the setting.

Prefix no Yes**Change settings** Yes**Multiple input** No**Interface type** WiFiMaster

Synopsis

```
(config-if)> atf inbound
```

```
(config-if)> no atf inbound
```

Example

```
(config-if)> atf inbound
Network::Interface::Rtx::WifiMaster: "WifiMaster0": Airtime ►
Fairness inbound is set.
```

```
(config-if)> atf inbound
Network::Interface::Rtx::WifiMaster: "WifiMaster1": Airtime ►
Fairness inbound is set.
```

```
(config-if)> no atf inbound
Network::Interface::Rtx::WifiMaster: "WifiMaster1": Airtime ►
Fairness inbound is unset.
```

History

Version	Description
3.02	The interface atf inbound command has been introduced.

3.29.3 interface authentication chap

Description Enable [CHAP](#) authentication support.
Command with **no** prefix disables [CHAP](#).

Prefix no Yes**Change settings** Yes**Multiple input** No**Interface type** Secure

Synopsis

```
(config-if)> authentication chap
```

```
(config-if)> no authentication chap
```

Example

```
(config-if)> authentication chap
Network::Interface::Supplicant: "PPTP0": added authentication: ►
CHAP.
```

```
(config-if)> no authentication chap
Network::Interface::Supplicant: "PPTP0": removed authentication: ►
CHAP.
```

History

Version	Description
2.00	The interface authentication chap command has been introduced.

3.29.4 interface authentication eap-md5

Description Enable EAP-MD5 authentication support.
Command with **no** prefix disables EAP-MD5.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
(config-if)> authentication eap-md5
(config-if)> no authentication eap-md5
```

Example

```
(config-if)> authentication eap-md5
Network::Interface::Ethernet: "GigabitEthernet1": configured ►
authentication: EAP-MD5.

(config-if)> no authentication eap-md5
Network::Interface::Supplicant: "GigabitEthernet1": removed ►
authentication: EAP-MD5.
```

History

Version	Description
2.00	The interface authentication eap-md5 command has been introduced.

3.29.5 interface authentication eap-mschapv2

Description Enable EAP-MSCHAPv2 authentication support.
Command with **no** prefix disables EAP-MSCHAPv2, MS-CHAPv2.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type	Secure				
Synopsis	<pre>(config-if)> authentication eap-mschapv2</pre> <pre>(config-if)> no authentication eap-mschapv2</pre>				
Example	<pre>(config-if)> authentication eap-mschapv2</pre> <pre>Network::Interface::Supplicant: "IKE0": authentication is ►</pre> <pre>unchanged.</pre> <pre>(config-if)> no authentication eap-mschapv2</pre> <pre>Network::Interface::Supplicant: "IKE0": removed authentication: ►</pre> <pre>EAP-MSCHAPv2, MS-CHAPv2.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>3.05</td> <td>The interface authentication eap-mschapv2 command has been introduced.</td> </tr> </tbody> </table>	Version	Description	3.05	The interface authentication eap-mschapv2 command has been introduced.
Version	Description				
3.05	The interface authentication eap-mschapv2 command has been introduced.				

3.29.6 interface authentication eap-ttls

Description	<p>Enable EAP-TTLS authentication support.</p> <p>Command with no prefix disables EAP-TTLS.</p>				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Interface type	Secure				
Synopsis	<pre>(config-if)> authentication eap-ttls</pre> <pre>(config-if)> no authentication eap-ttls</pre>				
Example	<pre>(config-if)> authentication eap-ttls</pre> <pre>Network::Interface::Ethernet: "GigabitEthernet1": configured ►</pre> <pre>authentication: EAP-TTLS.</pre> <pre>(config-if)> no authentication eap-ttls</pre> <pre>Network::Interface::Supplicant: "GigabitEthernet1": removed ►</pre> <pre>authentication: EAP-TTLS.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.00</td> <td>The interface authentication eap-ttls command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.00	The interface authentication eap-ttls command has been introduced.
Version	Description				
2.00	The interface authentication eap-ttls command has been introduced.				

3.29.7 interface authentication identity

Description Specify user name for device authentication on the remote system. Equally often used on PPTP, PPPoE, L2TP and Proxy connections, as well as for UsbQmi interfaces.

Command with **no** prefix deletes the previously specified user name.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
(config-if)> authentication identity <identity>
(config-if)> no authentication identity
```

Arguments

Argument	Value	Description
identity	<i>String</i>	User name for authentication.

Example

```
(config-if)> authentication identity mylogin
Network::Interface::Supplicant: "PPTP0": identity saved.
```

```
(config-if)> no authentication identity
Network::Interface::Supplicant: "PPTP0": identity cleared.
```

History

Version	Description
2.00	The interface authentication identity command has been introduced.

3.29.8 interface authentication mschap

Description Enable MS-CHAP authentication support.

Command with **no** prefix disables MS-CHAP.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
(config-if)> authentication mschap
```

```
(config-if)> no authentication mschap
```

Example

```
(config-if)> authentication mschap
Network::Interface::Supplicant: "PPTP0": added authentication: ►
MS-CHAP.
```

```
(config-if)> no authentication mschap
Network::Interface::Supplicant: "PPTP0": removed authentication: ►
MS-CHAP.
```

History

Version	Description
2.00	The interface authentication mschap command has been introduced.

3.29.9 interface authentication mschap-v2

Description

Enable MS-CHAPv2 authentication support.

Command with **no** prefix disables MS-CHAPv2.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Secure

Synopsis

```
(config-if)> authentication mschap-v2
```

```
(config-if)> no authentication mschap-v2
```

Example

```
(config-if)> authentication mschap-v2
Network::Interface::Supplicant: "PPTP0": authentication is ►
unchanged.
```

```
(config-if)> no authentication mschap-v2
Network::Interface::Supplicant: "PPTP0": removed authentication: ►
MS-CHAPv2.
```

History

Version	Description
2.00	The interface authentication mschap-v2 command has been introduced.

3.29.10 interface authentication pap

Description

Enable *PAP* authentication support.

Command with **no** prefix disables [PAP](#).

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
(config-if)> authentication pap
(config-if)> no authentication pap
```

Example

```
(config-if)> authentication pap
Network::Interface::Supplicant: "PPTP0": added authentication: ►
PAP.
```

```
(config-if)> no authentication pap
Network::Interface::Supplicant: "PPTP0": removed authentication: ►
PAP.
```

History

Version	Description
2.00	The interface authentication pap command has been introduced.

3.29.11 interface authentication password

Description Specify password for device authentication on the remote system. Equally often used on PPTP, PPPoE, L2TP and Proxy connections.

Command with **no** prefix deletes the password.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
(config-if)> authentication password <password>
(config-if)> no authentication password
```

Arguments

Argument	Value	Description
password	<i>String</i>	Password for authentication.

Example

```
(config-if)> authentication password Aihoi2cha1
Network::Interface::Supplicant: "PPTP0": password saved.
```



```
(config-if)> no authentication password
Network::Interface::Supplicant: "PPTP0": password cleared.
```

History

Version	Description
2.00	The interface authentication password command has been introduced.

3.29.12 interface authentication peap

Description Enable *EAP-PEAP* authentication support.

Command with **no** prefix disables *EAP-PEAP*.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
(config-if)> authentication peap
(config-if)> no authentication peap
```

Example

```
(config-if)> authentication peap
Network::Interface::Ethernet: "WifiMaster1/AccessPoint0": ►
configured authentication: PEAP.
```

```
(config-if)> no authentication peap
Network::Interface::Supplicant: "WifiMaster1/AccessPoint0": ►
removed authentication: PEAP.
```

History

Version	Description
2.03	The interface authentication peap command has been introduced.

3.29.13 interface authentication shared

Description Enable authentication with a *shared key*. This mode is used only in conjunction with *WEP* encryption. *Shared keys* are specified by **interface encryption key** command.

Command with **no** prefix turns authentication to open mode.

Prefix no Yes

Change settings Yes

Multiple input No**Interface type** WiFi

Synopsis

```
(config-if)> authentication shared
(config-if)> no authentication shared
```

Example

```
(config-if)> authentication shared
Network::Interface::Rtx::AccessPoint: "WifiMaster1/AccessPoint0": ►
shared authentication mode enabled.

(config-if)> no authentication shared
Network::Interface::Rtx::AccessPoint: "WifiMaster1/AccessPoint0": ►
shared authentication mode disabled.
```

History

Version	Description
2.00	The interface authentication shared command has been introduced.

3.29.14 interface authentication wpa-psk

Description Specify the pre-agreed key for authentication via WPA-PSK protocol. It is possible to specify the key as a 256-bit hexadecimal number or as a string of ASCII-characters. In the second case, the string is used as a code phrase to generate the key (passphrase).

Command with **no** prefix removes setting.

Prefix no Yes**Change settings** Yes**Multiple input** No**Interface type** WiFi

Synopsis

```
(config-if)> authentication wpa-psk <psk>
(config-if)> no authentication wpa-psk
```

Arguments

Argument	Value	Description
psk	<i>String</i>	Pre-agreed key in the form of a 256-bit hexadecimal number, which consists of 64 hexadecimal digits, or in the form of ASCII string of 8 to 63 characters length.

Example

```
(config-if)> authentication wpa-psk Eethaich9z
Network::Interface::Wifi: "WifiMaster1/AccessPoint0": WPA PSK set.
```

```
(config-if)> no authentication wpa-psk
Network::Interface::Wifi: "WifiMaster1/AccessPoint0": WPA PSK ►
removed.
```

History

Version	Description
2.00	The interface authentication wpa-psk command has been introduced.

3.29.15 interface auto-ssid

Description Generate a custom wireless network name (SSID) based on the router's MAC address.

Prefix no No

Change settings Yes

Multiple input No

Interface type WifiMaster

Synopsis

```
(config-if)> auto-ssid <template> <prefix>
```

Arguments

Argument	Value	Description
template	mac4	Template name — the last 4 or 6 digits of the MAC address to be added to the prefix.
	mac6	
prefix	<i>String</i>	Custom string at the user's choice.

Example

```
(config-if)> auto-ssid mac4 12313213
Network::Interface::AccessPoint: "WifiMaster0/AccessPoint0": ►
generated SSID "12313213207E".
```

```
(config-if)> auto-ssid mac6 12313213
Network::Interface::AccessPoint: "WifiMaster0/AccessPoint0": ►
generated SSID "1231321369207E".
```

History

Version	Description
3.08	The interface auto-ssid command has been introduced.

3.29.16 interface backhaul

Description Enable support of [VLAN](#) for wireless connection between routers Keenetic in the trunk mode. By default, setting is disabled.

Command with **no** prefix disables the setting.

Prefix no Yes**Change settings** Yes**Multiple input** No**Interface type** WiFiMaster

Synopsis

```
(config-if)> backhaul
(config-if)> no backhaul
```

Example

```
(config-if)> backhaul
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint1": ►
backhaul mode enabled.
```

```
(config-if)> no backhaul
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint1": ►
backhaul mode disabled.
```

History

Version	Description
3.02	The interface backhaul command has been introduced.

3.29.17 interface band-steering

Description Enable *Band Steering* for AP 5 GHz. By default, the setting is enabled.

For correct *Band Steering* operation it is necessary to fulfill the following conditions:

- access points 2,4 GHz and 5 GHz are enabled both
- they have the same SSID's
- they have the same security settings (encryption type, key value, etc.)

Command with **no** prefix disables the *Band Steering*.

Prefix no Yes**Change settings** Yes**Multiple input** No**Interface type** WiFiMaster

Synopsis

```
(config-if)> band-steering
(config-if)> no band-steering
```

Example

```
(config-if)> band-steering
Network::Interface::Rtx::WifiMaster: "WifiMaster1": band steering ►
enabled.
```

```
(config-if)> no band-steering
Network::Interface::Rtx::WifiMaster: "WifiMaster1": band steering ►
disabled.
```

History

Version	Description
2.09	The interface band-steering command has been introduced.

3.29.18 interface band-steering preference

Description Set the band to give a preference in *Band Steering* technology. By default, the value is not defined.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type WiFiMaster

Synopsis

```
(config-if)> band-steering preference <band>
(config-if)> no band-steering preference
```

Arguments

Argument	Value	Description
band	2	2,4 GHz band.
	5	5 GHz band.

Example

```
(config-if)> band-steering preference 5
Network::Interface::Rtx::WifiMaster: "WifiMaster1": band steering ►
preference is 5 GHz.
```

```
(config-if)> no band-steering preference
Network::Interface::Rtx::WifiMaster: "WifiMaster1": band steering ►
preference disabled.
```

History

Version	Description
2.09	The interface band-steering preference command has been introduced.

3.29.19 interface beamforming explicit

Description Enable explicit *Beamforming* (eBF) for AP 5 GHz and AP 2.4 GHz. The feature can be used for 802.11ac clients only and is incompatible with other standards. By default, the setting is enabled.

Command with **no** prefix disables the explicit *Beamforming*.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type WiFiMaster

Synopsis

```
(config-if)> beamforming explicit [mu-mimo]
(config-if)> no beamforming explicit
```

Arguments

Argument	Value	Description
mu-mimo	<i>Keyword</i>	Control MU-MIMO flags for explicit Beamforming. Enable control of data flow for multiple users.

Example

```
(config-if)> beamforming explicit
Network::Interface::Rtx::WifiMaster: "WifiMaster1": explicit ►
beamforming and SU-MIMO enabled.
```

```
(config-if)> beamforming explicit mu-mimo
Network::Interface::Rtx::WifiMaster: "WifiMaster1": explicit ►
beamforming and MU-MIMO enabled.
```

```
(config-if)> no beamforming explicit
Network::Interface::Rtx::WifiMaster: "WifiMaster1": explicit ►
beamforming and MIMO disabled.
```

History

Version	Description
2.10	The interface beamforming explicit command has been introduced.

3.29.20 interface beamforming implicit

Description Enable implicit *Beamforming* (iBF) for AP 5 GHz and AP 2.4 GHz. By default, the setting is disabled.

Command with **no** prefix disables the implicit *Beamforming*.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type WiFiMaster

Synopsis

```
(config-if)> beamforming implicit
(config-if)> no beamforming implicit
```

Example

```
(config-if)> beamforming implicit
Network::Interface::Rtx::WifiMaster: "WifiMaster1": implicit ►
beamforming enabled.

(config-if)> no beamforming implicit
Network::Interface::Rtx::WifiMaster: "WifiMaster1": implicit ►
beamforming disabled.
```

History

Version	Description
2.10	The interface beamforming implicit command has been introduced.

3.29.21 interface ccp

Description Enable [CCP](#) support during establishing connection.
Command with **no** prefix disables [CCP](#).

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPP

Synopsis

```
(config-if)> ccp
(config-if)> no ccp
```

Example

```
(config-if)> ccp
CCP enabled.

(config-if)> no ccp
CCP disabled.
```

History

Version	Description
2.00	The interface ccp command has been introduced.

3.29.22 interface channel

Description Set the radio channel (broadcasting frequency band) for wireless interfaces. Wi-Fi interfaces take integers from 1 to 14 (frequency range from 2.412 GHz to 2.484 GHz) and from 36 to 165 (frequency range from 5.180 GHz to 5.825 GHz) as channel numbers. By default, auto value is used.

Command with **no** prefix resets to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Radio

Synopsis

```
(config-if)> channel <channel>
(config-if)> no channel
```

Arguments

Argument	Value	Description
channel	number	Number of radio channel.
	auto	Radio channel number is detected automatically.

Example

```
(config-if)> channel 8
Network::Interface::Rtx::WifiMaster: "WifiMaster0": channel set ►
to 8.
```

```
(config-if)> channel 36
Network::Interface::Rtx::WifiMaster: "WifiMaster1": channel set ►
to 36.
```

```
(config-if)> no channel
Network::Interface::Rtx::WifiMaster: "WifiMaster0": auto channel ►
mode set.
```

History

Version	Description
2.00	The interface channel command has been introduced.

3.29.23 interface channel auto-rescan

Description Set a schedule for radio channel automatic scanning. By default, the setting is disabled.

Command with **no** prefix disables the setting.

Prefix no Yes

Change settings	Yes
Multiple input	No
Interface type	Radio
Synopsis	<pre>(config-if)> channel auto-rescan [<hh>:<mm>]interval <interval></pre> <pre>(config-if)> no channel auto-rescan</pre>

Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td rowspan="4">interval</td> <td>1</td> <td rowspan="4">Rescan interval in hours.</td> </tr> <tr> <td>6</td> </tr> <tr> <td>12</td> </tr> <tr> <td>24</td> </tr> </tbody> </table>	Argument	Value	Description	interval	1	Rescan interval in hours.	6	12	24
Argument	Value	Description								
interval	1	Rescan interval in hours.								
	6									
	12									
	24									

Example	<pre>(config-if)> channel auto-rescan interval 1</pre> <pre>Network::Interface::Rtx::WifiMaster: "WifiMaster0": scheduled ▶ auto rescan, interval 1 hour.</pre> <pre>(config-if)> no channel auto-rescan</pre> <pre>Network::Interface::Rtx::WifiMaster: "WifiMaster0": auto rescan ▶ disabled.</pre>
----------------	---

History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.07</td> <td>The interface channel auto-rescan command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.07	The interface channel auto-rescan command has been introduced.
Version	Description				
2.07	The interface channel auto-rescan command has been introduced.				

3.29.24 interface channel width

Description	<p>Set the bandwidth for a specified channel. By default, 40-below for AP 2,4 GHz, 40-above/80 or 160 for AP 5 GHz value is used.</p> <p>Command with no prefix resets to default.</p>
Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	Radio
Synopsis	<pre>(config-if)> channel width <width></pre> <pre>(config-if)> no channel width</pre>

Arguments

Argument	Value	Description
width	20	Set bandwidth equal to 20 MHz.
	40-above	Expand the bandwidth up to 40 MHz using next channel.
	40-below	Expand the bandwidth up to 40 MHz using previous channel.
	40-above/80	Expand the bandwidth up to 40/80 MHz using next channel.
	40-below/80	Expand the bandwidth up to 40/80 MHz using previous channel.
	80-plus-80	Expand the bandwidth up to 80+80 MHz.
	160	Expand the bandwidth up 160 MHz.

Example

```
(config-if)> channel width 20
Network::Interface::Rtx::WifiMaster: "WifiMaster0": channel ►
bandwidth setting applied.
```

```
(config-if)> no channel width
Network::Interface::Rtx::WifiMaster: "WifiMaster0": channel ►
bandwidth settings reset to default.
```

History

Version	Description
2.04	The interface channel width command has been introduced.

3.29.25 interface chilli coaport

Description Set *UDP* port to which disconnect requests from the *RADIUS* client are sent. Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Chilli

Synopsis

```
(config-if)> chilli coaport <coaport>
```

```
(config-if)> no chilli coaport
```

Arguments

Argument	Value	Description
coaport	<i>Integer</i>	The <i>CoA</i> port number.

Example

```
(config-if)> chilli coaport 3940
Chilli::Interface: "Chilli0": coaport set to 3940.
```

```
(config-if)> no chilli coaport
Chilli::Interface: "Chilli0": coaport reset to default.
```

Version	Description
2.10	The interface chilli coaport command has been introduced.

3.29.26 interface chilli dhcpif

Description Assign Chilli interface to the system network interface.
Command with **no** prefix cancels the association.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Chilli

Synopsis

```
(config-if)> chilli dhcpif <dhcpif>
```

```
(config-if)> no chilli dhcpif
```

Argument	Value	Description
dhcpif	<i>Interface</i>	Full interface name or an alias.

Example

```
(config-if)> chilli dhcpif Bridge1
Chilli::Interface: "Chilli0": bound to Bridge1.
```

```
(config-if)> no chilli dhcpif
Chilli::Interface: "Chilli0": unbound.
```

Version	Description
2.10	The interface chilli dhcpif command has been introduced.

3.29.27 interface chilli dns

Description Set IP address of the DNS server.
Command with **no** prefix removes the setting.

Prefix no Yes**Change settings** Yes**Multiple input** No**Interface type** Chilli

Synopsis

```
(config-if)> chilli dns <dns1> [ <dns2> ]
```

```
(config-if)> no chilli dns
```

Arguments

Argument	Value	Description
dns1	<i>IP address</i>	Address of primary DNS server.
dns2	<i>IP address</i>	Address of secondary DNS server.

Example

```
(config-if)> chilli dns 8.8.8.8 1.1.1.1  
Chilli::Interface: "Chilli0": DNS servers set to 8.8.8.8, 1.1.1.1.
```

```
(config-if)> no chilli dns  
Chilli::Interface: "Chilli0": DNS servers reset to default.
```

History

Version	Description
2.10	The interface chilli dns command has been introduced.

3.29.28 interface chilli lease

Description Configure the lease time of the connected client IP addresses. By default, the value 3600 is used.

Command with **no** prefix resets setting to default.

Prefix no Yes**Change settings** Yes**Multiple input** No**Interface type** Chilli

Synopsis

```
(config-if)> chilli lease <lease>
```

```
(config-if)> no chilli lease
```

Arguments

Argument	Value	Description
lease	<i>Integer</i>	Lease time in seconds. The maximum value is 259200.

Example

```
(config-if)> chilli lease 1000
Chilli::Interface: "Chilli0": lease has been set 1000 seconds.

(config-if)> no chilli lease
Chilli::Interface: "Chilli0": lease has been reset to default ►
(3600 seconds).
```

Version	Description
2.11	The interface chilli lease command has been introduced.

3.29.29 interface chilli login

Description Configure authorization to connect to the [RADIUS](#) server.

Prefix no No

Change settings No

Multiple input No

Interface type Chilli

Synopsis

```
(config-if)> chilli login <mac> [ username <username> password <password> ]
```

Argument	Value	Description
mac	<i>MAC address</i>	MAC address for authentication.
username	<i>String</i>	Username for authentication.
password	<i>String</i>	The password for authentication.

Example

```
(config-if)> interface Chilli0 chilli login 00:01:02:03:04:05
Chilli::Interface: "Chilli0": sent login request for ►
00:01:02:03:04:05

(config-if)> interface Chilli0 chilli login 00:01:02:03:04:05 ►
username test password test
Chilli::Interface: "Chilli0": sent login request for ►
00:01:02:03:04:05
```

Version	Description
4.00	The interface chilli login command has been introduced.

3.29.30 interface chilli logout

Description Force the MAC address of the specified client to be disabled.

Prefix no	No
Change settings	No
Multiple input	No
Interface type	Chilli

Synopsis | (config-if)> **chilli logout** (*<mac>* | **all**)

Arguments

Argument	Value	Description
mac	MAC address	MAC address of the registered client.
all	Keyword	Disable all MAC addresses.

Example

```
(config-if)> chilli logout 64:a2:22:51:b4:11
```

```
(config-if)> chilli logout all
Chilli::Interface: "Chilli0": service restarted.
```

History

Version	Description
2.10	The interface chilli logout command has been introduced.

3.29.31 interface chilli macauth

Description Enable user authentication option based on MAC address detection only.
Command with **no** prefix disables the setting.

Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	Chilli

Synopsis | (config-if)> **chilli macauth**
| (config-if)> **no chilli macauth**

Example

```
(config-if)> chilli macauth
Chilli::Interface: "Chilli0": macauth set to "".
```

```
(config-if)> no chilli macauth
Chilli::Interface: "Chilli0": macauth cleared.
```

History	Version	Description
	2.10	The interface chilli macauth command has been introduced.

3.29.32 interface chilli macpasswd

Description Set the password for MAC address authentication.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Chilli

Synopsis

```
(config-if)> chilli macpasswd <macpasswd>
```

```
(config-if)> no chilli macpasswd
```

Arguments	Argument	Value	Description
	macpasswd	String	The user password.

Example

```
(config-if)> chilli macpasswd 1234567890
```

```
Chilli::Interface: "Chilli0": macpasswd set to "1234567890".
```

```
(config-if)> no chilli macpasswd
```

```
Chilli::Interface: "Chilli0": macpasswd cleared.
```

History	Version	Description
	2.11	The interface chilli macpasswd command has been introduced.

3.29.33 interface chilli nasip

Description Set *RADIUS* option NAS IP Address. Allows you to configure and use an arbitrary IP address.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Chilli

Synopsis

```
(config-if)> chilli nasip (<address> | interface <wan> | auto)
```

```
(config-if)> no chilli nasip
```

Arguments

Argument	Value	Description
address	<i>IP address</i>	Specific IP address of the server.
wan	<i>Interface</i>	IP address from the specified WAN interface.
auto	<i>Keyword</i>	IP address from the current WAN interface.

Example

```
(config-if)> chilli nasip 95.213.215.187  
Chilli::Interface: "Chilli0": NAS IP address set to ►  
"95.213.215.187".
```

```
(config-if)> chilli nasip interface ISP  
Chilli::Interface: "Chilli0": NAS IP interface set to ►  
"GigabitEthernet1".
```

```
(config-if)> chilli nasip auto  
Chilli::Interface: "Chilli0": NAS IP address set to auto.
```

```
(config-if)> no chilli nasip  
Chilli::Interface: "Chilli0": NAS IP address cleared.
```

History

Version	Description
2.10	The interface chilli nasip command has been introduced.

3.29.34 interface chilli nasmac

Description Set MAC address for *RADIUS* Called-Station-ID attribute. By default, MAC address of the guest network is used.

Command with **no** prefix resets setting to default.

Prefix no Yes**Change settings** Yes**Multiple input** No**Interface type** Chilli

Synopsis

```
(config-if)> chilli nasmac <mac>
```

```
(config-if)> no chilli nasmac
```


Argument	Value	Description
mac	<i>MAC address</i>	New MAC address for RADIUS Called-Station-ID.

Example

```
(config-if)> chilli nasmac 50:ff:20:00:1e:86
Chilli::Interface: "Chilli0": NAS MAC address set to ►
"50:ff:20:00:1e:86".
```

```
(config-if)> no chilli nasmac
Chilli::Interface: "Chilli0": NAS MAC address cleared.
```

Version	Description
2.11	The interface chilli nasmac command has been introduced.

3.29.35 interface chilli profile

Description Assign Chilli profile to the Chilli interface.
Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Chilli

Synopsis

```
(config-if)> chilli profile <profile>
```

```
(config-if)> no chilli profile
```

Argument	Value	Description
profile	<i>String</i>	<i>RADIUS</i> server profile name.

Example

```
(config-if)> chilli profile Wi-Fi_SYSTEM
Chilli::Interface: "Chilli0": assigned profile: Wi-Fi.
```

```
(config-if)> no chilli profile
Chilli::Interface: "Chilli0": profile cleared.
```

Version	Description
2.10	The interface chilli profile command has been introduced.

3.29.36 interface chilli radius

Description Add the *RADIUS* server addresses.
Command with **no** prefix removes the servers.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Chilli

Synopsis

```
(config-if)> chilli radius <server1> [ <server2> ]
(config-if)> no chilli radius
```

Arguments

Argument	Value	Description
server1	<i>String</i>	Address of first <i>RADIUS</i> server.
server2	<i>String</i>	Address of second <i>RADIUS</i> server.

Example

```
(config-if)> chilli radius radius.example.net radius2.example.net
Chilli::Interface: "Chilli0": RADIUS servers set to ►
radius.example.net, radius2.example.net.
```

```
(config-if)> no chilli radius
Chilli::Interface: "Chilli0": RADIUS servers cleared.
```

History

Version	Description
2.10	The interface chilli radius command has been introduced.

3.29.37 interface chilli radiusacctport

Description Set accounting UDP-port of *RADIUS* server. By default, value 1813 is used.
Command with **no** prefix resets port to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Chilli

Synopsis

```
(config-if)> chilli radiusacctport <radiusacctport>
```

```
(config-if)> no chilli radiusacctport
```

Arguments

Argument	Value	Description
radiusacctport	<i>String</i>	The port number.

Example

```
(config-if)> chilli radiusacctport 1819
Chilli::Interface: "Chilli0": radiusacctport set to 1819.
```

```
(config-if)> no chilli radiusacctport
Chilli::Interface: "Chilli0": radiusacctport reset to default.
```

History

Version	Description
3.06	The interface chilli radiusacctport command has been introduced.

3.29.38 interface chilli radiusauthport

Description

Set authentication UDP-port of *RADIUS* server. By default, value 1812 is used.
Command with **no** prefix resets port to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Chilli

Synopsis

```
(config-if)> chilli radiusauthport <radiusauthport>
```

```
(config-if)> no chilli radiusauthport
```

Arguments

Argument	Value	Description
radiusauthport	<i>String</i>	The port number.

Example

```
(config-if)> chilli radiusauthport 1820
Chilli::Interface: "Chilli0": radiusauthport set to 1820.
```

```
(config-if)> no chilli radiusauthport
Chilli::Interface: "Chilli0": radiusauthport reset to default.
```

History

Version	Description
3.06	The interface chilli radiusauthport command has been introduced.

3.29.39 interface chilli radiuslocationid

Description Set location identifier of *RADIUS* server. It should be in the format isocc=, cc=, ac=, network=.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Chilli

Synopsis

```
(config-if)> chilli radiuslocationid <radiuslocationid>
(config-if)> no chilli radiuslocationid
```

Arguments

Argument	Value	Description
radiuslocationid	<i>String</i>	Location identifier value.

Example

```
(config-if)> chilli radiuslocationid ►
isocc=,cc=,ac=,network=WiFiSYSTEM,
Chilli::Interface: "Chilli0": radiuslocationid set to ►
"isocc=,cc=,ac=,network=WiFiSYSTEM,".
```

```
(config-if)> no chilli radiuslocationid
Chilli::Interface: "Chilli0": radiuslocationid cleared.
```

History

Version	Description
2.10	The interface chilli radiuslocationid command has been introduced.

3.29.40 interface chilli radiuslocationname

Description Set location name of *RADIUS* server.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Chilli

Synopsis

```
(config-if)> chilli radiuslocationname <radiuslocationname>
```

```
(config-if)> no chilli radiuslocationname
```

Arguments

Argument	Value	Description
radiuslocationname	<i>String</i>	Location name.

Example

```
(config-if)> chilli radiuslocationname MyHotSpot
Chilli::Interface: "Chilli0": radiuslocationname set to ►
"MyHotSpot".
```

```
(config-if)> no chilli radiuslocationname
Chilli::Interface: "Chilli0": radiuslocationname cleared.
```

History

Version	Description
2.10	The interface chilli radiuslocationname command has been introduced.

3.29.41 interface chilli radiusnasid

Description

Set Network Access Server identifier.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Chilli

Synopsis

```
(config-if)> chilli radiusnasid <radiusnasid>
```

```
(config-if)> no chilli radiusnasid
```

Arguments

Argument	Value	Description
radiusnasid	<i>String</i>	NAS identifier.

Example

```
(config-if)> chilli radiusnasid keeneticru_12
Chilli::Interface: "Chilli0": radiusnasid set to "keeneticru_12".
```

```
(config-if)> no chilli radiusnasid
Chilli::Interface: "Chilli0": radiusnasid cleared.
```

History

Version	Description
2.10	The interface chilli radiusnasid command has been introduced.

3.29.42 interface chilli radiussecret

Description Set shared secret for both *RADIUS* servers.
Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Chilli

Synopsis

```
(config-if)> chilli radiussecret <radiussecret>
(config-if)> no chilli radiussecret
```

Argument	Value	Description
radiussecret	<i>String</i>	A secret value.

Example

```
(config-if)> chilli radiussecret 12df34fd
Chilli::Interface: "Chilli0": radiussecret set to "12df34fd".
```

```
(config-if)> no chilli radiussecret
Chilli::Interface: "Chilli0": radiussecret cleared.
```

Version	Description
2.10	The interface chilli radiussecret command has been introduced.

3.29.43 interface chilli uamallowed

Description Specify the resource to which the client has access without first authenticating.
Command with **no** prefix removes the resource from the list. If you use no argument, the entire list of resources will be cleared.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type Chilli

Synopsis

```
(config-if)> chilli uamallowed <uamallowed>
(config-if)> no chilli uamallowed [ <uamallowed> ]
```

Argument	Value	Description
uamallowed	<i>String</i>	IP-address, URL or subnetwork.

Example

```
(config-if)> chilli uamallowed 188.166.114.0/24
Chilli::Interface: "Chilli0": "188.166.114.0/24" added to walled ►
garden.
```

```
(config-if)> chilli uamallowed www.example.link
Chilli::Interface: "Chilli0": "www.example.link" added to walled ►
garden.
```

```
(config-if)> no chilli uamallowed 188.166.114.0/24
Chilli::Interface: "Chilli0": "188.166.114.0/24" removed from ►
walled garden.
```

```
(config-if)> no chilli uamallowed www.example.link
Chilli::Interface: "Chilli0": "www.example.link" removed from ►
walled garden.
```

```
(config-if)> no chilli uamallowed
Chilli::Interface: "Chilli0": walled garden cleared.
```

History

Version	Description
2.10	The interface chilli uamallowed command has been introduced.

3.29.44 interface chilli uamdomain

Description

Specify the domain name to which the client has access without first authenticating.

Command with **no** prefix removes the domain name from the list. If you use no argument, the entire list of domain names will be cleared.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Interface type

Chilli

Synopsis

```
(config-if)> chilli uamdomain <uamdomain>
```

```
(config-if)> no chilli uamdomain [ <uamdomain> ]
```

Arguments

Argument	Value	Description
uamdomain	<i>String</i>	Domain name of remote host.

Example

```
(config-if)> chilli uamdomain example.net
Chilli::Interface: "Chilli0": "example.net" added to walled ►
garden.
```

```
(config-if)> no chilli uamdomain example.net
Chilli::Interface: "Chilli0": "example.net" removed from walled ►
garden.
```

```
(config-if)> no chilli uamdomain
Chilli::Interface: "Chilli0": walled garden cleared.
```

History

Version	Description
2.10	The interface chilli uamdomain command has been introduced.

3.29.45 interface chilli uamhomepage

Description

Set URL of homepage to redirect unauthenticated users to.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Chilli

Synopsis

```
(config-if)> chilli uamhomepage <uamhomepage>
```

```
(config-if)> no chilli uamhomepage
```

Arguments

Argument	Value	Description
uamhomepage	<i>String</i>	Custom URL.

Example

```
(config-if)> chilli uamhomepage http://192.168.2.1/welcome.html
Chilli::Interface: "Chilli0": uamhomepage set to ►
"http://192.168.2.1/welcome.html".
```

```
(config-if)> no chilli uamhomepage
Chilli::Interface: "Chilli0": uamhomepage cleared.
```

History

Version	Description
2.10	The interface chilli uamhomepage command has been introduced.

3.29.46 interface chilli uamport

Description Set *TCP* port to bind to for authenticating clients. By default, value 3990 is used.

Command with **no** prefix resets port to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Chilli

Synopsis

```
(config-if)> chilli uamport <uamport>
(config-if)> no chilli uamport
```

Arguments

Argument	Value	Description
uamport	<i>Integer</i>	The port number.

Example

```
(config-if)> chilli uamport 3922
Chilli::Interface: "Chilli0": uamport set to 3922.
```

```
(config-if)> no chilli uamport
Chilli::Interface: "Chilli0": uamport reset to default.
```

History

Version	Description
2.10	The interface chilli uamport command has been introduced.

3.29.47 interface chilli uamsecret

Description Set shared secret between *UAM* server and Chilli. The *UAM* secret is used to hash the challenge before password computation.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Chilli

Synopsis

```
(config-if)> chilli uamsecret <uamsecret>
```

```
(config-if)> no chilli uamsecret
```

Arguments

Argument	Value	Description
uamsecret	<i>String</i>	A secret value.

Example

```
(config-if)> chilli uamsecret 12df34fd
Chilli::Interface: "Chilli0": uamsecret set to "12df34fd".
```

```
(config-if)> no chilli uamsecret
Chilli::Interface: "Chilli0": uamsecret set to "".
```

History

Version	Description
2.10	The interface chilli uamsecret command has been introduced.

3.29.48 interface chilli uamserver

Description

Set URL of web server to use for authenticating clients.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Chilli

Synopsis

```
(config-if)> chilli uamserver <uamserver>
```

```
(config-if)> no chilli uamserver
```

Arguments

Argument	Value	Description
uamserver	<i>String</i>	Custom URL of web server.

Example

```
(config-if)> chilli uamserver ►
https://auth.example.net/hotspotlogin
Chilli::Interface: "Chilli0": uamserver set to ►
"https://auth.example.net/hotspotlogin".
```

```
(config-if)> no chilli uamserver
Chilli::Interface: "Chilli0": uamserver cleared.
```

History

Version	Description
2.10	The interface chilli uamserver command has been introduced.

3.29.49 interface compatibility

Description

Set the standard for wireless communications, with which a given wireless adapter (the interface) must be compatible. For Wi-Fi interfaces, the compatibility is set by string of Latin letters A, B, G, N, that denote extensions to the standard IEEE 802.11. For example, the presence 'N' in the compatibility line will imply that the given adapter will be able to deal with the 802.11n-compatible devices via radio channel. The set of admissible compatibility lines is defined by the hardware capabilities of a particular adapter and provisions of the relevant additions to the IEEE 802.11 standard.

By default, "BGN" value is used for 2.4 GHz, "AN" — for 5 GHz.

Prefix no

No

Change settings

Yes

Multiple input

No

Interface type

Radio

Synopsis

```
(config-if)> compatibility <annex>
```

Arguments

Argument	Value	Description
annex	B, G, N	For 2,4 GHz.
	A, N	For 5 GHz.
	A, N+AC	Additional IEEE standard.

Example

```
(config-if)> compatibility N  
Network::Interface::Rtx::WifiMaster: "WifiMaster0": PHY mode set.
```

```
(config-if)> compatibility N+AC  
Network::Interface::Rtx::WifiMaster: "WifiMaster1": PHY mode set.
```

History

Version	Description
2.00	The interface compatibility command has been introduced.
2.06	New standard AC was added.

3.29.50 interface connect

Description

Start the process of connecting to a remote node.

Command with **no** prefix terminates the connection.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPP, IP

Synopsis

```
(config-if)> connect [ via <via> ]
(config-if)> no connect
```

Argument	Value	Description
via	<i>Interface</i>	Interface through which remote node is accessed. For PPPoE this option is mandatory.

Example

```
(config-if)> connect via ISP
(config-if)> no connect
```

Version	Description
2.00	The interface connect command has been introduced.

3.29.51 interface country-code

Description Assign to the interface a literal country code, which influences the set of radio channels. By default, RU value is used.

Prefix no No

Change settings Yes

Multiple input No

Interface type Radio

Synopsis

```
(config-if)> country-code <code>
```

Argument	Value	Description
code	<i>String</i>	The country code.

Example

```
(config-if)> country-code RU
Network::Interface::Rtx::WifiMaster: "WifiMaster0": country code ►
set.
```

History	Version	Description
	2.00	The interface country-code command has been introduced.

3.29.52 interface debug

Description Enable debug mode of *PPP* connection. Detailed info about connection progress is saved to the system log. By default, setting is disabled.

Command with **no** prefix disables the debug mode.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPP

Synopsis

```
(config-if)> debug
(config-if)> no debug
```

Example

```
(config-if)> debug
Network::Interface::Base: Debug enabled.
```

```
(config-if)> no debug
Network::Interface::Base: Debug disabled.
```

History	Version	Description
	2.00	The interface debug command has been introduced.

3.29.53 interface description

Description Assign arbitrary description to the specified network interface.

Command with **no** prefix deletes the description.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-if)> description <description>
(config-if)> no description
```

Arguments

Argument	Value	Description
description	<i>String</i>	Arbitrary description of the interface.

Example

```
(config-if)> description MYHOME
Network::Interface::Base: "Bridge0": description saved.
```

```
(config-if)> no description
Network::Interface::Base: "Bridge0": description saved.
```

History

Version	Description
2.00	The interface description command has been introduced.

3.29.54 interface down

Description

Disable the network interface and persist the state “down” to the settings.

Command with **no** prefix enables the network interface and deletes “down” from settings.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-if)> down
```

```
(config-if)> no down
```

Example

```
(config-if)> down
Network::Interface::Base: "GigabitEthernet0/2": interface is down.
```

```
(config-if)> up
Network::Interface::Base: "GigabitEthernet0/2": interface is up.
```

History

Version	Description
2.00	The interface down command has been introduced.

3.29.55 interface downlink-mumimo

Description

Enable the downlink (explicit) *Beamforming* (eBF) MU-MIMO. The feature can be used for 802.11ac clients only and is incompatible with other standards. The setting cannot be enabled unless **interface beamforming explicit** is set.

Command with **no** prefix disables the feature.

Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	WiFiMaster

Synopsis

```
(config-if)> downlink-mumimo
(config-if)> no downlink-mumimo
```

Example

```
(config-if)> downlink-mumimo
Network::Interface::Rtx::WifiMaster: "WifiMaster1": 11ac/ax ►
downlink-mumimo enabled.

(config-if)> no downlink-mumimo
Network::Interface::Rtx::WifiMaster: "WifiMaster1": 11ac/ax ►
downlink-mumimo disabled.
```

History

Version	Description
3.05	The interface downlink-mumimo command has been introduced.

3.29.56 interface duplex

Description Set the duplex mode of the Ethernet port. By default, auto value is set.
Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

```
(config-if)> duplex (full | half | auto)
(config-if)> no duplex
```

Arguments

Argument	Value	Description
mode	full	Full duplex protocol.
	half	Half duplex protocol.
	auto	Auto duplex protocol.

Example

```
(config-if)> duplex full
Network::Interface::Ethernet: "GigabitEthernet0/1": duplex set ►
to "full".
```

```
(config-if)> no duplex
Network::Interface::Ethernet: "GigabitEthernet0/1": duplex reset ►
to default.
```

History

Version	Description
2.06.B.1	The interface duplex command has been introduced.

3.29.57 interface dyndns profile

Description Assign the DynDns profile to the interface. Profile must be created and customized with [dyndns profile](#) commands before execution.

Command with **no** prefix unbinds the profile.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-if)> dyndns profile <profile>
```

```
(config-if)> no dyndns profile
```

Arguments

Argument	Value	Description
profile	<i>String</i>	The name of DynDns profile.

Example

```
(config-if)> dyndns profile TEST
DynDns::Profile: Interface set.
```

```
(config-if)> no dyndns profile TEST
DynDns::Profile: Interface removed.
```

History

Version	Description
2.02	The interface dyndns profile command has been introduced.

3.29.58 interface dyndns update

Description Update IP address for DynDns manually. By default command works in accordance with the policy of the DynDns service provider, that is not allows

to update too often. Using the keyword `force` allows you to update excluding policy of the service provider.

Prefix no	No
Change settings	Yes
Multiple input	No

Synopsis | (config-if)> **dyndns update** [**force**]

Arguments

Argument	Value	Description
force	<i>Keyword</i>	Not take into account the update rate recommended by service provider.

Example

```
(config-if)> dyndns update
```

History

Version	Description
2.00	The interface dyndns update command has been introduced.

3.29.59 interface encryption anonymous-dh

Description Enable Anonymous DH for SSTP servers without a certificate.
Command with **no** prefix disables Anonymous DH.

Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	SSTP

Synopsis | (config-if)> **encryption anonymous-dh**
| (config-if)> **no encryption anonymous-dh**

Example

```
(config-if)> encryption anonymous-dh
Network::Interface::Sstp: "SSTP0": anonymous DH TLS is enabled.
```

```
(config-if)> no encryption anonymous-dh
Network::Interface::Sstp: "SSTP0": anonymous DH TLS is disabled.
```

History

Version	Description
2.13	The interface encryption anonymous-dh command has been introduced.

3.29.60 interface encryption disable

Description Disable encryption on the wireless interface.

Prefix no No

Change settings Yes

Multiple input No

Interface type WiFi

Synopsis `(config-if)> encryption disable`

Example `(config-if)> encryption disable`
 Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ► wireless encryption disabled.

History

Version	Description
2.00	The interface encryption disable command has been introduced.

3.29.61 interface encryption enable

Description Enable encryption on the wireless interface. By default, [WEP](#) encryption is used.

Command with **no** prefix disables wireless interface encryption.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type WiFi

Synopsis `(config-if)> encryption enable`

`(config-if)> no encryption enable`

Example `(config-if)> encryption enable`
 Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ► wireless encryption enabled.

`(config-if)> no encryption enable`
 Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ► wireless encryption disabled.

History	Version	Description
	2.00	The interface encryption enable command has been introduced.

3.29.62 interface encryption key

Description Specify the [WEP](#) encryption keys. Depending on the bit, the key can be standard 64-bit [WEP](#) uses a 40 bit key (also known as WEP-40), or 128-bit [WEP](#) uses a 26 hexadecimal characters (13 characters ASCII). Overall, there can be 1 to 4 encryption keys, with one of them default key must be assigned.

Command with **no** prefix removes key.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type WiFi

Synopsis

```
(config-if)> encryption key <id> (<value> [default] | default)
(config-if)> no encryption key <id>
```

Arguments	Argument	Value	Description
	id	<i>Integer</i>	The key number. Overall, up to 4 keys could be specified.
	value	<i>String</i>	The key value as a hexadecimal number, consisting of 10 or 26 digits.
	default	<i>Keyword</i>	Indicates that this key will be used by default.

Example

```
(config-if)> encryption key 1 1231231234
Network::Interface::Wifi: "WifiMaster0/AccessPoint0": WEP key 1 ► set.
```

```
(config-if)> no encryption key 1
Network::Interface::Wifi: "WifiMaster0/AccessPoint0": WEP key 1 ► removed.
```

History	Version	Description
	2.00	The interface encryption key command has been introduced.

3.29.63 interface encryption mppe

Description Enable *MPPE* encryption support.
Command with **no** prefix disables *MPPE* encryption.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPTP

Synopsis

```
(config-if)> encryption mppe
(config-if)> no encryption mppe
```

Example

```
(config-if)> encryption mppe
MPPE enabled.
```

```
(config-if)> no encryption mppe
MPPE disabled.
```

History

Version	Description
2.00	The interface encryption mppe command has been introduced.

3.29.64 interface encryption owe

Description Enable *OWE* security algorithms on the wireless interface. By default, the setting is disabled.

Command with **no** prefix disables *OWE* support.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type WifiMaster

Synopsis

```
(config-if)> encryption owe
(config-if)> no encryption owe
```

Example

```
(config-if)> encryption owe
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ►
OWE algorithms enabled.
```

```
(config-if)> no encryption owe
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ►
OWE algorithms disabled.
```

History

Version	Description
3.00	The interface encryption owe command has been introduced.

3.29.65 interface encryption tkip hold-down

Description

Set the "countermeasure" timer value for *TKIP* when the joint use *WPA* and *WPA2* security algorithms on the wireless interface. By default, the value 60 is used.

Command with **no** prefix resets setting to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

WiFi

Synopsis

```
(config-if)> encryption tkip hold-down <hold-down>
```

```
(config-if)> no encryption tkip hold-down
```

Arguments

Argument	Value	Description
hold-down	<i>Integer</i>	Timer value in seconds. Can take values in the range from 0 to 60. If timer is set to 0, the setting is disabled.

Example

```
(config-if)> encryption tkip hold-down 10
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ►
hold-down interval is 10 sec.
```

```
(config-if)> no encryption tkip hold-down
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ►
hold-down interval is reset to default (60 sec.).
```

History

Version	Description
3.08	The interface encryption tkip hold-down command has been introduced.

3.29.66 interface encryption wpa

Description Enable [WPA](#) security algorithms on the wireless interface. Wireless interface can support the joint use of [WPA](#) and [WPA2](#), but supporting [WEP](#) automatically disables when any of the [WPA](#) is enabled.

Command with **no** prefix disables [WPA](#) support.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type WiFi

Synopsis

```
(config-if)> encryption wpa
(config-if)> no encryption wpa
```

Example

```
(config-if)> encryption wpa
WPA algorithms enabled.
```

History

Version	Description
2.00	The interface encryption wpa command has been introduced.

3.29.67 interface encryption wpa2

Description Enable [WPA2](#) (IEEE 802.11i, RSN) security algorithms on the wireless interface. Wireless interface can support the joint use of [WPA](#) and [WPA2](#), but supporting [WEP](#) automatically disables when any of the [WPA](#) is enabled.

Command with **no** prefix disables [WPA2](#) support.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type WiFi

Synopsis

```
(config-if)> encryption wpa2
(config-if)> no encryption wpa2
```

Example

```
(config-if)> encryption wpa2
WPA2 algorithms enabled.
```

History	Version	Description
	2.00	The interface encryption wpa2 command has been introduced.

3.29.68 interface encryption wpa3

Description Enable [WPA3](#) security algorithms on the wireless interface. Wireless interface can support the joint use of [WPA2](#) and [WPA3](#). By default, the setting is disabled.

Command with **no** prefix disables [WPA3](#) support.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type WiFi

Synopsis

```
(config-if)> encryption wpa3
(config-if)> no encryption wpa3
```

Example

```
(config-if)> encryption wpa3
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ►
WPA3 algorithms enabled.
```

```
(config-if)> no encryption wpa3
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ►
WPA3 algorithms disabled.
```

History	Version	Description
	3.00	The interface encryption wpa3 command has been introduced.

3.29.69 interface encryption wpa3 suite-b

Description Enable [WPA3](#) security algorithms to protect sensitive data Suite-B for [WPA Enterprise](#). By default, the feature is disabled.

Prefix no No

Change settings Yes

Multiple input No

Interface type WiFi

Synopsis

```
(config-if)> encryption wpa3 suite-b
```

Example (config-if)> **encryption wpa3 suite-b**
 Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint1": ►
 WPA3 SuiteB enabled.

Version	Description
3.01	The interface encryption wpa3 suite-b command has been introduced.

3.29.70 interface flowcontrol

Description Configure Ethernet flow control Tx/Rx. By default, the feature is enabled.
 Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

```
(config-if)> flowcontrol on
```

```
(config-if)> no flowcontrol [send]
```

Argument	Value	Description
send	<i>Keyword</i>	Flow control works asynchronously.

Example (config-if)> **flowcontrol on**
 Network::Interface::Ethernet: "GigabitEthernet0/0": flow control ►
 enabled.

```
(config-if)> no flowcontrol send  

Network::Interface::Ethernet: "GigabitEthernet0/0": flow control ►  

send disabled.
```

Version	Description
2.08	The interface flowcontrol command has been introduced.

3.29.71 interface follow

Description Copy settings from AP on WifiMaster0 (2.4 GHz) to the AP on WifiMaster with an index greater than zero (5 GHz or above).

The follower automatically copies all changes applied to the master access point.

If you change the follower settings, the link with the master access point is terminated.

Warning: The WifiMaster0 access points are always used as a source of settings. They never follow. They can only be followed.

Prefix no	No
Change settings	Yes
Multiple input	No
Interface type	AccessPoint

Synopsis `(config-if)> follow <access-point>`

Arguments

Argument	Value	Description
access-point	Interface	The name of an AccessPoint interface on the WifiMaster0 2.4 GHz. You can see the list of available interfaces with help of follow [Tab] command.

Example

```
(config-if)> follow WifiMaster0/AccessPoint0
Network::Interface::AccessPoint: "WifiMaster1/AccessPoint0": set ►
to follow WifiMaster0/AccessPoint0.
```

History

Version	Description
3.07	The interface follow command has been introduced.

3.29.72 interface ft enable

Description

Enable support of *FT* for Access Point (FT Over the Air, OTA) within the IEEE 802.11r standard. By default, the option is disabled.

For correct *FT* operation between 2,4 and 5 GHz APs it is necessary to fulfill the following conditions:

- access points 2,4 GHz and 5 GHz are enabled both
- they have the same SSID's
- they have the same security settings (encryption type — WPA2 or without password, password value, etc.)

Command with **no** prefix removes the setting.

Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	AccessPoint

Synopsis

```
(config-if)> ft enable
(config-if)> no ft enable
```

Example

```
(config-if)> ft enable
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ►
fast transition enabled.

(config-if)> no ft enable
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ►
fast transition disabled.
```

History	Version	Description
	2.13	The interface ft enable command has been introduced.

3.29.73 interface ft mdid

Description Set Mobility Domain ID for *FT*. By default, KN value is used.
Command with **no** prefix resets setting to default.

Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	AccessPoint

Synopsis

```
(config-if)> ft mdid <mdid>
(config-if)> no ft mdid
```

Arguments	Argument	Value	Description
	mdid	<i>String</i>	The value of Mobility Domain ID. Consists of 2 ASCII symbols.

Example

```
(config-if)> ft mdid 1F
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ►
fast transition MDID set to "1F".
```

```
(config-if)> no ft mdid
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ►
fast transition MDID reset to default.
```

History

Version	Description
2.13	The interface ft mdid command has been introduced.

3.29.74 interface ft otd

Description

Enable support of *FT* Over-the-DS (Distribution System) within the IEEE 802.11r standard. This type of *FT* is used for roaming in outdated subscriber devices, for example, in the iPhone 4s. By default, the setting is disabled.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

AccessPoint

Synopsis

```
(config-if)> ft otd
```

```
(config-if)> no ft otd
```

Example

```
(config-if)> ft otd
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ►
fast transition OTD enabled.
```

```
(config-if)> no ft otd
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ►
fast transition OTD disabled.
```

History

Version	Description
2.13	The interface ft otd command has been introduced.

3.29.75 interface green-ethernet

Description

Enable *Green Ethernet* mode on the interface. By default, this mode is disabled.

Command with **no** prefix disables the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type Ethernet

Synopsis

```
(config-if)> green-ethernet
(config-if)> no green-ethernet
```

Example

```
(config-if)> green-ethernet
Network::Interface::Ethernet: Green ethernet enabled.

(config-if)> no green-ethernet
Network::Interface::Ethernet: Green ethernet disabled.
```

History

Version	Description
3.05	The interface green-ethernet command has been introduced.

3.29.76 interface hide-ssid

Description Enable hidden [SSID](#) mode. When using this feature, Access Point will not be displayed in the list of available wireless networks. But if user informed of the existence of this network and know its [SSID](#), than he can connect to it. The mode is disabled by default.

Command with **no** prefix disables the mode.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Access Point

Synopsis

```
(config-if)> hide-ssid
(config-if)> no hide-ssid
```

Example

```
(config-if)> hide-ssid
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ►
SSID broadcasting disabled.

(config-if)> no hide-ssid
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ►
SSID broadcasting enabled.
```

History

Version	Description
2.00	The interface hide-ssid command has been introduced.

3.29.77 interface iapp auto

Description Generate *IAPP* key in automatic mode. To assign the key manually, use [interface iapp key](#) command.

Prefix no No

Change settings Yes

Multiple input No

Interface type Bridge

Synopsis

```
(config-if)> iapp auto
```

Example

```
(config-if)> iapp auto
Network::Interface::Rtx::Iapp: Bridge0 autoconfigured.
```

History

Version	Description
3.03	The interface iapp auto command has been introduced.

3.29.78 interface iapp key

Description Assign the *IAPP* Mobile Domain key for successful synchronization between Access Points where *FT* works ([interface ft enable](#) command). Access Points must belong to the same IP-subnet. By default, the key is not assigned.

Command with **no** prefix removes key value.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Bridge

Synopsis

```
(config-if)> iapp key <key>
```

```
(config-if)> no iapp key
```

Arguments

Argument	Value	Description
key	<i>String</i>	The value of <i>IAPP</i> key. Maximum key length is 64 characters.

Example

```
(config-if)> iapp key 11223344556677
Network::Interface::Rtx::Iapp: Bridge0 key applied.
```

```
(config-if)> no iapp key
Network::Interface::Rtx::Iapp: Bridge0 key cleared.
```

History

Version	Description
2.13	The interface iapp key command has been introduced.

3.29.79 interface idle-timeout

Description Set the interval for the STA client to disconnect from the Access Point by inactivity timeout. By default, 600 value is used.

Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type WiFiMaster

Synopsis

```
(config-if)> idle-timeout <idle-timeout>
(config-if)> no idle-timeout
```

Arguments

Argument	Value	Description
idle-timeout	<i>Integer</i>	Idle-timeout value in seconds. Can take values in the range from 60 to 2147483646.

Example

```
(config-if)> idle-timeout 500
Network::Interface::Rtx::WifiMaster: "WifiMaster1": idle timeout ►
value is 500 sec.
```

```
(config-if)> no idle-timeout
Network::Interface::Rtx::WifiMaster: "WifiMaster1": idle timeout ►
disabled.
```

History

Version	Description
3.06	The interface idle-timeout command has been introduced.

3.29.80 interface igmp downstream

Description Enable *IGMP* mode on the interface in the direction of the multicast recipients. **service igmp-proxy** must be enabled on the device. There can be several downstream interfaces.

Command with **no** prefix disables the mode.

Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	IP

Synopsis

```
(config-if)> igmp downstream
(config-if)> no igmp downstream
```

Example

```
(config-if)> igmp downstream
(config-if)> no igmp downstream
```

History

Version	Description
2.00	The interface igmp downstream command has been introduced.

3.29.81 interface igmp fork

Description Enable the duplication of outgoing packets *IGMP* upstream to the specified interface. There can be only one fork interface.

Command with **no** prefix disables the mode.

Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	IP

Synopsis

```
(config-if)> igmp fork
(config-if)> no igmp fork
```

Example

```
(config-if)> igmp fork
(config-if)> no igmp fork
```

History

Version	Description
2.00	The interface igmp fork command has been introduced.

3.29.82 interface igmp upstream

Description Enable *IGMP* mode on the interface in the direction of the multicast source. **service igmp-proxy** must be enabled on the device. Only one upstream interface is allowed.

Command with **no** prefix disables the mode.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-if)> igmp upstream
(config-if)> no igmp upstream
```

Example (config-if)> **igmp upstream**

```
(config-if)> no igmp upstream
```

History

Version	Description
2.00	The interface igmp upstream command has been introduced.

3.29.83 interface include

Description Specify Ethernet-interface name which will be added to the software bridge as a port.

Command with **no** prefix removes the interface from the bridge.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type Bridge

Synopsis

```
(config-if)> include <interface>
(config-if)> no include <interface>
```

Arguments

Argument	Value	Description
interface	<i>Interface</i>	Name or alias of the Ethernet-interface that should be plugged into the bridge.

Example

```
(config-if)> include ISP
Network::Interface::Bridge: "Bridge0": ISP included.
```

```
(config-if)> no include
Network::Interface::Bridge: "Bridge0": removed ISP.
```

History

Version	Description
2.00	The interface include command has been introduced.

3.29.84 interface inherit

Description

Specify the name of the Ethernet-interface which will be added to the program bridge as a port. In contrast with the **include** command, **inherit** command transfers some settings of the interface being added to the bridge, such as IP address, mask and IP-aliases. On removing either the bridge itself or the bridge interface, these settings, even if they have been changed will be copied back to the vacant interface.

The command allows one to add the device control interface to the bridge so that control is not lost.

Command with **no** prefix removes the interface from the bridge, returns the settings that have earlier been inherited by the bridge back to the interface, and resets these settings on the bridge.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type Bridge

Synopsis

```
(config-if)> inherit <interface>
```

```
(config-if)> no inherit <interface>
```

Arguments

Argument	Value	Description
interface	<i>Interface</i>	Name or alias of the Ethernet-interface that should be plugged into the bridge.

Example

```
(config-if)> inherit GigabitEthernet0/Vlan3
Network::Interface::Bridge: "Bridge1": GigabitEthernet0/Vlan3 ►
inherited in Bridge1.
```

```
(config-if)> no inherit
Network::Interface::Bridge: "Bridge1": inherit removed.
```

History

Version	Description
2.00	The interface inherit command has been introduced.

3.29.85 interface ip access-group

Description

Assign a named list of filtering rules (*ACL*, see [access-list](#)) to the interface. Parameter *in* or *out* indicates the traffic direction for which the *ACL* will be applied. Several *ACLs* can be assigned to a single interface.

Command with **no** prefix disables the *ACL* for the specified interface and traffic direction.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Interface type

IP

Synopsis

```
(config-if)> ip access-group <acl> <direction>
```

```
(config-if)> no ip access-group [ <acl> [ <direction> ] ]
```

Arguments

Argument	Value	Description
acl	<i>String</i>	List of filtering rules as previously created using access-list command.
direction	in	Apply filtering to incoming packets.
	out	Apply filtering to outgoing packets.

Example

```
(config-if)> ip access-group BLOCK in
Network::Acl: Input "BLOCK" access list added to "CdcEthernet1".
```

```
(config-if)> ip access-group BLOCK out
Network::Acl: Output "BLOCK" access list added to "CdcEthernet1".
```

```
(config-if)> no ip access-group BLOCK in
Network::Acl: "BLOCK" access group deleted from "CdcEthernet1".
```

```
(config-if)> no ip access-group
Network::Acl: All access groups deleted from "CdcEthernet1".
```

History

Version	Description
2.00	The interface ip access-group command has been introduced.

3.29.86 interface ip address

Description Change the IP address and the mask of the network interface. If the address automatic configuration service is running on the interface, for instance, DHCP client, (see [interface ip address dhcp](#)), then the manually set address can be overwritten.

Command with **no** prefix resets the address to 0.0.0.0.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-if)> ip address <address> <mask>
(config-if)> no ip address
```

Arguments

Argument	Value	Description
address	<i>IP address</i>	The network interface address.
mask	<i>IP-mask</i>	The network interface mask. There are two ways to specify the mask: the canonical form (for example, 255.255.255.0) and the prefix with bit length (for example, /24).

Example

The network address, defined by the IP address and mask, can be specified in either of the two ways: specify a mask in the canonical form, or set the prefix bit length.

```
(config)> ip address 192.168.9.1/24
Network::Interface::Ip: "Bridge3": IP address is 192.168.9.1/24.
```

```
(config)> no ip address
Network::Interface::Ip: "Bridge3": IP address cleared.
```

History

Version	Description
2.00	The interface ip address command has been introduced.

3.29.87 interface ip address dhcp

Description Start the DHCP client to automatically configure the network parameters: IP address and mask of the interface, [DNS](#) servers and default gateway.

Command with **no** prefix stops the DHCP client, removes the dynamically configured settings and restores the previous settings of IP address and mask.

Prefix no Yes**Change settings** Yes**Multiple input** No**Interface type** Ethernet

Synopsis

```
(config-if)> ip address dhcp [ hostname <hostname> ]
```

```
(config-if)> no ip address dhcp
```

Arguments

Argument	Value	Description
hostname	<i>String</i>	Name of the host to be placed in the DHCP option 12 field. This name need not be the same as the host name entered in global configuration mode.

Example

```
(config-if)> ip address dhcp hostname QWERTY2
Dhcp::Client: Started DHCP client on ISP.
```

```
(config-if)> no ip address dhcp
Dhcp::Client: Stopped DHCP client on ISP.
```

History

Version	Description
2.00	The interface ip address dhcp command has been introduced.

3.29.88 interface ip adjust-ttl recv

Description Modify the TTL for all inbound packets on the interface.
Command with **no** prefix cancels the setting.

Prefix no Yes**Change settings** Yes**Multiple input** No**Interface type** IP

Synopsis

```
(config-if)> ip adjust-ttl recv <recv>
```

```
(config-if)> no ip adjust-ttl recv
```

Arguments

Argument	Value	Description
recv	<i>Integer</i>	The value of TTL changing. Can take values in the range from 1 to 255 inclusively.

Example

```
(config-if)> ip adjust-ttl rcv 1
Network::Interface::Ip: "CdcEthernet0": incoming TTL set to 1.

(config-if)> no ip adjust-ttl rcv
Network::Interface::Ip: "CdcEthernet0": incoming TTL settings ►
removed.
```

History

Version	Description
3.07	The interface ip adjust-ttl rcv command has been introduced. Previous command name is interface ip adjust-ttl .

3.29.89 interface ip adjust-ttl send

Description Modify the TTL for all outbound packets on the interface.

Command with **no** prefix cancels the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-if)> ip adjust-ttl send <send>

(config-if)> no ip adjust-ttl send
```

Arguments

Argument	Value	Description
send	<i>Integer</i>	The value of TTL changing. Can take values in the range from 1 to 255 inclusively.

Example

```
(config-if)> ip adjust-ttl send 65
Network::Interface::Ip: "CdcEthernet1": outgoing TTL set to 65.

(config-if)> no ip adjust-ttl send
Network::Interface::Ip: "CdcEthernet1": outgoing TTL settings ►
removed.
```

History

Version	Description
2.09	The interface ip adjust-ttl send command has been introduced.

3.29.90 interface ip alias

Description Assign an additional IP address and mask to the network interface (alias).
Command with **no** prefix resets the specified alias to 0.0.0.0. If you use no arguments, the entire list of aliases will be removed.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type IP, Ethernet

Synopsis

```
(config-if)> ip alias <address> <mask>
(config-if)> no ip alias [ <address> <mask> ]
```

Arguments

Argument	Value	Description
address	IP address	Additional address of the network interface.
mask	IP-mask	Additional mask of the network interface. There are two ways to specify the mask: the canonical form (for example, 255.255.255.0) and the prefix with bit length (for example, /24).

Example

```
(config-if)> ip alias 192.168.1.88/24
Network::Interface::Ip: "WifiMaster1/WifiStation0": alias 0 is ►
192.168.1.88/24.
```

```
(config-if)> no ip alias 192.168.1.88/24
Network::Interface::Ip: "WifiMaster1/WifiStation0": alias 0 reset ►
to 0.0.0.0/0.
```

```
(config-if)> no ip alias
Network::Interface::Ip: "WifiMaster1/WifiStation0": all aliases ►
removed.
```

History

Version	Description
2.00	The interface ip alias command has been introduced.

3.29.91 interface ip dhcp client broadcast

Description Set broadcast bit in the DHCP Discover messages, that indicate to a server how the reply should be sent back to the client. By default, the setting is disabled.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

```
(config-if)> ip dhcp client broadcast
(config-if)> no ip dhcp client broadcast
```

Example

```
(config-if)> ip dhcp client broadcast
Dhcp::Client: ISP DHCP client request broadcast enabled.
```

```
(config-if)> no ip dhcp client broadcast
Dhcp::Client: ISP DHCP client request broadcast disabled.
```

History

Version	Description
2.15	The interface ip dhcp client broadcast command has been introduced.

3.29.92 interface ip dhcp client class-id

Description Specify the device vendor name where *DHCP* client is running (dhcp option 60).

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

```
(config-if)> ip dhcp client class-id <class>
(config-if)> no ip dhcp client class-id
```

Arguments

Argument	Value	Description
class	<i>String</i>	Vendor class name, enclosed in double quotes.

Example

```
(config-if)> ip dhcp client class-id "Titan"
Dhcp::Client: ISP DHCP client vendor class is set to "Titan".
```

```
(config-if)> no ip dhcp client class-id
Dhcp::Client: ISP DHCP client vendor class is cleared.
```

History

Version	Description
2.02	The interface ip dhcp client class-id command has been introduced.

3.29.93 interface ip dhcp client debug

Description Enable debug mode for DHCP client. Detailed info about DHCP client working is saved to the system log.

Command with **no** prefix disables the debug mode.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

```
(config-if)> ip dhcp client debug
```

```
(config-if)> no ip dhcp client debug
```

Example

```
(config-if)> ip dhcp client debug
Dhcp::Client: ISP DHCP client debug enabled.
```

```
(config-if)> no ip dhcp client debug
Dhcp::Client: ISP DHCP client debug disabled.
```

History

Version	Description
2.01	The interface ip dhcp client debug command has been introduced.

3.29.94 interface ip dhcp client displace

Description Displace static address of *what* if it conflicts with an address from DHCP client of main interface.

This command is executed automatically when you connect the USB Ethernet adapter. After that the configuration will be saved and device will be restarted.

Command with **no** prefix cancels the displacement for the specified interface.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type Ethernet

Synopsis

```
(config-if)> ip dhcp client displace <what> [ check-session ]
(config-if)> no ip dhcp client displace <what> [ check-session ]
```

Arguments

Argument	Value	Description
what	<i>Interface</i>	Name or alias of the interface whose static address will be displaced.
check-session	<i>Keyword</i>	With active SCGI sessions, it does not allow rebooting and changing the router's network address. By default, command is added to default-config.

Example

```
(config-if)> ip dhcp client displace Home
Dhcp::Client: ISP added "Home" displacement.
```

```
(config-if)> ip dhcp client displace Home check-session
Dhcp::Client: ISP added "Home" displacement.
```

```
(config-if)> no ip dhcp client displace Home
Dhcp::Client: ISP deleted "Home" displacement.
```

```
(config-if)> no ip dhcp client displace Home check-session
Dhcp::Client: ISP deleted "Home" displacement.
```

History

Version	Description
2.03	The interface ip dhcp client displace command has been introduced.
2.15	Argument check-session was added.

3.29.95 interface ip dhcp client dns-routes

Description Enable automatic addition of host routes to the DNS server received from the DHCP server. By default, the setting is enabled.

Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

```
(config-if)> ip dhcp client dns-routes
(config-if)> no ip dhcp client dns-routes
```

Example

```
(config-if)> ip dhcp client dns-routes
Dhcp::Client: ISP DHCP client DNS host routes are enabled.
```

```
(config-if)> no ip dhcp client dns-routes
Dhcp::Client: ISP DHCP client DNS host routes are disabled.
```

History

Version	Description
2.00	The interface ip dhcp client dns-routes command has been introduced.

3.29.96 interface ip dhcp client fallback

Description

Set static IP address in case of DHCP errors.

Command with **no** prefix cancels setting and sets 0.0.0.0. address.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Ethernet

Synopsis

```
(config-if)> ip dhcp client fallback <type>
```

```
(config-if)> no ip dhcp client fallback
```

Arguments

Argument	Value	Description
type	<i>String</i>	The type of IP address. Currently implemented only one type — static.

Example

```
(config-if)> ip dhcp client fallback static
Dhcp::Client: A DHCP address fallback is static.
```

```
(config-if)> no ip dhcp client fallback
Dhcp::Client: A DHCP address fallback set to zero for "ISP".
```

History

Version	Description
2.05	The interface ip dhcp client fallback command has been introduced.

3.29.97 interface ip dhcp client hostname

Description

Assign a host name which is sent in DHCP-request.

Command with **no** prefix resets the host name to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

```
(config-if)> ip dhcp client hostname <hostname>
```

```
(config-if)> no ip dhcp client hostname
```

Arguments

Argument	Value	Description
hostname	String	The host name to assign.

Example

```
(config-if)> ip dhcp client hostname MYHOME
Dhcp::Client: ISP DHCP client hostname is set to MYHOME.
```

```
(config-if)> no ip dhcp client hostname
Dhcp::Client: ISP DHCP client hostname is reset to default (HOME).
```

History

Version	Description
2.00	The interface ip dhcp client hostname command has been introduced.

3.29.98 interface ip dhcp client name-servers

Description Use [DNS](#) server addresses which are received via [DHCP](#). By default, the function is enabled.

Command with **no** prefix denies using of [DNS](#) server addresses which are received via [DHCP](#).

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

```
(config-if)> ip dhcp client name-servers
```

```
(config-if)> no ip dhcp client name-servers
```

Example

```
(config-if)> ip dhcp client name-servers
Dhcp::Client: ISP DHCP name servers are enabled.
```

```
(config-if)> no ip dhcp client name-servers
Dhcp::Client: ISP DHCP name servers are disabled.
```

History

Version	Description
2.00	The interface ip dhcp client name-servers command has been introduced.

3.29.99 interface ip dhcp client release

Description DHCP client releases lease IP address and goes into sleep mode. Another execution of this command takes DHCP client to the mode of automatical obtaining of IP address.

Prefix no No

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis `(config-if)> ip dhcp client release`

Example `(config-if)> ip dhcp client release`
 Dhcp::Client: IP address released.

History

Version	Description
2.03	The interface ip dhcp client release command has been introduced.

3.29.100 interface ip dhcp client renew

Description DHCP client releases lease IP address and passes in a mode of obtaining a new one.

Prefix no No

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis `(config-if)> ip dhcp client renew`

Example `(config-if)> ip dhcp client renew`
 Dhcp::Client: IP address renewed.

History	Version	Description
	2.03	The interface ip dhcp client renew command has been introduced.

3.29.101 interface ip dhcp client routes

Description Enable receiving routes from the provider (dhcp options 33, 121, 242). By default it is enabled. In the configuration it is displayed only with **no** prefix.

Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

```
(config-if)> ip dhcp client routes
(config-if)> no ip dhcp client routes
```

Example

```
(config-if)> ip dhcp client routes
Dhcp::Client: ISP DHCP client static routes are enabled.
```

```
(config-if)> no ip dhcp client routes
Dhcp::Client: ISP DHCP client static routes are disabled.
```

History	Version	Description
	2.05	The interface ip dhcp client routes command has been introduced.

3.29.102 interface ip flow

Description Enable *NetFlow* sensor on the specified interface. By default, the setting is disabled.

Command with **no** prefix disables *NetFlow* sensor.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-if)> ip flow <direction>
```

```
(config-if)> no ip flow
```

Arguments

Argument	Value	Description
	ingress	Collection of incoming traffic.
	egress	Collection of outgoing traffic.
	both	Collection of incoming and outgoing traffic both.

Example

```
(config-if)> ip flow ingress
Netflow::Manager: NetFlow collector is enabled on interface ►
"Home" in "ingress" direction.
```

```
(config-if)> ip flow egress
Netflow::Manager: NetFlow collector is enabled on interface ►
"Home" in "egress" direction.
```

```
(config-if)> ip flow both
Netflow::Manager: NetFlow collector is enabled on interface ►
"Home" in "both" direction.
```

History

Version	Description
2.11	The interface ip flow command has been introduced.

3.29.103 interface ip global

Description

Set property "global" with a parameter to the interface. This property is necessary to configure the default route, DynDNS client and NAT functioning. Can represent global-interfaces as leading to the global network (the Internet).

Property "global" affects the interface priority in setting the default route. The higher the priority the more desirable it is for the user to access the global network through the specified interface. Internet access backup (WAN backup) functionality is using priority "global".

By default, setting is disabled.

Command with **no** prefix removes property.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-if)> ip global (<priority> | order <order> | auto)
```

```
(config-if)> no ip global
```

Arguments

Argument	Value	Description
priority	<i>Integer</i>	Interface priority to configure the default route. Can take values in the range from 1 to 65534.
order	<i>Integer</i>	Relative priority between interfaces. It can take values in the range from 0 to 65534, but not more than the number of global interfaces.
auto	<i>Keyword</i>	Automatic priority calculation of the interface. The interface is located near the end of the list, but above order X.

Example

```
(config-if)> ip global 10
Network::Interface::IP: "L2TP0": global priority is 10.
```

```
(config-if)> ip global order 0
Network::Interface::IP: "L2TP0": order is 1.
```

```
(config-if)> ip global auto
Network::Interface::IP: Global priority recalculated.
```

```
(config-if)> no ip global
Network::Interface::IP: "L2TP0": global priority cleared.
```

History

Version	Description
2.00	The interface ip global command has been introduced.
2.09	The order and auto arguments were added.

3.29.104 interface ip mru

Description

Set the value of *MRU* to be transmitted to a remote node during establishing the *PPP* (*IPCP*) connection. By default, 1460 value is used.

Command with **no** prefix resets the *MRU* value to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

PPP

Synopsis

```
(config-if)> ip mru <mr>
```

```
(config-if)> no ip mru
```

Arguments

Argument	Value	Description
mru	<i>Integer</i>	<i>MRU</i> value.

Example

```
(config-if)> ip mru 1492
Network::Interface::Ppp: "PPPoE0": MRU saved.
```

```
(config-if)> no ip mru
Network::Interface::Ppp: "PPPoE0": MRU reset to default.
```

History

Version	Description
2.00	The interface ip mru command has been introduced.

3.29.105 interface ip mtu

Description

Set the *MTU* value on the network interface. When establishing a connection via *PPP (IPCP)*, packets with defined *MTU* size will be sent to the remote host, even if the host requested a lower *MTU* value.

Command with **no** prefix resets the *MTU* value to that which was before the first use of the command.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
(config-if)> ip mtu <mtu>
```

```
(config-if)> no ip mtu
```

Arguments

Argument	Value	Description
mtu	<i>Integer</i>	<i>MTU</i> value. Can take values in the range from 64 to 65535 inclusively.

Example

```
(config-if)> ip mtu 1500
Network::Interface::Base: "GigabitEthernet1": static MTU is 1500.
```

```
(config-if)> no ip mtu
Network::Interface::Base: "GigabitEthernet1": static MTU reset ►
to default.
```


History	Version	Description
	2.00	The interface ip mtu command has been introduced.

3.29.106 interface ip nat loopback

Description Enable reverse translation to send local requests to the local server from the Internet. By default, the setting is enabled for the Home segment interfaces (private and protected security levels).

Command with **no** prefix disables NAT loopback.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-if)> ip nat loopback
(config-if)> no ip nat loopback
```

Example

```
(config-if)> ip nat loopback
Network::StaticNat: NAT loopback is explicitly enabled on "Home".

(config-if)> no ip nat loopback
Network::StaticNat: NAT loopback is explicitly disabled on "Home".
```

History	Version	Description
	2.11	The ip nat loopback command has been introduced.

3.29.107 interface ip remote

Description Set a remote peer static address.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPP

Synopsis

```
(config-if)> ip remote <address>
(config-if)> no ip remote
```

Arguments

Argument	Value	Description
address	<i>IP address</i>	A remote peer address.

Example

```
(config-if)> ip remote 192.168.2.19
Network::Interface::Ppp: "L2TP0": remote address saved.
```

```
(config-if)> no ip remote
Network::Interface::Ppp: "L2TP0": remote address erased.
```

History

Version	Description
2.00	The interface ip remote command has been introduced.

3.29.108 interface ip tcp adjust-mss

Description

Set the limit on the segment size of outgoing *TCP* sessions. If the *MSS* value, which is transmitted in the header of SYN-packets, exceeds the specified limit, command changes it. The command is applied to the interface and affects all outgoing *TCP* SYN packets.

Command with **no** prefix removes all limits from *MSS*.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
(config-if)> ip tcp adjust-mss (pmtu | <mss>)
```

```
(config-if)> no ip tcp adjust-mss
```

Arguments

Argument	Value	Description
pmtu	<i>Keyword</i>	Set the upper limit of <i>MSS</i> , equal to the minimum <i>MTU</i> along the path to the remote peer.
mss	<i>Integer</i>	<i>MSS</i> upper limit.

Example

```
(config-if)> ip tcp adjust-mss pmtu
Network::Interface::Ip: "L2TP0": TCP-MSS adjustment enabled.
```

```
(config-if)> ip tcp adjust-mss 1300
Network::Interface::Ip: "L2TP0": TCP-MSS adjustment enabled.
```

```
(config-if)> no ip tcp adjust-mss
Network::Interface::Ip: "L2TP0": TCP-MSS adjustment disabled.
```

History	Version	Description
	2.00	The interface ip tcp adjust-mss command has been introduced.

3.29.109 interface ipcp address

Description Use address from the remote peer.
Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPP

Synopsis

```
(config-if)> ipcp address
(config-if)> no ipcp address
```

Example

```
(config-if)> ipcp address
using address from remote peer
```

```
(config-if)> no ipcp address
not using address from remote peer
```

History	Version	Description
	3.09	The interface ipcp address command has been introduced.

3.29.110 interface ipcp default-route

Description Use the remote peer address as default gateway. By default, the setting is enabled.

Command with **no** prefix denies default gateway changing.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPP

Synopsis

```
(config-if)> ipcp default-route
```

```
(config-if)> no ipcp default-route
```

Example

```
(config-if)> ipcp default-route
Using peer as a default gateway.
```

History

Version	Description
2.00	The interface ipcp default-route command has been introduced.

3.29.111 interface ipcp dns-routes

Description

Use routes which are received via *IPCP*. By default, the setting is enabled.
Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

PPP

Synopsis

```
(config-if)> ipcp dns-routes
```

```
(config-if)> no ipcp dns-routes
```

Example

```
(config-if)> ipcp dns-routes
DNS routes enabled
```

```
(config-if)> no ipcp dns-routes
DNS routes disabled
```

History

Version	Description
2.02	The interface ipcp dns-routes command has been introduced.

3.29.112 interface ipcp name-servers

Description

Use *DNS* servers addresses which are received via *IPCP*. By default, the setting is enabled.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input No

Interface type PPP

Synopsis

```
(config-if)> ipcp name-servers
(config-if)> no ipcp name-servers
```

Example

```
(config-if)> ipcp name-servers
using remote name servers.
```

```
(config-if)> no ipcp name-servers
not using remote name servers.
```

History

Version	Description
2.00	The interface ipcp name-servers command has been introduced.

3.29.113 interface ipcp vj

Description Enable compression of TCP/IP headers by Van Jacobson's method. By default, the setting is disabled.

Command with **no** prefix disables compression.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPP

Synopsis

```
(config-if)> ipcp vj [cid]
(config-if)> no ipcp vj
```

Arguments

Argument	Value	Description
cid	<i>Keyword</i>	Enable compression of Connection ID into headers.

Example

```
(config-if)> ipcp vj cid
VJ compression enabled.
```

```
(config-if)> no ipcp vj
VJ compression disabled.
```

History

Version	Description
2.03	The interface ipcp vj command has been introduced.

3.29.114 interface ipsec encryption-level

Description Set encryption level for *IPSec* connection that is automatically associated with the tunnel. By default, the normal value is used.

A detailed description of each level is given in the [Appendix](#).

Command with **no** prefix resets encryption level to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis (config-if)> **ipsec encryption-level** <level>

(config-if)> **no ipsec encryption-level**

Arguments

Argument	Value	Description
level	weak	Weak level, DES and MD5 algorithms enabled.
	normal	Level is compatible with most systems, priority is given to AES128 and SHA1.
	normal-3des	Level is compatible with most systems, priority is given to 3DES and SHA1.
	strong	The strongest level, <i>PFS</i> is mandatory, priority is given to AES256 and SHA1.
	weak-pfs	The same as weak, but for the second phase <i>PFS</i> group 1 and 2 is enabled.
	normal-pfs	The same as normal, but for the second phase <i>PFS</i> group 2 and 5 is enabled.
	normal-3des-pfs	The same as normal-3des, but for the second phase <i>PFS</i> group 5 and 14 is enabled.
	high	A set of modern algorithms for external providers of VPN services.
	strong-aead	The strongest level, priority is given to AES256 and SHA1 with addition of <i>AEAD</i> algorithms.
	strong-aead-pfs	The strongest level, <i>PFS</i> is mandatory, priority is given to AES256 and SHA1 with addition of <i>AEAD</i> algorithms.

Example

```
(config-if)> ipsec encryption-level high
Network::Interface::Secure: "IKE0": security level is set to ►
"high".
```

```
(config-if)> no ipsec encryption-level
Network::Interface::Secure: "IKE0": security level was reset.
```

History

Version	Description
2.08	The interface ipsec encryption-level command has been introduced.
3.07	New levels of encryption has been added — high, strong-aead and strong-aead-pfs.

3.29.115 interface ipsec force-encaps

Description

Enable support of *ESP* forced encapsulation in *UDP* for client tunnels. By default, the feature is disabled.

Command with **no** prefix cancels the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Secure

Synopsis

```
(config-if)> ipsec force-encaps
```

```
(config-if)> no ipsec force-encaps
```

Example

```
(config-if)> ipsec force-encaps
Network::Interface::Secure: Force ESP in UDP encapsulation ►
enabled.
```

```
(config-if)> no ipsec force-encaps
Network::Interface::Secure: Force ESP in UDP encapsulation ►
disabled.
```

History

Version	Description
2.12	The interface ipsec force-encaps command has been introduced.

3.29.116 interface ipsec ignore

Description

Disable processing incoming *IKE* packets for *IPSec* service on the interface. By default the command is disabled.

Command with **no** prefix cancels the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
(config-if)> ipsec ignore
(config-if)> no ipsec ignore
```

Example

```
(config-if)> ipsec ignore
IpSec::Manager: Interface "Gre0" added to IPsec ignore list.

(config-if)> no ipsec ignore
IpSec::Manager: Interface "Gre0" removed from IPsec ignore list.
```

History

Version	Description
2.10	The interface ipsec ignore command has been introduced.

3.29.117 interface ipsec ikev2

Description Enable IKEv2 protocol for *IPSec* connection that is automatically associated with the tunnel. By default, IKEv1 is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
(config-if)> ipsec ikev2
(config-if)> no ipsec ikev2
```

Example

```
(config-if)> ipsec ikev2
Network::Interface::Secure: IKEv2 is enabled.

(config-if)> no ipsec ikev2
Network::Interface::Secure: IKEv2 is disabled, enable IKEv1.
```


History	Version	Description
	2.10	The interface ipsec ikev2 command has been introduced.

3.29.118 interface ipsec nail-up

Description Enable automatic changes of the secret keys for L2TP/IPsec, EoIP/IPsec, Gre/IPsec, IPIP/IPsec tunnels. By default, setting is enabled.

Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
(config-if)> ipsec nail-up
(config-if)> no ipsec nail-up
```

Example

```
(config-if)> ipsec nail-up
Network::Interface::Secure: SA renegotiation enabled.
```

```
(config-if)> no ipsec nail-up
Network::Interface::Secure: SA renegotiation disabled.
```

History	Version	Description
	2.12	The interface ipsec nail-up command has been introduced.

3.29.119 interface ipsec name-servers

Description Use *DNS* server addresses which are received via IKEv1 or IKEv2 *IPSec* server. By default, the function is enabled.

Command with **no** prefix denies using of *DNS* server addresses which are received via IKEv1 and IKEv2 *IPSec* server.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
(config-if)> ipsec name-servers
```

```
(config-if)> no ipsec name-servers
```

Example

```
(config-if)> ipsec name-servers
IpSec::Interface::Ike: "IKE0": automatic name servers via IKE ►
Configuration Payload are enabled.
```

```
(config-if)> no ipsec name-servers
IpSec::Interface::Ike: "IKE0": automatic name servers via IKE ►
Configuration Payload are disabled.
```

History

Version	Description
3.06	The interface ipsec name-servers command has been introduced.

3.29.120 interface ipsec preshared-key

Description

Set PSK key for *IPSec* connection that is automatically associated with the tunnel. Command also enables *IPSec* for this tunnel.

Command with **no** prefix resets the key.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Secure

Synopsis

```
(config-if)> ipsec preshared-key <key>
```

```
(config-if)> no ipsec preshared-key
```

Arguments

Argument	Value	Description
key	<i>String</i>	Secret PSK key value.

Example

```
(config-if)> ipsec preshared-key 12345678
Network::Interface::Secure: "Gre0": preshared key was set.
```

```
(config-if)> no ipsec preshared-key
Network::Interface::Secure: "Gre0": preshared key was reset.
```

History

Version	Description
2.08	The interface ipsec preshared-key command has been introduced.

3.29.121 interface ipsec proposal lifetime

Description Set lifetime of *IPSec* transformation Phase1 on the interface. By default, the value 28800 is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
(config-if)> ipsec proposal lifetime <lifetime>
(config-if)> no ipsec proposal lifetime
```

Arguments

Argument	Value	Description
lifetime	<i>Integer</i>	Lifetime of <i>IPSec</i> transformation in seconds. Can take values in the range from 60 to 2147483647.

Example

```
(config-if)> ipsec proposal lifetime 222222
Network::Interface::Secure: IPsec IKE proposal lifetime set to ►
222222 s.
```

```
(config-if)> no ipsec proposal lifetime
Network::Interface::Secure: IPsec IKE proposal lifetime reset ►
to 28800 s.
```

History

Version	Description
2.11	The interface ipsec proposal lifetime command has been introduced.

3.29.122 interface ipsec proposal local-id

Description Set custom local identifier for *IKE*.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
(config-if)> ipsec proposal local-id <local-id>
```

```
(config-if)> no ipsec proposal local-id
```

Arguments

Argument	Value	Description
local-id	<i>String</i>	IP address or domain name of local host.

Example

```
(config-if)> ipsec proposal local-id 192.168.8.4
Network::Interface::Secure: Set IKE local ID to "192.168.8.4".
```

```
(config-if)> no ipsec proposal local-id
Network::Interface::Secure: Reset IKE local ID.
```

History

Version	Description
3.08	The interface ipsec proposal local-id command has been introduced.

3.29.123 interface ipsec proposal remote-id

Description

Set custom remote identifier for *IKE*.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Secure

Synopsis

```
(config-if)> ipsec proposal remote-id <remote-id>
```

```
(config-if)> no ipsec proposal remote-id
```

Arguments

Argument	Value	Description
remote-id	<i>String</i>	IP address or domain name of remote host.

Example

```
(config-if)> ipsec proposal remote-id my.domain.com
Network::Interface::Secure: Set IKE remote ID to "my.domain.com".
```

```
(config-if)> no ipsec proposal remote-id
Network::Interface::Secure: Reset IKE remote ID.
```

History

Version	Description
3.08	The interface ipsec proposal remote-id command has been introduced.

3.29.124 interface ipsec transform-set lifetime**Description**

Set lifetime of *IPSec* transformation Phase2 on the interface. By default, the value 28800 is used.

Command with **no** prefix resets setting to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Secure

Synopsis

```
(config-if)> ipsec transform-set lifetime <lifetime>
```

```
(config-if)> no ipsec transform-set lifetime
```

Arguments

Argument	Value	Description
lifetime	<i>Integer</i>	Lifetime of <i>IPSec</i> transformation in seconds. Can take values in the range from 60 to 2147483647.

Example

```
(config-if)> ipsec transform-set lifetime 2222222
Network::Interface::Secure: IPsec ESP transform-set lifetime set ►
to 2222222 s.
```

```
(config-if)> no ipsec transform-set lifetime
Network::Interface::Secure: IPsec ESP transform-set lifetime ►
reset to 28800 s.
```

History

Version	Description
2.11	The interface ipsec transform-set lifetime command has been introduced.

3.29.125 interface ipv6 address**Description**

Configure an IPv6 address on the interface. If the argument is **auto**, address is autoconfigured. Passing a literal address as an argument will assign it statically.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config-if)> ipv6 address (<address> | <block> | auto)
(config-if)> no ipv6 address [address | <block> | auto]
```

Arguments

Argument	Value	Description
address	<i>IPv6 address</i>	The network interface address.
block	<i>IPv6 address</i>	The network interface address with mask.
auto	<i>Keyword</i>	Enable stateless autoconfiguration.

Example

```
(config-if)> ipv6 address 2a01:291:2:612:52ff:20ff:fe00:1e87
Network::Interface::Ip6: "GigabitEthernet1": added static address ►
2a01:291:2:612:52ff:20ff:fe00:1e87.
```

```
(config-if)> ipv6 address 2001:db8::1
Network::Interface::Ip6: "GigabitEthernet1": added static address ►
2001:db8::1.
```

```
(config-if)> ipv6 address fd08:a648:e303::3/64
Network::Interface::Ip6: "GigabitEthernet1": added static address ►
fd08:a648:e303::3/64.
```

```
(config-if)> no ipv6 address 2a01:291:2:612:52ff:20ff:fe00:1e87
Network::Interface::Ip6: "GigabitEthernet1": removed static ►
address 2a01:291:2:612:52ff:20ff:fe00:1e87.
```

```
(config-if)> no ipv6 address
Network::Interface::Ip6: "GigabitEthernet1": cleared addresses.
```

History

Version	Description
2.00	The interface ipv6 address command has been introduced.

3.29.126 interface ipv6 name-servers

Description Configure retrieval of [DNS](#) information. When **auto** is set, enables DHCPv6 name-server requests.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-if)> ipv6 name-servers (auto)
```

```
(config-if)> no ipv6 name-servers [auto]
```

Argument	Value	Description
auto	<i>Keyword</i>	Enable name-server autoconfiguration.

Example

```
(config-if)> ipv6 name-servers auto
```

Name servers provided by the interface network are accepted.

Version	Description
2.00	The interface ipv6 name-servers command has been introduced.

3.29.127 interface ipv6 prefix

Description Configure prefix delegation. When **auto** is set, prefix is requested via DHCPv6-PD.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-if)> ipv6 prefix (<prefix> | auto)
```

```
(config-if)> no ipv6 prefix [<prefix> | auto]
```

Argument	Value	Description
auto	<i>Keyword</i>	Enable prefix delegation.
prefix	<i>Prefix</i>	Manual input of prefix.

Example

```
(config-if)> ipv6 prefix 2001:db8:43:ab12::/64
```

Static IPv6 prefix added.

Version	Description
2.00	The interface ipv6 prefix command has been introduced.

3.29.128 interface ipv6cp

Description Enable *IPv6CP* support during establishing connection.

Command with **no** prefix disables *IPv6CP*.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPP

Synopsis

```
(config-if)> ipv6cp
(config-if)> no ipv6cp
```

Example

```
(config-if)> ipv6cp
IPv6CP enabled.
```

History

Version	Description
2.00	The interface ipv6cp command has been introduced.

3.29.129 interface lcp acfc

Description Enable compression negotiation of the *Data Link Layer Address and Control fields*. By default, the feature is disabled.

Command with **no** prefix disables this option and all the remote peer requests for the *ACFC* negotiation will be rejected.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPP

Synopsis

```
(config-if)> lcp acfc [cid]
(config-if)> no lcp acfc
```

Arguments

Argument	Value	Description
cid	<i>Keyword</i>	Enable compression of Connection ID into headers.

Example (config-if)> **lcp acfc cid**
ACFC compression enabled

(config-if)> **no lcp acfc cid**
ACFC compression disabled

History

Version	Description
2.03	The interface lcp acfc command has been introduced.

3.29.130 interface lcp echo

Description Specify the testing rules of the *PPP* connection with *LCP* echo tools.

By default, `interval` is set to 30, `count` is set to 3.

Command with **no** prefix disables *LCP* echo.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPP

Synopsis (config-if)> **lcp echo** *<interval>* *<count>* [**adaptive**]

(config-if)> **no lcp echo**

Arguments

Argument	Value	Description
<code>interval</code>	<i>Integer</i>	Interval between sending <i>LCP</i> echo, in seconds. If within the specified time interval there is no <i>LCP</i> echo request from the remote location, the same request will be sent there asking for response <i>LCP</i> reply.
<code>count</code>	<i>Integer</i>	The number of consecutive requests <i>LCP</i> echo sent, for which no response <i>LCP</i> reply was received. If count of <i>LCP</i> echo requests goes unanswered, the connection is terminated.
<code>adaptive</code>	<i>Keyword</i>	Pppd will send LCP echo-request frames only if no traffic was received from the peer since the last echo-request was sent.

Example (config-if)> **lcp echo 20 2**
Network::Interface::Ppp: "PPPoE0": LCP echo parameters updated.

(config-if)> **no lcp echo**
Network::Interface::Ppp: "PPPoE0": LCP echo disabled.

History

Version	Description
2.00	The interface lcp echo command has been introduced.
2.06	The adaptive keyword has been added.

3.29.131 interface lcp pfc

Description

Enable compression negotiation of the *PPP Protocol field*. By default, the feature is disabled.

Command with **no** prefix disables this option and all the remote peer requests for the *PFC* negotiation will be rejected.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

PPP

Synopsis

```
(config-if)> lcp pfc [cid]
```

```
(config-if)> no lcp pfc
```

Arguments

Argument	Value	Description
cid	<i>Keyword</i>	Enable compression of Connection ID into headers.

Example

```
(config-if)> lcp pfc cid
PFC compression enabled
```

```
(config-if)> no lcp pfc cid
PFC compression disabled
```

History

Version	Description
2.03	The interface lcp pfc command has been introduced.

3.29.132 interface ldpc

Description

Enable the *LDPC* code for AP 5 GHz. By default, the feature is disabled.

Command with **no** prefix disables this feature.

Prefix no

Yes

Change settings

Yes

Multiple input	No				
Interface type	WifiMaster				
Synopsis	<pre>(config-if)> ldpc</pre> <pre>(config-if)> no ldpc</pre>				
Example	<pre>(config-if)> ldpc</pre> <pre>Network::Interface::Rtx::WifiMaster: "WifiMaster1": LDPC enabled.</pre> <pre>(config-if)> no ldpc</pre> <pre>Network::Interface::Rtx::WifiMaster: "WifiMaster1": LDPC disabled.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.07</td> <td>The interface ldpc command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.07	The interface ldpc command has been introduced.
Version	Description				
2.07	The interface ldpc command has been introduced.				

3.29.133 interface led wan

Description	<p>Display the interface status by means of LED. SelectedWan control should be chosen with system led command. By default, function is disabled.</p> <p>Command with no prefix disables the feature.</p>				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Synopsis	<pre>(config-if)> led wan</pre> <pre>(config-if)> no led wan</pre>				
Example	<pre>(config-if)> led wan</pre> <pre>Network::Interface::Led: Selected WAN GigabitEthernet1.</pre> <pre>(config-if)> no led wan</pre> <pre>Network::Interface::Led: Selected no WAN.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.08</td> <td>The interface led wan command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.08	The interface led wan command has been introduced.
Version	Description				
2.08	The interface led wan command has been introduced.				

3.29.134 interface lldp disable

Description	<p>Disable LLDP agent on interface. By default, the feature is enabled.</p> <p>Command with no prefix enables LLDP agent.</p>
--------------------	--

Prefix no Yes**Change settings** Yes**Multiple input** No

Synopsis

```
(config-if)> lldp disable
```

```
(config-if)> no lldp disable
```

Example

```
(config-if)> lldp disable
Network::DiscoveryManager: LLDP agent is disabled on interface ►
"ISP".
```

```
(config-if)> no lldp disable
Network::DiscoveryManager: LLDP agent is enabled on interface ►
"ISP".
```

History

Version	Description
2.11	The interface lldp disable command has been introduced.

3.29.135 interface mac access-list address

Description Add a MAC address to the permit/deny filtering list of the interface. Type of access list is set with [interface mac access-list type](#) command.

Command with **no** prefix removes the specified MAC address from the [ACL](#).

Prefix no Yes**Change settings** Yes**Multiple input** Yes**Interface type** Access Point

Synopsis

```
(config-if)> mac access-list address <address>
```

```
(config-if)> no mac access-list address <address>
```

Arguments

Argument	Value	Description
address	<i>MAC address</i>	A MAC address to be added to the ACL .

Example

```
(config-if)> mac access-list address 64:a2:f9:53:b2:12
Network::Interface::Ethernet: "WifiMaster0/AccessPoint1": added ►
64:a2:f9:53:b2:12 to the ACL.
```

```
(config-if)> no mac access-list address 64:a2:f9:53:b2:12
Network::Interface::Ethernet: "WifiMaster0/AccessPoint1": removed ►
64:a2:f9:53:b2:12 from the ACL.
```

```
(config-if)> no mac access-list address
Network::Interface::Ethernet: "WifiMaster0/AccessPoint1": ACL ►
cleared.
```

History

Version	Description
2.00	The interface mac access-list address command has been introduced.

3.29.136 interface mac access-list type

Description Set the type for filtering list of the interface. Type is not defined by default (none value assigned).

Prefix no No

Change settings Yes

Multiple input No

Interface type Access Point

Synopsis | (config-if)> **mac access-list type** <type>

Arguments

Argument	Value	Description
type	none	Type of filtering list is not defined.
	permit	Only approved MAC addresses will be added to the list.
	deny	Only restricted MAC addresses will be added to the list.

Example

```
(config-if)> mac access-list type permit
Network::Interface::Ethernet: "WifiMaster0/AccessPoint1": ACL ►
type changed to permit.
```

History

Version	Description
2.00	The interface mac access-list type command has been introduced.

3.29.137 interface mac address

Description Set the MAC address to the specified network interface. Address is specified in hexadecimal format 00:00:00:00:00:00. The command allows one to assign arbitrary address, but warns the user if the new address “multicast” bit is set or “OUI enforced” bit is cleared.

Command with **no** prefix resets the original MAC addresses on the interface.

Warning: Change MAC address on Wi-Fi interface is prohibited.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type MAC

Synopsis

```
(config-if)> mac address <mac>
(config-if)> no mac address
```

Arguments

Argument	Value	Description
mac	MAC address	New MAC address of the interface.

Example

```
(config-if)> mac address 3C:1F:6E:2A:1C:BA
```

```
(config-if)> no mac address
```

History

Version	Description
2.00	The interface mac address command has been introduced.

3.29.138 interface mac address factory

Description Set the factory MAC address to the interface.

Prefix no No

Change settings Yes

Multiple input No

Interface type MAC

Synopsis

```
(config-if)> mac address factory <name>
```

Arguments

Argument	Value	Description
name	lan	"LAN" MAC address will be assigned to the interface.
	wan	"WAN" MAC address will be assigned to the interface.
	wlan5	"WLAN5" MAC address will be assigned to the interface.

Example

```
(config-if)> mac address factory lan
Core::System::UConfig: done.
```

History

Version	Description
2.00	The interface mac address factory command has been introduced.

3.29.139 interface mac band

Description

Bind a registered host to a 2.4 GHz or 5 GHz frequency band.

Command with **no** prefix removes the binding. If you use no argument, the entire list of bindings will be cleared.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Interface type

Bridge

Synopsis

```
(config-if)> mac band <mac> <band>
```

```
(config-if)> no mac band [ <mac> ]
```

Arguments

Argument	Value	Description
mac	MAC address	MAC address of the registered client.
band	0	2,4 GHz band.
	1	5 GHz band.

Example

```
(config-if)> mac band c0:b8:83:c2:cb:11 0
Network::Interface::Rtx::MacBand: "Bridge0": bound ►
c0:b8:83:c2:cb:11 to 2.4 GHz.
```

```
(config-if)> mac band c0:b8:83:c2:cb:11 1
Network::Interface::Rtx::MacBand: "Bridge0": bound ►
c0:b8:83:c2:cb:11 to 5 GHz.
```

```
(config-if)> no mac band c0:b8:83:c2:cb:85
Network::Interface::Rtx::MacBand: "Bridge0": unbound ►
c0:b8:83:c2:cb:85 from 2.4 GHz.
```

```
(config-if)> no mac band
Network::Interface::Rtx::MacBand: Unbound all hosts.
```

History

Version	Description
3.05	The interface mac band command has been introduced.

3.29.140 interface mac bssid

Description Specify the Access Point's MAC address to connect to [WISP](#).

Command with **no** prefix removes the MAC address.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type WifiStation

Synopsis | (config-if)> **mac bssid** *<bssid>*

| (config-if)> **no mac bssid**

Arguments

Argument	Value	Description
bssid	<i>MAC address</i>	MAC address of WISP Access Point.

Example

```
(config-if)> mac bssid 56:ff:20:00:1e:11
Network::Interface::WifiStation: BSSID set to 56:ff:20:00:1e:11.
```

```
(config-if)> no mac bssid
Network::Interface::WifiStation: BSSID cleared.
```

History

Version	Description
2.13	The interface mac bssid command has been introduced.

3.29.141 interface mac clone

Description Clone the MAC address from the operator's PC to the interface.

Prefix no No

Change settings Yes

Multiple input	No				
Interface type	MAC, IP				
Synopsis	<code>(config-if)> mac clone</code>				
Example	<code>(config-if)> mac clone</code>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.00</td> <td>The interface mac clone command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.00	The interface mac clone command has been introduced.
Version	Description				
2.00	The interface mac clone command has been introduced.				

3.29.142 interface mac vht40

Description	<p>Add a host to VHT40 compatibility list.</p> <p>Command with no prefix removes the host from the list. If you use no argument, the entire list of hosts will be cleared.</p>						
Prefix no	Yes						
Change settings	Yes						
Multiple input	Yes						
Interface type	WiFiMaster						
Synopsis	<pre>(config-if)> mac vht40 <vht40> (config-if)> no mac vht40 [<vht40>]</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>vht40</td> <td>MAC address</td> <td>MAC address of the host.</td> </tr> </tbody> </table>	Argument	Value	Description	vht40	MAC address	MAC address of the host.
Argument	Value	Description					
vht40	MAC address	MAC address of the host.					
Example	<pre>(config-if)> mac vht40 fa:8e:80:ec:12:11 Network::Interface::Rtx::WifiMaster: "WifiMaster1": added ► "fa:8e:80:ec:12:11" to VHT40 compatibility list. (config-if)> no mac vht40 fa:8e:80:ec:58:e2 Network::Interface::Rtx::WifiMaster: "WifiMaster1": removed ► "fa:8e:80:ec:12:11" from VHT40 compatibility list. (config-if)> no mac vht40 Network::Interface::Rtx::WifiMaster: "WifiMaster1": cleared VHT40 ► compatibility list.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>3.06</td> <td>The interface mac vht40 command has been introduced.</td> </tr> </tbody> </table>	Version	Description	3.06	The interface mac vht40 command has been introduced.		
Version	Description						
3.06	The interface mac vht40 command has been introduced.						

3.29.143 interface mobile lte disable-band

Description Disable specified LTE band.

Command with **no** prefix enables LTE band. If you use no argument, the entire list of LTE bands will be enabled.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type Usb

Synopsis

```
(config-if)> mobile lte disable-band <band>
(config-if)> no mobile lte disable-band [ <band> ]
```

Argument	Value	Description
band	<i>Integer</i>	LTE band in the range from 1 to 43 inclusively.

Example

```
(config-if)> mobile lte disable-band 22
UsbQmi::Interface: "UsbQmi0": LTE band 22 disabled.

(config-if)> no mobile lte disable-band 22
UsbQmi::Interface: "UsbQmi0": LTE band 22 enabled.

(config-if)> no mobile lte disable-band
UsbQmi::Interface: "UsbQmi0": all LTE bands are enabled.
```

Version	Description
3.04	The interface mobile lte disable-band command has been introduced.

3.29.144 interface mobile name-servers

Description Use [DNS](#) server addresses which are received via mobile operator. By default, the function is enabled.

Command with **no** prefix denies using of [DNS](#) server addresses which are received via mobile operator.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Usb

Synopsis

```
(config-if)> mobile name-servers
```

```
(config-if)> no mobile name-servers
```

Example

```
(config-if)> mobile name-servers
UsbQmi::Interface: "UsbQmi0": automatic name servers via QMI are ►
enabled.
```

```
(config-if)> no mobile name-servers
UsbQmi::Interface: "UsbQmi0": automatic name servers via QMI are ►
disabled.
```

History

Version	Description
3.06	The interface mobile name-servers command has been introduced.

3.29.145 interface mobile operator

Description

Set network identifier for *PLMN*.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Usb

Synopsis

```
(config-if)> mobile operator <PLMN>
```

```
(config-if)> no mobile operator
```

Arguments

Argument	Value	Description
PLMN	<i>String</i>	Operator identifier.

Example

```
(config-if)> mobile operator 25011
UsbQmi::Interface: Operator PLMN is set to "25011".
```

```
(config-if)> no mobile operator
UsbQmi::Interface: Operator PLMN cleared.
```

History

Version	Description
3.04	The interface mobile operator command has been introduced.

3.29.146 interface mobile pdp

Description Choose IP protocol version for USB modem. IPv6 can be selected only if the corresponding system component is installed. By default, ipv4 value is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Usb

Synopsis

```
(config-if)> mobile pdp (ipv4 | ipv6 | ipv4v6)
(config-if)> no mobile pdp
```

Arguments

Argument	Value	Description
ipv4	<i>String</i>	IPv4 only.
ipv6	<i>String</i>	IPv6 only.
ipv4v6	<i>String</i>	IPv4 and IPv6 dual stack.

Example

```
(config-if)> mobile pdp ipv4
UsbQmi::Interface: Packet data protocol is set to "ipv4".
```

```
(config-if)> mobile pdp ipv4v6
UsbQmi::Interface: Packet data protocol is set to "ipv4v6".
```

```
(config-if)> no mobile pdp
Mobile::Interface: "UsbLte0": packet data protocol is reset to ►
default.
```

History

Version	Description
3.04	The interface mobile pdp command has been introduced.
3.08	The ipv6 argument and NO prefix were added.

3.29.147 interface mobile roaming

Description Enable mobile roaming.
Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input	No				
Interface type	Usb				
Synopsis	<pre>(config-if)> mobile roaming</pre> <pre>(config-if)> no mobile roaming</pre>				
Example	<pre>(config-if)> mobile roaming</pre> <pre>UsbQmi::Interface: "UsbQmi0": roaming is enabled.</pre> <pre>(config-if)> no mobile roaming</pre> <pre>UsbQmi::Interface: "UsbQmi0": roaming is disabled.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>3.03</td> <td>The interface mobile roaming command has been introduced.</td> </tr> </tbody> </table>	Version	Description	3.03	The interface mobile roaming command has been introduced.
Version	Description				
3.03	The interface mobile roaming command has been introduced.				

3.29.148 interface mobile scan

Description	Run a mobile network scan. The scanning process takes 20-50 seconds. Command with no prefix stops scanning.				
Prefix no	Yes				
Change settings	No				
Multiple input	No				
Interface type	Usb				
Synopsis	<pre>(config-if)> mobile scan</pre> <pre>(config-if)> no mobile scan</pre>				
Example	<pre>(config-if)> mobile scan</pre> <pre>UsbQmi::Interface: Network scanning started.</pre> <pre>(config-if)> no mobile scan</pre> <pre>UsbQmi::Interface: Network scanning stopped.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>3.05</td> <td>The interface mobile scan command has been introduced.</td> </tr> </tbody> </table>	Version	Description	3.05	The interface mobile scan command has been introduced.
Version	Description				
3.05	The interface mobile scan command has been introduced.				

3.29.149 interface mobile umts disable-band

Description	Disable specified UMTS band. Command with no prefix enables UMTS band. If you use no argument, the entire list of UMTS bands will be enabled.
Prefix no	Yes
Change settings	Yes
Multiple input	Yes
Interface type	Usb

Synopsis

```
(config-if)> mobile umts disable-band <band>
(config-if)> no mobile umts disable-band [ <band> ]
```

Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>band</td> <td><i>Integer</i></td> <td>UMTS band. Can take values 1, 2, 3, 4, 5, 6, 7, 8, 9, 11, 26.</td> </tr> </tbody> </table>	Argument	Value	Description	band	<i>Integer</i>	UMTS band. Can take values 1, 2, 3, 4, 5, 6, 7, 8, 9, 11, 26.
Argument	Value	Description					
band	<i>Integer</i>	UMTS band. Can take values 1, 2, 3, 4, 5, 6, 7, 8, 9, 11, 26.					

Example

```
(config-if)> mobile umts disable-band 6
UsbQmi::Interface: "UsbQmi0": WCDMA band 6 disabled.

(config-if)> no mobile lte disable-band 6
UsbQmi::Interface: "UsbQmi0": WCDMA band 6 enabled.

(config-if)> no mobile lte disable-band
UsbQmi::Interface: "UsbQmi0": all WCDMA bands are enabled.
```

History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>3.05</td> <td>The interface mobile umts disable-band command has been introduced.</td> </tr> </tbody> </table>	Version	Description	3.05	The interface mobile umts disable-band command has been introduced.
Version	Description				
3.05	The interface mobile umts disable-band command has been introduced.				

3.29.150 interface modem connect

Description	Command to connect for USB-modem. Modem must be initialized with tty init command before execution. Command with no prefix terminates the connection.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	UsbModem

Synopsis

```
(config-if)> modem connect ( dial <phone> | <string> )
```

```
(config-if)> no modem connect
```

Arguments

Argument	Value	Description
phone	<i>String</i>	The phone number for dialing.
string	<i>String</i>	An arbitrary command.

Example

```
(config-if)> modem connect dial *99#
Network::Interface::UsbModem: "UsbModem0": connect sequence saved.
```

```
(config-if)> modem connect dial *99#
Network::Interface::UsbModem: "UsbModem0": connect sequence ►
cleared.
```

History

Version	Description
2.00	The interface modem connect command has been introduced.

3.29.151 interface modem timeout

Description

Set modem connection timeout. Setting is used for slow modems/connections. By default, 30 value is used.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

UsbModem

Synopsis

```
(config-if)> modem timeout <timeout>
```

```
(config-if)> no modem timeout
```

Arguments

Argument	Value	Description
timeout	<i>Integer</i>	Value of timeout in seconds. Can take values in the range from 1 to 600 inclusively.

Example

```
(config-if)> modem timeout 300
Network::Interface::UsbModem: "UsbModem0": connect timeout is ►
300 seconds.
```

```
(config-if)> no modem timeout
Network::Interface::UsbModem: "UsbModem0": connect timeout is ►
unchanged, defaults to 30 seconds.
```

History

Version	Description
2.05	The interface modem timeout command has been introduced.

3.29.152 interface openvpn accept-routes

Description Enable receiving routes from a remote side via OpenVPN.

Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type OpenVPN

Synopsis

```
(config-if)> openvpn accept-routes
(config-if)> no openvpn accept-routes
```

Example

```
(config-if)> openvpn accept-routes
Network::Interface::OpenVpn: "OpenVPN0": enable automatic routes ►
accept via tunnel.
```

```
(config-if)> no openvpn accept-routes
Network::Interface::OpenVpn: "OpenVPN0": disable automatic routes ►
accept via tunnel.
```

History

Version	Description
2.10	The interface openvpn accept-routes command has been introduced.

3.29.153 interface openvpn connect

Description Set interface for OpenVPN connection. If you use no argument, connection is set via any interface.

Prefix no No

Change settings Yes

Multiple input No

Interface type	OpenVPN							
Synopsis	<pre>(config-if)> openvpn connect [via <via>]</pre> <pre>(config-if)> openvpn connect</pre>							
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>via</td> <td><i>Interface</i></td> <td>Full interface name or an alias.</td> </tr> </tbody> </table>		Argument	Value	Description	via	<i>Interface</i>	Full interface name or an alias.
Argument	Value	Description						
via	<i>Interface</i>	Full interface name or an alias.						
Example	<pre>(config-if)> openvpn connect via ISP Network::Interface::OpenVpn: "OpenVPN0": set connection via ISP.</pre> <pre>(config-if)> openvpn connect Network::Interface::OpenVpn: "OpenVPN0": set connection via any ► interface.</pre>							
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.10</td> <td>The interface openvpn connect command has been introduced.</td> </tr> </tbody> </table>		Version	Description	2.10	The interface openvpn connect command has been introduced.		
Version	Description							
2.10	The interface openvpn connect command has been introduced.							

3.29.154 interface openvpn name-servers

Description	<p>Use DNS server addresses which are received via OpenVPN server. By default, the function is enabled.</p> <p>Command with no prefix denies using of DNS server addresses which are received via OpenVPN server.</p>
Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	OpenVPN
Synopsis	<pre>(config-if)> openvpn name-servers</pre> <pre>(config-if)> no openvpn name-servers</pre>
Example	<pre>(config-if)> openvpn name-servers Network::Interface::OpenVpn: "OpenVPN0": automatic name servers ► via tunnel are enabled.</pre> <pre>(config-if)> no openvpn name-servers Network::Interface::OpenVpn: "OpenVPN0": automatic name servers ► via tunnel are disabled.</pre>

History

Version	Description
3.06	The interface openvpn name-servers command has been introduced.

3.29.155 interface peer

Description

Specify ID of the remote peer to which the *PPP* connection will be used. A more precise meaning of configuration depends on interface type. For example, for PPPoE the **interface peer** command specifies the name of access hub, for PPTP — remote host name or IP address, and for SSTP — specifies a remote server with port 443 or another.

Command with **no** prefix cancels the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

PPP

Synopsis

```
(config-if)> peer <peer>
```

```
(config-if)> no peer
```

Arguments

Argument	Value	Description
peer	<i>String</i>	Remote connection point ID or remote server address <code>host.example.net:port</code> . By default, port number is 443.

Example

```
(config-if)> peer 111
```

```
(config-if)> peer host.example.net:5555
```

History

Version	Description
2.00	The interface peer command has been introduced.
2.12	Added the ability to change the port of a remote server.

3.29.156 interface peer-isolation

Description

Enable the isolation of wireless clients in the Home segment. The setting applies on the Bridge interface and has an effect for all access points included in it. Also, it blocks traffic from wireless clients inside the L2 network.

Command with **no** prefix cancels the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Bridge

Synopsis

```
(config-if)> peer-isolation
(config-if)> no peer-isolation
```

Example

```
(config-if)> peer-isolation
Network::Interface::Ethernet: "Bridge0": peer isolation enabled.

(config-if)> no peer-isolation
Network::Interface::Ethernet: "Bridge0": peer isolation disabled.
```

History

Version	Description
2.10	The interface peer-isolation command has been introduced.

3.29.157 interface ping-check profile

Description Assign *Ping Check* profile to the interface.
Command with **no** prefix cancels the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-if)> ping-check profile <profile>
(config-if)> no ping-check profile
```

Arguments

Argument	Value	Description
profile	<i>String</i>	Profile name to assign.

Example

```
(config-if)> ping-check profile test
PingCheck::Client: Set ping-check profile for interface "ISP".

(config-if)> no ping-check profile
PingCheck::Client: Reset ping-check profile for interface "ISP".
```

History

Version	Description
2.04	The interface ping-check profile command has been introduced.

3.29.158 interface ping-check restart

Description Enable interface restart if *Ping Check* is triggered (Internet is not available on interface). By default the function is disabled.

Command with **no** prefix disables the function.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-if)> ping-check restart [ <interface> ]
```

```
(config-if)> no ping-check restart
```

Arguments

Argument	Value	Description
interface	<i>Interface</i>	Full name or alias of the interface to be restarted when the <i>Ping Check</i> on the binded interface is triggered. If this argument is not specified, the interface binded with <i>Ping Check</i> profile will be restarted.

Example

```
(config-if)> ping-check restart
PingCheck::Client: Enabled "PPPoE0" interface restart.
```

```
(config-if)> ping-check restart ISP
PingCheck::Client: Enabled "ISP" interface restart for "PPPoE0".
```

```
(config-if)> no ping-check restart
PingCheck::Client: Remove restart settings for "PPPoE0".
```

History

Version	Description
3.04	The interface ping-check restart command has been introduced.

3.29.159 interface pmf

Description Enable *PMF* functionality.

Command with **no** prefix disables the feature.

Prefix no Yes**Change settings** Yes**Multiple input** No**Interface type** WiFi

Synopsis

```
(config-if)> pmf
(config-if)> no pmf
```

Example

```
(config-if)> pmf
Network::Interface::Rtx::WifiStation: "WifiMaster0/WifiStation0": ►
PMF enabled.

(config-if)> no pmf
Network::Interface::Rtx::WifiStation: "WifiMaster0/WifiStation0": ►
PMF disabled.
```

History

Version	Description
2.09	The interface pmf command has been introduced.

3.29.160 interface power

Description Set the transmitter power for the radio interface. Transmitter power is limited by the hardware capabilities and state laws applicable to radio broadcast. This command allows one to only reduce the power of the transmitter relative to its maximum power, such as to decrease potential interference with other devices in this range/band. By default, the setting value of the power is set to 100.

Prefix no No**Change settings** Yes**Multiple input** No**Interface type** Radio

Synopsis

```
(config-if)> power <power>
```

Arguments

Argument	Value	Description
power	<i>Integer</i>	The transmitter power as the percentage of the maximum power (from 1 to 100).

Example

```
(config-if)> power 1
Network::Interface::Rtx::WifiMaster: "WifiMaster0": TX power ►
level set.
```

History

Version	Description
2.00	The interface power command has been introduced.

3.29.161 interface pppoe service

Description Specify PPPoE service. If service is not defined, then PPPoE client will be connected to an arbitrary service.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPPoE

Synopsis

```
(config-if)> pppoe service <service>
```

```
(config-if)> no pppoe service
```

Arguments

Argument	Value	Description
service	<i>String</i>	Name of PPPoE service.

Example

```
(config-if)> pppoe service TEST
Network::Interface::Pppoe: "PPPoE0": service set.
```

```
(config-if)> no pppoe service
Network::Interface::Pppoe: "PPPoE0": service removed.
```

History

Version	Description
2.05	The interface pppoe service command has been introduced.

3.29.162 interface pppoe session auto-cleanup

Description Enable sending a PADT packet for the unfinished PPPoE session. By default the option is enabled.

Command with **no** prefix disables sending a PADT packet.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPPoE

Synopsis	<pre>(config-if)> pppoe session auto-cleanup</pre> <pre>(config-if)> no pppoe session auto-cleanup</pre>				
Example	<pre>(config-if)> pppoe session auto-cleanup</pre> <pre>Network::Interface::Ppp: "PPPoE0": enabled session auto cleanup.</pre> <pre>(config-if)> no pppoe session auto-cleanup</pre> <pre>Network::Interface::Ppp: "PPPoE0": disabled session auto cleanup.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>3.03</td> <td>The interface pppoe session auto-cleanup command has been introduced.</td> </tr> </tbody> </table>	Version	Description	3.03	The interface pppoe session auto-cleanup command has been introduced.
Version	Description				
3.03	The interface pppoe session auto-cleanup command has been introduced.				

3.29.163 interface preamble-short

Description	Use short <i>preamble</i> . By default, the setting is disabled.				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Interface type	Radio				
Synopsis	<pre>(config-if)> preamble-short</pre> <pre>(config-if)> no preamble-short</pre>				
Example	<pre>(config-if)> preamble-short</pre> <pre>Network::Interface::Rtx::WifiMaster: "WifiMaster0": short ► preamble enabled.</pre> <pre>(config-if)> no preamble-short</pre> <pre>Network::Interface::Rtx::WifiMaster: "WifiMaster0": short ► preamble disabled.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.00</td> <td>The interface preamble-short command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.00	The interface preamble-short command has been introduced.
Version	Description				
2.00	The interface preamble-short command has been introduced.				

3.29.164 interface proxy connect

Description	Start the process of connecting to the proxy server. By default, connection is set via any interface.
--------------------	---

Command with **no** prefix resets value to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Proxy

Synopsis

```
(config-if)> proxy connect [ via <via> ]
(config-if)> no proxy connect
```

Argument	Value	Description
via	<i>Interface</i>	Interface through which remote node is accessed.

Example

```
(config-if)> proxy connect via WifiMaster1/WifiStation0
Proxy::Interface: "Proxy0": set connection via ►
WifiMaster1/WifiStation0.

(config-if)> no proxy connect
Proxy::Interface: "Proxy0": set connection via any interface.
```

Version	Description
3.09	The interface proxy connect command has been introduced.

3.29.165 interface proxy protocol

Description Set the connection protocol. By default, the http connection protocol is used.
Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Proxy

Synopsis

```
(config-if)> proxy protocol <protocol>
(config-if)> no proxy protocol
```

Argument	Value	Description
protocol	socks5	Use SOCKS5 protocol for connection.

Argument	Value	Description
	http	Use HTTP or HTTPS protocol for connection.

Example

```
(config-if)> proxy protocol socks5
Proxy::Interface: "Proxy0": set proxy protocol to socks5.
```

```
(config-if)> no proxy protocol
Proxy::Interface: "Proxy0": reset proxy protocol.
```

History

Version	Description
3.09	The interface proxy protocol command has been introduced.

3.29.166 interface proxy socks5-udp

Description

Enable [UDP](#) mode for the [SOCKS5](#) protocol. By default, the [UDP](#) mode is disabled.

Command with **no** prefix disables the mode.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Proxy

Synopsis

```
(config-if)> proxy socks5-udp
```

```
(config-if)> no proxy socks5-udp
```

Example

```
(config-if)> proxy socks5-udp
Proxy::Interface: "Proxy0": enable SOCKS5 UDP mode.
```

```
(config-if)> no proxy socks5-udp
Proxy::Interface: "Proxy0": disable SOCKS5 UDP mode.
```

History

Version	Description
4.0	The interface proxy socks5-udp command has been introduced.

3.29.167 interface proxy udpgw-upstream

Description

Set proxy server for [UDP](#) connection.

Note: Command is available if the [SOCKS5](#) is the connection protocol.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Proxy

Synopsis

```
(config-if)> proxy udpgw-upstream <host> [ <port> ]
```

```
(config-if)> no proxy udpgw-upstream
```

Arguments

Argument	Value	Description
host	<i>String</i>	IP-address or domain name of proxy server.
port	<i>Integer</i>	The UDP port of server.

Example

```
(config-if)> proxy udpgw-upstream 202.150.93.130 8080  
Proxy::Interface: "Proxy0": set proxy UDPGW upstream to ►  
202.150.93.130:8080.
```

```
(config-if)> no proxy udpgw-upstream  
Proxy::Interface: "Proxy0": cleared proxy UDPGW upstream.
```

History

Version	Description
4.0	The interface proxy udpgw-upstream command has been introduced.

3.29.168 interface proxy upstream

Description Set proxy server for connection.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Proxy

Synopsis

```
(config-if)> proxy upstream <host> [ <port> ]
```

```
(config-if)> no proxy upstream
```

Argument	Value	Description
host	<i>String</i>	IP-address or domain name of proxy server.
port	<i>Integer</i>	The server port.

Example

```
(config-if)> proxy upstream 161.8.174.48 1080
Proxy::Interface: "Proxy0": set proxy upstream to ►
161.8.174.48:1080.
```

```
(config-if)> no proxy upstream
Proxy::Interface: "Proxy0": cleared proxy upstream.
```

History

Version	Description
3.09	The interface proxy upstream command has been introduced.

3.29.169 interface reconnect-delay

Description Set the period of time between reconnection attempts. By default, value 3 is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPP

Synopsis | (config-if)> **reconnect-delay** <sec>

| (config-if)> **no reconnect-delay**

Arguments

Argument	Value	Description
sec	<i>Integer</i>	Value of time in seconds. Can take values in the range from 3 to 600.

Example

```
(config-if)> reconnect-delay 3
Network::Interface::Ppp: "PPTP1": reconnect delay set to 3 ►
seconds.
```

```
(config-if)> no reconnect-delay
Network::Interface::Ppp: "PPTP0": reconnect delay reset to ►
default.
```

History

Version	Description
2.11	The interface reconnect-delay command has been introduced.

3.29.170 interface rekey-interval**Description**

Set the period of time between automatic changes of the secret keys, which all devices on the network share. By default, 86400 value is used.

Command with **no** prefix disables keys changing.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

WiFi

Synopsis

```
(config-if)> rekey-interval <interval>
```

```
(config-if)> no rekey-interval
```

Arguments

Argument	Value	Description
interval	<i>Integer</i>	Value of rekey interval in seconds.

Example

```
(config-if)> rekey-interval 3000
Network::Interface::Rtx::WifiMaster: "WifiMaster0": rekey ►
interval is 3000 sec.
```

```
(config-if)> no rekey-interval
Network::Interface::Rtx::WifiMaster: "WifiMaster0": rekey ►
interval disabled.
```

History

Version	Description
2.06	The interface rekey-interval command has been introduced.
2.15	Added default value of rekey interval 3600 sec.
3.04	Default value of rekey interval is changed to 86400 sec.

3.29.171 interface rename**Description**

Assign arbitrary name to the specified network interface. The interface can be referred to by the new name just like by ID.

Command with **no** prefix removes the setting.

Warning: Do not rename Home interface. This can cause unpredictable system errors.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-if) rename <rename>
```

```
(config-if) no rename
```

Arguments

Argument	Value	Description
rename	<i>String</i>	New interface name.

Example

```
(config-if)> rename PPPoE1
Network::Interface::Base: "PPPoE0": renamed to "PPPoE1".
```

```
(config-if)> no rename
Network::Interface::Base: "PPPoE0": name cleared.
```

History

Version	Description
2.08	The interface rename command has been introduced.

3.29.172 interface rf e2p set

Description Change the memory cell value of calibration data at *offset* by *value* for the specified interface.

Prefix no No

Change settings No

Multiple input No

Interface type Radio

Synopsis

```
(config-if) rf e2p set <offset> <value>
```

Arguments

Argument	Value	Description
offset	<i>Hex</i>	Memory cell location. Can take values in the range from 1E0 to 1FE.
value	<i>Hex</i>	Value to be set. Can take values in the range from 0 to FFFF.

Example `(config-if)> rf e2p set 1f6 0`
 Network::Interface::Rtx::WifiMaster: EEPROM [0x01F6]:0000 set.

Version	Description
2.04	The interface rf e2p set command has been introduced.

3.29.173 interface role

Description Set a role for the interface. Multiple roles can be assigned to one interface. Command is used for correct view of VLAN connections in the web interface.

Command with **no** prefix removes the role. If you use no arguments, the entire list of roles will be removed.

Prefix no Yes

Change settings No

Multiple input Yes

Synopsis

```
(config-if)> role <role> [ for <ifor> ]
(config-if)> no role [ role ]
```

Argument	Value	Description
role	inet	Interface is used for Internet connection.
	iptv	Interface is used for IPTV service.
	voip	Interface is used for VoIP service.
	misc	Interface is used for IP Policy .
ifor	<i>Interface</i>	Full interface name or an alias.

Example

```
(config-if)> role iptv for GigabitEthernet1
Network::Interface::Base: "GigabitEthernet1": assigned role ▶
"iptv" for GigabitEthernet1.

(config-if)> no role iptv for GigabitEthernet1
Network::Interface::Base: "GigabitEthernet1": deleted role "iptv".

(config-if)> no role
Network::Interface::Base: "GigabitEthernet1": deleted all roles.
```

Version	Description
2.06	The interface role command has been introduced.
2.10	Argument <code>misc</code> was added.

3.29.174 interface rrm

Description Enable [RRM](#) for search of nearby APs according to IEEE 802.11k standard in order to provide this AP list to the subscriber device by request. By default, the option is disabled.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type AccessPoint

Synopsis

```
(config-if)> rrm
(config-if)> no rrm
```

Example

```
(config-if)> rrm
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ►
RRM enabled.
```

```
(config-if)> no rrm
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ►
RRM disabled.
```

History

Version	Description
2.13	The interface rrm command has been introduced.

3.29.175 interface schedule

Description Assign a schedule to the interface. Schedule must be created and customized with [schedule action](#) command before execution.

Command with **no** prefix unbinds the schedule.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-if)> schedule <schedule>
(config-if)> no schedule
```

Arguments

Argument	Value	Description
schedule	<i>Schedule</i>	The name of the schedule that was created with schedule group of commands.

Example

```
(config-if)> schedule WIFI
Network::Interface::Base: "WifiMaster0": schedule is "WiFi".
```

```
(config-if)> no schedule
Network::Interface::Base: "WifiMaster0": schedule cleared.
```

History

Version	Description
2.06	The interface schedule command has been introduced.

3.29.176 interface security-level

Description

Specify the interface security level. The security levels define the firewall logic:

- Allow establishing private → public connections.
- Prohibit establishing connections coming to the public interface, i. e. in the direction public → private and public → public.
- The device itself accepts network connections (allows control) only from private interfaces.
- Data transfer between private interfaces can be allowed or disallowed depending on the **isolate-private** global parameter.
- protected interfaces have no access to device and to other private/protected subnetworks, but they have access to public interfaces and to the internet. The device provides only DHCP and DNS services to the protected segments.
- Data transfer from private to protected interfaces is forbidden by default. To allow such connection use the **no isolate-private** command.

Note: By default, to all newly created interfaces public security level assigned.

Access lists **access-list** have higher priority than the security levels, so they can be used to set additional rules of packet filtering.

Prefix no No

Change settings Yes

Multiple input No

Interface type IP

Synopsis | (config-if)> **security-level** (public | private | protected)

Example Despite the fact that there is no functionality to disable the firewall completely, it is possible to disable it for particular directions. Suppose that it is necessary to allow data transfer between the “home” network Home and global network PPPoE0. To accomplish that, to both interfaces must be assigned private security level and function **isolate-private** must be disabled.

```
(config)> interface Home security-level private
Network::Interface::IP: "Bridge0": security level set to ►
"private".
```

```
(config)> interface PPPoE0 security-level private
Network::Interface::IP: "PPPoE0": security level set to "private".
```

```
(config)> no isolate-private
Netfilter::Manager: Private networks not isolated.
```

Note: The firewall and the address translation — are the functions designed to solve fundamentally different problems. Enabling NAT between Home and PPPoE0 interfaces in the configuration shown above, does not prohibit access to the network Home from the global network. Even as the address translation is enabled by command **ip nat Home**, the packets from PPPoE0 will get to Home network.

History

Version	Description
2.00	The interface security-level command has been introduced.
2.06	The protected parameter was added.

3.29.177 interface sim pin

Description Set PIN-code for SIM card.
Command with **no** prefix removes PIN-code.

Prefix no Yes

Change settings No

Multiple input No

Interface type Usb

Synopsis | (config-if)> **sim pin** <pin>

```
(config-if)> no sim pin
```

Arguments

Argument	Value	Description
pin	<i>String</i>	4 to 8 digits PIN.

Example

```
(config-if)> sim pin 0000
Mobile::Interface: "UsbLte0": PIN code has been set.
```

```
(config-if)> no sim pin
Mobile::Interface: "UsbLte0": PIN code has been reset.
```

History

Version	Description
3.02	The interface sim pin command has been introduced.
4.00	Prefix no was added.

3.29.178 interface sim slot

Description

Switch SIM-slot for QMI modem. By default, the 1 slot is set.

Command with **no** prefix resets setting to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Usb

Synopsis

```
(config-if)> sim slot <slot>
```

```
(config-if)> no sim slot
```

Arguments

Argument	Value	Description
slot	1	Set 1 or 2 slot.
	2	

Example

```
(config-if)> sim slot 2
Mobile::Interface: "UsbQmi0": SIM slot is set to "2".
```

```
(config-if)> no sim slot
Mobile::Interface: "UsbQmi0": SIM slot is reset to default.
```

History

Version	Description
3.08	The interface sim slot command has been introduced.

3.29.179 interface speed

Description Configure the speed of the Ethernet interface. By default, auto value is set.
Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

```
(config-if)> speed (10 | 100 | 1000 | auto)
(config-if)> no speed
```

Arguments

Argument	Value	Description
10	<i>Keyword</i>	Connection speed in Mbit/s.
100		
1000		
auto	<i>Keyword</i>	Automatical speed configuration.

Example

```
(config-if)> speed 1000
Network::Interface::Ethernet: "GigabitEthernet1/0": speed set ►
to 1000.
```

```
(config-if)> no speed
Network::Interface::Ethernet: "GigabitEthernet1/0": speed reset ►
to default (auto-negotiation).
```

History

Version	Description
2.06.B.1	The interface speed command has been introduced.

3.29.180 interface speed nonegotiate

Description Disable autonegotiation. By default, autonegotiation is enabled.
Command with **no** prefix enables autonegotiation.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

```
(config-if)> speed nonegotiate
```

```
(config-if)> no speed nonegotiate
```

Example

```
(config-if)> speed nonegotiate
Network::Interface::Ethernet: "GigabitEthernet1/0": ►
autonegotiation will be disabled for fixed speed.
```

```
(config-if)> no speed nonegotiate
Network::Interface::Ethernet: "GigabitEthernet1/0": ►
autonegotiation enabled..
```

History

Version	Description
2.08	The interface speed nonegotiate command has been introduced.

3.29.181 interface ssid

Description Specify the wireless network name (SSID) for WiFiStation and AccessPoint interfaces. Depending on the interface type, the SSID value is processed differently.

- For AccessPoint, the SSID is a necessary setting, without which the connection will not be accepted.
- For the WiFiStation SSID determines which access point WiFiStation will connect to. Without a specified SSID, WiFiStation can connect to any available wireless network at its discretion.

Command with **no** prefix resets network name to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type WiFi

Synopsis

```
(config-if)> ssid <ssid>
```

```
(config-if)> no ssid
```

Arguments

Argument	Value	Description
ssid	<i>String</i>	Wireless Network Name (SSID).

Example

```
(config-if)> ssid MYNETWORK
Network::Interface::Wireless: "WifiMaster0/AccessPoint0": SSID ►
saved.
```

```
(config-if)> no ssid
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ►
SSID reset.
```

History

Version	Description
2.00	The interface ssid command has been introduced.

3.29.182 interface standby enable

Description

Enable the standby mode. When the standby mode is enabled for an interface, it is automatically turned off when another WAN connection with a higher global priority is up and running.

The standby option is ignored in following cases:

- the global priority is not configured;
- the standby interface is included in a group, such as Bridge;
- the current WAN connection operates over the standby interface.

Command with **no** prefix disables the standby mode.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-if)> standby enable
```

```
(config-if)> no standby enable
```

Example

```
(config-if)> standby enable
Network::Interface::Standby: "CdcEthernet0": enabled.
```

```
(config-if)> no standby enable
Network::Interface::Standby: "CdcEthernet0": disabled.
```

History

Version	Description
4.00	The interface standby enable command has been introduced.

3.29.183 interface storm-control disable

Description

Enable the broadcast storm control on the Bridge interface. By default, the setting is enabled.

Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Bridge

Synopsis

```
(config-if)> storm-control disable
(config-if)> no storm-control disable
```

Example

```
(config-if)> storm-control disable
Network::Interface::Bridge: "Bridge0": disabled storm control and loop detector.

(config-if)> no storm-control disable
Network::Interface::Bridge: "Bridge0": enabled storm control and loop detector.
```

History

Version	Description
4.00	The interface storm-control disable command has been introduced.

3.29.184 interface switchport access

Description Set the port [VLAN](#) ID for access mode. Allows to transfer frames of the specified [VLAN](#) to the port and remove [VLAN](#) marker from the transferred frames.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Port

Synopsis

```
(config-if)> switchport access vlan <vid>
(config-if)> no switchport access vlan
```

Arguments

Argument	Value	Description
vid	<i>Integer</i>	Access VLAN ID. Can take values in the range from 1 to 4094 inclusively.

Example

```
(config-if)> switchport access vlan 1
Network::Interface::Switch: "GigabitEthernet0/0": set access ►
VLAN ID: 1.
```

Version	Description
2.06	The interface switchport access command has been introduced.

3.29.185 interface switchport friend

Description Configure unidirectional [VLAN](#) for multicast traffic in addition to access [VLAN](#). Port can be a member of one access [VLAN](#). This command enables forwarding of downstream traffic from a different [VLAN](#) (called "friend"). Friend packets are transmitted without a tag.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Port

Synopsis

```
(config-if)> switchport friend vlan <vid>
(config-if)> no switchport friend vlan
```

Argument	Value	Description
vid	<i>Integer</i>	Friend VLAN ID. Can take values in the range from 1 to 4094 inclusively.

Example

```
(config-if)> switchport friend vlan 2
Network::Interface::Switch: "GigabitEthernet0/0": set friend ►
VLAN ID: 2.
```

Version	Description
2.06	The interface switchport friend command has been introduced.

3.29.186 interface switchport mode

Description Set access or trunk mode for [VLAN](#). By default, access mode is set.

Command with **no** prefix resets setting to default.

Prefix no Yes**Change settings** Yes**Multiple input** No**Interface type** Port

Synopsis

```
(config-if)> switchport mode [ (access [q-in-q] ) | trunk ]
```

```
(config-if)> no switchport mode
```

Arguments

Argument	Value	Description
mode	access	Enable the access mode to a <i>VLAN</i> , that is the mode when only the untagged frames pass through the port. The incoming frames get tagged with the PVID marker, which is set with switchport access command. The port is an output one only for <i>VLAN</i> with PVID ID. Once a frame is transferred to the port, the <i>VLAN</i> marker gets removed.
	trunk	Enable the <i>VLAN</i> trunk mode, that is the mode when frames belonging to several VLANs get transmitted through the port. In this case each frame gets tagged. The list of IDs of <i>VLAN</i> networks that include the port is set with switchport trunk command.
q-in-q	<i>Keyword</i>	Enable double tagging.

Example

```
(config-if)> switchport mode access
Network::Interface::Switch: "GigabitEthernet0/1": access mode ►
enabled.
```

History

Version	Description
2.06	The interface switchport mode command has been introduced.

3.29.187 interface switchport trunk

Description

Add a port to the *VLAN*. Allows receiving and transmitting of the given *VLAN* frames to the port, such that VLAN marker from the transmitted frames is not removed. In the trunk mode it is allowed to add a port to several VLANs.

Command with **no** prefix removes the port from the specified *VLAN*. If you use no argument, the port will be removed from all the VLANs.

Prefix no Yes**Change settings** Yes

Multiple input	Yes						
Interface type	Port						
Synopsis	<pre>(config-if)> switchport trunk vlan <vid></pre> <pre>(config-if)> no switchport trunk vlan [vid]</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>vid</td> <td><i>Integer</i></td> <td><i>VLAN</i> ID. Can take values in the range from 1 to 4094 inclusively.</td> </tr> </tbody> </table>	Argument	Value	Description	vid	<i>Integer</i>	<i>VLAN</i> ID. Can take values in the range from 1 to 4094 inclusively.
Argument	Value	Description					
vid	<i>Integer</i>	<i>VLAN</i> ID. Can take values in the range from 1 to 4094 inclusively.					
Example	<pre>(config-if)> switchport trunk vlan 100</pre> <pre>Network::Interface::Switch: "GigabitEthernet0/1": set trunk VLAN ID: 100.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.06</td> <td>The interface switchport trunk command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.06	The interface switchport trunk command has been introduced.		
Version	Description						
2.06	The interface switchport trunk command has been introduced.						

3.29.188 interface traffic-counter action disconnect

Description	Disconnect from the provider when the traffic limit is reached.						
Prefix no	No						
Change settings	Yes						
Multiple input	No						
Interface type	Usb						
Synopsis	<pre>(config-if)> traffic-counter action <trigger> disconnect</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>trigger</td> <td>limit</td> <td>Disconnection trigger on a limit traffic.</td> </tr> </tbody> </table>	Argument	Value	Description	trigger	limit	Disconnection trigger on a limit traffic.
Argument	Value	Description					
trigger	limit	Disconnection trigger on a limit traffic.					
Example	<pre>(config-if)> traffic-counter action limit disconnect</pre> <pre>UsbQmi::TrafficCounter: "UsbQmi0": set disconnect action for trigger "limit".</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>3.06</td> <td>The interface traffic-counter action disconnect command has been introduced.</td> </tr> </tbody> </table>	Version	Description	3.06	The interface traffic-counter action disconnect command has been introduced.		
Version	Description						
3.06	The interface traffic-counter action disconnect command has been introduced.						

3.29.189 interface traffic-counter action sms-alert message

Description Set *SMS* alert message.

Prefix no No

Change settings Yes

Multiple input No

Interface type Usb

Synopsis

```
(config-if)> traffic-counter action <trigger> sms-alert message
<message>
```

Arguments

Argument	Value	Description
trigger	threshold	SMS alerting trigger is a threshold.
	limit	SMS alerting trigger is a traffic limit.
message	<i>String</i>	SMS alerting message.

Example

```
(config-if)> traffic-counter action threshold sms-alert message ►
TEXT
UsbQmi::TrafficCounter: "UsbQmi0": set message for trigger ►
"threshold".
```

History

Version	Description
3.06	The interface traffic-counter action sms-alert message command has been introduced.

3.29.190 interface traffic-counter action sms-alert phone

Description Set phone numbers for *SMS* alerting.

Prefix no No

Change settings Yes

Multiple input Yes

Interface type Usb

Synopsis

```
(config-if)> traffic-counter action <trigger> sms-alert phone <phone>
```

Arguments

Argument	Value	Description
trigger	threshold	SMS alerting trigger is a threshold.
	limit	SMS alerting trigger is a traffic limit.

Argument	Value	Description
phone	<i>String</i>	Phone number for SMS alerting. Up to three phone numbers can be set.

Example

```
(config-if)> traffic-counter action threshold sms-alert phone ►
+71112223344
UsbQmi::TrafficCounter: "UsbQmi0": add phone number ►
"+71112223344" for action "threshold".
```

History

Version	Description
3.06	The interface traffic-counter action sms-alert phone command has been introduced.

3.29.191 interface traffic-counter enable

Description

Enable the mobile traffic counter. By default, setting is disabled.
Command with **no** prefix disables the mobile traffic counter.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Usb

Synopsis

```
(config-if)> traffic-counter enable
```

```
(config-if)> no traffic-counter enable
```

Example

```
(config-if)> traffic-counter enable
UsbQmi::TrafficCounter: "UsbQmi0": enabled.
```

```
(config-if)> no traffic-counter enable
UsbQmi::TrafficCounter: "UsbQmi0": disabled.
```

History

Version	Description
3.06	The interface traffic-counter enable command has been introduced.

3.29.192 interface traffic-counter limit

Description

Set the traffic counter limit in megabytes, gigabytes or terabytes.
Command with **no** prefix resets configuration.

Prefix no Yes**Change settings** Yes**Multiple input** No**Interface type** Usb

Synopsis

```
(config-if)> traffic-counter limit <value> <unit>
```

```
(config-if)> no traffic-counter limit
```

Arguments

Argument	Value	Description
value	<i>Integer</i>	Limit traffic value.
unit	<i>String</i>	Limit value units: MB, GB, TB, MiB, GiB, TiB.

Example

```
(config-if)> traffic-counter limit 4 TB  

UsbQmi::TrafficCounter: "UsbQmi0": set limit to 4 TB.
```

```
(config-if)> no traffic-counter limit  

UsbQmi::TrafficCounter: "UsbQmi0": reset limit.
```

History

Version	Description
3.06	The interface traffic-counter limit command has been introduced.

3.29.193 interface traffic-counter monthly

Description Set the day of the month to restart the traffic counter.Command with **no** prefix resets configuration.**Prefix no** Yes**Change settings** Yes**Multiple input** No**Interface type** Usb

Synopsis

```
(config-if)> traffic-counter monthly <day-of-month>
```

```
(config-if)> no traffic-counter monthly
```

Arguments

Argument	Value	Description
day-of-month	<i>Integer</i>	The day of the month from 1 to 31 to restart the traffic counter.

Example (config-if)> **traffic-counter monthly 31**
 UsbQmi::TrafficCounter: "UsbQmi0": set day of month to "31".

(config-if)> **no traffic-counter monthly**
 UsbQmi::TrafficCounter: "UsbQmi0": reset day of month.

History

Version	Description
3.06	The interface traffic-counter monthly command has been introduced.

3.29.194 interface traffic-counter set

Description Set the current value of the traffic counter.

Prefix no No

Change settings Yes

Multiple input No

Interface type Usb

Synopsis (config-if)> **traffic-counter set** *<value>* *<unit>*

Arguments

Argument	Value	Description
value	<i>Integer</i>	Numeric counter value (either integer or floating point).
unit	<i>String</i>	Limit value units: MB, GB, TB, MiB, GiB, TiB.

Example (config-if)> **traffic-counter set 1.54 GB**
 UsbQmi::TrafficCounter: "UsbQmi0": set value to 1.54 GB.

History

Version	Description
3.06	The interface traffic-counter set command has been introduced.

3.29.195 interface traffic-counter threshold

Description Set the traffic counter warning threshold.

Command with **no** prefix resets configuration.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Usb**Synopsis**

```
(config-if)> traffic-counter threshold <threshold>
```

```
(config-if)> no traffic-counter threshold
```

Arguments

Argument	Value	Description
threshold	<i>Integer</i>	Threshold value as a percentage of the limit. Can take values from 1 to 99 percent.

Example

```
(config-if)> traffic-counter threshold 99
UsbQmi::TrafficCounter: "UsbQmi0": set treshold to 99 percent ►
of the limit.
```

```
(config-if)> no traffic-counter threshold
UsbQmi::TrafficCounter: "UsbQmi0": reset threshold.
```

History

Version	Description
3.06	The interface traffic-counter threshold command has been introduced.

3.29.196 interface traffic-shape

Description

Set the limit of data rate on a specified interface in both directions. By default speed is not limited.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-if)> traffic-shape rate <rate> [ asymmetric <upstream-rate> ]
[ schedule <schedule> ]
```

```
(config-if)> no traffic-shape
```

Arguments

Argument	Value	Description
rate	<i>Integer</i>	Value of data download rate in Kbps. Limit could be in the range from 64 Kbps to 1 Gbps.
upstream-rate	<i>Integer</i>	Data upload rate in Kbps. Value can be in the range from 64 Kbps to 1 Gbps.
schedule	<i>Schedule</i>	The name of the schedule that was created with schedule group of commands.

Example

```
(config-if)> traffic-shape rate 5000
TrafficControl::Manager: "Bridge0" interface rate limited to ►
5000 kbit/s.
```

```
(config-if)> traffic-shape rate 5000 asymmetric 500
TrafficControl::Manager: "Bridge0" interface rate limited to ►
5000/500 kbit/s.
```

```
(config-if)> no traffic-shape
TrafficControl::Manager: Rate limit removed for "Bridge0" ►
interface.
```

History

Version	Description
2.05	The interface traffic-shape command has been introduced.
3.04	The upstream-rate argument was added.

3.29.197 interface tty init

Description Add initialization string at specified position *index* for RAS (UsbModem), NDIS (UsbLte), QMI (UsbQmi) modems.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Usb

Synopsis

```
(config-if)> tty init [ <index> ] <string> [ sleep <delay> ]
```

```
(config-if)> no tty init [ <index> ]
```

Arguments

Argument	Value	Description
index	<i>Integer</i>	Position, the line number where you want to insert a string.
string	<i>String</i>	Modem initialization string.
delay	<i>Integer</i>	Modem delay value in seconds.

Example

```
(config-if)> tty init AT^SYSCFG=14,2,3fffffff,0,1
Mobile::Interface: "UsbQmi0": initialization string inserted.
```

```
(config-if)> tty init AT^SYSCFG=14,2,3fffffff,0,1 sleep 1
Mobile::Interface: "UsbQmi0": initialization string inserted.
```

```
(config-if)> no tty init
Mobile::Interface: "UsbQmi0": initialization strings erased.
```

History

Version	Description
4.00	The interface tty init command has been introduced.

3.29.198 interface tty send

Description Send AT command to UsbLte, UsbQmi modems.

Prefix no No

Change settings Yes

Multiple input No

Interface type Usb

Synopsis | (config-if)> **tty send** *<command>* [*<expect>*] [*<timeout>*]

Arguments

Argument	Value	Description
command	<i>String</i>	AT command.
expect	<i>String</i>	Expected response. Default response is OK ERROR.
timeout	<i>Integer</i>	Time to wait in seconds. Default value is 3.

Example

```
(config-if)> tty send ATI
".Built@Aug 23 2019:16:28:33"
OK
Mobile::Interface: "UsbLte0": got expected response.

(config-if)> tty send ATI OK|ERROR 2
".Built@Aug 23 2019:16:28:33"
OK
Mobile::Interface: "UsbLte0": got expected response.

(config-if)> tty send ATI OKEY 2
".Built@Aug 23 2019:16:28:33"
OK
Mobile::Interface error[73140786]: "UsbLte0": timeout waiting ►
for expected response.
```

History

Version	Description
3.09	The interface tty send command has been introduced.

3.29.199 interface tunnel destination

Description Set the remote end of tunnel. If it is used in conjunction with an automatic *IPSec* connection associated with the tunnel, remote host becomes the initiator of an *IPSec* connection.

Command with **no** prefix resets the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Tunnel

Synopsis

```
(config-if)> tunnel destination <destination>
(config-if)> no tunnel destination
```

Arguments

Argument	Value	Description
destination	<i>String</i>	IP address or domain name of the remote host.

Example

```
(config-if)> tunnel destination example.net
Network::Interface::Tunnel: "Gre0": destination set to ►
example.net.
```

```
(config-if)> no tunnel destination
Network::Interface::Tunnel: "Gre0": destination was reset.
```

History

Version	Description
2.08	The interface tunnel destination command has been introduced.

3.29.200 interface tunnel eoip id

Description Set identifier of EoIP tunnel.

Command with **no** prefix resets the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Eoip

Synopsis

```
(config-if)> tunnel eoip id <id>
```

```
(config-if)> no tunnel eoip id
```

Arguments

Argument	Value	Description
id	<i>Integer</i>	Tunnel ID.

Example

```
(config-if)> tunnel eoip id 50  
Network::Interface::Tunnel: "Gre0": eoip id interface set to auto.
```

```
(config-if)> no tunnel eoip id  
Network::Interface::Tunnel: "Gre0": eoip id was reset.
```

History

Version	Description
2.08	The interface tunnel eoip id command has been introduced.

3.29.201 interface tunnel gre keepalive

Description

Enable support of Cisco-like keepalive for GRE tunnel. By default, interval is set to 5, count is set to 3.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Tunnel

Synopsis

```
(config-if)> tunnel gre keepalive <interval> [count]
```

```
(config-if)> no tunnel gre keepalive
```

Arguments

Argument	Value	Description
interval	<i>Integer</i>	The interval of sending keepalive packets in seconds. Can take values in the range from 0 to 60. If 0 is set, then GRE keepalive replies is enabled only and the router will not react on the tunnel state change.
count	<i>Integer</i>	Number of attempts to send keepalive packets. Can take values in the range from 1 to 20.

Example

```
(config-if)> tunnel gre keepalive 10 7
Network::Interface::Gre: "Gre0": set GRE keepalive to 10 s (7 ►
retries).
```

```
(config-if)> no tunnel gre keepalive
Network::Interface::Gre: "Gre0": disable GRE keepalive.
```

```
(config-if)> tunnel gre keepalive 0
Network::Interface::Gre: "Gre0": enable only GRE keepalive ►
replies.
```

History

Version	Description
2.10	The interface tunnel gre keepalive command has been introduced.

3.29.202 interface tunnel source

Description Set the local end of tunnel. If it is used in conjunction with an automatic *IPSec* connection associated with the tunnel, then the reception mode of IPsec IKE connections is activated to establish a secure tunnel.

Prefix no No

Change settings Yes

Multiple input No

Interface type Tunnel

Synopsis `(config-if)> tunnel source (auto | <interface> | <address>)`

Arguments

Argument	Value	Description
auto	<i>Keyword</i>	Set the current working WAN interface.
interface	<i>Interface</i>	Full interface name or an alias.
address	<i>IP address</i>	Local IP-address of the tunnel.

Example

```
(config-if)> tunnel source auto
Network::Interface::Tunnel: "Gre0": set source interface to auto.
```

History

Version	Description
2.08	The interface tunnel source command has been introduced.
2.09	The auto argument has been added.
3.08	The no prefix was removed as obsolete.

3.29.203 interface tx-burst

Description Enable Wi-Fi packet aggregation (Tx Burst). By default, the setting is disabled. Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-if)> tx-burst
(config-if)> no tx-burst
```

Example

```
(config-if)> tx-burst
Network::Interface::Rtx::WifiMaster: Tx Burst enabled.
```

Version	Description
2.07	The interface tx-burst command has been introduced.

3.29.204 interface tx-queue length

Description Set the size of the queue of outgoing packets on the interface. By default, 1000 value is set.

Command with **no** prefix resets to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-if)> tx-queue length <length>
(config-if)> no tx-queue length
```

Argument	Value	Description
length	<i>Integer</i>	Queue length can take values in the range from 0 to 65536.

Example

```
(config-if)> tx-queue length 255
Network::Interface::Base: "L2TP0": TX queue length is 255.
```

```
(config-if)> no tx-queue length
Network::Interface::Base: "L2TP0": TX queue length reset to ►
default.
```

History	Version	Description
	3.06	The interface tx-queue length command has been introduced.

3.29.205 interface tx-queue scheduler cake

Description Set the *CAKE* package scheduler for the interface. By default, the value *cake* is used for DSL and USB-modem interfaces, *fq_code1* — for all others.

Command with **no** prefix resets the scheduler to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-if)> tx-queue scheduler cake
(config-if)> no tx-queue scheduler cake
```

Example

```
(config-if)> tx-queue scheduler cake
Network::Interface::Base: "L2TP0": set TX queue scheduler to ►
"cake".
```

```
(config-if)> no tx-queue scheduler cake
Network::Interface::Base: "L2TP0": set default TX queue scheduler.
```

History	Version	Description
	3.06	The interface tx-queue scheduler cake command has been introduced.

3.29.206 interface tx-queue scheduler fq_code1

Description Set the *FQ_CODEL* package scheduler for the interface. By default, the value *cake* is used for DSL and USB-modem interfaces, *fq_code1* — for all others.

Command with **no** prefix resets the scheduler to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-if)> tx-queue scheduler fq_code1
(config-if)> no tx-queue scheduler fq_code1
```

Example

```
(config-if)> tx-queue scheduler fq_codel
Network::Interface::Base: "L2TP0": set TX queue scheduler to ►
"fq_codel".
```

```
(config-if)> no tx-queue scheduler fq_codel
Network::Interface::Base: "L2TP0": set default TX queue scheduler.
```

History

Version	Description
3.06	The interface tx-queue scheduler fq_codel command has been introduced.

3.29.207 interface up

Description

Enable the network interface and persist the state “up” to the settings.

Command with **no** prefix disables the the network interface and deletes “up” from settings. Also **interface down** command can be used.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-if)> up
```

```
(config-if)> no up
```

Example

```
(config-if)> up
Interface enabled.
```

History

Version	Description
2.00	The interface up command has been introduced.

3.29.208 interface usb acq

Description

Lock 3G/LTE mode for Huawei USB-modems.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Usb

Synopsis

```
(config-if)> usb acq <acq>
```

```
(config-if)> no usb acq
```

Argument	Value	Description
acq	gsm	2G network.
	umts	3G network.
	lte	4G network.

Example

```
(config-if)> usb acq lte  
Network::Interface::Usb: "UsbLte0": ACQ saved.
```

```
(config-if)> no usb acq  
Network::Interface::Usb: "UsbLte0": ACQ cleared.
```

Version	Description
2.09	The interface usb acq command has been introduced.

3.29.209 interface usb apn

Description Set access point name (APN) for USB-modems in NDIS mode. Modem reboots after applying the command.

Command with **no** prefix resets the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Usb

Synopsis

```
(config-if)> usb apn <apn>
```

```
(config-if)> no usb apn
```

Argument	Value	Description
apn	<i>String</i>	Access point name.

Example

```
(config-if)> usb apn example.net  
Network::Interface::Usb: "UsbModem0": APN saved.
```

```
(config-if)> no usb apn  
Network::Interface::Usb: "UsbModem0": APN cleared.
```

History

Version	Description
2.05	The interface usb apn command has been introduced.

3.29.210 interface usb device-id

Description

Assign vendor and model ID to the UsbModem interface. It is necessary for modem and interface binding.

If there is an interface UsbModem[N] with the appropriate DeviceID, then automatic binding is occur. If there is no such interface, it will be created automatically with the appropriate DeviceID.

Command with **no** prefix deletes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Usb

Synopsis

```
(config-if)> usb device-id <vendor> <model>
```

```
(config-if)> no usb device-id
```

Arguments

Argument	Value	Description
vendor	<i>String</i>	Vendor info.
model	<i>String</i>	Model info.

Example

```
(config-if)> usb device-id 12d1 1001  
Device ID saved.
```

History

Version	Description
2.00	The interface usb device-id command has been introduced.

3.29.211 interface usb power-cycle

Description

Turn off power on the usb-modem for a specified period of time. This function is used to hardware reset usb-modem in case of freezing.

Prefix no

No

Change settings

No

Multiple input

No

Interface type Usb

Synopsis `(config-if)> usb power-cycle <pause>`

Arguments

Argument	Value	Description
pause	<i>Integer</i>	Period of time in which usb-modem will be disabled, in milliseconds.

Example

```
(config-if)> usb power-cycle 3000
Network::Interface::Usb: "UsbLte0": started 3000 ms. power cycle.
```

History

Version	Description
2.03	The interface usb power-cycle command has been introduced.

3.29.212 interface usb power-fail

Description Specify further actions in case the usb-modem power-off did not help.

Prefix no No

Change settings Yes

Multiple input No

Interface type Usb

Synopsis `(config-if)> usb power-fail <interval> (retry <pause> | reboot)`

Arguments

Argument	Value	Description
interval	<i>Integer</i>	Time to wait for modem detection after its power reset, in seconds. Can take values in the range from 0 to 60 inclusively.
pause	<i>Integer</i>	Period of time in which usb-modem will be disabled, in seconds. Can take values in the range from 0 to 60 inclusively.
reboot	<i>Keyword</i>	Reboot of the entire system.

Example

```
(config-if)> usb power-fail 60 reboot
Network::Interface::Usb: "YotaOne1": enabled power fail action: ►
reboot.
```

History

Version	Description
2.10	The interface usb power-fail command has been introduced.

3.29.213 interface usb wwan-force-connected

Description Disable CDC-modem link polling via HTTP. By default, the feature is disabled. Command with **no** prefix disables the function.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Usb

Synopsis

```
(config-if)> usb wwan-force-connected
(config-if)> no usb wwan-force-connected
```

Example

```
(config-if)> usb wwan-force-connected
Network::Interface::Usb: "UsbLte0": force WWAN link status.

(config-if)> no usb wwan-force-connected
Network::Interface::Usb: "UsbLte0": unforce WWAN link status.
```

History

Version	Description
2.12	The interface wwan-force-connected command has been introduced.

3.29.214 interface web-api address

Description Set the IP address to access the modem's web interface connected to the router. Command with **no** prefix deletes the address.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Usb

Synopsis

```
(config-if)> web-api address <address>
(config-if)> no web-api address
```

Arguments

Argument	Value	Description
address	<i>IP-address</i>	The web interface address.

Example

```
(config-if)> web-api address 192.168.8.1
Mobile::Interface: "CdcEthernet0": WEB address is set.
```

```
(config-if)> no web-api address
Mobile::Interface: "CdcEthernet0": WEB address cleared.
```

Version	Description
3.08	The interface web-api address command has been introduced.

3.29.215 interface web-api login

Description Specify the user name to access the modem's web interface connected to the router.

Command with **no** prefix deletes the user name.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Usb

Synopsis

```
(config-if)> web-api login <login>
```

```
(config-if)> no web-api login
```

Argument	Value	Description
login	<i>String</i>	User name for authentication. Maximum user name length is 64 characters.

Example

```
(config-if)> web-api login myadmin
Mobile::Interface: "CdcEthernet0": WEB login is set.
```

```
(config-if)> no web-api login
Mobile::Interface: "CdcEthernet0": WEB login cleared.
```

Version	Description
3.08	The interface web-api login command has been introduced.

3.29.216 interface web-api password

Description Set a password to access the modem's web interface connected to the router.

Command with **no** prefix deletes the password.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Usb

Synopsis

```
(config-if)> web-api password <password>
```

```
(config-if)> no web-api password
```

Argument	Value	Description
password	<i>String</i>	The password for authentication. Maximum password length is 64 characters.

Example

```
(config-if)> web-api password 12345678910  
Mobile::Interface: "CdcEthernet0": WEB password is set.
```

```
(config-if)> no web-api password  
Mobile::Interface: "CdcEthernet0": WEB password cleared.
```

Version	Description
3.08	The interface web-api password command has been introduced.

3.29.217 interface wireguard listen-port

Description Specify *UDP* port number to which incoming connections are accepted. By default, port number is not defined.

Command with **no** prefix resets the port.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Wireguard

Synopsis

```
(config-if)> wireguard listen-port <port>
```

```
(config-if)> no wireguard listen-port
```

Argument	Value	Description
port	<i>Integer</i>	Port number. Can take values in the range from 1 to 65535 inclusively.

Example

```
(config-if)> wireguard listen-port 11633
Wireguard::Interface: "Wireguard4": set listen port to "11633".
```

```
(config-if)> no wireguard listen-port
Wireguard::Interface: "Wireguard4": reset listen port.
```

Version	Description
3.03	The interface wireguard listen-port command has been introduced.

3.29.218 interface wireguard peer

Description Add the remote peer public key to configure the secure connection using the [WireGuard](#) protocol.

Command with **no** prefix removes specified key.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type Wireguard

Group entry (config-wg-peer)

Synopsis

```
(config-if)> wireguard peer <key>
```

```
(config-if)> no wireguard peer <key>
```

Argument	Value	Description
key	<i>String</i>	Value of the key. Latin letters, numbers and equal signs are acceptable. The key length is 44 characters (Base64-encoded 32-byte string representation).

Example

```
(config-if)> wireguard peer ►
gbp1gW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm0g=
(config-wg-peer)>
```

```
(config-if)> no wireguard peer ►
gbp1gW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm0g=
```

```
Wireguard::Interface: "Wireguard4": removed peer ▶
"gbp1gW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmmg0=".
```

History

Version	Description
3.03	The interface wireguard peer command has been introduced.

3.29.218.1 interface wireguard peer allow-ips**Description**

Add the subnet of IP addresses to which the transmission of packets inside the tunnel is allowed.

Note: You can add `0.0.0.0/0` subnet to allow transmission to any addresses.

Command with **no** prefix removes the subnet. If you use no argument, the entire list of subnets will be removed.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Interface type

Wireguard

Synopsis

```
(config-wg-peer)> allow-ips <address> <mask>
```

```
(config-wg-peer)> no allow-ips [ <address> <mask> ]
```

Arguments

Argument	Value	Description
address	<i>IP address</i>	Together with mask <i>mask</i> sets the subnet of IP addresses to be translated.
mask	<i>IP-mask</i>	Mask of subnet. There are two ways to enter the mask: the canonical form (for example, 255.255.255.0) and the form of prefix bit length (for example, /24).

Example

```
(config-wg-peer)> allow-ips 0.0.0.0/0
Wireguard::Interface: "Wireguard4": add allowed IPs ▶
"0.0.0.0/0.0.0.0" from peer ▶
"gbp1gW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm2g=".
```

```
(config-wg-peer)> allow-ips 192.168.11.0 255.255.255.0
Wireguard::Interface: "Wireguard4": add allowed IPs ▶
"192.168.11.0/255.255.255.0" from peer ▶
"gbp1gW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm2g=".
```

```
(config-wg-peer)> no allow-ips
Wireguard::Interface: "Wireguard4": clear allowed IPs of peer ►
"gbp1gW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm2g=".
```

History

Version	Description
3.03	The interface wireguard peer allow-ips command has been introduced.

3.29.218.2 interface wireguard peer endpoint**Description**

Set the remote peer address to which the *WireGuard* connection will be established.

Command with **no** prefix removes the endpoint.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Wireguard

Synopsis

```
(config-wg-peer)> endpoint <address> [:<port>]
```

```
(config-wg-peer)> no endpoint
```

Arguments

Argument	Value	Description
address	<i>IP address</i>	IP address or domain name of the server.
port	<i>Integer</i>	The <i>UDP</i> server port.

Example

```
(config-wg-peer)> endpoint 10.0.1.10:11635
Wireguard::Interface: "Wireguard4": set peer ►
"gbp1gW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm2g=" endpoint to ►
"10.0.1.10:11635".
```

```
(config-wg-peer)> no endpoint
Wireguard::Interface: "Wireguard4": reset endpoint for peer ►
"gbp1gW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm2g=".
```

History

Version	Description
3.03	The interface wireguard peer endpoint command has been introduced.

3.29.218.3 interface wireguard peer keepalive-interval

Description Set the interval of keepalive packet sending for *WireGuard* connection monitoring. By default, the interval is not set.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Wireguard

Synopsis

```
(config-wg-peer)> keepalive-interval <interval>
```

```
(config-wg-peer)> no keepalive-interval
```

Arguments

Argument	Value	Description
interval	<i>Integer</i>	The interval of keepalive packet sending in seconds. Can take values in the range from 3 to 3600 inclusively.

Example

```
(config-wg-peer)> keepalive-interval 3
Wireguard::Interface: "Wireguard4": set peer ►
"gbp1gW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm2g=" keepalive interval ►
to "3".
```

```
(config-wg-peer)> no keepalive-interval
Wireguard::Interface: "Wireguard4": reset persistent keepalive ►
interval for peer "gbp1gW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm2g=".
```

History

Version	Description
3.03	The interface wireguard peer keepalive-interval command has been introduced.

3.29.218.4 interface wireguard peer preshared-key

Description Set preshared key for *WireGuard* connection to remote peer. The preshared key (PSK) is an optional security improvement as per the *WireGuard* protocol and should be a unique PSK per client for highest security. By default, PSK is not used.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input	No						
Interface type	Wireguard						
Synopsis	<pre>(config-wg-peer)> preshared-key <pre-shared-key></pre> <pre>(config-wg-peer)> no preshared-key</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>preshared-key</td> <td><i>String</i></td> <td>Secret PSK key value. Latin letters, numbers and equal signs are acceptable. The key length is 44 characters.</td> </tr> </tbody> </table>	Argument	Value	Description	preshared-key	<i>String</i>	Secret PSK key value. Latin letters, numbers and equal signs are acceptable. The key length is 44 characters.
Argument	Value	Description					
preshared-key	<i>String</i>	Secret PSK key value. Latin letters, numbers and equal signs are acceptable. The key length is 44 characters.					
Example	<pre>(config-wg-peer)> preshared-key ► WY2fkHJZuDCbYew7L8whBMzkReVf8KKzWJrmaR79F8z= Wireguard::Interface: "Wireguard4": set preshared key for peer ► "gbplgW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm2g=".</pre> <pre>(config-wg-peer)> no preshared-key Wireguard::Interface: "Wireguard4": reset preshared key for peer ► "gbplgW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm2g=".</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>3.03</td> <td>The interface wireguard peer preshared-key command has been introduced.</td> </tr> </tbody> </table>	Version	Description	3.03	The interface wireguard peer preshared-key command has been introduced.		
Version	Description						
3.03	The interface wireguard peer preshared-key command has been introduced.						

3.29.219 interface wireguard private-key

Description	Set or generate the private key to connect to the remote peers via WireGuard protocol. By default, private key is not configured.						
Prefix no	No						
Change settings	No						
Multiple input	No						
Interface type	Wireguard						
Synopsis	<pre>(config-if)> wireguard private-key [<i><private-key></i>]</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>private-key</td> <td><i>String</i></td> <td>A new private key value. Latin letters, numbers and equal signs are acceptable. The key length is 44 characters.</td> </tr> </tbody> </table>	Argument	Value	Description	private-key	<i>String</i>	A new private key value. Latin letters, numbers and equal signs are acceptable. The key length is 44 characters.
Argument	Value	Description					
private-key	<i>String</i>	A new private key value. Latin letters, numbers and equal signs are acceptable. The key length is 44 characters.					
Example	<pre>(config-if)> wireguard private-key Wireguard::Interface: "Wireguard4": generated new private key.</pre>						

```
(config-if)> wireguard private-key ▶
UshaeghezaiJ7reo8iK6ear0eomujohkeen8jahX5uo=
Wireguard::Interface: "Wireguard4": set private key.
```

History

Version	Description
3.03	The interface wireguard private-key command has been introduced.

3.29.220 interface wmm

Description Enable [WMM](#) on the interface.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Access Point

Synopsis

```
(config-if)> wmm
```

```
(config-if)> no wmm
```

Example

```
(config-if)> wmm
WMM extensions enabled.
```

History

Version	Description
2.00	The interface wmm command has been introduced.

3.29.221 interface wpa-eap radius secret

Description Specify the shared secret for secure communication between a [RADIUS](#) server and a [RADIUS](#) client.

Command with **no** prefix deletes the shared secret.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Bridge

Synopsis

```
(config-if)> wpa-eap radius secret <secret>
```

```
(config-if)> no wpa-eap radius secret
```

Argument	Value	Description
secret	<i>String</i>	The value of <i>RADIUS</i> shared secret. Maximum key length is 64 characters.

Example

```
(config-if)> wpa-eap radius secret ►
(+>R#G`}-JNxru'i8i|LK}wBN9E^X0Xa{xFOG-N^%FaTnr|S(e(q$/LP2/tbX/#Q
Network::Interface::Rtx::WpaEap: Bridge0 RADIUS secret applied.

(config-if)> no wpa-eap radius secret
Network::Interface::Rtx::WpaEap: Bridge0 RADIUS secret cleared.
```

Version	Description
3.01	The interface wpa-eap radius secret command has been introduced.

3.29.222 interface wpa-eap radius server

Description Specify *RADIUS* server address.
Command with **no** prefix deletes the address.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Bridge

Synopsis

```
(config-if)> wpa-eap radius server <address> [:<port>]
(config-if)> no wpa-eap radius server
```

Argument	Value	Description
address	<i>IP address</i>	<i>RADIUS</i> server IP address.
port	<i>Integer</i>	<i>RADIUS</i> server port.

Example

```
(config-if)> wpa-eap radius server 192.168.10.10
Network::Interface::Rtx::WpaEap: Bridge0 RADIUS server set to ►
192.168.10.10.

(config-if)> wpa-eap radius server 192.168.10.10:1111
Network::Interface::Rtx::WpaEap: Bridge0 RADIUS server set to ►
192.168.10.10:1111.

(config-if)> no wpa-eap radius server
Network::Interface::Rtx::WpaEap: Bridge0 RADIUS server cleared.
```

History

Version	Description
3.01	The interface wpa-eap radius server command has been introduced.

3.29.223 interface wps

Description Enable [WPS](#) functionality.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type WiFi

Synopsis

```
(config-if)> wps
(config-if)> no wps
```

Example

```
(config-if)> wps
WPS functionality enabled.
```

History

Version	Description
2.00	The interface wps command has been introduced.

3.29.224 interface wps auto-self-pin

Description Enable [WPS](#) auto-self-pin mode. By default auto-self-pin mode is enabled. Command with **no** prefix disables this mode.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type WiFi

Synopsis

```
(config-if)> wps auto-self-pin
(config-if)> no wps auto-self-pin
```

Example

```
(config-if)> wps auto-self-pin
Network::Interface::Rtx::Wps: an auto self PIN mode enabled.
```

History	Version	Description
	2.04	The interface wps auto-self-pin command has been introduced.

3.29.225 interface wps button

Description Start WPS process using a software button. Process takes 2 minutes or until the first connection occurred.

Prefix no No

Change settings No

Multiple input No

Interface type WiFi

Synopsis `(config-if)> wps button <direction>`

Arguments	Argument	Value	Description
	direction	send	Send WiFi configuration.
		receive	Receive WiFi configuration from Titan.

Example `(config-if)> wps button send`
Sending WiFi configuration process started (software button mode).

History	Version	Description
	2.00	The interface wps button command has been introduced.

3.29.226 interface wps peer

Description Start WPS process using remote peer's PIN. Process takes 2 minutes or until the first connection occurred. By default, WPS PIN is disabled.

Prefix no No

Change settings No

Multiple input No

Interface type WiFi

Synopsis `(config-if)> wps peer <direction> <pin>`

Arguments

Argument	Value	Description
direction	send	Send WiFi configuration.
	receive	Receive WiFi configuration from the remote peer.
pin	<i>String</i>	PIN code of the remote peer.

Example

```
(config-if)> wps peer send 53794141
Network::Interface::Rtx::Wps: "WifiMaster0/AccessPoint0": peer ►
PIN WPS session started.
```

History

Version	Description
2.04	The interface wps peer command has been introduced.

3.29.227 interface wps self-pin

Description

Start WPS process using self PIN. Process takes 2 minutes or until the first connection occur.

Prefix no

No

Change settings

No

Multiple input

No

Interface type

WiFi

Synopsis

```
(config-if)> wps self-pin <direction>
```

Arguments

Argument	Value	Description
direction	send	Send WiFi configuration.
	receive	Receive WiFi configuration from Titan.

Example

```
(config-if)> wps self-pin receive
Receiving WiFi configuration process started (self PIN mode).
```

History

Version	Description
2.00	The interface wps self-pin command has been introduced.

3.30 ip arp

Description

Set static mapping between an IP address and a MAC address for hosts that do not support dynamic [ARP](#).

Command with **no** prefix removes entry from ARP table. If you use no arguments, the whole list of ARP entries will be removed.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config)> ip arp <ip> <mac>
(config)> no ip arp [ <ip> ]
```

Arguments

Argument	Value	Description
ip	<i>IP address</i>	IP address in four-part dotted decimal format corresponding to the local data-link address.
mac	<i>MAC address</i>	MAC address as six groups of two hexadecimal digits separated by colons.

Example

```
(config)> ip arp 192.168.2.50 a1:2e:84:85:f4:21
Network::ArpTable: Static ARP entry saved.
```

```
(config)> no ip arp 192.168.2.50
Network::ArpTable: Static ARP entry deleted for 192.168.2.50.
```

```
(config)> no ip arp
Network::ArpTable: Static ARP table cleared.
```

History

Version	Description
2.00	The ip arp command has been introduced.

3.31 ip dhcp class

Description Access to a group of commands to configure [DHCP](#) vendor class (option 60). If specified class name is not found, the command tries to create it.

Command with **no** prefix removes selected class.

Prefix no Yes

Change settings No

Multiple input Yes

Group entry (config-dhcp-class)

Synopsis

```
(config)> ip dhcp class <class>
(config)> no ip dhcp class <class>
```

Arguments

Argument	Value	Description
class	<i>String</i>	The vendor-class name.

Example

```
(config)> ip dhcp class STB-One
Dhcp::Server: Vendor class "STB-One" has been created.
```

History

Version	Description
2.00	The ip dhcp class command has been introduced.

3.31.1 ip dhcp class option

Description

Set an option 60 to match the vendor-class.

Command with **no** prefix removes selected option.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(config-dhcp-class)> option <number> hex <data>
```

```
(config-dhcp-class)> no option <number>
```

Arguments

Argument	Value	Description
number	<i>Integer</i>	Option number. Now the only 60 value is used.
data	<i>String</i>	Value of an option.

Example

```
(config-dhcp-class)> option 60 hex FF
Dhcp::Server: Option 60 is set to FF.
```

History

Version	Description
2.00	The ip dhcp class option command has been introduced.

3.32 ip dhcp host

Description

Configure static linking of IP address to MAC address of the host. If the host with the specified name is not found, the command tries to create it. If the specified IP address is not in range of any pool, the command will remain in the settings, but will not affect the *DHCP server* functioning.

The command allows one to change the MAC address, leaving the old value IP address and vice versa — to change the IP address, leaving the old MAC address value intact.

Command with **no** prefix removes the host.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config)> ip dhcp host <host> [ mac ] [ ip ]
```

```
(config)> no ip dhcp host <host>
```

Arguments

Argument	Value	Description
host	<i>String</i>	Arbitrary host name, used to identify a MAC-IP pair in the settings.
mac	<i>MAC address</i>	MAC address of the host for static linking of IP address. If not specified, the value is taken from the previous configuration.
ip	<i>IP address</i>	IP address of the host. If not specified, the value is taken from the previous configuration.

Example

```
(config)> ip dhcp host HOST 192.168.1.44
```

new host "HOST" has been created.

History

Version	Description
2.00	The ip dhcp host command has been introduced.

3.33 ip dhcp pool

Description

Access to a group of commands to configure DHCP-pool. If the pool is not found, the command tries to create it. For a pool one sets a list of DNS servers (**dns-server** command), default gateway (**default-router** command) and the lease time (**lease** command), as well as a range of dynamic IP addresses (**range** command).

Having configured the pool, it is necessary to enable the *DHCP* service using the **service dhcp** command.

You can enter up to 32 pools. Maximum pool name length is 32 characters.

Note: In the current version of the system no more than one pool per interface is supported. For *DHCP server* to function correctly it is required that the range of IP addresses set by

range command belong to the network that is configured on one of the device's Ethernet-interfaces.

Command with **no** prefix removes the pool.

Prefix no Yes

Change settings Yes

Multiple input Yes

Group entry (config-dhcp-pool)

Synopsis

```
(config)> ip dhcp pool <name>
```

```
(config)> no ip dhcp pool <name>
```

Arguments

Argument	Value	Description
name	String	DHCP pool name.

Example

```
(config)> ip dhcp pool test_pool
pool "test_pool" has been created.
```

History

Version	Description
2.00	The ip dhcp pool command has been introduced.

3.33.1 ip dhcp pool bind

Description Bind the pool to specified interface.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

```
(config-dhcp-pool)> bind <interface>
```

```
(config-dhcp-pool)> no bind <interface>
```

Arguments

Argument	Value	Description
interface	Interface	Full interface name or an alias.

Example

```
(config-dhcp-pool)> bind GigabitEthernet1
pool "test_pool" bound to interface GigabitEthernet1.
```

History	Version	Description
	2.00	The ip dhcp pool bind command has been introduced.

3.33.2 ip dhcp pool bootfile

Description Set boot file path on TFTP server for DHCP client (option 67).

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

```
(config-dhcp-pool)> bootfile <bootfile>
```

```
(config-dhcp-pool)> no bootfile
```

Arguments	Argument	Value	Description
	bootfile	Filename	The boot file path.

Example

```
(config-dhcp-pool)> bootfile test.cnf
Dhcp::Pool: "_WEBADMIN": set bootfile option to "test.cnf".
```

```
(config-dhcp-pool)> no bootfile
Dhcp::Pool: "_WEBADMIN": cleared bootfile option.
```

History	Version	Description
	2.11	The ip dhcp pool bootfile command has been introduced.

3.33.3 ip dhcp pool class

Description Access to a group of commands to configure *DHCP* vendor class for selected pool. If specified class name is not found, the command tries to create it.

To work correctly class name should be the same as for **ip dhcp class** command.

Command with **no** prefix removes selected class.

Prefix no Yes

Change settings Yes

Multiple input Yes**Group entry** (config-dhcp-pool-class)

Synopsis

```
(config-dhcp-pool)> class <class>
```

```
(config-dhcp-pool)> no class <class>
```

Arguments

Argument	Value	Description
class	String	The vendor-class name.

Example

```
(config-dhcp-pool)> class STB-One
Dhcp::Server: Vendor class "STB-One" has been created.
```

History

Version	Description
2.00	The ip dhcp pool class command has been introduced.

3.33.3.1 ip dhcp pool class option

Description Set additional options for *DHCP* client in case of vendor-class matching.
Command with **no** prefix removes selected option.

Prefix no Yes**Change settings** Yes**Multiple input** Yes

Synopsis

```
(config-dhcp-pool-class)> option <number> <type> <data>
```

```
(config-dhcp-pool-class)> no option <number>
```

Arguments

Argument	Value	Description
number	6	6 option, DNS server.
	42	42 option, NTP server.
	43	43 option, vendor specific information.
type	ip	Type of data is IP address. This type is not used for 43 option.
	hex	Type of data is hexadecimal number.
data	String	Value of an option.

Example

```
(config-dhcp-pool-class)> option 6 ip 192.168.1.1
Dhcp::Server: Option 6 is set to 192.168.1.1.
```

History	Version	Description
	2.00	The ip dhcp pool class option command has been introduced.

3.33.4 ip dhcp pool debug

Description Add debug messages to the system log. By default, the setting is disabled. Command with **no** prefix disables debugging.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-dhcp-pool)> debug
(config-dhcp-pool)> no debug
```

History	Version	Description
	2.01	The ip dhcp pool debug command has been introduced.

3.33.5 ip dhcp pool default-router

Description Configure default gateway IP address. If not specified, the address of the Ethernet-interface determined automatically for a given range **range** will be used.

Command with **no** prefix cancels the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-dhcp-pool)> default-router <address>
(config-dhcp-pool)> no default-router
```

Arguments	Argument	Value	Description
	address	IP address	Default gateway address.

Example

```
(config-dhcp-pool)> default-router 192.168.1.88
pool "test_pool" router address has been saved.
```

History

Version	Description
2.00	The ip dhcp pool default-router command has been introduced.

3.33.6 ip dhcp pool dns-server

Description

Configure IP addresses of the DNS servers (DHCP option 6). If not specified, the address of the Ethernet-interface determined automatically for a given range **range** will be used.

Command with **no** prefix cancels the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-dhcp-pool)> dns-server (<address1> [ address2 ] | disable)
(config-dhcp-pool)> no dns-server
```

Arguments

Argument	Value	Description
address1	<i>IP address</i>	Address of primary DNS server.
address2	<i>IP address</i>	Address of secondary DNS server.
disable	<i>Keyword</i>	Disable DHCP option 6.

Example

```
(config-dhcp-pool)> dns-server 192.168.1.88
pool "test_pool" name server list has been saved.
```

History

Version	Description
2.00	The ip dhcp pool dns-server command has been introduced.
2.11	Disable argument has been added.

3.33.7 ip dhcp pool domain

Description

Specify the domain name that client should use when resolving hostnames via DNS (option 15).

Command with **no** prefix cancels the setting.

Prefix no

Yes

Change settings

Yes

Multiple input No

Synopsis

```
(config-dhcp-pool)> domain <domain>
(config-dhcp-pool)> no domain
```

Arguments

Argument	Value	Description
domain	<i>String</i>	Local domain name.

Example

```
(config-dhcp-pool)> domain example.net
Dhcp::Pool: Domain option has been saved.
```

History

Version	Description
2.05	The ip dhcp pool domain command has been introduced.

3.33.8 ip dhcp pool enable

Description Start to use the pool in the system.

Command with **no** prefix disables pool using.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-dhcp-pool)> enable
(config-dhcp-pool)> no enable
```

Example

```
(config-dhcp-pool)> enable
Dhcp::Server: pool "111" is enabled.
```

History

Version	Description
2.03	The ip dhcp pool enable command has been introduced.

3.33.9 ip dhcp pool lease

Description Set the lease time of DHCP pool IP address. By default, 25200 value is used (7 hours).

Command with **no** prefix resets lease time to default.

Prefix no Yes

Change settings Yes**Multiple input** No

Synopsis

```
(config-dhcp-pool)> lease <lease>
```

```
(config-dhcp-pool)> no lease
```

Arguments

Argument	Value	Description
lease	<i>Integer</i>	Lease time in seconds. Can take values in the range from 1 to 259200 seconds (3 days).

Example

```
(config-dhcp-pool)> lease 259200
```

```
Dhcp::Pool: "_WEBADMIN": set lease time: 259200 seconds.
```

```
(config-dhcp-pool)> no lease
```

```
Dhcp::Pool: "_WEBADMIN": lease time reset to default (25200 ► seconds).
```

History

Version	Description
2.00	The ip dhcp pool lease command has been introduced.

3.33.10 ip dhcp pool next-server

Description Set TFTP server address for DHCP client (option 66).Command with **no** prefix removes the setting.**Prefix no** Yes**Change settings** Yes**Multiple input** No**Interface type** Ethernet

Synopsis

```
(config-dhcp-pool)> next-server <address>
```

```
(config-dhcp-pool)> no next-server
```

Arguments

Argument	Value	Description
address	<i>IP address</i>	TFTP server address.

Example

```
(config-dhcp-pool)> next-server 10.1.1.11
```

```
Dhcp::Pool: "_WEBADMIN": set next server address: 10.1.1.11.
```

```
(config-dhcp-pool)> no next-server
```

```
Dhcp::Pool: "_WEBADMIN": cleared next server address.
```


History

Version	Description
2.11	The ip dhcp pool next-server command has been introduced.

3.33.11 ip dhcp pool option

Description Set additional options for DHCP server.
Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type Ethernet

Synopsis

```
(config-dhcp-pool)> option <number> [ type ] <data>
```

```
(config-dhcp-pool)> no option <number>
```

Arguments

Argument	Value	Description
number	4	4 option, Time server. Type is IP address.
	6	6 option, DNS server. Type is IP address.
	42	42 option, NTP server. Type is IP address.
	44	44 option, NetBIOS server. Type is IP address.
	26	26 option, MTU. Can take values in the range from 0 to 65535 inclusively.
	121	121 option, Classless Static Routes. Type is IP address of the destination network and mask of the destination network the form of prefix bit length (for example, /24).
	249	249 option, Microsoft Classless Static Routes. Type is IP address of the destination network and mask of the destination network the form of prefix bit length (for example, /24).
type	hex	Hexadecimal number.
	ascii	ASCII number.
	ip	IP address. It is not applicable to 26 option. It is not specified as a keyword in the command.
data	<i>String</i>	Value of an option.

Example

```
(config-dhcp-pool)> option 4 192.168.2.1  
Dhcp::Pool: "_WEBADMIN_BRIDGE2": set option 4.
```

```
(config-dhcp-pool)> option 60 ascii "MSFT 5.0"
Dhcp::Pool: "_WEBADMIN_BRIDGE2": set option 60.
```

```
(config-dhcp-pool)> option 150 ip 41.57.50.46,42.54.50.46
Dhcp::Pool: "_WEBADMIN_BRIDGE2": set option 150.
```

```
(config-dhcp-pool)> no option 4
Dhcp::Pool: "_WEBADMIN_BRIDGE2": cleared option 4.
```

History

Version	Description
2.09	The ip dhcp pool option command has been introduced.

3.33.12 ip dhcp pool range

Description

Configure the range of dynamic addresses issued to DHCP clients of a subnet. The range is set by start and end IP addresses or the start address and size. The network interface to which the settings are applied is chosen automatically. Address of the chosen interface is used as the default gateway and DNS server, if other addresses are not specified using commands **ip dhcp pool default-router** and **ip dhcp pool dns-server**.

Command with **no** prefix removes the range.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-dhcp-pool)> range <begin> (<end> | <size>)
```

```
(config-dhcp-pool)> no range
```

Arguments

Argument	Value	Description
begin	<i>IP address</i>	Pool's start address.
end	<i>IP address</i>	Pool's end address.
size	<i>Integer</i>	Pool size.

Example

```
(config-dhcp-pool)> range 192.168.15.43 3
pool "_WEBADMIN" range has been saved.
```

History

Version	Description
2.00	The ip dhcp pool range command has been introduced.

3.33.13 ip dhcp pool update-dns

Description Add static records into DNS-proxy when DHCP-address is assigned. The name of record is the hostname of the DHCP-request. By default, the feature is disabled.

Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-dhcp-pool)> update-dns
(config-dhcp-pool)> no update-dns
```

Example

```
(config-dhcp-pool)> update-dns
Dhcp::Pool: DNS update has been enabled.
```

Version	Description
2.06	The ip dhcp pool update-dns command has been introduced.

3.33.14 ip dhcp pool wpad

Description Configure DHCP option 252 — [WPAD](#) protocol. By default, the option is disabled.

Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-dhcp-pool)> wpad <wpad>
(config-dhcp-pool)> no wpad
```

Argument	Value	Description
wpad	<i>String</i>	URL of proxy.

Example

```
(config-dhcp-pool)> wpad http://wpad/wpad.dat
Dhcp::Pool: WPAD option has been saved.
```

History

Version	Description
2.05	The ip dhcp pool wpad command has been introduced.

3.34 ip dhcp relay lan

Description

Specify which network interface the DHCP relay will use to handle client's requests. Several "lan" interfaces can be specified, to which end the command should be entered several times, enumerating all desired interfaces one by one.

Command with **no** prefix disables the DHCP relay on the specified interface. If you use no argument, the DHCP relay will be removed from all interfaces.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(config)> ip dhcp relay lan <interface>
```

```
(config)> no ip dhcp relay lan [ interface ]
```

Arguments

Argument	Value	Description
interface	<i>Interface</i>	Full name or an alias of Ethernet interface, through which DHCP relay will accept requests from clients.

Example

```
(config)> ip dhcp relay lan Home
added LAN interface Home.
```

History

Version	Description
2.00	The ip dhcp relay lan command has been introduced.

3.35 ip dhcp relay server

Description

Specify the IP address of the *DHCP server*, to which the relay will forward client requests from the LAN.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> ip dhcp relay server <address>
```

```
(config)> no ip dhcp relay server [ address ]
```

Arguments

Argument	Value	Description
address	IP address	IP address of the DHCP server .

Example

```
(config)> ip dhcp relay server 192.168.1.11
using DHCP server 192.168.1.11.
```

History

Version	Description
2.00	The ip dhcp relay server command has been introduced.

3.36 ip dhcp relay wan

Description

Specify the network interface through which DHCP relay will interact with higher level [DHCP server](#). There can be only one interface of such type in the system. If exact address of the server is not specified (see [ip dhcp relay server](#)), the requests will be broadcasted. It is recommended to specify server address.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> ip dhcp relay wan <interface>
```

```
(config)> no ip dhcp relay wan [ interface ]
```

Arguments

Argument	Value	Description
interface	Interface	Full name or an alias of Ethernet interface, on which requests from the DHCP clients will be sent.

Example

```
(config)> ip dhcp relay wan GigabitEthernet1
using WAN interface GigabitEthernet1.
```

History

Version	Description
2.00	The ip dhcp relay wan command has been introduced.

3.37 ip esp alg enable

Description Enable *IPSec Passthrough* mode for *IPsec ESP* tunnel. By default, the setting is disabled.

Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> ip esp alg enable
(config)> no ip esp alg enable
```

Example

```
(config)> ip esp alg enable
Esp::Alg: Enabled.
```

```
(config)> no ip esp alg enable
Esp::Alg: Disabled.
```

History

Version	Description
3.05	The ip esp alg enable command has been introduced.

3.38 ip flow-cache timeout active

Description Set timeout of active sessions in cache. By default, the value 10 is used.

Command with **no** prefix resets the setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> ip flow-cache timeout active <timeout>
(config)> no ip flow-cache timeout active
```

Arguments

Argument	Value	Description
timeout	<i>Integer</i>	The timeout value, in minutes. Can take values in the range from 1 to 30.

Example

```
(config)> ip flow-cache timeout active 1
Netflow::Manager: Active timeout set to "1" min.
```

```
(config)> no ip flow-cache timeout active
Netflow::Manager: Active timeout reset to "10" min.
```

History

Version	Description
2.11	The ip flow-cache timeout active command has been introduced.

3.39 ip flow-cache timeout inactive

Description Set timeout of inactive sessions in cache. By default, the value 20 is used. Command with **no** prefix resets the setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> ip flow-cache timeout inactive <timeout>
```

```
(config)> no ip flow-cache timeout inactive
```

Arguments

Argument	Value	Description
timeout	<i>Integer</i>	The timeout value, in seconds. Can take values in the range from 1 to 600.

Example

```
(config)> ip flow-cache timeout inactive 1
Netflow::Manager: Inactive timeout set to "1" s.
```

```
(config)> no ip flow-cache timeout inactive
Netflow::Manager: Inactive timeout reset to "20" s.
```

History

Version	Description
2.11	The ip flow-cache timeout inactive command has been introduced.

3.40 ip flow-export destination

Description Set parameters of *NetFlow* collector. Command with **no** prefix removes collector's parameters.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> ip flow-export destination <address> <port>
```

```
(config)> no ip flow-export destination
```

Arguments

Argument	Value	Description
address	<i>IP address</i>	IP address of the data collector.
port	<i>Integer</i>	Collector's UDP port number. Can take values 2055, 2056, 4432, 4739, 9025, 9026, 9995, 9996, 6343.

Example

```
(config)> ip flow-export destination 192.168.101.31 4739
Netflow::Manager: Export destination is set to ►
192.168.101.31:4739.
```

```
(config)> no ip flow-export destination
Netflow::Manager: Export destination is unset.
```

History

Version	Description
2.11	The ip flow-export destination command has been introduced.

3.41 ip flow-export version

Description

Set version of *NetFlow* collector. By default, 5 value is used.

Command with **no** prefix resets version to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> ip flow-export version <version>
```

```
(config)> no ip flow-export version
```

Arguments

Argument	Value	Description
version	<i>String</i>	Version of protocol.

Example

```
(config)> ip flow-export version 9
Netflow::Manager: Set export protocol version to 9.
```



```
(config)> no ip flow-export version
Netflow::Manager: Reset export version to 5.
```

History

Version	Description
3.05	The ip flow-export version command has been introduced.

3.42 ip ftp

Description Access to a group of commands to configure access to **ftp**.

Prefix no No

Change settings No

Multiple input No

Interface type IP

Group entry (config-ftp)

Synopsis | (config)> **ip ftp**

Example (config)> **ip ftp**
(config-ftp)>

History

Version	Description
2.08	The ip ftp command has been introduced.

3.42.1 ip ftp client-charset

Description Set default encoding on FTP server. By default, the UTF-8 is used.

Command with **no** prefix resets encoding to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis | (config-ftp)> **client-charset** *<charset>*

| (config-ftp)> **no client-charset**

Arguments

Argument	Value	Description
charset	utf-8	Encoding type.
	utf-16	
	utf-16le	
	utf-16be	
	utf-32	
	utf-32le	
	utf-32be	
	iso-8859-1	
	iso-8859-2	
	iso-8859-3	
	iso-8859-4	
	iso-8859-5	
	iso-8859-6	
	iso-8859-7	
	iso-8859-8	
	iso-8859-9	
	iso-8859-10	
	iso-8859-11	
	iso-8859-12	
	iso-8859-13	
	iso-8859-14	
	iso-8859-15	
	iso-8859-16	
	cp-037	
	cp-424	
	cp-437	
	cp-500	
	cp-737	
	cp-775	
	cp-850	
cp-852		
cp-852		
cp-855		
cp-856		
cp-857		

Argument	Value	Description
	cp-860	
	cp-861	
	cp-862	
	cp-863	
	cp-864	
	cp-865	
	cp-866	
	cp-869	
	cp-874	
	cp-1026	
	cp-1250	
	cp-1251	
	cp-1252	
	cp-1253	
	cp-1254	
	cp-1255	
	cp-1256	
	cp-1257	
	cp-1258	
	koi8-r	
	koi8-u	
	kz-1048	
	nextstep	
	mac-celtic	
	mac-centeuro	
	mac-croatian	
	mac-cyrillic	
	mac-gaelic	
	mac-greek	
	mac-icelandic	
	mac-inuit	
	mac-roman	
	mac-romanian	
	mac-turkish	
	mac-ukrainian	

Example

```
(config-ftp)> client-charset utf-16
Ftp::Server: Set client charset to "utf-16".
```

```
(config-ftp)> no client-charset
Ftp::Server: Reset client charset to default.
```

History

Version	Description
2.11	The ip ftp client-charset command has been introduced.

3.42.2 ip ftp lockout-policy

Description

Set FTP server bruteforce detection parameters for public interfaces. By default, feature is enabled. If you use 0 as an argument, all bruteforce detection parameters will be reset to default.

Command with **no** prefix disables bruteforce detection.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
(config-ftp)> lockout-policy <threshold> [ <duration> [ <observation-window> ] ]
```

```
(config-ftp)> no lockout-policy
```

Arguments

Argument	Value	Description
threshold	<i>Integer</i>	The number of failed attempts to log in. By default, 5 value is used. Can take values in the range from 3 to 20.
duration	<i>Integer</i>	An authorization ban duration for the specified IP in minutes. By default, 15 value is used. Can take values in the range from 1 to 60.
observation-window	<i>Integer</i>	Duration of suspicious activity observation in minutes. By default, 3 value is used. Can take values in the range from 1 to 10.

Example

```
(config-ftp)> lockout-policy 10 30 2
Ftp::Server: Bruteforce detection is enabled.
```

```
(config-ftp)> no lockout-policy
Ftp::Server: Bruteforce detection is disabled.
```

```
(config-ftp)> lockout-policy 0
Ftp::Server: Bruteforce detection reset to default.
```

History

Version	Description
2.12	The ip ftp lockout-policy command has been introduced.

3.42.3 ip ftp permissive

Description Access to the FTP server for all users without authentication.

Command with **no** prefix denies access.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis | (config-ftp)> **permissive**

| (config-ftp)> **no permissive**

Example (config-ftp)> **permissive**

(config-ftp)> **no permissive**

History

Version	Description
2.08	The ip ftp permissive command has been introduced.

3.42.4 ip ftp security-level

Description Set FTP security level. By default, private value is set.

Prefix no No

Change settings Yes

Multiple input No

Interface type IP

Synopsis | (config-ftp)> **security-level (public | private | protected)**

Arguments

Argument	Value	Description
public	<i>Keyword</i>	Access to the FTP server is allowed for public, private and protected interfaces.
private	<i>Keyword</i>	Access to the FTP server is allowed for private interfaces.
protected	<i>Keyword</i>	Access to the FTP server is allowed for private and protected interfaces.

Example

```
(config-ftp)> security-level protected
Ftp::Manager: Security level changed to protected.
```

History

Version	Description
2.08	The ip ftp security-level command has been introduced.

3.43 ip host

Description Add a domain name and address as a DNS-record.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config)> ip host <domain> <address>
```

```
(config)> no ip host [ <domain> <address> ]
```

Arguments

Argument	Value	Description
domain	<i>String</i>	A domain name of a host.
address	<i>IP address</i>	An IP address of a host.

Example

```
(config)> ip host keenetic.local 192.168.1.22
Dns::Manager: Added static record for "keenetic.local", address ►
192.168.1.22.
```

```
(config)> no ip host keenetic.local 192.168.1.22
Dns::Manager: Record "keenetic.local", address 192.168.1.22 ►
deleted.
```

History

Version	Description
2.00	The ip host command has been introduced.

3.44 ip hotspot

Description Access to a group of commands for Hotspot configuration.

Prefix no No

Change settings No

Multiple input No

Interface type IP

Group entry (config-hotspot)

Synopsis (config)> **ip hotspot**

Example (config)> **ip hotspot**
(config-hotspot)>

History

Version	Description
2.06	The ip hotspot command has been introduced.

3.44.1 ip hotspot auto-scan interface

Description Enable subnetwork passive scanning on interface. By default is enabled.
Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type IP

Synopsis (config-hotspot)> **auto-scan interface** *<interface>*
(config-hotspot)> **no auto-scan interface** *<interface>*

Arguments

Argument	Value	Description
interface	<i>Interface</i>	Full interface name or an alias.

Example (config-hotspot)> **auto-scan interface WifiMaster0/AccessPoint1**
Hotspot::Discovery::Manager: Subnetwork scanning on interface ►
"WifiMaster0/AccessPoint1" is unchanged.

```
(config-hotspot)> auto-scan interface WifiMaster0/AccessPoint1
Hotspot::Discovery::Manager: Subnetwork scanning on interface ►
"WifiMaster0/AccessPoint1" is disabled.
```

History

Version	Description
2.08	The ip hotspot auto-scan interface command has been introduced.

3.44.2 ip hotspot auto-scan interval

Description Set interval for probes of online hosts. By default, the value 30 is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-hotspot)> auto-scan interval <interval>
```

```
(config-hotspot)> no auto-scan interval
```

Arguments

Argument	Value	Description
interval	<i>Integer</i>	Auto-scan probe interval in seconds.

Example

```
(config-hotspot)> auto-scan interval 10
Hotspot::Discovery::Manager: Auto-scan probe interval is set to ►
10 s.
```

```
(config-hotspot)> no auto-scan interval
Hotspot::Discovery::Manager: Auto-scan probe interval reset to ►
default.
```

History

Version	Description
2.08	The ip hotspot auto-scan interval command has been introduced.

3.44.3 ip hotspot auto-scan passive

Description Set passive autoscan rate in hosts per seconds. By default, the value 3 is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-hotspot)> auto-scan passive <rate> hps
```

```
(config-hotspot)> no auto-scan passive
```

Arguments

Argument	Value	Description
rate	<i>Integer</i>	Passive autoscan rate.

Example

```
(config-hotspot)> auto-scan passive 5 hps
Hotspot::Discovery::Manager: Auto-scan rate is set to 5 hps.
```

```
(config-hotspot)> no auto-scan passive
Hotspot::Discovery::Manager: Auto-scan rate reset to default.
```

History

Version	Description
2.08	The ip hotspot auto-scan passive command has been introduced.

3.44.4 ip hotspot auto-scan timeout

Description Set offline timeout for hosts. After the specified time, the missing host is removed from the online host list. By default, the value 35 is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-hotspot)> auto-scan timeout <timeout>
```

```
(config-hotspot)> no auto-scan timeout
```

Arguments

Argument	Value	Description
timeout	<i>Integer</i>	Offline timeout in seconds.

Example

```
(config-hotspot)> auto-scan timeout 31
Hotspot::Discovery::Manager: Auto-scan host offline timeout is ►
set to 31 s.
```

```
(config-hotspot)> no auto-scan timeout
Hotspot::Discovery::Manager: Auto-scan host offline timeout reset ►
to default.
```

History

Version	Description
2.08	The ip hotspot auto-scan timeout command has been introduced.

3.44.5 ip hotspot default-policy

Description

Define the Hotspot policy for all interfaces or assign IP Policy. Policy applies to all hosts that have no explicitly configured access rule, [ip hotspot policy](#).

Default policy: permit.

Command with **no** prefix resets policy to default.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Interface type

IP

Synopsis

```
(config-hotspot)> default-policy (<access> | <policy>)
```

```
(config-hotspot)> no default-policy
```

Arguments

Argument	Value	Description
access	permit	Permit access to the internet.
	deny	Deny access to the internet.
policy	<i>Policy</i>	Name of IP Policy profile.

Example

```
(config-hotspot)> default-policy permit
FHotspot::Manager: Default policy "permit" applied.
```

```
(config-hotspot)> default-policy deny
Hotspot::Manager: Default policy "deny" applied.
```

```
(config-hotspot)> default-policy Policy0
Hotspot::Manager: Default policy "Policy0" applied.
```

```
(config-hotspot)> no default-policy
Hotspot::Manager: Default policy cleared.
```

History	Version	Description
	2.09	The ip hotspot default-policy command has been introduced.
	2.12	Argument <code>policy</code> was added.

3.44.6 ip hotspot host

Description Setup bypass or block rules for specific Hotspot clients. Host rules override interface based policy (see [ip hotspot policy](#) command).

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type IP

Synopsis

```
(config-hotspot)> host <mac> (<access> | schedule <schedule> | policy <policy>)
```

```
(config-hotspot)> no host <mac> (<access> | schedule | policy)
```

Arguments	Argument	Value	Description
	mac	MAC address	Host MAC address. Host must be registered via known host in advance.
	access	permit	Permit access to the internet.
		deny	Deny access to the internet.
	schedule	Schedule	The name of the schedule that was created with schedule group of commands.
	policy	Policy	Name of IP Policy profile.

Example

```
(config)> known host MYTEST 54:e4:3a:8a:f3:a7
Hotspot::Manager: Policy "permit" applied to interface "Home".
```

```
(config-hotspot)> host 54:e4:3a:8a:f3:a7 permit
Hotspot::Manager: Rule "permit" applied to host ►
"54:e4:3a:8a:f3:a7".
```

```
(config-hotspot)> host 54:e4:3a:8a:f3:a7 deny
Hotspot::Manager: Rule "deny" applied to host "54:e4:3a:8a:f3:a7".
```

```
(config-hotspot)> host 54:e4:3a:8a:f3:a7 schedule MYSCHEDULE
Hotspot::Manager: Schedule "MYSCHEDULE" applied to host ►
"54:e4:3a:8a:f3:a7".
```

```
(config-hotspot)> no host 54:e4:3a:8a:f3:a7 schedule
Hotspot::Manager: Host "54:e4:3a:8a:f3:a7" schedule disabled.
```

```
(config-hotspot)> host 54:e4:3a:8a:f3:a7 policy Policy0
Hotspot::Manager: Policy "Policy0" applied to host ►
"54:e4:3a:8a:f3:a7".
```

```
(config-hotspot)> no host 54:e4:3a:8a:f3:a7 policy
Hotspot::Manager: Policy removed from host "54:e4:3a:8a:f3:a7".
```

History

Version	Description
2.06	The ip hotspot host command has been introduced.
2.12	Arguments permit, deny, schedule, policy were added.

3.44.7 ip hotspot host priority

Description Assign a specific priority to all traffic bound to a registered host. Registration of a host is performed in advance by the **known host** command.

Command with **no** prefix removes the priority.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis `(config-hotspot)> host <mac> priority <priority>`

`(config-hotspot)> no host <mac> priority`

Arguments

Argument	Value	Description
mac	MAC address	Host MAC address.
priority	1	Top.
	2	Critical.
	3	High.
	4	Medium-high.
	5	Medium.
	6	Normal (Default).
	7	Low.

Example `(config-hotspot)> host 04:d2:c1:14:bc:59 priority 7`
Hotspot::Manager: Applied priority "7" to host ►
"04:d2:c1:14:bc:59".

```
(config-hotspot)> no host 04:d2:c1:14:bc:59 priority
Hotspot::Manager: Removed priority from host "04:d2:c1:14:bc:59".
```

History

Version	Description
3.08	The ip hotspot host priority command has been introduced.

3.44.8 ip hotspot policy

Description Define the Hotspot policy for a specific interface. Policy applies to all hosts that have no explicitly configured access rule, [ip hotspot host](#).

Default policy: permit.

Command with **no** prefix resets policy to default.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type IP

Synopsis | (config-hotspot)> **policy** <interface> (<access> | <policy>)

| (config-hotspot)> **no policy** <interface>

Arguments

Argument	Value	Description
interface	<i>Interface</i>	Ethernet interface full name or an alias.
access	permit	Permit access to the internet.
	deny	Deny access to the internet.
policy	<i>Policy</i>	Name of IP Policy profile.

Example

```
(config-hotspot)> policy Home permit
Hotspot::Manager: Policy "permit" applied to interface "Home".
```

```
(config-hotspot)> policy Home deny
Hotspot::Manager: Policy "deny" applied to interface "Home".
```

```
(config-hotspot)> policy Home Policy0
Hotspot::Manager: Policy "Policy0" applied to interface "Home".
```

```
(config-hotspot)> no policy Home
Hotspot::Manager: Interface "Home" policy cleared.
```

History

Version	Description
2.06	The ip hotspot policy command has been introduced.
2.12	Argument <code>policy</code> was added.

3.44.9 ip hotspot priority**Description**

Assign a specific priority to all traffic bound to the interface.

Command with **no** prefix removes the priority.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Interface type

IP

Synopsis

```
(config-hotspot)> priority <interface> <priority>
```

```
(config-hotspot)> no priority <interface>
```

Arguments

Argument	Value	Description
interface	<i>Interface</i>	Full interface name or an alias.
priority	1	Top.
	2	Critical.
	3	High.
	4	Medium-high.
	5	Medium.
	6	Normal (Default).
	7	Low.

Example

```
(config-hotspot)> priority Home 7  
Hotspot::Manager: Applied priority "7" to interface "Home".
```

```
(config-hotspot)> no priority Home  
Hotspot::Manager: Removed priority from interface "Home".
```

History

Version	Description
3.08	The ip hotspot priority command has been introduced.

3.44.10 ip hotspot wake

Description Send Wake-on-LAN packet to private and protected interfaces of the host.

Prefix no No

Change settings No

Multiple input No

Interface type IP

Synopsis `(config-hotspot)> wake <mac>`

Arguments

Argument	Value	Description
mac	MAC address	Host MAC address.

Example

```
(config-hotspot)> wake a8:1e:84:11:f1:22
Hotspot::Manager: WoL sent to host: a8:1e:84:11:f1:22.
```

History

Version	Description
2.08	The ip hotspot wake command has been introduced.

3.45 ip http lockout-policy

Description Set HTTP bruteforce detection parameters for public interfaces. By default, feature is enabled. If you use 0 as an argument, all bruteforce detection parameters will be reset to default.

Command with **no** prefix disables bruteforce detection.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis `(config)> ip http lockout-policy <threshold> [<duration> [<observation-window>]]`

`(config)> no ip http lockout-policy`

Arguments

Argument	Value	Description
threshold	<i>Integer</i>	The number of failed attempts to log in. By default, 5 value is used. Can take values in the range from 4 to 20.
duration	<i>Integer</i>	An authorization ban duration for the specified IP in minutes. By default, 15 value is used. Can take values in the range from 1 to 60.
observation-window	<i>Integer</i>	Duration of suspicious activity observation in minutes. By default, 3 value is used. Can take values in the range from 1 to 10.

Example

```
(config)> ip http lockout-policy 10 30 2
Http:Manager: Bruteforce detection is enabled.
```

```
(config)> no ip http lockout-policy
Http:Manager: Bruteforce detection is disabled.
```

```
(config)> ip http lockout-policy 0
Http:Manager: Bruteforce detection reset to default.
```

History

Version	Description
2.08	The ip http lockout-policy command has been introduced.

3.46 ip http log access

Description Enable debug mode for web server (nginx). By default, feature is disabled. Command with **no** prefix disables the debug mode.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config)> ip http log access
```

```
(config)> no ip http log access
```

Example

```
(config)> ip http log access
Http:Manager: Enabled access logging.
```



```
(config)> no ip http log access
Http::Manager: Disabled access logging.
```

History

Version	Description
3.00	The ip http log access command has been introduced.

3.47 ip http log auth

Description Enable logging of failed authorization attempts to the system. By default, feature is disabled.

Command with **no** prefix disables logging.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis | (config)> **ip http log auth**

| (config)> **no ip http log auth**

Example (config)> **ip http log auth**
Http::Manager: Auth logging enabled.

```
(config)> no ip http log auth
Http::Manager: Auth logging disabled.
```

History

Version	Description
2.08	The ip http log auth command has been introduced.

3.48 ip http log webdav

Description Enable logging of failed connection attempts to the [WebDAV](#) server. By default, feature is disabled.

Command with **no** prefix disables logging.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config)> ip http log webdav
```

```
(config)> no ip http log webdav
```

Example

```
(config)> ip http log webdav
WebDav::Server: Enabled request tracing.
```

```
(config)> no ip http log webdav
WebDav::Server: Disabled request tracing.
```

History

Version	Description
3.04	The ip http log webdav command has been introduced.

3.49 ip http port

Description

Assign HTTP port for Web interface of Titan. By default, 80 value is used.

Command with **no** prefix resets HTTP port to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
(config)> ip http port <port>
```

```
(config)> no ip http port
```

Arguments

Argument	Value	Description
port	<i>Integer</i>	New HTTP port.

Example

```
(config)> ip http port 8080
Http::Manager: Port changed to 8080.
```

```
(config)> no ip http port
Http::Manager: Port reset to 80.
```

History

Version	Description
2.08	The ip http port command has been introduced.

3.50 ip http proxy

Description Access to a group of commands to configure HTTP proxy. If the proxy is not found, the command tries to create it.

Command with **no** prefix removes the proxy.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type IP

Group entry (config-http-proxy)

Synopsis

```
(config)> ip http proxy <name>
```

```
(config)> no ip http proxy <name>
```

Arguments

Argument	Value	Description
name	<i>String</i>	HTTP proxy name.

Example

```
(config)> ip http proxy TEST
Http::Manager: Proxy "TEST" successfully created.
```

History

Version	Description
2.08	The ip http proxy command has been introduced.

3.50.1 ip http proxy auth

Description Enable authorization for HTTP proxy. By default, the setting is disabled.

Command with **no** prefix disables HTTP proxy authorization.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-http-proxy)> auth
```

```
(config-http-proxy)> no auth
```

Example

```
(config-http-proxy)> auth
Http::Manager: Proxy password auth is enabled.
```

```
(config-http-proxy)> no auth
Http::Manager: Proxy password auth is disabled.
```

History

Version	Description
2.10	The ip http proxy auth command has been introduced.

3.50.2 ip http proxy domain

Description

Set domain name that specifies the *FQDN* of the virtual host.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
(config-http-proxy)> domain static <domain>
```

```
(config-http-proxy)> no domain
```

Arguments

Argument	Value	Description
domain	<i>String</i>	A domain name.

Example

```
(config-http-proxy)> domain static example.net
Http::Manager: Configured base domain for proxy: test.
```

```
(config-http-proxy)> no domain
Http::Manager: Removed ndns domain for proxy: test.
```

History

Version	Description
2.08	The ip http proxy domain command has been introduced.

3.50.3 ip http proxy domain ndns

Description

Set HTTP proxy domain through NDNS. If enabled, setting **ip http proxy domain** is deleted.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-http-proxy)> domain ndns
(config-http-proxy)> no domain ndns
```

Example

```
(config-http-proxy)> domain ndns
Http::Manager: Configured ndns domain for proxy: test.
```

```
(config-http-proxy)> no domain
Http::Manager: Removed ndns domain for proxy: test.
```

History

Version	Description
2.08	The ip http proxy domain ndns command has been introduced.

3.50.4 ip http proxy force-host

Description Enable the Host header rewriting for the upstream.
Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-http-proxy)> force-host <force-host>
(config-http-proxy)> no force-host
```

Arguments

Argument	Value	Description
force-host	String	IP address or domain name.

Example

```
(config-http-proxy)> force-host 192.168.8.1
Http::Proxy: "modem": enabled Host header enforcing to ►
"192.168.8.1".
```

```
(config-http-proxy)> force-host modem.keenetic.pro
Http::Proxy: "modem": enabled Host header enforcing to ►
"modem.keenetic.pro".
```

```
(config-http-proxy)> no force-host
Http::Proxy: "modem": disabled Host header enforcing.
```

History

Version	Description
3.06	The ip http proxy force-host command has been introduced.

3.50.5 ip http proxy preserve-host

Description Set option to save the original header for the host when passing through a proxy.

Command with **no** prefix disable option.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-http-proxy)> preserve-host
(config-http-proxy)> no preserve-host
```

Example

```
(config-http-proxy)> preserve-host
Http::Manager: Proxy HTTP Host header preservation is enabled.
```

```
(config-http-proxy)> no preserve-host
Http::Manager: Proxy HTTP Host header preservation is disabled.
```

History

Version	Description
2.13	The ip http proxy preserve-host command has been introduced.

3.50.6 ip http proxy security-level

Description Set the security level for HTTP proxy service. By default, private value is set.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-http-proxy)> security-level (public | private)
```

```
(config-http-proxy)> no security-level
```

Argument	Value	Description
public	<i>Keyword</i>	Access to the HTTP proxy is allowed for public, private and protected interfaces.
private	<i>Keyword</i>	Access to the HTTP proxy is allowed for private interfaces only.

Example

```
(config-http-proxy)> security-level public  
Http::Proxy: "test1": set public security level.
```

```
(config-http-proxy)> no security-level  
Http::Proxy: "test1": unset public security level.
```

Version	Description
3.05	The ip http proxy security-level command has been introduced.

3.50.7 ip http proxy ssl redirect

Description Enable automatic redirection on domains with SSL certificate for HTTP proxy service. By default, the redirection is enabled.

Command with **no** prefix disables redirection.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-http-proxy)> ssl redirect
```

```
(config-http-proxy)> no ssl redirect
```

Example

```
(config)> ip http ssl redirect  
Http::Proxy: "mytest": enabled SSL redirect.
```

```
(config)> no ip http ssl redirect  
Http::Proxy: "mytest": disabled SSL redirect.
```

History

Version	Description
4.00	The ip http proxy ssl redirect command has been introduced.

3.50.8 ip http proxy upstream

Description

Set HTTP or HTTPS server address for request redirecting.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
(config-http-proxy)> upstream (http | https) (<mac> | <ip> | <fqdn>) [port]
```

```
(config-http-proxy)> no upstream
```

Arguments

Argument	Value	Description
http	<i>Keyword</i>	HTTP server.
https	<i>Keyword</i>	HTTPS server.
mac	<i>MAC address</i>	MAC address of server.
ip	<i>IP address</i>	IP address of server.
fqdn	<i>FQDN</i>	Full domain name of server.
port	<i>Integer</i>	The port number.

Example

```
(config-http-proxy)> upstream http 192.168.1.1 8080  
Http::Manager: Proxy "TEST" upstream was set.
```

```
(config-http-proxy)> upstream https google.com 443  
Http::Proxy: "modem": set https upstream google.com, port 443.
```

```
(config-http-proxy)> no upstream  
Http::Manager: Remove upstream info for proxy "test".
```

History

Version	Description
2.08	The ip http proxy upstream command has been introduced.
3.05	https keyword was added.

3.50.9 ip http proxy x-real-ip

Description Enable X-Real-IP and X-Forwarded-For header support for HTTP proxy.
Command with **no** prefix disables headers.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-http-proxy)> x-real-ip
(config-http-proxy)> no x-real-ip
```

Example

```
(config-http-proxy)> x-real-ip
Http::Proxy: "test1": enabled X-Real-IP and X-Forwarded-For ►
headers.
```

```
(config-http-proxy)> no x-real-ip
Http::Proxy: "test1": disabled X-Real-IP and X-Forwarded-For ►
headers.
```

History

Version	Description
3.05	The ip http proxy x-real-ip command has been introduced.

3.51 ip http security-level

Description Set the security level for remote access to the Keenetic web interface. By default, private value is set.

Prefix no No

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config)> ip http security-level (public [ssl] | private | protected)
```

Arguments

Argument	Value	Description
public	<i>Keyword</i>	Access to the web interface is allowed for public, private and protected interfaces via HTTP and HTTPS.

Argument	Value	Description
private	<i>Keyword</i>	Access to the web interface is allowed for private interfaces.
protected	<i>Keyword</i>	Access to the web interface is allowed for private and protected interfaces.
ssl	<i>Keyword</i>	Access to the web interface is allowed for public interfaces via HTTPS only.

Example

```
(config)> ip http security-level protected
Http::Manager: Security level changed to protected.
```

```
(config)> ip http security-level public ssl
Http::Manager: Security level set to public SSL.
```

History

Version	Description
2.08	The ip http security-level command has been introduced.
3.00	Parameter ssl was added.

3.52 ip http ssl acme ecdsa

Description

Enable support for certificates based on ECDSA cryptography.

Command with **no** prefix disables the feature.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> ip http ssl acme ecdsa
```

```
(config)> no ip http ssl acme ecdsa
```

Example

```
(config)> ip http ssl acme ecdsa
Acme::Client: Enabled ECDSA chain.
```

```
(config)> no ip http ssl acme ecdsa
Acme::Client: Disabled ECDSA chain.
```

History

Version	Description
3.09	The ip http ssl acme ecdsa command has been introduced.

3.53 ip http ssl acme get

Description Generate and sign SSL certificate for the specified domain name (by default, KeenDNS). Access from the Internet should be granted.

Prefix no No

Change settings No

Multiple input No

Synopsis `(config)> ip http ssl acme get [<domain>]`

Argument	Value	Description
domain	<i>String</i>	KeenDNS domain name.

Example `(config)> ip http ssl acme get mytest.keenetic.pro`
 Acme::Client: Obtaining certificate for domain ►
 "mytest.keenetic.pro" is started.

Version	Description
2.11	The <code>ip http ssl acme get</code> command has been introduced.

3.54 ip http ssl acme revoke

Description Revoke and remove SSL certificate for the specified domain name (KeenDNS, by default).

Prefix no No

Change settings No

Multiple input No

Synopsis `(config)> ip http ssl acme revoke <domain>`

Argument	Value	Description
domain	<i>String</i>	KeenDNS domain name.

Example `(config)> ip http ssl acme revoke mytest.keenetic.pro`
 Acme::Client: Revoking certificate for domain ►
 "mytest.keenetic.pro" is started.

History

Version	Description
2.11	The ip http ssl acme revoke command has been introduced.

3.55 ip http ssl acme list

Description Show a list of free Let`s Encrypt certificates in the system.

Prefix no No

Change settings No

Multiple input No

Synopsis `(config)> ip http ssl acme list`

Example

```
(config)> ip http ssl acme list
certificate:
    domain: cc6b5a71a7644903b51a5454.keenetic.io
should-be-renewed: no
is-expired: no
issue-time: 2018-06-20T09:16:30.000Z
expiration-time: 2018-09-17T09:16:30.000Z

certificate:
    domain: mytest.keenetic.pro
should-be-renewed: no
is-expired: no
issue-time: 2018-06-28T16:36:56.000Z
expiration-time: 2018-09-25T16:36:56.000Z
```

History

Version	Description
2.11	The ip http ssl acme list command has been introduced.

3.56 ip http ssl enable

Description Enable HTTP SSL server. By default, the server is disabled.

Command with **no** prefix disables SSL server.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config)> ip http ssl enable
(config)> no ip http ssl enable
```

Example

```
(config)> ip http ssl enable
Http::Manager: Enabled SSL service.

(config)> no ip http ssl enable
Http::Manager: Disabled SSL service.
```

History

Version	Description
2.07	The ip http ssl enable command has been introduced.

3.57 ip http ssl port

Description Assign HTTPS port for Web interface of Titan. By default, 443 value is used. Command with **no** prefix resets HTTPS port to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config)> ip http ssl port <port>
(config)> no ip http ssl port
```

Arguments

Argument	Value	Description
port	<i>Integer</i>	New HTTPS port.

Example

```
(config)> ip http ssl port 4343
Http::Manager: SSL port changed to 4343.

(config)> no ip http ssl port
Http::Manager: SSL port reset to 443.
```

History

Version	Description
4.00	The ip http ssl port command has been introduced.

3.58 ip http ssl redirect

Description Enable automatic redirection on domains with SSL certificate. By default, the redirection is enabled.

Command with **no** prefix disables redirection.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis `(config)> ip http ssl redirect`

`(config)> no ip http ssl redirect`

Example `(config)> ip http ssl redirect`
Http::Manager: Redirect to SSL is enabled.

`(config)> no ip http ssl redirect`
Http::Manager: Redirect to SSL is disabled.

History

Version	Description
2.11	The <code>ip http ssl redirect</code> command has been introduced.

3.59 ip http webdav

Description Access to a group of commands to configure [WebDAV](#) server.

Prefix no No

Change settings No

Multiple input No

Interface type IP

Group entry `(config-webdav)`

Synopsis `(config)> ip http webdav`

Example `(config)> ip http webdav`
Core::Configurator: Done.
`(config-webdav)>`

History	Version	Description
	3.04	The ip http webdav command has been introduced.

3.59.1 ip http webdav enable

Description Enable [WebDAV](#) server. By default, the server is disabled.

Command with **no** prefix disables [WebDAV](#) server.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis | (config-webdav)> **enable**

| (config-webdav)> **no enable**

Example (config-webdav)> **enable**
WebDav::Server: Enabled.

(config-webdav)> **no enable**
WebDav::Server: Disabled.

History	Version	Description
	3.04	The ip http webdav enable command has been introduced.

3.59.2 ip http webdav permissive

Description Access to the [WebDAV](#) server for all users without authentication.

Command with **no** prefix denies anonymous access.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis | (config-webdav)> **permissive**

| (config-webdav)> **no permissive**

Example

```
(config-webdav)> permissive
WebDav::Server: Enabled permissive mode.
```

```
(config-webdav)> no permissive
WebDav::Server: Disabled permissive mode.
```

History

Version	Description
3.04	The ip http webdav permissive command has been introduced.

3.59.3 ip http webdav security-level

Description

Set the security level for remote access to the [WebDAV](#) server. By default, private value is set.

Prefix no

No

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
(config-webdav)> security-level (public | private)
```

Arguments

Argument	Value	Description
public	<i>Keyword</i>	Access to the WebDAV server is allowed for public, private and protected interfaces.
private	<i>Keyword</i>	Access to the WebDAV server is allowed for private interfaces.

Example

```
(config-webdav)> security-level public
Http::Manager: WebDAV security level set to public.
```

History

Version	Description
3.04	The ip http webdav security-level command has been introduced.

3.60 ip http x-frame-options

Description

Set X-Frame-Options header value for web server (nginx) in Home network segment.

Command with **no** prefix disables the feature.

Prefix no

Yes

Change settings Yes**Multiple input** No**Interface type** IP

Synopsis

```
(config)> ip http x-frame-options <x-frame-options>
(config)> no ip http x-frame-options <x-frame-options>
```

Arguments

Argument	Value	Description
x-frame-options	<i>String</i>	The X-Frame-Option value.

Example

```
(config)> ip http x-frame-options DENY
Http::Manager: Set X-Frame-Options to "DENY".
```

```
(config)> no ip http x-frame-options DENY
Http::Manager: Disabled X-Frame-Options header.
```

History

Version	Description
3.05	The ip http x-frame-options command has been introduced.

3.61 ip name-server

Description

Configure DNS server IP addresses. Addresses saved in this fashion are called static as opposite to dynamic — as registered by *PPP* or *DHCP* services.

Active, that addressed being used are the ones that have been registered most recently as compared to the others. Usually, the system uses the addresses which were obtained by several recent successfully connected *PPP* or *DHCP* services. If none of the services registers *DNS* addresses, static settings will be active. However, if after registering dynamic addresses the static settings are changed by the user, they become active until the new dynamic addresses are registered.

ip name-server command can be entered multiple times if several DNS-server addresses need to be setup. Moreover, each entered address can be associated with one or more domain names for working with specific areas, such as local names in the corporate network.

Command with **no** prefix removes the specified DNS server address from the static and the active lists if the command is furnished with arguments. If you use no arguments, the entire list of static addresses will be removed.

Prefix no Yes**Change settings** Yes**Multiple input** Yes

Interface type IP**Synopsis**

```
(config)> ip name-server <address> [ : <port> ] [ <domain> [ on <interface> ] ]
```

```
(config)> no ip name-server [ <address> [ : <port> ] ] [ <domain> [ on <interface> ] ]
```

Arguments

Argument	Value	Description
address	<i>IP address</i>	Name server address.
port	<i>Integer</i>	Name server port.
domain	<i>String</i>	Domain for which the server will be used. In resolving names the DNS-proxy first selects the address of the server with name best matching the requested domain. If the domain is not specified, the server will be used for all requests. Use "" as default domain. The maximum number of domains per one DNS entry is 16.
interface	<i>Interface</i>	Interface name to configure.

Example

```
(config)> ip name-server 8.8.8.8 "" on ISP
Dns::InterfaceSpecific: Name server 8.8.8.8 added, domain ►
(default), interface ISP.
```

```
(config)> no ip name-server
Dns::Manager: Static name server list cleared.
```

History

Version	Description
2.00	The ip name-server command has been introduced.
2.14	Argument port was added.

3.62 ip nat

Description

Enable translation of "local" addresses of network *network* or network behind the interface *interface*. For example, command `ip nat Home` means that all packets from the network Home, passing through the router will undergo IP spoofing.

Prefix no Yes**Change settings** Yes**Multiple input** Yes**Interface type** IP

Synopsis

```
(config)> ip nat (<interface> | <address> <mask>)
```

```
(config)> no ip nat (<interface> | <address> <mask>)
```

Arguments

Argument	Value	Description
interface	<i>Interface</i>	Source interface name (full name or an alias).
address	<i>IP address</i>	Together with mask <i>mask</i> sets the range of source IP addresses to be translated.
mask	<i>IP-mask</i>	Mask of a translation range. There are two ways to enter the mask: the canonical form (for example, 255.255.255.0) and the form of prefix bit length (for example, /24).

Example

```
(config)> ip nat Home
Network::Nat: A NAT rule added.
```

```
(config)> no ip nat Home
Network::Nat: A NAT rule removed.
```

History

Version	Description
2.00	The ip nat command has been introduced.

3.63 ip nat full-cone

Description

Enable mode *Full Cone NAT*. By default, the mode is disabled.

Command with **no** prefix disables the mode.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
(config)> ip nat full-cone
```

```
(config)> no ip nat full-cone
```

Example

```
(config)> ip nat full-cone
Network::Nat: Full cone mode enabled.
```

```
(config)> no ip nat full-cone
Network::Nat: Full cone mode disabled.
```

History

Version	Description
3.01	The ip nat full-cone command has been introduced.

3.64 ip nat restricted-cone

Description

Enable mode *Restricted NAT*. By default, the mode is disabled.

Command with **no** prefix disables the mode.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
(config)> ip nat restricted-cone
```

```
(config)> no ip nat restricted-cone
```

Example

```
(config)> ip nat restricted-cone
Network::Nat: Restricted cone mode enabled.
```

```
(config)> no ip nat restricted-cone
Network::Nat: Restricted cone mode disabled.
```

History

Version	Description
3.01	The ip nat restricted-cone command has been introduced.

3.65 ip nat sstp

Description

Enable translation for *SSTP* clients.

Note: Command is available if the *SSTP* VPN server component is installed.

Command with **no** prefix removes the rule.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis | (config)> **ip nat sstp**

| (config)> **no ip nat sstp**

Example (config)> **ip nat sstp**
SstpServer::Nat: SSTP VPN NAT enabled.

(config)> **no ip nat sstp**
SstpServer::Nat: SSTP VPN NAT disabled.

History

Version	Description
2.12	The ip nat sstp command has been introduced.

3.66 ip nat vpn

Description Enable translation for PPTP clients.

Note: Command is available if the PPTP VPN server component is installed.

Command with **no** prefix removes the rule.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis | (config)> **ip nat vpn**

| (config)> **no ip nat vpn**

Example (config)> **ip nat vpn**
VpnServer::Nat: PPTP VPN NAT enabled.

(config)> **no ip nat vpn**
VpnServer::Nat: PPTP VPN NAT disabled.

History

Version	Description
2.04	The ip nat vpn command has been introduced.

3.67 ip policy

Description Access to a group of commands to configure IP Policy — a default route selection rules for hosts and home network segments. If the IP Policy profile is not found, the command tries to create it. You can enter up to 16 profiles.

Command with **no** prefix removes the defined IP Policy profile from the list.

Prefix no Yes

Change settings Yes

Multiple input Yes

Group entry (config-policy)

Synopsis | (config)> **ip policy** <name>

| (config)> **no ip policy** <name>

Arguments

Argument	Value	Description
name	<i>Policy</i>	IP Policy name. Latin letters, numbers, hyphens and underscores are acceptable. Not more than 32 characters.

Example

```
(config)> ip policy Policy0
Network::PolicyTable: Created policy "Policy0".
```

```
(config)> no ip policy Policy0
Network::PolicyTable: Removed policy "Policy0".
```

History

Version	Description
2.12	The ip policy command has been introduced.

3.67.1 ip policy description

Description Assign an arbitrary description to the specified IP Policy profile.

Command with **no** prefix removes description.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis | (config-policy)> **description** <description>

```
(config-policy)> no description
```

Arguments

Argument	Value	Description
description	<i>String</i>	An arbitrary description of the IP Policy. Latin letters, numbers, hyphens and underscores are acceptable. Not more than 256 characters.

Example

```
(config-policy)> description PolicyOne
Network::PolicyTable: "Policy0": updated description.
```

```
(config-policy)> no description
Network::PolicyTable: "Policy0": updated description.
```

History

Version	Description
2.12	The ip policy description command has been introduced.

3.67.2 ip policy multipath

Description

Enable the function of simultaneous use of WAN connections in the balancing mode.

Command with **no** prefix disables the function.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
(config-policy)> multipath
```

```
(config-policy)> no multipath
```

Example

```
(config-policy)> multipath
Network::PolicyTable: "Policy0": enable multipath.
```

```
(config-policy)> no multipath
Network::PolicyTable: "Policy0": disable multipath.
```

History

Version	Description
2.14	The ip policy multipath command has been introduced.

3.67.3 ip policy permit

Description	Permit IP Policy for the global interface. If single IP Policy is permitted for multiple interfaces, you can specify a priority for each of them. Command with no prefix denies the IP Policy for specified interface. If you use no arguments, IP Policy will be denied for the entire list of interfaces.
Prefix no	Yes
Change settings	Yes
Multiple input	Yes
Interface type	IP
Synopsis	<pre>(config-policy)> permit global <interface> [order <order>] (config-policy)> no permit [global <interface>]</pre>

Arguments	Argument	Value	Description
	interface	<i>Interface</i>	Full interface name or an alias.
	order	<i>Integer</i>	The priority of global interface to which the IP Policy is permitted. Can take values in the range from 1 to 65534, but not more than the number of global interfaces.

Example	<pre>(config-policy)> permit global L2TP0 order 0 Network::PolicyTable: "Policy0": set permission to use L2TP0.</pre>
	<pre>(config-policy)> no permit global L2TP0 Network::PolicyTable: "Policy0": set no permission to use L2TP0.</pre>

History	Version	Description
	2.12	The ip policy permit command has been introduced.

3.67.4 ip policy permit auto

Description	Permit new connections for the IP Policy automatically. By default, the feature is disabled. Command with no prefix removes auto permission.
Prefix no	Yes
Change settings	Yes
Multiple input	No

Interface type	IP				
Synopsis	<pre>(config-policy)> permit auto</pre> <pre>(config-policy)> no permit auto</pre>				
Example	<pre>(config-policy)> permit auto</pre> <pre>Network::PolicyTable: "Policy0": set auto permission.</pre> <pre>(config-policy)> no permit auto</pre> <pre>Network::PolicyTable: "Policy0": set auto permission.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.12</td> <td>The ip policy permit auto command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.12	The ip policy permit auto command has been introduced.
Version	Description				
2.12	The ip policy permit auto command has been introduced.				

3.67.5 ip policy rate-limit input

Description	Add the input rate-limiting parameters to global interfaces of the IP Policy. Command with no prefix removes the setting.												
Prefix no	Yes												
Change settings	Yes												
Multiple input	No												
Interface type	IP												
Synopsis	<pre>(config-policy)> rate-limit <interface> input (<rate> auto)</pre> <pre>(config-policy)> rate-limit <interface> no input</pre>												
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>interface</td> <td><i>Interface</i></td> <td>The name of a global IP interface to rate-limit its traffic for a group of policy assignees.</td> </tr> <tr> <td>rate</td> <td><i>Integer</i></td> <td>The ingress rate limit in kbps. Can take values in the range from 64 to 1000000.</td> </tr> <tr> <td>auto</td> <td><i>Keyword</i></td> <td>Auto-ingress mode.</td> </tr> </tbody> </table>	Argument	Value	Description	interface	<i>Interface</i>	The name of a global IP interface to rate-limit its traffic for a group of policy assignees.	rate	<i>Integer</i>	The ingress rate limit in kbps. Can take values in the range from 64 to 1000000.	auto	<i>Keyword</i>	Auto-ingress mode.
Argument	Value	Description											
interface	<i>Interface</i>	The name of a global IP interface to rate-limit its traffic for a group of policy assignees.											
rate	<i>Integer</i>	The ingress rate limit in kbps. Can take values in the range from 64 to 1000000.											
auto	<i>Keyword</i>	Auto-ingress mode.											
Example	<pre>(config-policy)> rate-limit WifiMaster1/WifiStation0 input auto</pre> <pre>Network::PolicyTable: "Policy0": set input rate limit to "auto".</pre> <pre>(config-policy)> rate-limit WifiMaster1/WifiStation0 input 100000</pre> <pre>Network::PolicyTable: "Policy0": set input rate limit to "100000" ►</pre> <pre>kbps.</pre>												

```
(config-policy)> rate-limit WifiMaster1/WifiStation0 no input
Network::PolicyTable: "Policy0": reset input rate limit.
```

History

Version	Description
3.05	The ip policy rate-limit input command has been introduced.

3.67.6 ip policy rate-limit output

Description Add output rate-limiting parameters to global interfaces of the IP Policy.
Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-policy)> rate-limit <interface> output (<rate> | auto)
(config-policy)> rate-limit <interface> no output
```

Arguments

Argument	Value	Description
interface	<i>Interface</i>	The name of a global IP interface to rate-limit its traffic for a group of policy assignees.
rate	<i>Integer</i>	The ingress rate limit in kbps. Can take values in the range from 64 to 1000000.
auto	<i>Keyword</i>	Auto-ingress mode.

Example

```
(config-policy)> rate-limit ISP output auto
Network::PolicyTable: "Policy0": set output rate limit to "auto".
```

```
(config-policy)> rate-limit ISP output 1000
Network::PolicyTable: "Policy0": set output rate limit to "1000" ►
kbps.
```

```
(config-policy)> rate-limit ISP no output
Network::PolicyTable: "Policy0": reset output rate limit.
```

History

Version	Description
3.05	The ip policy rate-limit output command has been introduced.
3.08	The auto argument has been added.

3.68 ip route

Description Add a static route to the routing table to describe a rule of IP-packets transmission through a particular gateway or network interface.

As the destination network, one can specify default keyword. In this case, a default route will be created.

Command with **no** prefix removes the route with the specified parameters.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type IP

Synopsis

```
(config)> ip route (<network> <mask> | <host> | default) (<gateway>
[<interface> | <interface>] [auto] [metric] [reject])

(config)> no ip route (<network> <mask> | <host> | default) [<gateway> |
<interface>] [metric]
```

Arguments

Argument	Value	Description
network	<i>IP address</i>	IP address of the destination network.
mask	<i>IP-mask</i>	Mask of the destination network. There are two ways to enter the mask: in the canonical form (for example, 255.255.255.0) and in the form of prefix bit length (for example, /24).
host	<i>IP address</i>	IP address of the destination node.
default	<i>Keyword</i>	Helps specify default routes.
interface	<i>Interface</i>	Interface full name or an alias. Specified as the direction of the packet transferring, if the interface has a point-to-point channel connected that requires no additional addressing within the channel. If priority interface ip global is set on the interface, the route is added to the system table only if there is no other higher priority route with the same address.
gateway	<i>IP address</i>	IP address of the router in a directly connected network. Can be specified along with the interface name, if it is required to specify interface ip global priority. If no interface is specified, the systemd determines it automatically based on the current IP settings.

Argument	Value	Description
auto	<i>Keyword</i>	Allows you to apply the route when specified gateway becomes available.
metric	<i>Integer</i>	Route metrics. Ignored in the current implementation.
reject	<i>Keyword</i>	Enable route to use only the selected interface for routing the traffic to the specified destination. If the specified interface is not active, the traffic is not sent via other possible routes. This option works only when using the auto option and cannot be applied to the default route.

Example

```
(config)> ip route default Home
Network::RoutingTable: Added static route: 0.0.0.0/0 via Home.
```

```
(config)> ip route 123.123.123.123 Wireguard1 auto reject
Network::RoutingTable: Added static route: 123.123.123.123/32 ►
via Wireguard1.
```

```
(config)> no ip route 123.123.123.123 Wireguard1
Network::RoutingTable: Deleted static route: 123.123.123.123/32 ►
via Wireguard1.
```

```
(config)> no ip route default
Network::RoutingTable: No such route: 0.0.0.0/0.
```

History

Version	Description
2.00	The ip route command has been introduced.
3.08	The reject option was added.

3.69 ip search-domain

Description Assign search domain to resolve hostnames that are not fully qualified.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> ip search-domain <domain>
```

```
(config)> no ip search-domain
```

Argument	Value	Description
domain	<i>String</i>	The domain name to assign.

Example

```
(config)> ip search-domain my.example
```

```
(config)> no ip search-domain my.example
```

Version	Description
2.00	The ip search-domain command has been introduced.

3.70 ip sip alg direct-media

Description Replace IP address in Owner field of SDP. This feature is used to not configure port forwarding separately for VoIP traffic. By default, the setting is disabled.

Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> ip sip alg direct-media
```

```
(config)> no ip sip alg direct-media
```

Example

```
(config)> ip sip alg direct-media
Sip::Alg: Direct media enabled.
```

```
(config)> no ip sip alg direct-media
Sip::Alg: Direct media disabled.
```

Version	Description
2.11	The ip sip alg direct-media command has been introduced.

3.71 ip sip alg port

Description Specify a port number for SIP messages other than the default port. By default, port number is 5060.

Command with **no** prefix resets port to default.

Prefix no Yes

Change settings Yes**Multiple input** No

Synopsis

```
(config)> ip sip alg port <port>
```

```
(config)> no ip sip alg port
```

Arguments

Argument	Value	Description
port	<i>Integer</i>	The port number.

Example

```
(config)> ip sip alg port 7090
Sip::Alg: Port set to 7090.
```

```
(config)> no ip sip alg port
Sip::Alg: Port reset to default.
```

History

Version	Description
2.12	The ip sip alg port command has been introduced.

3.72 ip ssh

Description Access to a group of commands to manage SSH-server.**Prefix no** No**Change settings** No**Multiple input** No**Interface type** IP**Group entry** (config-ssh)

Synopsis

```
(config)> ip ssh
```

Example

```
(config)> ip ssh
(config-ssh)>
```

History

Version	Description
2.12	The ip ssh command has been introduced.

3.72.1 ip ssh cipher

Description Set a symmetric key cipher for SSH session.

Command with **no** prefix removes the specified cipher.

Prefix no	Yes
Change settings	Yes
Multiple input	Yes
Interface type	IP

Synopsis

```
(config-ssh)> cipher <cipher>
```

```
(config-ssh)> no cipher <cipher>
```

Arguments

Argument	Value	Description
cipher	chacha20-poly1305@openssh.com	An encryption algorithm ChaCha20-Poly1305.
	aes128-ctr	An encryption algorithm AES128-CTR.
	aes256-ctr	An encryption algorithm AES1256-CTR.
	aes128-gcm@openssh.com	An encryption algorithm AES128-GCM.
	aes256-gcm@openssh.com	An encryption algorithm AES256-GCM.

Example

```
(config-ssh)> cipher chacha20-poly1305@openssh.com  
Ssh::Manager: Added cipher "chacha20-poly1305@openssh.com".
```

```
(config-ssh)> no cipher chacha20-poly1305@openssh.com  
Ssh::Manager: Use default ciphers.
```

History

Version	Description
3.04	The ip ssh cipher command has been introduced.

Version	Description
3.05	New encryption algorithms aes128-gcm@openssh.com, aes256-gcm@openssh.com were added.

3.72.2 ip ssh keygen

Description	Regeneration of a given type key.
Prefix no	No
Change settings	Yes
Multiple input	No

Interface type IP**Synopsis** `(config-ssh)> keygen <keygen>`**Arguments**

Argument	Value	Description
keygen	default	Automatic generation of a new open key RSA2048 + ECDSA-NISTP521.
	rsa-1024	Automatic generation of a new open RSA-key with a length of 1024 bits.
	rsa-2048	Automatic generation of a new open RSA-key with a length of 2048 bits.
	rsa-4096	Automatic generation of a new open RSA-key with a length of 4096 bits.
	ecdsa-nistp256	Automatic generation of a new open ECDSA-key with a length of 256 bits.
	ecdsa-nistp384	Automatic generation of a new open ECDSA-key with a length of 384 bits.
	ecdsa-nistp521	Automatic generation of a new open ECDSA-key with a length of 521 bits.
	ed25519	Automatic generation of a new open ED25519 key with a length of 256 bits.

Example

```
(config-ssh)> keygen default
Ssh::Manager: Key generation is in progress...
```

History

Version	Description
2.12	The ip ssh keygen command has been introduced.

3.72.3 ip ssh lockout-policy

Description

Set SSH bruteforce detection parameters for public interfaces. By default, feature is enabled. If you use 0 as an argument, all bruteforce detection parameters will be reset to default.

Command with **no** prefix disables bruteforce detection.

Prefix no Yes**Change settings** Yes**Multiple input** No**Interface type** IP

Synopsis `(config-ssh)> lockout-policy <threshold> [<duration> [<observation-window>]]`


```
(config-ssh)> no lockout-policy
```

Arguments

Argument	Value	Description
threshold	<i>Integer</i>	The number of failed attempts to log in. By default, 5 value is used. Can take values in the range from 4 to 20.
duration	<i>Integer</i>	An authorization ban duration for the specified IP in minutes. By default, 15 value is used. Can take values in the range from 1 to 60.
observation-window	<i>Integer</i>	Duration of suspicious activity observation in minutes. By default, 3 value is used. Can take values in the range from 1 to 10.

Example

```
(config-ssh)> lockout-policy 10 30 2
Ssh::Manager: Bruteforce detection is reconfigured.
```

```
(config-ssh)> no lockout-policy
Ssh::Manager: Bruteforce detection is disabled.
```

```
(config-ssh)> lockout-policy 0
Ssh::Manager: Bruteforce detection reset to default.
```

History

Version	Description
2.12	The ip ssh lockout-policy command has been introduced.

3.72.4 ip ssh port

Description Specify port number for SSH connection. By default, 22 port number is used.

Command with **no** prefix resets port number to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-ssh)> port <number>
```

```
(config-ssh)> no port
```

Arguments

Argument	Value	Description
number	<i>Integer</i>	Port number. Can take values in the range from 1 to 65535 inclusively.

Example

```
(config-ssh)> port 2626
Ssh::Manager: Port changed to 2626.
```

```
(config-ssh)> no port
Ssh::Manager: Port reset to 22.
```

History

Version	Description
2.12	The ip ssh port command has been introduced.

3.72.5 ip ssh security-level

Description

Set SSH security level. By default, private value is set.

Prefix no

No

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
(config-ssh)> security-level (public | private | protected)
```

Arguments

Argument	Value	Description
public	<i>Keyword</i>	Access to the SSH server is allowed for public, private and protected interfaces.
private	<i>Keyword</i>	Access to the SSH server is allowed for private interfaces.
protected	<i>Keyword</i>	Access to the SSH server is allowed for private and protected interfaces.

Example

```
(config-ssh)> security-level protected
Ssh::Manager: Security level changed to protected.
```

History

Version	Description
2.12	The ip ssh security-level command has been introduced.

3.72.6 ip ssh session timeout

Description Set the lifetime of inactive session for SSH connection. By default, 300 value is used, i.e. the function of activity tracking within a session is disabled.

Command with **no** prefix resets timeout to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-ssh)> session timeout <timeout>
(config-ssh)> no session timeout
```

Arguments

Argument	Value	Description
timeout	<i>Integer</i>	The lifetime of inactive session. Can take values in the range from 5 to $2^{32}-1$ seconds inclusively.

Example

```
(config-ssh)> session timeout 123456
Ssh::Manager: A session timeout value set to 123456 seconds.
```

```
(config-ssh)> no session timeout
Ssh::Manager: A session timeout reset.
```

History

Version	Description
3.03	The ip ssh session timeout command has been introduced.

3.72.7 ip ssh sftp

Description Access to a group of commands to manage [SFTP](#) server.

Prefix no No

Change settings No

Multiple input No

Interface type IP

Group entry (config-sftp)

Synopsis

```
(config)> ip ssh sftp
```

Example (config)> **ip ssh sftp**
(config-sftp)>

Version	Description
3.04	The ip ssh sftp command has been introduced.

3.72.7.1 ip ssh sftp enable

Description Enable *SFTP* server.
Command with **no** prefix disables the server.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis (config-sftp)> **enable**
(config-sftp)> **no enable**

Example (config-sftp)> **enable**
Ssh::Manager: Enabled SFTP server.

(config-sftp)> **no enable**
Ssh::Manager: Disabled SFTP server.

Version	Description
3.04	The ip ssh sftp enable command has been introduced.

3.72.7.2 ip ssh sftp permissive

Description Access to the *SFTP* server for all users without authentication.
Command with **no** prefix denies access.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis (config-sftp)> **permissive**

```
(config-sftp)> no permissive
```

Example

```
(config-sftp)> permissive
```

```
(config-sftp)> no permissive
```

History

Version	Description
3.04	The ip ssh sftp permissive command has been introduced.

3.72.7.3 ip ssh sftp root**Description**

Set root directory on *SFTP* server by default.

Command with **no** prefix resets root directory.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
(config-sftp)> root (<directory> | <directory>)
```

```
(config-sftp)> no root
```

Arguments

Argument	Value	Description
directory	<i>String</i>	Path to default root directory.

Example

```
(config-sftp)> root files_ssd:/
Sftp::Server: A default root directory set to "files_ssd:/".
```

```
(config-sftp)> no root files_ssd:/
Sftp::Server: A default root directory reset.
```

History

Version	Description
3.04	The ip ssh sftp root command has been introduced.

3.73 ip static**Description**

Define translation rule for global and local IP addresses. If *interface* or *network* corresponds to the interface with *security level* public, then the destination address translation (DNAT) will occur. If *to-address* corresponds

to the interface with [security level](#) `public`, then source address translation (SNAT) will occur. TCP/UDP port number is always treated as the destination port.

If `network` corresponds to a single address and this address is equal to `to-address`, then this rule will prohibit the translation of the specified address, which could have been done based on the specified rules [ip nat](#).

ip static rules have higher priority than the [ip nat](#) rules.

When using the translation rule, the router opens access to the specified port, so there is no need to make additional configuration of the firewall.

Command with **no** prefix enables the rule or removes the rule.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type IP

Synopsis

```
(config)> ip static [protocol] (interface | (address mask))
  (port through end-port (to-address | to-host |
to-interface) |
  port (to-address | to-host | to-interface) [to-port] |
  to-address | to-host | to-interface)
```

```
(config)> no ip static [protocol] (interface | (address mask))
  (port through end-port (to-address | to-host |
to-interface) |
  port (to-address | to-host | to-interface) [to-port] |
  to-address | to-host | to-interface)]
```

Arguments

Argument	Value	Description
protocol	tcp	TCP protocol.
	udp	UDP protocol.
	icmp	ICMP protocol.
	tcpudp	TCP and UDP protocols.
	gre	GRE protocol.
	ipip	IP in IP protocol.
interface	<i>Interface</i>	Input interface name (full name or alias).
comment	<i>String</i>	User's notes with symbol ! before them.
address	<i>IP address</i>	Along with mask <i>mask</i> sets the range of destination IP addresses that are to be translated.

Argument	Value	Description
mask	<i>IP-mask</i>	Translation range mask. There are two ways to enter the mask: the canonical form (for example, 255.255.255.0) and the form of prefix bit length (for example, /24).
port	<i>Integer</i>	TCP/UDP port number for which a translation request comes. If not specified, all incoming requests will be translated.
end-port	<i>Integer</i>	The end of the range of ports.
to-address	<i>IP address</i>	The destination address after translation.
to-host	<i>MAC address</i>	The destination MAC address after translation. Only MAC address from known hosts are accepted. If the known host is deleted, then the associated rules will be deleted too.
to-port	<i>Integer</i>	TCP/UDP port number after translation. If not specified, the destination port remains the same.
to-interface	<i>Interface</i>	Interface name after translation.

Example

Let there be a router between the “local” network 172.16.1.0/24 ([security level private](#)) and “global” network 10.0.0.0/16 ([security level public](#)). It is required that all requests coming to the “global” interface of this router on port 80 to be broadcast to the “local” server with the address 172.16.1.33. The sequence of commands to implement the required schema might look like this:

```
(config)> interface Home ip address 192.168.1.1/24
Network::Interface::Ip: "Bridge0": IP address is 192.168.1.1/24.
```

```
(config)> ip static tcp ISP 80 172.16.1.33 80
Network::StaticNat: Static NAT rule has been added.
```

```
(config)> ip static tcp ISP 21 00:0e:c6:a1:22:11 !test
Network::StaticNat: Static NAT rule is already there.
```

```
(config)> ip static disable
Network::StaticNat: Static NAT disable unchanged.
```

```
(config)> no ip static disable
Network::StaticNat: Static NAT rule enabled.
```

```
(config)> no ip static
Network::StaticNat: Static NAT rules have been removed.
```

History

Version	Description
2.00	The ip static command has been introduced.
2.06	The to-host argument has been added.

3.74 ip static rule

Description Disable IP address translation rule or set rule operation time by schedule.
Command with **no** prefix enables the rule or removes the rule schedule.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type IP

Synopsis

```
(config)> ip static rule <index> (disable | schedule <schedule>)
(config)> no ip static rule <index> (disable | schedule)
```

Arguments

Argument	Value	Description
index	<i>Integer</i>	The translation rule number.
disable	<i>Keyword</i>	Disable the translation rule.
schedule	<i>Schedule</i>	The name of the schedule that was created with schedule group of commands.

Example

```
(config)> ip static rule 0 schedule test_schedule
Network::StaticNat: Static NAT rule schedule applied.
```

```
(config)> ip static rule 0 disable
Network::StaticNat: Static NAT rule disabled.
```

```
(config)> no ip static rule 0 disable
Network::StaticNat: Static NAT rule enabled.
```

```
(config)> no ip static rule 0 schedule
Network::StaticNat: Static NAT rule schedule removed.
```

History

Version	Description
2.08	The ip static rule command has been introduced.

3.75 ip telnet

Description Access to a group of commands to manage Telnet server.

Prefix no No

Change settings No

Multiple input No

Interface type	IP
Group entry	(config-telnet)
Synopsis	(config)> ip telnet

Example

```
(config)> ip telnet
(config-telnet)>
```

History	Version	Description
	2.08	The ip telnet command has been introduced.

3.75.1 ip telnet lockout-policy

Description Set Telnet bruteforce detection parameters for public interfaces. By default, feature is enabled. If you use 0 as an argument, all bruteforce detection parameters will be reset to default.

Command with **no** prefix disables bruteforce detection.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-telnet)> lockout-policy <threshold> [ <duration> [
<observation-window> ] ]
(cconfig-telnet)> no lockout-policy
```

Arguments	Argument	Value	Description
	threshold	<i>Integer</i>	The number of failed attempts to log in. By default, 5 value is used. Can take values in the range from 4 to 20.
	duration	<i>Integer</i>	An authorization ban duration for the specified IP in minutes. By default, 15 value is used. Can take values in the range from 1 to 60.
	observation-window	<i>Integer</i>	Duration of suspicious activity observation in minutes. By default, 3 value is used. Can take values in the range from 1 to 10.

Example

```
(config-telnet)> lockout-policy 10 30 2
Telnet::Server: Bruteforce detection is reconfigured.
```

```
(config-telnet)> no lockout-policy
Telnet::Server: Bruteforce detection is disabled.
```

```
(config-telnet)> lockout-policy 0
Telnet::Server: Bruteforce detection is enabled.
```

History

Version	Description
2.08	The ip telnet lockout-policy command has been introduced.

3.75.2 ip telnet port

Description

Specify port number for telnet connection. By default, 23 port number is used.

Command with **no** prefix resets port number to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
(config-telnet)> port <number>
```

```
(config-telnet)> no port
```

Arguments

Argument	Value	Description
number	<i>Integer</i>	Port number. Can take values in the range from 1 to 65535 inclusively.

Example

```
(config-telnet)> port 2525
Telnet::Server: Port unchanged.
```

```
(config-telnet)> no port
Telnet::Server: Port unchanged.
```

History

Version	Description
2.08	The ip telnet port command has been introduced.

3.75.3 ip telnet security-level

Description

Set Telnet security level. By default, private value is set.

Prefix no No

Change settings Yes

Multiple input No

Interface type IP

Synopsis `(config-telnet)> security-level (public | private | protected)`

Arguments

Argument	Value	Description
public	<i>Keyword</i>	Access to the Telnet server is allowed for public, private and protected interfaces.
private	<i>Keyword</i>	Access to the Telnet server is allowed for private interfaces.
protected	<i>Keyword</i>	Access to the Telnet server is allowed for private and protected interfaces.

Example

```
(config-telnet)> security-level protected
Telnet::Manager: Security level changed to protected.
```

History

Version	Description
2.08	The ip telnet security-level command has been introduced.

3.75.4 ip telnet session max-count

Description Set the maximal number of simultaneous sessions for telnet connection. By default, 4 value is used.

Command with **no** prefix resets count to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis `(config-telnet)> session max-count <count>`

`(config-telnet)> no session max-count`

Arguments

Argument	Value	Description
count	<i>Integer</i>	The maximal number of simultaneous sessions. Can take values in the range from 1 to 4 inclusively.

Example

```
(config-telnet)> session max-count 4
Telnet::Server: The maximum session count set to 4.
```

```
(config-telnet)> no session max-count
Telnet::Server: The maximum session count reset to 4.
```

History

Version	Description
2.08	The ip telnet session max-count command has been introduced.

3.75.5 ip telnet session timeout

Description

Set the lifetime of inactive session for telnet connection. By default, 300 value is used which means that the function of activity tracking within a session is disabled.

Command with **no** prefix resets timeout to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
(config-telnet)> session timeout <timeout>
```

```
(config-telnet)> no session timeout
```

Arguments

Argument	Value	Description
timeout	<i>Integer</i>	The lifetime of inactive session. Can take values in the range from 5 to $2^{32}-1$ seconds inclusively.

Example

```
(config-telnet)> session timeout 600
Telnet::Server: A session timeout value set to 600 seconds.
```

```
(config-telnet)> no session timeout
Telnet::Server: A session timeout reset.
```

History

Version	Description
2.08	The ip telnet session timeout command has been introduced.

3.76 ip traffic-shape host

Description Set the limit of data rate on a specified known host in both directions. By default speed is not limited.

Command with **no** prefix removes the setting for specified host. If you use no arguments, the entire list of rate limits for all hosts will be removed.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type IP

Synopsis

```
(config)> ip traffic-shape host <mac> rate <rate> [ asymmetric
<upstream-rate> ] [ schedule <schedule> ]

(config)> no ip traffic-shape host [ <mac> ]
```

Arguments

Argument	Value	Description
mac	<i>MAC address</i>	MAC address of the known host.
rate	<i>Integer</i>	Value of data download rate in Kbps. Limit could be in the range from 64 Kbps to 1 Gbps.
upstream-rate	<i>Integer</i>	Data upload rate in Kbps. Value can be in the range from 64 Kbps to 1 Gbps.
schedule	<i>Schedule</i>	The name of the schedule that was created with schedule group of commands.

Example

```
(config)> ip traffic-shape host a8:1e:82:81:f1:21 rate 80
TrafficControl::Manager: "a8:1e:82:81:f1:21" host rate limited ►
to DL 80 / UL 80 Kbits/sec.
```

```
(config)> ip traffic-shape host a8:1e:82:81:f1:21 rate 80 ►
asymmetric 64
TrafficControl::Manager: "a8:1e:82:81:f1:21" host rate limited ►
to DL 80 / UL 64 Kbits/sec..
```

```
(config)> ip traffic-shape host a8:1e:82:81:f1:21 rate 80 ►
asymmetric 64 schedule Update
TrafficControl::Manager: "a8:1e:82:81:f1:21" host rate limited ►
to DL 80 / UL 64 Kbits/sec (controlled by schedule Update).
```

```
(config)> no ip traffic-shape host a8:1e:82:81:f1:21
TrafficControl::Manager: Rate limit removed for host ►
"a8:1e:82:81:f1:21".
```

```
(config)> no ip traffic-shape host a8:1e:82:81:f1:21
TrafficControl::Manager: Rate limit removed for host ►
"a8:1e:82:81:f1:21".
```

```
(config)> no ip traffic-shape host
TrafficControl::Manager: Rate limits for all hosts removed.
```

History

Version	Description
2.05	The ip traffic-shape host command has been introduced.
2.08	The schedule argument was added.
3.04	The upstream-rate argument was added.

3.77 ip traffic-shape unknown-host

Description Set the data rate limitation for unregistered devices in both directions. By default, speed is unlimited.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config)> ip traffic-shape unknown-host rate <rate> [ asymmetric
<upstream-rate> ]
```

```
(config)> no ip traffic-shape unknown-host rate
```

Arguments

Argument	Value	Description
rate	<i>Integer</i>	The data download rate in Kbps. Value could be in the range from 64 Kbps to 1 Gbps.
upstream-rate	<i>Integer</i>	Data upload rate in Kbps. Value can be in the range from 64 Kbps to 1 Gbps.

Example

```
(config)> ip traffic-shape unknown-host rate 80
TrafficControl::Manager: Rate limit for unknown hosts set to 80 ►
Kbits/sec.
```

```
(config)> ip traffic-shape unknown-host rate 80 asymmetric 64
TrafficControl::Manager: Rate limit for unknown hosts set to ►
80/64 Kbits/sec.
```

```
(config)> no ip traffic-shape unknown-host rate
TrafficControl::Manager: Rate limit for unknown hosts removed.
```

History	Version	Description
	2.09	The ip traffic-shape unknown-host command has been introduced.
	3.04	The upstream-rate argument was added.

3.78 ipv6 local-prefix

Description Configure a local (ULA) prefix. Argument can be a literal prefix or **default**, which generates a persistent unique prefix automatically.

Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> ipv6 local-prefix (default | <prefix> )
(config)> no ipv6 local-prefix [default | <prefix> ]
```

Arguments	Argument	Value	Description
	default	<i>Keyword</i>	Generate persistent unique prefix.
	prefix	<i>Prefix</i>	Local ULA prefix. Must be a valid prefix in the block fd00::/8 with a prefix length no longer than 48.

Example

```
(config)> ipv6 local-prefix default
Ip6::Prefixes: Default ULA prefix enabled.
```

```
(config)> ipv6 local-prefix fd01:db8:43::/48
Ip6::Prefixes: Added static prefix: fd01:db8:43::/48.
```

```
(config)> no ipv6 local-prefix default
Ip6::Prefixes: Default ULA prefix disabled.
```

```
(config)> no ipv6 local-prefix fd01:db8:43::/48
Ip6::Prefixes: Deleted static prefix: fd01:db8:43::/48.
```

History	Version	Description
	2.00	The ipv6 local-prefix command has been introduced.

3.79 ipv6 name-server

Description Configure DNS server IPv6-addresses. Addresses saved in this fashion are called static as opposite to dynamic — as registered by *PPP* or *DHCP* services.

ipv6 name-server command can be entered multiple times if several DNS server addresses need to be setup.

Command with **no** prefix removes the specified DNS server address from the static and the active lists if the command is furnished with arguments, or clears the list of static addresses if the command has no arguments.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config)> ipv6 name-server <address> [ <domain> [ on <interface> ] ]
```

```
(config)> no ipv6 name-server [ <address> [ <domain> [ on <interface> ] ] ]
```

Arguments

Argument	Value	Description
address	<i>IPv6-address</i>	Name server address.
domain	<i>String</i>	Domain for which the server will be used. In resolving names the DNS-proxy first selects the address of the server with name best matching the requested domain. If the domain is not specified, the server will be used for all requests. Use "" as default domain.
interface	<i>Interface</i>	Interface name to configure.

Example

```
(config)> ipv6 name-server 2001:4860:4860::8888  
Dns::Manager: Name server 2001:4860:4860::8888 added, domain ►  
(default).
```

```
(config)> ipv6 name-server 123::456 "" on ISP  
Dns::InterfaceSpecific: "GigabitEthernet1": name server 123::456 ►  
added, domain (default).
```

```
(config)> ipv6 name-server 2001:4860:4860::8888 google.com  
Dns::Manager: Name server 2001:4860:4860::8888 added, domain ►  
google.com.
```

```
(config)> no ipv6 name-server 2001:4860:4860::8888  
Dns::Manager: Name server 2001:4860:4860::8888, domain (default) ►  
deleted.
```



```
(config)> no ipv6 name-server 123::456 "" on ISP
Dns::InterfaceSpecific: Name server 123::456 deleted, domain ►
(default).
```

```
(config)> no ipv6 name-server 2001:4860:4860::8888 google.com
Dns::Manager: Name server 2001:4860:4860::8888, domain google.com ►
deleted.
```

```
(config)> no ipv6 name-server
Dns::Manager: Static name server list cleared.
```

History

Version	Description
2.00	The ipv6 name-server command has been introduced.
4.00	The interface argument was added.

3.80 ipv6 pass

Description Enable Pass Through mode on the router for IPv6-packets. By default, the feature is disabled.

Command with **no** prefix disables the function.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> ipv6 pass through <wan-iface> <lan-iface>
```

```
(config)> no ipv6 pass
```

Arguments

Argument	Value	Description
wan-iface	<i>Interface</i>	Full WAN-interface name or an alias.
lan-iface	<i>Interface</i>	Full LAN-interface name or an alias.

Example

```
(config)> ipv6 pass through ISP Home
Ip6::Pass: Configured pass from "GigabitEthernet1" to "Bridge0".
```

```
(config)> no ipv6 pass
Ip6::Pass: Disabled.
```

History

Version	Description
2.06	The ipv6 pass command has been introduced.

3.81 ipv6 route

Description

Add a static route to the routing table to describe a rule of IPv6-packets transmission through a particular gateway or network interface.

As the destination network keyword `default` can be specified. In this case, a default route will be created.

Command with **no** prefix removes the route with the specified parameters.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(config)> ipv6 route ( <prefix> | default ) ( <interface> [ <gateway> ] | <gateway> )
```

```
(config)> no ipv6 route ( <prefix> | default ) ( <interface> [ <gateway> ] | <gateway> )
```

Arguments

Argument	Value	Description
prefix	<i>Prefix</i>	IPv6 prefix.
default	<i>Keyword</i>	Default prefix.
interface	<i>Interface</i>	Full interface name or an alias.
gateway	<i>IP address</i>	IP address of the router in a directly connected network.

Example

```
(config)> ipv6 route 2002:c100:aeb5::/48 ISP  
route added
```

```
(config)> no ipv6 route 2002:c100:aeb5::/48 ISP  
route erased
```

```
(config)> ipv6 route 2002:c100:aeb5:100::/56 2002:c100:aeb5::33  
route added
```

```
(config)> no ipv6 route 2002:c100:aeb5:100::/56 2002:c100:aeb5::33  
route erased
```

History

Version	Description
2.00	The ipv6 route command has been introduced.
2.11	gateway argument has been added.

3.82 ipv6 static

Description Define the rule to allow incoming connection to a specified port of a registered home network device.

Command with **no** prefix removes the rule.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> ipv6 static <protocol> (<interface> <mac> | <mac>) [<port> [
through <end-port> ]]
```

```
(config)> no ipv6 static [<protocol> (<interface> <mac> | <mac>) [<port> [
through <end-port> ]]
```

Arguments

Argument	Value	Description
protocol	tcp	<i>TCP</i> protocol.
	udp	<i>UDP</i> protocol.
	tcpudp	<i>TCP</i> and <i>UDP</i> protocol.
	icmp6	<i>ICMPv6</i> protocol.
interface	<i>Interface</i>	Input interface name (full name or an alias).
mac	<i>MAC address</i>	MAC address of host.
port	<i>Integer</i>	TCP/UDP port number for which incoming request comes.
end-port	<i>Integer</i>	The end of the range of ports.

Example

```
(config)> ipv6 static tcp ISP 04:d1:c3:24:bc:19 81
Ip6::Firewall: Static rule added.
```

```
(config)> ipv6 static tcp 04:d1:c3:24:bc:19 8080
Ip6::Firewall: Static rule added.
```

```
(config)> ipv6 static tcp ISP 04:d1:c3:24:bc:19 8080 through 8081
Ip6::Firewall: Static rule added.
```

```
(config)> ipv6 static icmpv6 ISP 04:d1:c3:24:bc:19
Ip6::Firewall: Static rule added.
```

```
(config)> no ipv6 static icmpv6 ISP 04:d1:c3:24:bc:19
Ip6::Firewall: Static rule removed.
```

```
(config)> no ipv6 static
Ip6::Firewall: Static rules cleared.
```

History

Version	Description
2.12	The ipv6 static command has been introduced.
4.00	The icmpv6 argument was added.

3.83 ipv6 subnet

Description Access to a group of commands to configure a LAN IPv6 segment. If the segment is not found, the command tries to create it.

Prefix no Yes

Change settings Yes

Multiple input Yes

Group entry (config-subnet)

Synopsis

```
(config)> ipv6 subnet <name>
(config)> no ipv6 subnet [ <name> ]
```

Arguments

Argument	Value	Description
name	<i>String</i>	Subnet name or an alias.

Example

```
(config)> ipv6 subnet Default
(config-subnet)>
```

History

Version	Description
2.00	The ipv6 subnet command has been introduced.

3.83.1 ipv6 subnet bind

Description Bind the subnet to an interface.
Command with **no** prefix cancels binding.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-subnet)> bind <bind>
(config-subnet)> no bind
```

Argument	Value	Description
bind	<i>Interface</i>	Full interface name or an alias.

Example

```
(config-subnet)> bind WifiMaster0/AccessPoint1
Ip6::Subnets: Interface "WifiMaster0/AccessPoint1" bound to ►
subnet "Default".
```

```
(config-subnet)> no bind
Ip6::Subnets: Interface unbound from subnet "Default".
```

Version	Description
2.00	The ipv6 subnet bind command has been introduced.

3.83.2 ipv6 subnet mode

Description Select the address configuration mode for hosts in the subnet. Exclusive options are **dhcp** and **slaac**. The former will enable a local DHCPv6 server for the purposes of address assignment, and the latter will enable SLAAC (Stateless Address Autoconfiguration).

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-subnet)> mode mode
```

```
(config-subnet)> no mode
```

Argument	Value	Description
mode	slaac	Enable SLAAC (stateless autoconfiguration).
	dhcp	Enable DHCPv6 server (stateful autoconfiguration).

Example

```
(config-subnet)> mode dhcp
Ip6::Subnets: Subnet "Default" enabled as DHCP.
```

```
(config-subnet)> no mode
Ip6::Subnets: Subnet "Default" disabled.
```

Version	Description
2.00	The ipv6 subnet mode command has been introduced.

3.83.3 ipv6 subnet number

Description Assign the subnet ID, which will determine the advertised prefix for the segment. Must be unique across subnets.

Prefix no No

Change settings Yes

Multiple input No

Synopsis `(config-subnet)> number <number>`

Arguments

Argument	Value	Description
number	<i>Integer</i>	Unique subnet ID.

Example

```
(config-subnet)> number 2
Ip6::Subnets: Number 2 assigned to subnet "Default".
```

History

Version	Description
2.00	The ipv6 subnet number command has been introduced.

3.83.4 ipv6 subnet prefix delegate

Description Set delegated prefix length.
Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis `(config-subnet)> prefix delegate <delegate>`

`(config-subnet)> no prefix delegate`

Arguments

Argument	Value	Description
delegate	<i>Integer</i>	The value must be less than prefix length.

Example

```
(config-subnet)> prefix delegate 63
Network::Ip6::Subnets: Delegate length is /63 assigned to subnet ▶
"Default".
```

```
(config-subnet)> no prefix delegate
Network::Ip6::Subnets: Prefix delegation disabled for subnet ►
"Default".
```

History

Version	Description
4.00	The ipv6 subnet prefix delegate command has been introduced.

3.83.5 ipv6 subnet prefix length

Description

Set subnet prefix length. By default, /64 prefix length is set.

Command with **no** prefix resets to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-subnet)> prefix length <length>
```

```
(config-subnet)> no prefix length
```

Arguments

Argument	Value	Description
length	<i>Integer</i>	Prefix length can take values in the range from /32 to /64.

Example

```
(config-subnet)> prefix length 62
Network::Ip6::Subnets: Length is /62 assigned to subnet "Default".
```

```
(config-subnet)> no prefix length
Network::Ip6::Subnets: Length reset to default for subnet ►
"Default".
```

History

Version	Description
4.00	The ipv6 subnet prefix length command has been introduced.

3.84 isolate-private

Description

Prohibit data transfer between any interfaces with [security level](#) private. Enabled by default.

Command with **no** prefix cancels the command, allowing data transfer between private interfaces.

Prefix no Yes**Change settings** Yes**Multiple input** No

Synopsis

```
(config)> isolate-private
(config)> no isolate-private
```

Example

```
(config)> isolate-private
Netfilter::Manager: Private networks isolated.

(config)> no isolate-private
Netfilter::Manager: Private networks not isolated.
```

History

Version	Description
2.00	The isolate-private command has been introduced.

3.85 kabinet

Description Access to a group of commands to configure KABINET authenticator parameters.

Command with **no** prefix resets all parameters to default.

Prefix no Yes**Change settings** Yes**Multiple input** No**Group entry** (kabinet)

Synopsis

```
(config)> kabinet
(config)> no kabinet
```

Example

```
(config)> kabinet
(kabinet)>

(config)> no kabinet
Kabinet::Authenticator: A configuration reset.
```

History

Version	Description
2.02	The kabinet command has been introduced.

3.85.1 kabinet access-level

Description Set an access level for KAbiNET authenticator. By default, access level `internet` is used.

Command with **no** prefix resets level to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(kabinet)> access-level <level>
(kabinet)> no access-level
```

Arguments

Argument	Value	Description
level	lan	Access level value.
	internet	

Example

```
(kabinet)> access-level lan
Kabinet::Authenticator: An access level set to "lan".
```

```
(kabinet)> access-level internet
Kabinet::Authenticator: An access level set to "internet".
```

```
(kabinet)> no access-level
Kabinet::Authenticator: An access level reset to "internet".
```

History

Version	Description
2.02	The kabinet access-level command has been introduced.

3.85.2 kabinet interface

Description Bind KAbiNET authenticator to the specified interface.

Command with **no** prefix unbinds interface.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(kabinet)> interface <interface>
(kabinet)> no interface
```

Arguments

Argument	Value	Description
interface	<i>Interface</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(kabinet)> interface [Tab]
```

```
Usage template:
  interface {interface}
```

```
Choose:
  GigabitEthernet1
  ISP
  WifiMaster0/AccessPoint2
  WifiMaster1/AccessPoint1
  WifiMaster0/AccessPoint3
  WifiMaster0/AccessPoint0
  AccessPoint
```

```
(kabinet)> interface ISP
Kabinet::Authenticator: Bound to GigabitEthernet1.
```

```
(kabinet)> no interface
Kabinet::Authenticator: Interface binding cleared.
```

History

Version	Description
2.02	The kabinet interface command has been introduced.

3.85.3 kabinet password

Description

Set a password for KABINET authenticator. By default, password is not set.

Command with **no** prefix clears the password.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(kabinet)> password <password>
```

```
(kabinet)> no password
```

Arguments

Argument	Value	Description
password	<i>String</i>	The password for authentication.

Example

```
(kabinet)> password 123456789
Kabinet::Authenticator: A password set.
```

```
(kabinet)> no password
Kabinet::Authenticator: A password cleared.
```

Version	Description
2.02	The kabinet password command has been introduced.

3.85.4 kabinet port

Description Set the server port for KAbiNET authenticator. By default, values 8314 or 8899 are used.

Command with **no** prefix resets port to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(kabinet)> port <port>
```

```
(kabinet)> no port
```

Argument	Value	Description
port	<i>Integer</i>	The port number.

Example

```
(kabinet)> port 12345
Kabinet::Authenticator: A server port set.
```

```
(kabinet)> no port
Kabinet::Authenticator: A server port reset.
```

Version	Description
2.14	The kabinet port command has been introduced.

3.85.5 kabinet protocol-version

Description Set version of KAbiNET authenticator protocol. By default, protocol version 2 is used.

Command with **no** prefix resets protocol to default.

Prefix no Yes

Change settings Yes**Multiple input** No

Synopsis

```
(kabinet)> protocol-version <version>
```

```
(kabinet)> no protocol-version
```

Arguments

Argument	Value	Description
version	<i>String</i>	Version of protocol.

Example

```
(kabinet)> protocol-version 1  
Kabinet::Authenticator: A protocol version set to "1".
```

```
(kabinet)> no protocol-version  
Kabinet::Authenticator: A protocol version reset to "2".
```

History

Version	Description
2.02	The kabinet protocol-version command has been introduced.

3.85.6 kabinet server

Description Set an IP address of KAbINET authentication server. By default, IP 10.0.0.1 is used.

Command with **no** prefix resets the address.

Prefix no Yes**Change settings** Yes**Multiple input** No

Synopsis

```
(kabinet)> server <address>
```

```
(kabinet)> no server
```

Arguments

Argument	Value	Description
address	<i>IP address</i>	Authentication server address.

Example

```
(kabinet)> server 77.222.111.1  
Kabinet::Authenticator: A server address set.
```

```
(kabinet)> no server  
Kabinet::Authenticator: A server address reset.
```

History	Version	Description
	2.02	The kabinet server command has been introduced.

3.86 known host

Description Set known host.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config)> known host <name> <mac>
```

```
(config)> no known host [ mac ]
```

Arguments	Argument	Value	Description
	name	<i>String</i>	Arbitrary host name.
	mac	<i>MAC address</i>	MAC address.

Example

```
(config)> known host MY 00:0e:c6:a2:22:a1  
Core::KnownHosts: New host "MY" has been created.
```

```
(config)> no known host 00:0e:c6:a2:22:a1  
Core::KnownHosts: Host 00:0e:c6:a1:26:a8 has been removed.
```

History	Version	Description
	2.00	The known host command has been introduced.

3.87 mdns

Description Access to a group of commands to manage *mDNS* service.

Prefix no No

Change settings No

Multiple input No

Group entry (config-mdns)

Synopsis

```
(config)> mdns
```

Example

```
(config)> mdns
Core::Configurator: Done.
(config-mdns)>
```

History

Version	Description
3.07	The mdns command has been introduced.

3.87.1 mdns reflector disable

Description Forcibly disable transparency mode between home network segments, irrespective of segment isolation (see the [interface security-level](#) command).

Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-mdns)> reflector disable
```

```
(config-mdns)> no reflector disable
```

Example

```
(config-mdns)>reflector disable
Mdns::Manager: Reflector disabled.
```

```
(config-mdns)>no reflector disable
Mdns::Manager: Reflector enabled.
```

History

Version	Description
3.07	The mdns reflector disable command has been introduced.

3.87.2 mdns reflector enforce

Description Forcibly enable transparency mode between home network segments, irrespective of segment isolation (see the [interface security-level](#) command).

Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-mdns)> reflector enforce
```

```
(config-mdns)> no reflector enforce
```

Example

```
(config-mdns)>reflector enforce
Mdns::Manager: Reflector enforced.
```

```
(config-mdns)>no reflector enforce
Mdns::Manager: Reflector unenforced.
```

History

Version	Description
3.07	The mdns reflector enforce command has been introduced.

3.88 mws acquire

Description

Attach new device to [MWS](#).

Command with **no** prefix stops the acquisition.

Prefix no

Yes

Change settings

No

Multiple input

No

Synopsis

```
(config)> mws acquire <candidate> [eula-accept] [dpn-accept]
[no-update]
```

```
(config)> no mws acquire <candidate>
```

Arguments

Argument	Value	Description
candidate	<i>String</i>	Device ID — MAC address or CID.
eula-accept	<i>Keyword</i>	Send eula accept command.
dpn-accept	<i>Keyword</i>	Send Device Privacy Notice accept.
no-update	<i>Keyword</i>	Acquisition without firmware update confirmation.

Example

```
(config)> mws acquire ab1409a2-0f87-11e8-8f23-3d5f5921b253 ►
eula-accept
Mws::Controller: Candidate "ab1409a2-0f87-11e8-8f23-3d5f5921b253" ►
acquire started.
```

```
(config)> mws acquire 7207838e-af7d-11e6-8029-25463bd03811 ►
eula-accept dpn-accept no-update
Mws::Controller: Candidate "7207838e-af7d-11e6-8029-25463bd03811" ►
acquire started.
```

```
(config)> no mws acquire 60:31:97:3f:36:00
Mws::Controller: Candidate "60:31:97:3f:36:00" acquire stopped.
```

History

Version	Description
2.15	The mws acquire command has been introduced.

3.89 mws auto-ap-shutdown

Description

Enable automatic shutdown of the Wi-Fi System Extenders when communication with the Controller is inaccessible. By default, the setting is disabled.

Command with **no** prefix disables the feature.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> mws auto-ap-shutdown
```

```
(config)> no mws auto-ap-shutdown
```

Example

```
(config)> mws auto-ap-shutdown
Mws::Controller: Automatic access points shutdown enabled.
```

```
(config)> no mws auto-ap-shutdown
Mws::Controller: Automatic access points shutdown disabled.
```

History

Version	Description
3.08	The mws auto-ap-shutdown command has been introduced.

3.90 mws backhaul shutdown

Description

Disable hidden wireless backhaul access points for [MWS](#) service. By default, the setting is enabled.

Command with **no** prefix enables hidden wireless backhaul access points.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> mws backhaul shutdown
```

```
(config)> no mws backhaul shutdown
```

Example

```
(config)> mws backhaul shutdown
Mws::Controller: Backhaul disabled.
```

```
(config)> no mws backhaul shutdown
Mws::Controller: Backhaul enabled.
```

History

Version	Description
3.04	The mws backhaul shutdown command has been introduced.

3.91 mws log stp

Description

Enable STP logging for the interface. Allows you to track sent and received BPDU packets.

Command with **no** prefix disables logging for specified interface. If you use no argument, the entire list of STP logging will be removed.

Prefix no

Yes

Change settings

No

Multiple input

Yes

Synopsis

```
(config)> mws log stp <interface>
```

```
(config)> no mws log stp [ <interface> ]
```

Arguments

Argument	Value	Description
interface	<i>Interface</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(config)> mws log stp Bridge0
Network::Interface::Rtx::WifiController: Enabled STP logging for ►
"Bridge0".
```

```
(config)> no mws log stp Bridge0
Network::Interface::Rtx::WifiController: Disabled STP logging ►
for "Bridge0".
```

```
(config)> no mws log stp
Network::Interface::Rtx::WifiController: Disabled all STP logging.
```

History

Version	Description
3.06	The mws log stp command has been introduced.

3.92 mws member

Description Command with **no** prefix removes *MWS* member. If you use no argument, the entire list of members will be cleared.

Prefix no Yes

Change settings No

Multiple input No

Synopsis `(config)> no mws member [member]`

Arguments

Argument	Value	Description
member	<i>String</i>	Device ID — MAC address or CID.

Example

```
(config)> mws no member 2937a388-0d00-11e7-8029-7119319f930e
Mws::MemberList: Member 2937a388-0d00-11e7-8029-7119319f930e ►
pending factory reset.
```

History

Version	Description
2.15	The mws member command has been introduced.

3.93 mws member debug

Description Enable *MWS* member debug. By default, setting is disabled.

Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis `(config)> mws member <member> debug`

`(config)> no mws member <member> debug`

Arguments

Argument	Value	Description
member	<i>String</i>	Device ID — MAC address or CID.

Example

```
(config)> mws member 60:31:97:3c:11:12 debug
Mws::MemberList: Member "60:31:97:3c:11:12" ►
(7207838e-af7d-11e6-8011-25463bd03812) RCI debug enabled.
```

```
(config)> no mws member 60:31:97:3c:11:12 debug
Mws::MemberList: Member "60:31:97:3c:11:12" ►
(7207838e-af7d-11e6-8011-25463bd03812) RCI debug disabled.
```

History

Version	Description
3.05	The mws member debug command has been introduced.

3.94 mws member dpn-accept

Description Accept *DPN* for *MWS* member.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(config)> mws member <member> dpn-accept
```

Arguments

Argument	Value	Description
member	<i>String</i>	Device ID — MAC address or CID.

Example

```
(config)> mws member 7207838e-af7d-11e6-8029-25463bd03828 ►
dpn-accept
Mws::Controller: Candidate "ab1409a2-0f87-11e8-8f23-3d5f5921b253" ►
acquire started.
```

History

Version	Description
3.05	The mws member dpn-accept command has been introduced.

3.95 mws member reboot

Description Reboot the *MWS* member. The process of rebooting extenders should be displayed in the **show mws member** command output.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(config)> mws member <member> reboot [ <interval> ]
```

Arguments

Argument	Value	Description
member	<i>String</i>	Device ID — MAC-address or CID.
interval	<i>Integer</i>	Timeout for reboot in seconds. Can take values in the range from 0 to 60 inclusively). If not specified, the reboot will be executed immediately.

Example

```
(config)> mws member 7207838e-af7d-11e6-8029-25463bd03828 reboot ►
10
Mws::MemberList: Member "50:ff:21:1a:b1:f2" ►
(7207838e-af7d-11e6-8029-25463bd03828) pending reboot.
```

History

Version	Description
3.08	The mws member reboot command has been introduced.

3.96 mws member update check

Description

Check for an update for the *MWS* member.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(config)> mws member <member> update check
```

Arguments

Argument	Value	Description
member	<i>String</i>	Device ID — MAC address or CID.

Example

```
(config)> mws member 21:ff:22:32:18:af update check
Mws::Controller::Updater: "21:ff:22:32:18:af": checking for an ►
update.
```

History

Version	Description
4.00	The mws member update check command has been introduced.

3.97 mws member update start

Description Start the *MWS* member update.

Prefix no No

Change settings No

Multiple input No

Synopsis `(config)> mws member <member> update start`

Argument	Value	Description
member	<i>String</i>	Device ID — MAC address or CID.

Example `(config)> mws member 21:ff:22:32:18:af update start`
 Mws::Controller::Updater: "21:ff:22:32:18:af": pending update, ▶
 "(auto)" sandbox.

Version	Description
4.00	The mws member update start command has been introduced.

3.98 mws member update stop

Description Stop the *MWS* member update.

Prefix no No

Change settings No

Multiple input No

Synopsis `(config)> mws member <member> update stop`

Argument	Value	Description
member	<i>String</i>	Device ID — MAC address or CID.

Example `(config)> mws member 21:ff:22:32:18:af update stop`
 Mws::Controller::Updater: "21:ff:22:32:18:af": update stopped.

Version	Description
4.00	The mws member update stop command has been introduced.

3.99 mws reboot

Description Reboot the whole *MWS*.

Prefix no No

Change settings No

Multiple input No

Synopsis `(config)> mws reboot`

Example `(config)> mws reboot`
 Mws::Controller: Pending reboot Modular Wi-Fi System in 10 ► seconds.

History

Version	Description
3.08	The mws reboot command has been introduced.

3.100 mws revisit

Description Re-read status of potential *MWS* member.

Prefix no Yes

Change settings No

Multiple input No

Synopsis `(config)> mws revisit <candidate>`

`(config)> no mws revisit <candidate>`

Arguments

Argument	Value	Description
candidate	<i>String</i>	Device ID — MAC address or CID.

Example `(config)> mws revisit 50:ff:20:08:71:62`
 Mws::Controller: Candidate "50:ff:20:08:71:62" revisit started.

`(config)> mws no revisit 50:ff:20:08:71:62`
 Mws::Controller: Candidate "50:ff:20:08:71:62" revisit stopped.

History

Version	Description
2.15	The mws revisit command has been introduced.

3.101 mws update start

Description Start the *MWS* update.

If there are updates for members, then the members are updated sequentially. Then, if there is an update for the controller, then the controller update is started. If there are no updates, then nothing happens.

Prefix no No

Change settings No

Multiple input No

Synopsis `(config)> mws update start [controller | members]`

Arguments

Argument	Value	Description
controller	<i>Keyword</i>	Update the controller, don't try to update members. If members update is running, the controller will be updated after them.
members	<i>Keyword</i>	Update a members, don't try to update the controller.

Example

```
(config)> mws update start
Mws::Controller::Manager: Updating MWS.
```

```
(config)> mws update start controller
Mws::Controller::Manager: Updating controller.
```

```
(config)> mws update stop
Mws::Controller::Manager: Updating members.
```

History

Version	Description
4.00	The mws update start command has been introduced.

3.102 mws update stop

Description Stop the *MWS* update.

Prefix no No

Change settings No

Multiple input No

Synopsis `(config)> mws update stop`

Example (config)> **mws update stop**
Mws::Controller::Manager: Update stopped.

Version	Description
4.00	The mws update stop command has been introduced.

3.103 mws zone

Description Limit the connection area of the client device within the specified *MWS* members.

Command with **no** prefix removes the specified setting. If you use no arguments, the entire list of restrictions will be removed.

Prefix no Yes

Change settings No

Multiple input Yes

Synopsis

```
(config)> mws zone <mac> <cid>
```

```
(config)> no mws zone [ <mac> <cid> ]
```

Argument	Value	Description
mac	<i>MAC address</i>	MAC address of client device. It must be listed as a known host.
cid	<i>CID</i>	Identifier of <i>MWS</i> member.

Example

```
(config)> mws zone 11:22:33:ec:58:e2 ▶
12298f60-d886-11e7-9396-176971eeb8d6
Mws::Controller: Added zone 11:22:33:ec:58:e2 ▶
12298f60-d886-11e7-9396-176971eeb8d6.
```

```
(config)> no mws zone 11:22:33:ec:58:e2 ▶
12298f60-d886-11e7-9396-176971eeb8d6
Mws::Controller: Deleted zone 11:22:33:ec:58:e2 ▶
12298f60-d886-11e7-9396-176971eeb8d6.
```

```
(config)> no mws zone
Mws::Controller: Cleared all zones.
```

Version	Description
3.06	The mws zone command has been introduced.

3.104 nextdns

Description Access to a group of commands to configure *NextDNS* profiles.

Prefix no No

Change settings No

Multiple input No

Group entry (nextdns)

Synopsis (config)> **nextdns**

Example (config)> **nextdns**
Core::Configurator: Done.
(nextdns)>

History

Version	Description
3.08	The nextdns command has been introduced.

3.104.1 nextdns assign

Description Assign profile of protection to the host. By default System profile is used for all hosts and local network segments.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis (nextdns)> **assign** <host> <token> | **interface** <iface> <token>

(nextdns)> **no assign** [<host> | **interface** <iface>]

Arguments

Argument	Value	Description
host	<i>MAC address</i>	MAC address to assign.
token	<i>Integer</i>	Authentication token (ID).
iface	<i>Interface</i>	Full interface name or an alias.

Example (nextdns)> **assign 11:24:c4:54:bc:59 1f2a36**
NextDns::Client: Reassociated host "11:24:c4:54:bc:59" with ►
profile "1f2a36".

```
(nextdns)> assign interface Home 1f2a36
NextDns::Client: Associated interface "Home" with profile ▶
"1f2a36".
```

```
(nextdns)> no assign 11:24:c4:54:bc:59
NextDns::Client: Removed profile for host "11:24:c4:54:bc:59".
```

```
(nextdns)> no assign Bridge0
NextDns::Client: Removed profile for interface "Bridge0".
```

History

Version	Description
3.08	The nextdns assign command has been introduced.

3.104.2 nextdns authenticate

Description Specify login for *NextDNS* account.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(nextdns)> authenticate <login> <password> [ <pin> ]
```

```
(nextdns)> no authenticate
```

Arguments

Argument	Value	Description
login	<i>String</i>	Login to <i>NextDNS</i> account.
password	<i>String</i>	Password to <i>NextDNS</i> account.
pin	<i>String</i>	Pin to <i>NextDNS</i> account.

Example

```
(nextdns)> authenticate account@gmail.com 123456789 1234
NextDns::Client: Authenticated successfully.
```

History

Version	Description
3.08	The nextdns authenticate command has been introduced.

3.104.3 nextdns authtoken

Description Specify authentication token for *NextDNS* account.

Command with **no** prefix removes the token.

Prefix no Yes

Change settings Yes**Multiple input** No

Synopsis

```
(nextdns)> authtoken authtoken
(nextdns)> no authtoken
```

Argument	Value	Description
authtoken	<i>String</i>	Authentication token (ID) for <i>NextDNS</i> account.

Example

```
(nextdns)> authtoken 1f2a36
NextDns::Client: Set authentication token.
```

```
(nextdns)> no authtoken
NextDns::Client: Cleared authentication token.
```

Version	Description
3.08	The nextdns authtoken command has been introduced.

3.104.4 nextdns check-availability

Description Check availability of *NextDNS* service.**Prefix no** No**Change settings** No**Multiple input** No

Synopsis

```
(nextdns)> check-availability
```

Example

```
(nextdns)> check-availability
NextDns::Client: NextDNS DNS-over-HTTPS is available.
```

Version	Description
3.08	The nextdns check-availability command has been introduced.

3.105 ndns

Description Access to a group of commands to manage KeenDNS service.**Prefix no** No**Change settings** No

Multiple input No**Group entry** (ndns)**Synopsis** (config)> **ndns****Example**
(config)> **ndns**
Core::Configurator: Done.**History**

Version	Description
2.07	The ndns command has been introduced.

3.105.1 ndns book-name

Description Reserve Public DNS device hostname allocation.

For hostname transmission to another Keenetic device `transfer-code` parameter is used.

To transfer hostname it is necessary:

1. Execute command with `transfer-code` on the transmitting side.
2. Execute the same command with the same parameters on the receiving side.

Lifetime of `transfer-code` is 1 week.

Prefix no No**Change settings** Yes**Multiple input** No**Synopsis**
(ndns)> **book-name** <name> <domain> [`<access>`] [**ipv6** <access6>] |
<transfer-code>]**Arguments**

Argument	Value	Description
name	<i>String</i>	The hostname for allocation.
domain	<i>String</i>	Second-level domain.
access	auto	Automatic access type.
	cloud	Hostname is registered on the cloud server IP address, HTTP traffic is tunneled to the Titan.
	direct	Hostname is registered on the Titan WAN-address.
access6	cloud	Enable cloud mode for IPv6 address.

Argument	Value	Description
transfer-code	Hex	Code for domain transmission to another Keenetic device. The length is 32 symbols.

Example

```
(ndns)> book-name myhome23 keenetic.pro

done, layout = view, title = NDSS::ndns/bookName ▶
(Public DNS Hostname Booking), sub-title = The name booking was ▶
successful.:
  client, geo = RU, ip = 193.0.174.200, format = ▶
clean, date = 2019-05-23T09:46:54.536Z, standalone = false:

  fields:
    field, name = name, title = Public Name:
    field, name = domain, title = Domain Name:
    field, name = updated, title = Updated, type ▶
= date, variant = date:
    field, name = address, title = IP Address:
    field, name = access, title = Access Mode ▶
IP4, default = unknown:
    field, name = address6, title = IPv6 Address:
    field, name = access6, title = Access Mode ▶
IPV6, default = unknown:
    field, name = transfer, title = Transfer:

    name: myhome23
    domain: keenetic.pro
    acme: LE
    updated: 2019-05-23T09:46:51.013Z
    address: 193.0.174.200
    access: direct
    access6: none
    transfer: false

  suffix, layout = message, code = 200, message = ▶
The name booking was successful.:
  detail, layout = list:
    columns:
      column, id = type, title = Type:

      column, id = peer, title = Peer:

      column, id = detail, title = Detail:

      column, id = elapsed, title = Time, ▶
variant = period, scale = 1:

      item, elapsed = 18, origin = ▶
[TaskUdpSingle "ndss11h2.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookPrepare","014635737374513","myhome23","keenetic.pro",undefined]] ▶
/ started], type = reply-final,
peer = ndss11h2.ndm9.xyz, detail = [MsgCack]:
```

```

        item, elapsed = 19, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = prepare-reply, peer = ndss111h2.ndm9.xyz, detail = success
reply: [MsgCack], quorumLeft=3:

        item, elapsed = 27, origin = ▶
[TaskUdpSingle "ndss112o1.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookPrepare","014635737374513","myhome23","keenetic.pro",undefined]] ▶
/ started], type = reply-final,
peer = ndss112o1.ndm9.xyz, detail = [MsgCack]:

        item, elapsed = 27, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = prepare-reply, peer = ndss112o1.ndm9.xyz, detail = success
reply: [MsgCack], quorumLeft=2:

        item, elapsed = 67, origin = ▶
[TaskUdpSingle "ndss111r3.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookPrepare","014635737374513","myhome23","keenetic.pro",undefined]] ▶
/ started], type = reply-final,
peer = ndss111r3.ndm9.xyz, detail = [MsgCack]:

        item, elapsed = 68, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = prepare-reply, peer = ndss111r3.ndm9.xyz, detail = success
reply: [MsgCack], quorumLeft=1:

        item, elapsed = 70, origin = ▶
[TaskUdpSingle "ndss112r3.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookPrepare","014635737374513","myhome23","keenetic.pro",undefined]] ▶
/ started], type = reply-final,
peer = ndss112r3.ndm9.xyz, detail = [MsgCack]:

        item, elapsed = 79, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = done, peer = local, detail = finalize: the name allocation
committed.:

        item, elapsed = 91, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = complete, peer = finalizer, detail = address updated:
193.0.174.200:

        item, elapsed = 91, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = finalize, peer = local, detail = post-process triggers
executed.:

```

```

        item, elapsed = 91, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = prepare-reply, peer = ndss112r3.ndm9.xyz, detail = success
reply: [MsgCack]:

        item, elapsed = 97, origin = ▶
[TaskUdpSingle "ndss112o1.ndm9.xyz" [MsgNdssMessage ▶
["rchs/bookFinalize","014635737374513","myhome23","keenetic.pro","193.0.174.200",":2",undefined,"2019-05-23T09:46:51.013Z"]] / started], type = reply-final, peer = ▶
ndss112o1.ndm9.xyz, detail = [MsgCack]:

        item, elapsed = 106, origin = ▶
[TaskUdpSingle "ndss111h2.ndm9.xyz" [MsgNdssMessage ▶
["rchs/bookFinalize","014635737374513","myhome23","keenetic.pro","193.0.174.200",":2",undefined,"2019-05-23T09:46:51.013Z"]] / started], type = reply-final, peer = ▶
ndss111h2.ndm9.xyz, detail = [MsgCack]:

        item, elapsed = 153, origin = ▶
[TaskUdpSingle "ndss112r3.ndm9.xyz" [MsgNdssMessage ▶
["rchs/bookFinalize","014635737374513","myhome23","keenetic.pro","193.0.174.200",":2",undefined,"2019-05-23T09:46:51.013Z"]] / started], type = reply-final, peer = ▶
ndss112r3.ndm9.xyz, detail = [MsgCack]:

        item, elapsed = 153, origin = ▶
[TaskUdpSingle "ndss111r3.ndm9.xyz" [MsgNdssMessage ▶
["rchs/bookFinalize","014635737374513","myhome23","keenetic.pro","193.0.174.200",":2",undefined,"2019-05-23T09:46:51.013Z"]] / started], type = reply-final, peer = ▶
ndss111r3.ndm9.xyz, detail = [MsgCack]:

        item, elapsed = 3465, origin = ▶
[TaskUdpSingle "ndss112h2.ndm9.xyz" [MsgNdssMessage ▶
["rchs/bookFinalize","014635737374513","myhome23","keenetic.pro","193.0.174.200",":2",undefined,"2019-05-23T09:46:51.013Z"]] / started], type = reply-final, peer = ▶
ndss112h2.ndm9.xyz, detail = [MsgCack]:

        item, elapsed = 3520, origin = ▶
[TaskUdpSingle "ndss112h2.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookPrepare","014635737374513","myhome23","keenetic.pro",undefined]] ▶
/ started], type = reply-final,
peer = ndss112h2.ndm9.xyz, detail = [MsgCack]:

        item, elapsed = 3521, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = prepare-reply, peer = ndss112h2.ndm9.xyz, detail = success
reply: [MsgCack]:

        item, elapsed = 3521, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = complete, peer = *, detail = All done.:

```

```
Ndns::Client: Booked "myhome23.keenetic.pro".
```

```
(ndns)> book-name nnttnn keenetic.pro ▶
121d567f901a345b289c121b567c903c

done, layout = view, title = NDSS::ndns/bookName ▶
(Public DNS Hostname Booking), sub-title =
The name booking was successful.: client, geo = RU, ip = ▶
193.0.174.137, format =
clean, date = 2018-12-13T09:04:41.939Z, standalone = false:

fields:
  field, name = name, title = Public Name:
  field, name = domain, title = Domain Name:
  field, name = updated, title = Updated, type ▶
= date, variant = date:
  field, name = address, title = IP Address:
  field, name = access, title = Access Mode ▶
IP4, default = unknown:
  field, name = address6, title = IPv6 Address:
  field, name = access6, title = Access Mode ▶
IPv6, default = unknown:
  field, name = transfer, title = Transfer:

name: nnttnn
domain: keenetic.pro
acme: LE
updated: 2018-12-13T08:47:11.014Z
address: 0.0.0.0
access: cloud
access6: none
transfer: true

suffix, layout = message, code = 200, message = ▶
The name booking was successful.:
detail, layout = list:
columns:
  column, id = o, title = Operation:
  column, id = d, title = Detail:
  column, id = t, title = Time, variant ▶
= period, scale = 1:
  item, hl = false, o = start, d = ▶
[TaskBookName, {"name":"nnttnn","domain":
▶
"keenetic.pro","license":"730102642155400"}], t = 0:
  item, hl = false, o = lock-local, d = ▶
the name is locked (for current transaction), t = 1:
  item, hl = false, o = cluster, d = ▶
```



```

quorumRemaining: 2, quorumPossible: 4, quorumTotal: 4, t = 1:
    item, hl = false, o = lock-reply, d = ►
Success: prepare, [NDSS
(key=Binary('PuR10V/kVezuoVCE'), alt=Binary('0gJ/Wh1606j1Am1M'), ►
dst="/192.168.21.14:17047")], [MsgCack], quorumLeft=2, t = 10:
    item, hl = false, o = lock-reply, d = ►
Success: prepare, [NDSS
(key=Binary('EbxdTB4ne4ef/+p/'), alt=Binary('1c+3/pP6zaUjuE5w'), ►
dst="/88.198.177.100:17047")], [MsgCack], quorumLeft=1, t = 57:
    item, hl = false, o = lock-reply, d = ►
Quorum reached, finalizing, t = 57:
    item, hl = false, o = finalize, d = ►
local changes committed., t = 65:
    item, hl = false, o = refreshed, d = ►
address updated: 0.0.0.0, t = 77:
    item, hl = false, o = finalize, d = ►
post-process triggers executed., t = 77:
    item, hl = false, o = lock-reply, d = ►
Success: prepare, [NDSS
(key=Binary('+sSJ50ow6hn05f6n'), alt=Binary('7FsVtTpEppYeP7aj'), ►
dst="/46.105.148.85:17047")], [MsgCack], quorumLeft=0, t = 78:
    item, hl = false, o = lock-reply, d = ►
Success: prepare, [NDSS
(key=Binary('KveTxYekUYk2BwXz'), alt=Binary('s10R6mJvMmfQSe0s'), ►
dst="/88.198.177.100:16047")], [MsgCack], quorumLeft=0, t = 78:
    item, hl = false, o = lock-reply, d = ►
Done, all replies collected., t = 79:
    item, hl = false, o = commit-reply, d ►
= Success: finalize, [NDSS
(key=Binary('PuR10V/kVezuoVCE'), alt=Binary('0gJ/Wh1606j1Am1M'), ►
dst="/192.168.21.14:17047")], [MsgCack], t = 84:
    item, hl = false, o = commit-reply, d ►
= Success: finalize, [NDSS
(key=Binary('EbxdTB4ne4ef/+p/'), alt=Binary('1c+3/pP6zaUjuE5w'), ►
dst="/88.198.177.100:17047")], [MsgCack], t = 126:
    item, hl = false, o = commit-reply, d ►
= Success: finalize, [NDSS
(key=Binary('+sSJ50ow6hn05f6n'), alt=Binary('7FsVtTpEppYeP7aj'), ►
dst="/46.105.148.85:17047")], [MsgCack], t = 133:
    item, hl = false, o = commit-reply, d ►
= Success: finalize, [NDSS

```

```

key=Binary('KveTxYekUYk2BwXz'), alt=Binary('s10R6mJvMmfQSe0s'), ▶
dst="/88.198.177.100:16047")], [MsgCack], t = 145:

        item, hl = false, o = commit-reply, d ▶
= Commit stage complete., t = 146:

        item, hl = false, o = complete, d = All ▶
done., t = 146:

Ndns::Client: Booked "nnttnn.keenetic.pro".

(ndns)> book-name myhome23 keenetic.pro cloud ipv6 cloud

        done, layout = view, title = NDSS::ndns/bookName ▶
(Public DNS Hostname Booking), sub-title = The name booking was ▶
successful.:

        client, geo = RU, ip = 193.0.174.200, format = ▶
clean, date = 2019-05-23T09:12:29.145Z, standalone = false:

        fields:
                field, name = name, title = Public Name:
                field, name = domain, title = Domain Name:
                field, name = updated, title = Updated, type ▶
= date, variant = date:
                field, name = address, title = IP Address:
                field, name = access, title = Access Mode ▶
IP4, default = unknown:
                field, name = address6, title = IPv6 Address:
                field, name = access6, title = Access Mode ▶
IPV6, default = unknown:
                field, name = transfer, title = Transfer:

                name: myhome23
                domain: keenetic.pro
                acme: LE
                updated: 2019-05-23T09:12:16.197Z
                address: 0.0.0.0
                access: cloud
                address6: ::
                access6: cloud
                transfer: false

        suffix, layout = message, code = 200, message = ▶
The name booking was successful.:
        detail, layout = list:
                columns:
                        column, id = type, title = Type:

                        column, id = peer, title = Peer:

                        column, id = detail, title = Detail:

                        column, id = elapsed, title = Time, ▶
variant = period, scale = 1:

```

```

                item, elapsed = 11, origin = ▶
[TaskUdpSingle "ndss112h2.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookPrepare","014635737374513","myhome23","keenetic.pro",undefined]] ▶
/ started], type = reply-final,
peer = ndss112h2.ndm9.xyz, detail = [MsgCack]:

                item, elapsed = 11, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = prepare-reply, peer = ndss112h2.ndm9.xyz, detail = success
reply: [MsgCack], quorumLeft=3:

                item, elapsed = 17, origin = ▶
[TaskUdpSingle "ndss112o1.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookPrepare","014635737374513","myhome23","keenetic.pro",undefined]] ▶
/ started], type = reply-final,
peer = ndss112o1.ndm9.xyz, detail = [MsgCack]:

                item, elapsed = 18, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = prepare-reply, peer = ndss112o1.ndm9.xyz, detail = success
reply: [MsgCack], quorumLeft=2:

                item, elapsed = 18, origin = ▶
[TaskUdpSingle "ndss111o1.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookPrepare","014635737374513","myhome23","keenetic.pro",undefined]] ▶
/ started], type = reply-final,
peer = ndss111o1.ndm9.xyz, detail = [MsgCack]:

                item, elapsed = 19, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = prepare-reply, peer = ndss111o1.ndm9.xyz, detail = success
reply: [MsgCack], quorumLeft=1:

                item, elapsed = 25, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = done, peer = local, detail = finalize: the name allocation
committed.:

                item, elapsed = 40, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = complete, peer = finalizer, detail = address updated: ▶
0.0.0.0:

                item, elapsed = 40, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = finalize, peer = local, detail = post-process triggers
executed.:

```

```

        item, elapsed = 49, origin = ▶
[TaskUdpSingle "ndss112o1.ndm9.xyz" [MsgNdssMessage ▶
["rdns/bookFinalize", "014635737374513", "myhome23", "keenetic.pro", "0.0.0.0", ":", undefined, "2019-05-23T09:12:28.977Z"]] / started], type = reply-final, peer = ▶
ndss112o1.ndm9.xyz, detail = [MsgCack]:

        item, elapsed = 49, origin = ▶
[TaskUdpSingle "ndss111o1.ndm9.xyz" [MsgNdssMessage ▶
["rdns/bookFinalize", "014635737374513", "myhome23", "keenetic.pro", "0.0.0.0", ":", undefined, "2019-05-23T09:12:28.977Z"]] / started], type = reply-final, peer = ▶
ndss111o1.ndm9.xyz, detail = [MsgCack]:

        item, elapsed = 50, origin = ▶
[TaskUdpSingle "ndss111r3.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookPrepare", "014635737374513", "myhome23", "keenetic.pro", undefined]] ▶
/ started], type = reply-final,
peer = ndss111r3.ndm9.xyz, detail = [MsgCack]:

        item, elapsed = 50, origin = ▶
[TaskBookName, ▶
{"name": "myhome23", "domain": "keenetic.pro", "license": "014635737374513"}], ▶
type = prepare-reply, peer = ndss111r3.ndm9.xyz, detail = success
reply: [MsgCack]:

        item, elapsed = 50, origin = ▶
[TaskUdpSingle "ndss112r3.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookPrepare", "014635737374513", "myhome23", "keenetic.pro", undefined]] ▶
/ started], type = reply-final,
peer = ndss112r3.ndm9.xyz, detail = [MsgCack]:

        item, elapsed = 51, origin = ▶
[TaskBookName, ▶
{"name": "myhome23", "domain": "keenetic.pro", "license": "014635737374513"}], ▶
type = prepare-reply, peer = ndss112r3.ndm9.xyz, detail = success
reply: [MsgCack]:

        item, elapsed = 80, origin = ▶
[TaskUdpSingle "ndss112r3.ndm9.xyz" [MsgNdssMessage ▶
["rdns/bookFinalize", "014635737374513", "myhome23", "keenetic.pro", "0.0.0.0", ":", undefined, "2019-05-23T09:12:28.977Z"]] / started], type = reply-final, peer = ▶
ndss112r3.ndm9.xyz, detail = [MsgCack]:

        item, elapsed = 122, origin = ▶
[TaskUdpSingle "ndss112h2.ndm9.xyz" [MsgNdssMessage ▶
["rdns/bookFinalize", "014635737374513", "myhome23", "keenetic.pro", "0.0.0.0", ":", undefined, "2019-05-23T09:12:28.977Z"]] / started], type = reply-final, peer = ▶
ndss112h2.ndm9.xyz, detail = [MsgCack]:

        item, elapsed = 165, origin = ▶
[TaskUdpSingle "ndss111r3.ndm9.xyz" [MsgNdssMessage ▶
["rdns/bookFinalize", "014635737374513", "myhome23", "keenetic.pro", "0.0.0.0", ":", undefined, "2019-05-23T09:12:28.977Z"]] / started], type = reply-final, peer = ▶
ndss111r3.ndm9.xyz, detail = [MsgCack]:

```

```

        item, elapsed = 166, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = complete, peer = *, detail = All done.:
Ndns::Client: Booked "myhome23.keenetic.pro".

```

History

Version	Description
2.07	The ndns book-name command has been introduced.
2.14	Parameter <code>ipv6</code> was added.

3.105.2 ndns check-name

Description Check the availability of hostname for allocation.

Prefix no No

Change settings No

Multiple input No

Synopsis `(ndns)> check-name <name>`

Arguments

Argument	Value	Description
<code>name</code>	<i>String</i>	The hostname for allocation.

Example

```

(ndns)> check-name testname

list:
  item:
    domain: keenetic.link
    name: testname
  available: yes
  acme: yes

  item:
    domain: keenetic.name
    name: testname
  available: yes
  acme: yes

  item:
    domain: keenetic.pro
    name: testname
  available: no
  acme: yes

```

```
Ndns::Client: Check completed.
```

History

Version	Description
2.07	The ndns check-name command has been introduced.

3.105.3 ndns drop-name

Description Drop Public DNS device hostname allocation.

Prefix no No

Change settings Yes

Multiple input No

Synopsis `(ndns)> drop-name <name> <domain>`

Arguments

Argument	Value	Description
name	<i>String</i>	The hostname for dropping.
domain	<i>String</i>	Second-level domain.

Example

```
(ndns)> drop-name testname mykeenetic.net

done, title = NDSS::ndns/dropName (Delete DNS ▶
Hostname Booking), code = 200,
icon = tick, hl = true, layout = message:
  client, geo = RU, ip = 81.200.27.56, format = ▶
clean, date = 2016-09-
22T10:52:35.685Z, standalone = false:
  reason: The name is un-booked.

  detail, layout = list:
    columns:
      column, id = o, title = Operation:
      column, id = d, title = Detail:
      column, id = t, title = Time, variant = ▶
period, scale = 1:

  item, hl = false, o = start, d = ▶
[TaskDropName, {"name":"testname",
"domain":"mykeenetic.net","license":"243992935221479"}], t = 0:
  item, hl = false, o = lock-local, d = the ▶
name is locked (for current
transaction), t = 1:
  item, hl = false, o = cluster, d = ▶
quorumRemaining: 2, quorumPossible: 4,
quorumTotal: 4, t = 1:
```

```

        item, hl = false, o = lock-reply, d = ►
Success: prepare, [NDSS
(key=Binary('vNEqUcIAWtrIaC50'), alt=Binary('L2hVqanJmGJrzvKh'),
dst="/148.251.63.154:17047")), [MsgCack], quorumLeft=2, t = 55:
        item, hl = false, o = lock-reply, d = ►
Success: prepare, [NDSS
(key=Binary('yp/ghaehxe5EtXyc'), alt=Binary('t+JluEWuGguJ+28h'),
dst="/46.105.148.81:17047")), [MsgCack], quorumLeft=1, t = 72:
        item, hl = false, o = lock-reply, d = Quorum ►
reached, finalizing, t = 73:
        item, hl = false, o = finalize, d = local ►
changes committed., t = 79:
        item, hl = false, o = refreshed, d = address ►
cleared, t = 85:
        item, hl = false, o = finalize, d = ►
post-process triggers executed., t = 85:
        item, hl = false, o = commit-reply, d = ►
Success: finalize, [NDSS
(key=Binary('vNEqUcIAWtrIaC50'), alt=Binary('L2hVqanJmGJrzvKh'),
dst="/148.251.63.154:17047")), [MsgCack], t = 134:
        item, hl = false, o = commit-reply, d = ►
Success: finalize, [NDSS
(key=Binary('yp/ghaehxe5EtXyc'), alt=Binary('t+JluEWuGguJ+28h'),
dst="/46.105.148.81:17047")), [MsgCack], t = 161:
        item, hl = false, o = lock-reply, d = ►
Success: prepare, [NDSS
(key=Binary('SyptNue2bys/mxi0'), alt=Binary('yPrQwfa/4yn676wk'),
dst="/148.251.129.152:17047")), [MsgCack], quorumLeft=0, t = 231:
        item, hl = false, o = commit-reply, d = ►
Success: finalize, [NDSS
(key=Binary('SyptNue2bys/mxi0'), alt=Binary('yPrQwfa/4yn676wk'),
dst="/148.251.129.152:17047")), [MsgCack], t = 235:
        item, hl = false, o = commit-reply, d = ►
Success: finalize, [NDSS
(key=Binary('pLNIsTXD+0P4D9Fc'), alt=Binary('kGImY2U/LublZ/Zr'),
dst="/91.218.112.118:17047")), [MsgCack], t = 3608:
        item, hl = false, o = commit-reply, d = ►
Commit stage complete., t = 3608:
        item, hl = false, o = complete, d = All ►
done., t = 3608:

Ndns::Client: Dropped "testname.mykeenetic.net".

```

History

Version	Description
2.07	The ndns drop-name command has been introduced.

3.105.4 ndns get-booked

Description	Get actual info from the server about current booked Public DNS hostname.
Prefix no	No

Change settings No

Multiple input No

Synopsis | (ndns)> **get-booked**

Example

```
(ndns)> get-booked

done, layout = view, title = ►
NDSS::ndns/updateBooking (Update Name Booking
Address and Expiration):
    client, geo = RU, ip = 41.189.34.56, format = ►
xml, date = 2017-09-
14T08:30:19.266Z, standalone = false:
    menu, src = ►
/index?__auth=force&__role=context-
menu&ref=%2fndns%2fupdateBooking:

fields:
    field, name = name, title = Public Name:

    field, name = domain, title = Domain Name:

    field, name = address, title = IP Address:

    field, name = updated, title = Updated, type ►
= date, variant = date:

    field, name = access, title = Access Mode, ►
default = unknown:

    field, name = transfer, title = Transfer:

name: testname
domain: mykeenetic.com
address: 41.189.34.56
updated: 2017-09-11T11:27:32.167Z
access: direct
transfer: false

Ndns::Client: Get-booked completed.
```

History

Version	Description
2.08	The ndns get-booked command has been introduced.

3.105.5 ndns get-update

Description Update Public DNS device hostname allocation on the server.

Prefix no	No
Change settings	No
Multiple input	No

Synopsis

```
(ndns)> get-update [<access> [ipv6 <access6>]]
```

Arguments

Argument	Value	Description
access	auto	Automatic access type.
	cloud	Hostname is registered on the cloud server IP address, HTTP traffic is tunneled to the Titan.
	direct	Hostname is registered on the Titan WAN-address. This command allows to enable support for the <i>Static NAT (NAT 1-1)</i> on the server side in the KeenDNS account parameters.
access6	cloud	Enable cloud mode for IPv6 address.

Example

```
(ndns)> get-update auto

done, layout = view, title = ►
NDSS::ndns/updateBooking (Update Name Booking
Address and Expiration):
  client, geo = RU, ip = 81.200.27.56, format = ►
xml, date = 2016-09-
22T12:07:32.746Z, standalone = false:
  menu, src = ►
/index?__auth=force&__role=context-
menu&ref=%2fndns%2fupdateBooking:

  fields:
    field, name = name, title = Public Name:
    field, name = domain, title = Domain Name:
    field, name = address, title = IP Address:
    field, name = updated, title = Updated, type ►
= date, variant = date:
    field, name = access, title = Access Mode, ►
default = unknown:
    field, name = transfer, title = Transfer:

    name: testname
    domain: mykeenetic.net
    address: 81.200.27.56
    updated: 2016-09-22T12:07:32.744Z
    access: direct
    transfer: false

Ndns::Client: Get-update completed.
```

```
(ndns)> get-update cloud ipv6 cloud

done, layout = view, title = ►
NDSS::ndns/updateBooking (Update Name Booking Address and ►
Expiration):
    client, geo = RU, ip = 193.0.174.168, format = ►
xml, date = 2019-05-21T15:26:45.552Z, standalone = false:
    menu, src = ►
/index?__auth=force&__role=context-menu&ref=%2fndns%2fupdateBooking:

fields:
    field, name = name, title = Public Name:
    field, name = domain, title = Domain Name:
    field, name = updated, title = Updated, type ►
= date, variant = date:
    field, name = address, title = IP Address:
    field, name = access, title = Access Mode ►
(ip4), default = unknown:
    field, name = address6, title = IPv6 Address:
    field, name = access6, title = Access Mode ►
(ipv6), default = unknown:
    field, name = transfer, title = Transfer:

name: mytest
domain: keenetic.pro
acme: LE
address: 0.0.0.0
access: cloud
address6: ::
access6: cloud
updated: 2019-05-21T15:26:45.547Z
transfer: false

Ndns::Client: Get-update completed.
```

```
(ndns)> get-update direct

done, layout = view, title = ►
NDSS::ndns/updateBooking (Update Name Booking Address and ►
Expiration):
    client, geo = RU, ip = 193.0.174.159, format = ►
xml, date = 2019-11-13T16:53:30.782Z, standalone = false:
    menu, src = ►
/index?__auth=force&__role=context-menu&ref=%2fndns%2fupdateBooking:

fields:
    field, name = name, title = Public Name:
    field, name = domain, title = Domain Name:
    field, name = updated, title = Updated, type ►
= date, variant = date:
    field, name = address, title = IP Address:
    field, name = access, title = Access Mode ►
(ip4), default = unknown:
    field, name = address6, title = IPv6 Address:
```

```

        field, name = access6, title = Access Mode ▶
(ipv6), default = unknown:
        field, name = transfer, title = Transfer:

        name: myworknow
        domain: keenetic.link
        acme: LE
        address: 193.0.174.159
        access: direct
        access6: none
        updated: 2019-11-13T16:50:34.298Z
        transfer: false

```

History

Version	Description
2.07	The ndns get-update command has been introduced.
2.14	Parameter <code>ipv6</code> was added.

3.106 ntce

Description Access to a group of commands to configure the [NTCE](#) service.

Prefix no No

Change settings No

Multiple input No

Group entry (config-ntce)

Synopsis | (config)> **ntce**

Example (config)> **ntce**
(config-ntce)>

History

Version	Description
3.07	The ntce command has been introduced.

3.106.1 ntce debug

Description Enable debug for the [NTCE](#) service. By default, setting is disabled.

Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-ntce)> debug
(config-ntce)> no debug
```

Example

```
(config-ntce)> debug
Ntce::Manager: Enabled debug.

(config-ntce)> no debug
Ntce::Manager: Disabled debug.
```

History

Version	Description
3.07	The ntce debug command has been introduced.

3.106.2 ntce memory-watcher

Description Enable the memory pressure watcher mechanism for the [NTCE](#) service. By default, setting is enabled.

Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-ntce)> memory-watcher
(config-ntce)> no memory-watcher
```

Example

```
(config-ntce)> memory-watcher
Ntce::Manager: Enabled automatic memory pressure handler.

(config-ntce)> no memory-watcher
Ntce::Manager: Disabled automatic memory pressure handler.
```

History

Version	Description
3.08	The ntce memory-watcher command has been introduced.

3.106.3 ntce qos category priority

Description Set priorities for traffic categories.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-ntce)> qos category <category>priority <priority>
```

```
(config-ntce)> qos category <category>no priority
```

Arguments

Argument	Value	Description
category	calling	① Top.
	gaming	② Critical.
	streaming	③ High.
	work	④ Medium-high.
	surfing	⑤ Medium.
	other	⑥ Normal (Default).
	filetransferring	⑦ Low.
priority	<i>Integer</i>	Priority value. Can take values in the range from 1 to 7.

Example

```
(config-ntce)> qos category work priority 7
Ntce::Manager: Set category "work" priority to "7".
```

```
(config-ntce)> qos category other no priority
Ntce::Manager: Reset QoS priority for category "work".
```

History

Version	Description
3.08	The ntce qos category priority command has been introduced.

3.106.4 ntce qos enable

Description Enable IntelliQoS, which ensures inbound, and outbound bandwidth for prioritized applications and tasks via pre-defined category groups presets. By default the service is disabled.

Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis | (config-ntce)> **qos enable**

| (config-ntce)> **no qos enable**

Example (config-ntce)> **qos enable**
Ntce::Manager: Enabled QoS.

(config-ntce)> **no qos enable**
Ntce::Manager: Disabled QoS.

History

Version	Description
3.07	The ntce qos enable command has been introduced.

3.107 ntp

Description Access to configure [NTP](#) client.

Command with **no** prefix resets [NTP](#) client configuration to default.

Prefix no Yes

Change settings No

Multiple input No

Synopsis | (config)> **no ntp**

Example (config)> **no ntp**
Ntp::Client: Configuration reset.

History

Version	Description
2.00	The ntp command has been introduced.

3.108 ntp master

Description Enable [SNTP](#) server in private and protected network segments.

Command with **no** prefix stops the service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis | (config)> **ntp master**

```
(config)> no ntp master
```

Example

```
(config)> ntp mater
Ntp::Server: Enabled master mode.
```

```
(config)> no ntp master
Ntp::Server: Disabled master mode.
```

History

Version	Description
3.09	The ntp master command has been introduced.

3.109 ntp server

Description

Add a new *NTP* server to the list. You can enter up to 8 *NTP* servers.

Command with **no** prefix deletes *NTP* server from the list. If you use no argument, the entire list of *NTP* servers will be removed.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(config)> ntp server <server>
```

```
(config)> no ntp server [ <server> ]
```

Arguments

Argument	Value	Description
server	<i>String</i>	Host of <i>NTP</i> server.

Example

```
(config)> ntp server pool.ntp.org
Ntp::Client: Server "pool.ntp.org" has been added.
```

```
(config)> no ntp server
Ntp::Client: All NTP servers removed.
```

History

Version	Description
2.00	The ntp server command has been introduced.

3.110 ntp sync-period

Description

Set a period for time synchronization. By default, 1 week is used.

Command with **no** prefix resets time synchronization to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> ntp sync-period <period>
(config)> no ntp sync-period
```

Arguments

Argument	Value	Description
period	<i>Integer</i>	Time synchronization, in minutes. Can take values in the range from 60 minutes to 1 month.

Example

```
(config)> ntp sync-period 60
Ntp::Client: A synchronization period set to 60 minutes.
```

```
(config)> no ntp sync-period
Ntp::Client: Synchronization period value reset.
```

History

Version	Description
2.00	The ntp sync-period command has been introduced.

3.111 object-group ip

Description Create an object group of IP type, which can store IPv4 subnets with optional L4 protocol and port range info.

Command with **no** prefix removes the group.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type IP

Group entry (config-ogrp-ip)

Synopsis

```
(config)> object-group ip <name>
(config)> no object-group ip <name>
```


Argument	Value	Description
name	<i>String</i>	Name of the IPv4 object group.

Example

```
(config)> object-group ip test
Network::ObjectGroup: "test": group created.
```

```
(config)> no object-group ip test
Network::ObjectGroup: "test": group removed.
```

History

Version	Description
4.00	The object-group ip command has been introduced.

3.111.1 object-group ip exclude

Description Add or remove non-matching element of the object group.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config-ogrp-ip)> exclude <proto> <address> [ <port> [<end-port>]]
```

```
(config-ogrp-ip)> no exclude <proto> <address> [ <port> [<end-port>]]
```

Arguments

Argument	Value	Description
proto	ip	<i>IP</i> protocol (include <i>TCP</i> , <i>UDP</i> , <i>ICMP</i> and other).
	tcp	<i>TCP</i> protocol.
	udp	<i>UDP</i> protocol.
	tcpudp	<i>TCP</i> and <i>UDP</i> protocols.
	icmp	<i>ICMP</i> protocol.
	esp	<i>ESP</i> protocol.
	gre	<i>GRE</i> protocol.
	ipip	<i>IP in IP</i> protocol.
address	<i>String</i>	IP address or subnet (in the form of prefix bit length (e.g. 1.2.3.0/24)).
port	<i>Integer</i>	TCP/UDP port number for which a translation request comes. If not specified, all incoming requests will be translated.

Argument	Value	Description
end-port	<i>Integer</i>	The end of the range of ports.

Example

```
(config-ogrp-ip)> exclude tcpudp 1.2.3.0/24 70 80
Network::ObjectGroup: "test": added exclude tcpudp 1.2.3.0/24 ►
70-80.
```

```
(config-ogrp-ip)> no exclude tcpudp 1.2.3.0/24 70 80
Network::ObjectGroup: "test": removed exclude tcpudp 1.2.3.0/24 ►
70-80.
```

History

Version	Description
4.00	The object-group ip exclude command has been introduced.

3.111.2 object-group ip include

Description

Add or remove matching element of the object group.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(config-ogrp-ip)> include <proto> <address> [ <port> [<end-port>]]
```

```
(config-ogrp-ip)> no include <proto> <address> [ <port> [<end-port>]]
```

Arguments

Argument	Value	Description
proto	ip	<i>IP</i> protocol (include <i>TCP</i> , <i>UDP</i> , <i>ICMP</i> and other).
	tcp	<i>TCP</i> protocol.
	udp	<i>UDP</i> protocol.
	tcpudp	<i>TCP</i> and <i>UDP</i> protocols.
	icmp	<i>ICMP</i> protocol.
	esp	<i>ESP</i> protocol.
	gre	<i>GRE</i> protocol.
	ipip	<i>IP in IP</i> protocol.
address	<i>String</i>	IP address or subnet (in the form of prefix bit length (e.g. 1.2.3.0/24)).

Argument	Value	Description
port	<i>Integer</i>	TCP/UDP port number for which a translation request comes. If not specified, all incoming requests will be translated.
end-port	<i>Integer</i>	The end of the range of ports.

Example

```
(config-ogrp-ip)> include tcpudp 1.2.3.0/24 75 80
Network::ObjectGroup: "test": added include tcpudp 1.2.3.0/24 ►
75-80.
```

```
(config-ogrp-ip)> no include tcpudp 1.2.3.0/24 75 80
Network::ObjectGroup: "test": removed include tcpudp 1.2.3.0/24 ►
75-80.
```

History

Version	Description
4.00	The object-group ip include command has been introduced.

3.112 opkg chroot

Description

Enable chroot for *opkg*. If enabled, root directory is changed to /opt before executing any opkg script. By default, the setting is disabled.

Command with **no** prefix disables chroot mode.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> opkg chroot
```

```
(config)> no opkg chroot
```

Example

```
(config)> opkg chroot
Opkg::Manager: Chroot enabled.
```

```
(config)> no opkg chroot
Opkg::Manager: Chroot disabled.
```

History

Version	Description
2.05	The opkg chroot command has been introduced.

3.113 opkg disk

Description Configure partition for *opkg* software. This setting is required to install and run *opkg*.

Once configured, the partition will be mounted to `/opt` using **mount --bind**, and the **initrc** script executed immediately, see also [Section 3.115 on page 437](#).

If `/opt/install` directory is not empty, all contained `*.ipk` and `*.tgz` archives are unpacked to `/opt` before running `initrc`. Archives are deleted after installation.

Command with **no** prefix disables the *opkg* feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> opkg disk (<disk> | <disk>)
(config)> no opkg disk
```

Arguments

Argument	Value	Description
disk	<i>String</i>	Partition label or UUID.

Example

```
(config)> opkg disk ext4_opkg:/
Opkg::Manager: Disk is set to: ext4_opkg:/.
```

```
(config)> no opkg disk
Opkg::Manager: Disk is unset.
```

History

Version	Description
2.05	The opkg disk command has been introduced.

3.114 opkg dns-override

Description Disable *TCP* and *UDP* 53 port for DNS proxy.

Disables port allows to replace embedded DNS proxy with a custom service, such as BIND or Dnsmasq of *opkg*.

Command with **no** prefix returns port work for DNS proxy.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> opkg dns-override
(config)> no opkg dns-override
```

Example

```
(config)> opkg dns-override
Opkg::Manager: DNS override enabled.

(config)> no opkg dns-override
Opkg::Manager: DNS override disabled.
```

Version	Description
2.05	The opkg dns-override command has been introduced.

3.115 opkg initrc

Description Set initial script. Default value — /opt/etc/initrc.

When the [opkg disk](#) is mounted, and the packages are installed, the system will execute the initial script. If *path* is a directory, the system will execute all contained scripts in alphabetic order.

Command with **no** prefix resets `initrc` to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> opkg initrc path
(config)> no opkg initrc
```

Argument	Value	Description
path	<i>Filename</i>	Initial script file or directory.

Example

```
(config)> opkg initrc /opt/etc/init.d/rc.unslung
Opkg::Manager: Configured init script: ▶
"/opt/etc/init.d/rc.unslung".
(config)> no opkg initrc
Opkg::Manager: Init script reset to default: /opt/etc/initrc.
```

Version	Description
2.05.C.3	The opkg initrc command has been introduced.

3.116 opkg timezone

Description Configure TZ environment variable and /opt/var/TZ file for *opkg* software. Default — timezone is undefined.

It depends on the *opkg* C library, how timezone is interpreted. The value of TZ can be either a POSIX timezone specification in the form `stdoffset[dst[offset]][,start[/time],end[/time]]`, or the name of a zoneinfo-binary-format timezone file (the form used by glibc and almost all GNU systems).

Command with **no** prefix resets timezone to undefined.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> opkg timezone(auto | <timezone>)
(config)> no opkg timezone
```

Arguments

Argument	Value	Description
timezone	String	Timezone specification to be assigned to the TZ environment variable and written to /opt/var/TZ.
auto	Keyword	Automatic timezone assignment. Specification is generated from system wide settings, see Section 3.152.4 on page 623 .

Example

```
(config)> opkg timezone auto
Opkg::Manager: Enabled automatic timezone.
(config)> opkg timezone UTC
Opkg::Manager: Enabled timezone "UTC".
(config)> no opkg timezone
Opkg::Manager: Timezone reset to undefined.
```

History

Version	Description
2.05.C.3	The opkg timezone command has been introduced.

3.117 ping-check profile

Description Access to a group of commands to configure *Ping Check* profile. If the profile is not found, the command tries to create it.

Command with **no** prefix removes *Ping Check* profile.

Prefix no	Yes
Change settings	Yes
Multiple input	Yes
Group entry	(config-pchk)

Synopsis

```
(config)> ping-check profile <name>
(config)> no ping-check profile <name>
```

Arguments

Argument	Value	Description
name	<i>String</i>	<i>Ping Check</i> profile name. You can see the list of available profiles with help of ping-check profile [Tab] command.

Example

```
(config)> ping-check profile [Tab]

Usage template:
  profile {name}

Choose:
      TEST
      MYMY

(config)> ping-check profile new_prof
PingCheck::Client: Profile "new_prof" has been created.
(config-pchk)>

(config)> no ping-check profile new_prof
PingCheck::Client: Profile "new_prof" has been deleted.
```

History

Version	Description
2.04	The ping-check profile command has been introduced.

3.117.1 ping-check profile host

Description Assign hostname for testing. By default, hostname is assigned according to country code.

Command with **no** prefix removes the hostname.

Prefix no	Yes
Change settings	Yes
Multiple input	No

Synopsis

```
(config-pchk)> host <host>
```

```
(config-pchk)> no host [ <host> ]
```

Arguments

Argument	Value	Description
host	<i>Hostname</i>	Name or address of remote host.

Example

```
(config-pchk)> host 8.8.8.8
PingCheck::Profile: "test": add host "8.8.8.8" for testing.
```

```
(config-pchk)> host google.com
PingCheck::Profile: "test": add host "google.com" for testing.
```

```
(config-pchk)> no host
PingCheck::Profile: "test": hosts cleared.
```

History

Version	Description
2.04	The ping-check profile host command has been introduced.

3.117.2 ping-check profile max-fails

Description

Specify the number of consecutive failed requests to a remote host by obtaining of which the Internet at the interface considered absent. By default, value 5 is used.

Command with **no** prefix resets setting to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-pchk)> max-fails <count>
```

```
(config-pchk)> no max-fails
```

Arguments

Argument	Value	Description
count	<i>Integer</i>	Amount of failed requests. Can take values in the range from 1 to 10 inclusively.

Example

```
(config-pchk)> max-fails 7
PingCheck::Profile: "test": uses 7 fail count for disabling ►
interface.
```



```
(config-pchk)> no max-fails
PingCheck::Profile: "test": fail count is reset to 5.
```

History

Version	Description
2.04	The ping-check profile max-fails command has been introduced.

3.117.3 ping-check profile min-success

Description

Specify the number of consecutive success requests to a remote host by obtaining of which the Internet at the interface considered present. By default, value 5 is used.

Command with **no** prefix resets setting to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-pchk)> min-success <count>
```

```
(config-pchk)> no min-success
```

Arguments

Argument	Value	Description
count	<i>Integer</i>	Amount of success requests. Can take values in the range from 1 to 10 inclusively.

Example

```
(config-pchk)> min-success 3
PingCheck::Profile: "test": uses 3 success count for enabling ►
interface.
```

```
(config-pchk)> no min-success
PingCheck::Profile: "test": success count is reset to 5.
```

History

Version	Description
2.04	The ping-check profile min-success command has been introduced.

3.117.4 ping-check profile mode

Description

Set *Ping Check* mode. By default, icmp value is used.

Prefix no

No

Change settings Yes**Multiple input** No**Synopsis** `(config-pchk)> mode <mode>`**Arguments**

Argument	Value	Description
mode	icmp	The availability testing of remote host will be done by ICMP-echo request (ping) sending.
	connect	The availability testing of remote host will be done by TCP-connection establishing to specified port.
	tls	The availability testing of remote host will be done by TLS-connection.
	uri	The availability testing of remote host will be done by URI checking.

Example

```
(config-pchk)> mode tls
PingCheck::Profile: "test": uses tls mode.
```

History

Version	Description
2.04	The ping-check profile mode command has been introduced.
3.09	The <code>tls</code> argument was added.
4.00	The <code>uri</code> argument was added.

3.117.5 ping-check profile port

Description Specify port for connection to the remote host. Setting has a meaning for connect mode of *Ping Check* (see [ping-check profile mode](#) command).

Command with **no** prefix removes the setting.

Prefix no Yes**Change settings** Yes**Multiple input** No**Synopsis** `(config-pchk)> port <port>``(config-pchk)> no port`**Arguments**

Argument	Value	Description
port	<i>Integer</i>	Port number. Can take values in the range from 1 to 65534 inclusively.

Example

```
(config-pchk)> port 80
PingCheck::Profile: "test": uses port 80 for testing.
```

```
(config-pchk)> no port
PingCheck::Profile: "test": port is cleared.
```

Version	Description
2.04	The ping-check profile port command has been introduced.

3.117.6 ping-check profile power-cycle

Description Enable power-cycle for USB network interface. Enabled by default.
Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-pchk)> power-cycle
```

```
(config-pchk)> no power-cycle
```

Example

```
(config-pchk)> power-cycle
PingCheck::Profile: "test": enabled USB power cycle.
```

```
(config-pchk)> power-cycle
PingCheck::Profile: "test": disabled USB power cycle.
```

Version	Description
2.04	The ping-check profile power-cycle command has been introduced.

3.117.7 ping-check profile timeout

Description Set the maximum response time of the remote host for a single request in seconds. By default, 2 value is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-pchk)> timeout <timeout>
```

```
(config-pchk)> no timeout
```

Arguments

Argument	Value	Description
timeout	<i>Integer</i>	Response time in seconds. Can take values in the range from 1 to 10 inclusively.

Example

```
(config-pchk)> timeout 4  
PingCheck::Profile: "test": timeout is changed to 4 seconds.
```

```
(config-pchk)> no timeout  
PingCheck::Profile: "test": timeout is reset to 2.
```

History

Version	Description
2.04	The ping-check profile timeout command has been introduced.

3.117.8 ping-check profile update-interval

Description

Set periodicity of *Ping Check* performing.

Prefix no

No

Change settings

Yes

Multiple input

No

Synopsis

```
(config-pchk)> update-interval <seconds>
```

Arguments

Argument	Value	Description
seconds	<i>Integer</i>	Refresh period in seconds. Can take values in the range from 3 to 3600 inclusively.

Example

```
(config-pchk)> update-interval 60  
PingCheck::Profile: "test": update interval is changed to 60 ► seconds.
```

History

Version	Description
2.04	The ping-check profile update-interval command has been introduced.

3.117.9 ping-check profile uri

Description Assign URI ([Uniform Resource Identifier](https://en.wikipedia.org/wiki/Uniform_Resource_Identifier)⁶) host for testing.

Command with **no** prefix removes the host.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-pchk)> uri <uri>
(config-pchk)> no uri [ <uri> ]
```

Arguments

Argument	Value	Description
uri	<i>Hostname</i>	Name or address of remote HTTP or HTTPS host.

Example

```
(config-pchk)> uri http://localhost:8888/
PingCheck::Profile: "TEST": add URI "http://localhost:8888/" for ►
testing.
```

```
(config-pchk)> uri https://localhost:4343/
PingCheck::Profile: "TEST": add URI "https://localhost:4343/" ►
for testing.
```

```
(config-pchk)> no uri http://localhost:8888/
PingCheck::Profile: "TEST": URIs cleared.
```

```
(config-pchk)> no uri
PingCheck::Profile: "TEST": URIs cleared.
```

History

Version	Description
4.00	The ping-check profile uri command has been introduced.

3.118 ppe

Description Enable Packet Processing Engine. By default, the setting is turned on for SWNAT and HWNAT both.

Command with **no** prefix disables specified accelerator.

Prefix no Yes

Change settings Yes

⁶ https://en.wikipedia.org/wiki/Uniform_Resource_Identifier

Multiple input No**Synopsis**

```
(config)> ppe <engine>
```

```
(config)> no ppe [<engine>]
```

Arguments

Argument	Value	Description
engine	software	Software accelerator.
	hardware	Hardware accelerator.

Example

```
(config)> ppe software
Network::Interface::Rtx::Ppe: Software PPE enabled.
```

```
(config)> no ppe
Network::Interface::Rtx::Ppe: All PPE disabled.
```

History

Version	Description
2.00	The ppe command has been introduced.
2.05	Argument engine was implemented.
2.07	Argument hardware-ipv6 was implemented.
4.00	Argument hardware-ipv6 was removed as obsolete.

3.119 pppoe pass

Description Enable PPPoE Pass Through function. You can enter up to 10 network nodes. Command with **no** prefix disables the function.

Prefix no Yes**Change settings** Yes**Multiple input** No**Interface type** Ethernet**Synopsis**

```
(config)> pppoe pass through <wan-iface> <lan-iface>
```

```
(config)> no pppoe pass through
```

Arguments

Argument	Value	Description
wan-iface	<i>Interface</i>	The starting interface — full WAN-interface name or an alias.
lan-iface	<i>Interface</i>	The finishing interface — full LAN-interface name or an alias.

Example

```
(config)> pppoe pass through Home ISP
Pppoe::Pass: Configured pass from "Bridge0" to "GigabitEthernet1".
```

```
(config)> no pppoe pass
Pppoe::Pass: Disabled.
```

Version	Description
2.00	The pppoe pass command has been introduced.

3.120 printer

Description Access to a group of commands to configure the printer. If the printer is not found, the command tries to create it.

Command with **no** prefix deletes the printer.

Prefix no Yes

Change settings Yes

Multiple input Yes

Group entry (config-printer)

Synopsis

```
(config)> printer <id>
```

```
(config)> no printer <id>
```

Argument	Value	Description
id	<i>String</i>	Printer ID.

Example

```
(config)> printer 0924:3cf4
(config-printer)>
```

Version	Description
2.00	The printer command has been introduced.

3.120.1 printer bidirectional

Description Enable bidirectional mode for printer.

Command with **no** prefix disables bidirectional mode.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-printer)> bidirectional
(config-printer)> no bidirectional
```

Example

```
(config-printer)> bidirectional
Printer::Manager: A bidirectional mode enabled.

(config-printer)> no bidirectional
Printer::Manager: A bidirectional mode disabled.
```

History

Version	Description
2.04	The printer bidirectional command has been introduced.

3.120.2 printer debug

Description Enable debug mode for printer. If you use no argument, debug level 1 will be set.

Command with **no** prefix disables debug mode.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-printer)> debug [ level <level> ]
(config-printer)> no debug
```

Arguments

Argument	Value	Description
level	<i>Integer</i>	The debug level. Can take values in the range from 1 to 3 inclusively.

Example

```
(config-printer)> debug level 3
Printer::Manager: a debug level set to 3.
```

```
(config-printer)> no debug
Printer::Manager: A debug mode disabled.
```

History

Version	Description
2.04	The printer debug command has been introduced.

3.120.3 printer firmware

Description Set printer firmware file.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-printer)> firmware <firmware>
```

```
(config-printer)> no firmware
```

Arguments

Argument	Value	Description
firmware	<i>String</i>	Path to firmware file.

Example

```
(config-printer)> firmware storage:sihp1018.dl  
Printer::Manager: A printer firmware set.
```

```
(config-printer)> no firmware  
Printer::Manager: A printer firmware set.
```

History

Version	Description
2.00	The printer firmware command has been introduced.

3.120.4 printer name

Description Assign an arbitrary name to the printer.

Prefix no No

Change settings Yes

Multiple input No

Synopsis

```
(config-printer)> name <name>
```

Arguments

Argument	Value	Description
name	<i>String</i>	Arbitrary printer name.

Example

```
(config-printer)> name Canon  
Printer::Manager: A printer name set.
```

History

Version	Description
2.00	The printer name command has been introduced.

3.120.5 printer port

Description Set printer port if printer type is direct. By default, TCP-port is 9100.

Prefix no No

Change settings Yes

Multiple input No

Synopsis `(config-printer)> port <port>`

Arguments

Argument	Value	Description
port	<i>Integer</i>	Printer port.

Example

```
(config-printer)> port 2012
Printer::Manager: A port set.
```

History

Version	Description
2.00	The printer port command has been introduced.

3.120.6 printer status-polling

Description Enable printer status polling. By default, status polling is enabled.

Command with **no** prefix disables printer status polling.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis `(config-printer)> status-polling`

`(config-printer)> no status-polling`

Example

```
(config-printer)> status-polling
Printer::Manager: Status polling enabled.
```

```
(config-printer)> no status-polling
Printer::Manager: Status polling disabled.
```

History

Version	Description
3.04	The printer status-polling command has been introduced.

3.120.7 printer type

Description Set printer type.

Prefix no No

Change settings Yes

Multiple input No

Synopsis `(config-printer)> type <type>`

Arguments

Argument	Value	Description
type	cifs	Printer connected via CIFS .
	direct	Printer connected directly to device.

Example

```
(config-printer)> type direct
Printer::Manager: A printer type set.
```

History

Version	Description
2.00	The printer type command has been introduced.

3.121 schedule

Description Access to a group of commands to configure the schedule. If the schedule is not found, the command tries to create it.

Command with **no** prefix deletes the schedule.

Prefix no Yes

Change settings Yes

Multiple input Yes

Group entry `(config-sched)`

Synopsis `(config)> schedule <name>`

`(config)> no schedule <name>`

Arguments

Argument	Value	Description
name	<i>String</i>	A schedule name.

History

Version	Description
2.06	The schedule command has been introduced.

3.121.1 schedule action

Description Specify the actions to be performed according to the selected schedule.
Command with **no** prefix cancels the action.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config-sched)> action <action> <min> <hour> <dow>
```

```
(config-sched)> no action [ <action> <min> <hour> <dow> ]
```

Arguments

Argument	Value	Description
action	start	Action of the beginning.
	stop	Action of the end.
min	<i>Integer</i>	The minutes.
hour	<i>Integer</i>	The hours.
dow	<i>Integer</i>	Days of the week, separated by commas. 0 and 7 mean Sunday. * means daily.

Example

```
(config-sched)> action start 0 9 1,2,3,4,5  
Core::Schedule::Manager: Updated schedule "WIFI".
```

History

Version	Description
2.06	The schedule action command has been introduced.

3.121.2 schedule description

Description Set description for the selected schedule.
Command with **no** prefix deletes the description.

Prefix no Yes

Change settings No

Multiple input No

Synopsis

```
(config-sched)> description <description>
```

```
(config-sched)> no description
```

Argument	Value	Description
description	String	Text of the description.

Example

```
(config-sched)> description "Schedule for on/off Access Point"
Core::Schedule::Manager: Updated description of schedule "WIFI".
```

Version	Description
2.06	The schedule description command has been introduced.

3.121.3 schedule led

Description Set LED indication for the scheduled events. SelectedSchedule control should be chosen with **system led** command.

Command with **no** prefix removes LED indication.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-sched)> led <action>
```

```
(config-sched)> no led
```

Argument	Value	Description
action	start	LED shows the beginning of the scheduled event.
	stop	LED shows the end of the scheduled event.

Example

```
(config-sched)> led start
Core::Schedule::Led: Selected schedule "111".
```

Version	Description
2.08	The schedule led command has been introduced.

3.122 service afp

Description Enable *AFP* service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> service afp
(config)> no service afp
```

Example

```
(config)> service afp
Afp::Server: Enabled.
```

History

Version	Description
2.06	The service afp command has been introduced.

3.123 service cifs

Description Enable *CIFS* service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> service cifs
(config)> no service cifs
```

Example

```
(config)> service cifs
Cifs::ServerT smb: Enabled.
```

```
(config)> no service cifs
Cifs::ServerT smb: Disabled.
```

History

Version	Description
2.00	The service cifs command has been introduced.

3.124 service dhcp

Description Enable *DHCP server*. If there is not enough settings to start the service (see [ip dhcp pool](#)), the service will not respond to the network. As soon as there are enough settings, the service will be enabled automatically.

Command with **no** prefix stops the service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> service dhcp
(config)> no service dhcp
```

Example

```
(config)> service dhcp
service enabled.
```

History

Version	Description
2.00	The service dhcp command has been introduced.

3.125 service dhcp-relay

Description Enable DHCP-relay. If there are not enough settings to start the service (see [ip dhcp relay lan](#), [ip dhcp relay server](#), [ip dhcp relay wan](#)), it will not respond within the network. As soon as there are enough settings, the service will be enabled automatically.

Command with **no** prefix stops the service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> service dhcp-relay
(config)> no service dhcp-relay
```

Example

```
(config)> service dhcp-relay
service enabled.
```

History

Version	Description
2.00	The service dhcp-relay command has been introduced.

3.126 service dlna

Description Enable [DLNA](#) service. If there are not enough settings to start the service (see [dlna](#)), it will not respond within the network. As soon as there are enough settings, the service will be enabled automatically.

Command with **no** prefix stops the service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> service dlna
(config)> no service dlna
```

Example

```
(config)> service dlna
DLNA server enabled.
```

History

Version	Description
2.00	The service dlna command has been introduced.

3.127 service dns-proxy

Description Enable DNS-proxy. To configure the parameters of the service, use [Section 3.21 on page 118](#) group of commands.

Prefix no No

Change settings Yes

Multiple input No

Synopsis

```
(config)> service dns-proxy
```

Example

```
(config)> service dns-proxy
Dns::Manager: DNS proxy enabled.
```

History

Version	Description
2.00	The service dns-proxy command has been introduced.

3.128 service ftp

Description Enable FTP server that provides the user with access to connected USB-drives, configuration files and a file with firmware update.

Command with **no** prefix stops the service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis | (config)> **service ftp**

| (config)> **no service ftp**

Example (config)> **service ftp**
FTP server enabled.

History

Version	Description
2.00	The service ftp command has been introduced.

3.129 service http

Description Enable HTTP server that provides the user with Web-interface to configure Titan.

Command with **no** prefix stops the service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis | (config)> **service http**

| (config)> **no service http**

Example (config)> **service http**
HTTP server enabled.

History

Version	Description
2.00	The service http command has been introduced.

3.130 service igmp-proxy

Description Enable IGMP-proxy. For the service functioning it is necessary to have one upstream interface and at least one downstream interface. If there are not enough settings to run the service, the service will not function. As soon as there are enough settings, the service will start automatically.

Command with **no** prefix stops the service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> service igmp-proxy
(config)> no service igmp-proxy
```

Example

```
(config)> service igmp-proxy
IGMP proxy enabled.
```

History

Version	Description
2.00	The service igmp-proxy command has been introduced.

3.131 service internet-checker

Description Enable the Internet-checker to monitor the state of Internet connection on the device. By default, service is enabled.

Command with **no** prefix stops the service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> service internet-checker
(config)> no service internet-checker
```

Example

```
(config)> service internet-checker
Network::InternetChecker: Hosts check enabled.
```

```
(config)> no service internet-checker
Network::InternetChecker: Hosts check disabled.
```

History	Version	Description
	2.13	The service internet-checker command has been introduced.

3.132 service ipsec

Description Enable *IPsec* service. By default, service is disabled.
Command with **no** prefix stops the service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> service ipsec
(config)> no service ipsec
```

Example

```
(config)>service ipsec
IpSec::Manager: Service enabled.
```

History	Version	Description
	2.06	The service ipsec command has been introduced.

3.133 service kabinet

Description Enable KAbiNET authenticator service. By default it is disabled.
Command with **no** prefix stops the service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> service kabinet
(config)> no service kabinet
```

Example

```
(config)> service kabinet
Kabinet::Authenticator: Authenticator enabled.
```

```
(config)> service kabinet
Kabinet::Authenticator: Authenticator disabled.
```

History

Version	Description
2.02	The service kabinet command has been introduced.

3.134 service mdns

Description

Enable *mDNS* service. By default, service is enabled.

Command with **no** prefix stops the service.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> service mdns
```

```
(config)> no service mdns
```

Example

```
(config)>service mdns
```

```
(config)>no service mdns
```

History

Version	Description
2.15	The service mdns command has been introduced.

3.135 service mws

Description

Enable *MWS* service. By default, service is disabled.

Command with **no** prefix stops the service.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> service mws
```

```
(config)> no service mws
```

Example

```
(config)> service mws
Mws::Controller: Enabled.
```

```
(config)> no service mws
Mws::Controller: Disabled.
```

History	Version	Description
	2.15	The service mws command has been introduced.

3.136 service ntce

Description Enable *NTCE* service. By default it is disabled.
Command with **no** prefix stops the service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> service ntce
(config)> no service ntce
```

Example

```
(config)> service ntce
Ntce::Manager: Enabled.
```

History	Version	Description
	2.09	The service ntce command has been introduced. Previous command name is service dpi .

3.137 service ntp

Description Enable *NTP* service. By default it is enabled.
Command with **no** prefix stops the service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> service ntp
(config)> no service ntp
```

Example

```
(config)> service ntp
Ntp::Client: NTP service enabled.
```

```
(config)> no service ntp
Ntp::Client: NTP service disabled.
```

History

Version	Description
3.09	The service ntp command has been introduced. Previous command name is service ntp-client .

3.138 service snmp

Description

Enable *SNMP* service. By default, the service is disabled.

Command with **no** prefix stops the service.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> service snmp
```

```
(config)> no service snmp
```

Example

```
(config)> service snmp
Snmp::Manager: SNMP service was enabled.
(config)> no service snmp
Snmp::Manager: SNMP service was disabled.
```

History

Version	Description
2.08	The service snmp command has been introduced.

3.139 service ssh

Description

Enable the SSH server that provides the user with command line interface to configure the device.

Command with **no** prefix stops the service.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> service ssh
```

```
(config)> no service ssh
```

Example

```
(config)> service ssh
Ssh::Manager: SSH server enabled.
```

```
(config)> no service ssh
Ssh::Manager: SSH server disabled.
```

History

Version	Description
2.12	The service ssh command has been introduced.

3.140 service sstp-server

Description

Enable *SSTP* server.

Command with **no** prefix stops the service.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> service sstp-server
```

```
(config)> no service sstp-server
```

Example

```
(config)> service sstp-server
SstpServer::Manager: Service enabled.
```

```
(config)> no service sstp-server
SstpServer::Manager: Service disabled.
```

History

Version	Description
2.12	The service sstp-server command has been introduced.

3.141 service telnet

Description

Enable the telnet server that provides the user with command line interface to configure the device.

Command with **no** prefix stops the service.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> service telnet
```

```
(config)> no service telnet
```

Example (config)> **service tel**
Telnet server enabled.

History

Version	Description
2.00	The service telnet command has been introduced.

3.142 service torrent

Description Enable BitTorrent client that provides the user with peer-to-peer sharing of very large files, such as entire movies and TV shows.

Command with **no** prefix stops the service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> service torrent
(config)> no service torrent
```

Example (config)> **service torrent**
server enabled.

History

Version	Description
2.00	The service torrent command has been introduced.

3.143 service udpxy

Description Enable *udpxy* service.

Command with **no** prefix stops the service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> service udpxy
(config)> no service udpxy
```

Example (config)> **service udpxy**
Udpxy::Manager: a service enabled.

History	Version	Description
	2.03	The service udpxy command has been introduced.

3.144 service upnp

Description Enable *UPnP* service.
Command with **no** prefix stops the service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> service upnp
(config)> no service upnp
```

History	Version	Description
	2.00	The service upnp command has been introduced.

3.145 service vpn-server

Description Enable VPN server.
Command with **no** prefix stops the service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> service vpn-server
(config)> no service vpn-server
```

Example

```
(config)> service vpn-server
VpnServer::Manager: Service enabled.

(config)> no service vpn-server
VpnServer::Manager: Service disabled.
```

History	Version	Description
	2.04	The service vpn-server command has been introduced.

3.146 show

Description Access to a group of commands to display various diagnostic information about system. All commands of this group do not change system settings.

Prefix no No

Change settings No

Multiple input No

Group entry (show)

Synopsis (config)> **show**

Version	Description
2.00	The show command has been introduced.

3.146.1 show access

Description Show user access for directory on USB drive.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **access** <directory>

Argument	Value	Description
directory	<i>String</i>	Path to the folder on USB drive.

Example (show)> **access PENDRIVE:doc**

```

user:
  name: admin
  assigned: write
  effective: write
  exists: yes
user:
  name: test
  assigned: read
  effective: read
  exists: yes

```

History	Version	Description
	2.00	The show access command has been introduced.

3.146.2 show acme

Description Show *ACME* client status.

Prefix no No

Change settings No

Multiple input No

Synopsis | (show)> **acme**

Example

```
(show)> acme
acme:
    real-time: yes
    ndns-domain: mytest.keenetic.pro
    ndns-domain-acme: yes
    ndns-domain-error: no
    default-domain: cc6b5a71a7644903b51a5454.keenetic.io
    account-pending: no
    account-running: no
    get-pending: no
    get-running: no
    revoke-pending: no
    revoke-running: no
    reissue-queue-size: 0
    revoke-queue-size: 0
    retries: 0
    checker-timer: 82499
    apply-timer: 0
    acme-account: 36902346
```

History	Version	Description
	2.11	The show acme command has been introduced.

3.146.3 show afp

Description Show *AFP* server status.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(show)> afp
```

Example

```
(show)> afp
  enabled: yes
  automount: yes
  permissive: yes

  share:
    mount: C253-062D:
    label: FLASH
  timemachine: yes
  description:
    active: yes

  share:
    mount: C253-062D:/FOR_AFP
    label: AFP
  timemachine: yes
  description:
    active: yes
```

History

Version	Description
2.06	The show afp command has been introduced.

3.146.4 show associations

Description

Show list of wireless stations associated with an access point. If you use no argument, the entire list of wireless stations will be displayed.

Prefix no

No

Change settings

No

Multiple input

No

Interface type

Access Point

Synopsis

```
(show)> associations [ <name> ]
```

Arguments

Argument	Value	Description
name	<i>String</i>	An access point name. You can see the list of available access points with help of associations [Tab] command.

Example

```
(show)> associations [Tab]

Usage template:
```

```
associations [{name}]
```

Choose:

```
WifiMaster0/AccessPoint2
WifiMaster1/AccessPoint1
WifiMaster0/AccessPoint3
WifiMaster0/AccessPoint0
    AccessPoint
WifiMaster1/AccessPoint2
WifiMaster0/AccessPoint1
    GuestWiFi
WifiMaster1/AccessPoint3
WifiMaster1/AccessPoint0
    AccessPoint_5G
```

```
(show)> associations WifiMaster0/AccessPoint0
```

```
station:
    mac: ec:1f:72:d3:6d:3f
    ap: WifiMaster0/AccessPoint0
authenticated: 1
    txrate: 130
    uptime: 3804
    txbytes: 2058837
    rxbytes: 25023483
    ht: 20
    mode: 11n
    gi: 800
    rssi: -26
    mcs: 15

station:
    mac: 20:aa:4b:5c:09:0e
    ap: WifiMaster0/AccessPoint0
authenticated: 1
    txrate: 270
    uptime: 19662
    txbytes: 19450396
    rxbytes: 70800065
    ht: 40
    mode: 11n
    gi: 800
    rssi: -41
    mcs: 15
```

History

Version	Description
2.00	The show associations command has been introduced.

3.146.5 show button

Description Show information about specified system button. If you use no argument, the entire list of all buttons on the device will be displayed. Available buttons depend on hardware configuration.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> button [name]`

Arguments

Argument	Value	Description
name	<i>String</i>	The button name.

Example

```
(show)> button FN1

buttons:
  button, name = FN1:
    is_switch: no
    position: 2
  position_count: 2
    clicks: 0
    elapsed: 0
    hold_delay: 3000
```

History

Version	Description
2.00	The show button command has been introduced.

3.146.6 show button bindings

Description Show a list of actions associated with device buttons.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> button bindings`

Example

```
(show)> button bindings

bindings:

  binding, index = 0:
```

```
        button: RESET
        action: click
    active_handler: Reboot
    default_handler: Reboot
    protected: yes

    binding, index = 1:
        button: RESET
        action: hold
    active_handler: FactoryReset
    default_handler: FactoryReset
    protected: yes

    binding, index = 2:
        button: WLAN
        action: click
    active_handler: WpsStartMainAp
    default_handler: WpsStartMainAp
    protected: no

    binding, index = 3:
        button: WLAN
        action: double-click
    active_handler: WpsStartMainAp5
    default_handler: WpsStartMainAp5
    protected: no

    binding, index = 4:
        button: WLAN
        action: hold
    active_handler: WifiToggle
    default_handler: WifiToggle
    protected: no

    binding, index = 5:
        button: FN1
        action: click
    active_handler: UnmountUsbl
    default_handler: UnmountUsbl
    protected: no

    binding, index = 6:
        button: FN1
        action: double-click
    active_handler:
    default_handler:
    protected: no

    binding, index = 7:
        button: FN1
        action: hold
    active_handler:
    default_handler:
    protected: no
```

```

binding, index = 8:
  button: FN2
  action: click
  active_handler: UnmountUsb2
  default_handler: UnmountUsb2
  protected: no

binding, index = 9:
  button: FN2
  action: double-click
  active_handler:
  default_handler:
  protected: no

binding, index = 10:
  button: FN2
  action: hold
  active_handler:
  default_handler:
  protected: no

```

History

Version	Description
2.03	The show button bindings command has been introduced.

3.146.7 show button handlers

Description Show a list of available button handlers in the system.

Prefix no No

Change settings No

Multiple input No

Synopsis | (show)> **button handlers**

Example (show)> **button handlers**

```

handlers:
  handler, name = LedToggle:
  short_description: toggle system LED states
  protected: no
  switch_related: no

  handler, name = FactoryReset:
  short_description: reset a configuration to factory ►
defaults
  protected: yes

```



```

switch_related: no

    handler, name = UnmountUsb1:
short_description: unmount USB 1 port storages
    protected: no
    switch_related: no

    handler, name = UnmountUsb2:
short_description: unmount USB 2 port storages
    protected: no
    switch_related: no

    handler, name = Reboot:
short_description: reboot the system
    protected: yes
    switch_related: no

    handler, name = DlnaDirectoryRescan:
short_description: rescan DLNA directory for newer media ▶
files
    protected: no
    switch_related: no

    handler, name = DlnaDirectoryFullRescan:
short_description: remove a DLNA database and rescan a ▶
DLNA directory
    protected: no
    switch_related: no

    handler, name = DectHandsetRegistrationToggle:
short_description: toggle a DECT handset registration
    protected: no
    switch_related: no

    handler, name = DectHandsetPagingToggle:
short_description: toggle a DECT handset paging
    protected: no
    switch_related: no

    handler, name = OpkgRunScript:
short_description: run Opkg script
    protected: no
    switch_related: no

    handler, name = TorrentAltSpeedToggle:
short_description: toggle a Torrent alternative speed ▶
mode
    protected: no
    switch_related: no

    handler, name = TorrentClientStateToggle:
short_description: toggle a Torrent client state
    protected: no
    switch_related: no

```

```

        handler, name = WifiToggle:
short_description: on/off all Wi-Fi interfaces
        protected: no
        switch_related: no

        handler, name = WpsStartMainAp:
short_description: start WPS (2.4 GHz main access point)
        protected: no
        switch_related: no

        handler, name = WpsStartMainAp5:
short_description: start WPS (5 GHz main access point)
        protected: no
        switch_related: no

        handler, name = WifiGuestApToggle:
short_description: toggle a guest access point state ►
(2.4 GHz)
        protected: no
        switch_related: no

        handler, name = WpsStartStation:
short_description: start WPS (2.4 GHz Wi-Fi station)
        protected: no
        switch_related: no

        handler, name = WpsStartStation5:
short_description: start WPS (5 GHz Wi-Fi station)
        protected: no
        switch_related: no

```

History

Version	Description
2.03	The show button handlers command has been introduced.

3.146.8 show chilli profiles

Description Show the list of available *RADIUS* server profiles.

Prefix no No

Change settings No

Multiple input No

Synopsis | (show)> **chilli profiles**

Example (show)> **chilli profiles**

```

profile:
  name: Iron Wi-Fi
  url: https://www.ironwifi.com/
  description: Hosted RADIUS and Captive Portal

  preset:
    uamserver: ►
https://europe-west3.ironwifi.com/api/pages/uam/

    radius:
      server1: 35.198.88.176

  radiuslocationid:

    dns:
      dns1: 8.8.8.8
      dns2: 8.8.4.4

  custom: uamsecret

  custom: radiussecret

  custom: radiusnasid

```

History

Version	Description
2.10	The show chilli profiles command has been introduced.

3.146.9 show cifs

Description Show *CIFS* server status.

Prefix no No

Change settings No

Multiple input No

Synopsis | (show)> **cifs**

Example (show)> **cifs**

```

enabled: yes

master: no

automount: yes

permissive: yes

share:

```

```

mount: 9430B54530B52EDC:
label: 9430B54530B52EDC
description:
active: no

```

History

Version	Description
2.00	The show cifs command has been introduced.

3.146.10 show clock date

Description Show the current system date.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **clock date**

Example

```

(show)> clock date

weekday: 4
  day: 18
  month: 1
  year: 2018
  hour: 8
  min: 46
  sec: 2
  msec: 660
  dst: inactive

  tz:
  locality: GMT
  stdoffset: 0
  dstoffset: 0
  usedst: no
  rule: GMT0
  custom: no

```

History

Version	Description
2.00	The show clock date command has been introduced.

3.146.11 show clock timezone-list

Description Show the list of available timezones.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> clock timezone-list`

Example `(show)> clock timezone-list`

```

timezones:
  tz:
    locality: Adak
    stdoffset: -36000
    dstoffset: -32400
  tz:
    locality: Aden
    stdoffset: 10800
    dstoffset: -1
  tz:
    locality: Almaty
    stdoffset: 21600
    dstoffset: -1
  tz:
    locality: Amsterdam
    stdoffset: 3600
    dstoffset: 7200
  tz:
    locality: Anadyr
    stdoffset: 43200
    dstoffset: -1
...
...
...

```

History

Version	Description
2.00	The show clock timezone-list command has been introduced.

3.146.12 show components status

Description Display components updates status.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> component status`

Example

```
(show)> components status
```

```
    update:
      state: idle
```

```
(show)> components status
```

```
    update:
      state: running
      progress: 41
```

History

Version	Description
4.00	The show components status command has been introduced.

3.146.13 show configurator status**Description**

Show information about system configurator.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(show)> configurator status
```

Example

```
(show)> configurator status
```

```
touch: Thu, 18 Oct 2018 14:37:25 GMT
```

```
    header, name = Model: Keenetic Giga
```

```
    header, name = Version: 2.06.1
```

```
    header, name = Agent: http/rci
```

```
    header, name = Last change: Thu, 18 Oct 2018 14:37:25 GMT
```

```
    serving:
```

```
      name: Session /var/run/ndm.core.socket
      time: 0.000397
```

```
    request, host = 192.168.1.42, name = admin:
      parse: show configurator status
```

History

Version	Description
2.06	The show configurator status command has been introduced.

3.146.14 show credits

Description Show the license information about specified installed package in KeeneticOS. If you use no argument, the entire list of all installed packages on the device will be displayed.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> credits [<package>]`

Arguments

Argument	Value	Description
package	<i>String</i>	Package name.

Example

```
(show)> credits

package:
  name: accel-ppp
  title: High performance accel-ppp VPN server
  homepage: https://accel-ppp.org/

package:
  name: accel-ppp-l2tp
  title: L2TP plugin for accel-ppp
  homepage: https://accel-ppp.org/

package:
  name: accel-ppp-pptp
  title: PPTP plugin for accel-ppp
  homepage: https://accel-ppp.org/

package:
  name: accel-ppp-sstp
  title: SSTP plugin for accel-ppp
  homepage: https://accel-ppp.org/

package:
  name: avahi-daemon
  title: An mDNS/DNS-SD implementation (daemon)
  homepage: http://www.avahi.org/

package:
  name: coova-chilli
```

```
        title: Wireless LAN HotSpot controller (Coova ►
Chilli Version)
        homepage: http://www.coova.org/CoovaChilli

        package:
            name: crconf
            title: Netlink-based CryptoAPI userspace ►
management utility
            homepage:

        package:
            name: dhcpv6
            title: DHCPv6 client + server
            homepage: http://wide-dhcpv6.sourceforge.net/

        package:
            name: dropbear
            title: Small SSH2 client/server
            homepage: http://matt.ucc.asn.au/dropbear/

        package:
            name: iperf3-ssl
            title: Internet Protocol bandwidth measuring ►
tool with iperf_auth support
            homepage: https://github.com/esnet/iperf

        package:
            name: kernel
            title: Linux kernel
            homepage: http://www.kernel.org/

        package:
            name: kmod-ipt-account
            title: ACCOUNT netfilter module
            homepage:

        package:
            name: kmod-ipt-chaos
            title: CHAOS netfilter module
            homepage:

        package:
            name: kmod-ipt-compat-xtables
            title: API compatibilty layer netfilter module
            homepage:

        package:
            name: kmod-ipt-condition
            title: Condition netfilter module
            homepage:

        package:
            name: kmod-ipt-delude
            title: DELUDE netfilter module
```



```
homepage:

package:
  name: kmod-ipt-dhcpmac
  title: DHCPMAC netfilter module
homepage:

package:
  name: kmod-ipt-dnetmap
  title: DNETMAP netfilter module
homepage:

package:
  name: kmod-ipt-fuzzy
  title: fuzzy netfilter module
homepage:

package:
  name: kmod-ipt-geoip
  title: geoip netfilter module
homepage:

package:
  name: kmod-ipt-iface
  title: iface netfilter module
homepage:

package:
  name: kmod-ipt-ipmark
  title: IPMARK netfilter module
homepage:

package:
  name: kmod-ipt-ipp2p
  title: IPP2P netfilter module
homepage:

package:
  name: kmod-ipt-ipv4options
  title: ipv4options netfilter module
homepage:

package:
  name: kmod-ipt-length2
  title: length2 netfilter module
homepage:

package:
  name: kmod-ipt-logmark
  title: LOGMARK netfilter module
homepage:

package:
  name: kmod-ipt-lscan
```

```

        title: lscan netfilter module
        homepage:

package:
    name: kmod-ipt-netflow
    title: Netflow netfilter module for Linux kernel
    homepage: http://ipt-netflow.sourceforge.net/

package:
    name: kmod-ipt-psd
    title: psd netfilter module
    homepage:

package:
    name: kmod-ipt-quota2
    title: quota2 netfilter module
    homepage:

package:
    name: kmod-ipt-sysrq
    title: SYSRQ netfilter module
    homepage:

package:
    name: kmod-ipt-tarpit
    title: TARPIT netfilter module
    homepage:

package:
    name: kmod-nf-nathelper-rtsp
    title: RTSP Conntrack and NAT helpers
    homepage: https://github.com/maru-sama/rtsp-linux

package:
    name: kmod-wireguard
    title: WireGuard kernel module
    homepage:

package:
    name: libattr
    title: Extended attributes (xattr) manipulation ▶
library
    homepage: http://savannah.nongnu.org/projects/attr

package:
    name: libav
    title: This package contains Libav library
    homepage: https://libav.org/

package:
    name: libavahi
    title: An mDNS/DNS-SD implementation (No D-Bus)
    homepage: http://www.avahi.org/

```

```

package:
  name: libcurl
  title: A client-side URL transfer library
  homepage: http://curl.haxx.se/

package:
  name: libdaemon
  title: A lightweight C library that eases the ▶
writing of UNIX daemons
  homepage: ▶
http://0pointer.de/lennart/projects/libdaemon/

package:
  name: libdb47
  title: Berkeley DB library (4.7)
  homepage: http://www.sleepycat.com/products/db.shtml

package:
  name: libevent
  title: Event notification library
  homepage: http://www.monkey.org/~provos/libevent/

package:
  name: libexif
  title: Library for JPEG files with EXIF tags
  homepage: https://libexif.github.io

package:
  name: libexpat
  title: An XML parsing library
  homepage: https://libexpat.github.io/

package:
  name: libgcrypt
  title: GNU crypto library
  homepage: ▶
http://directory.fsf.org/security/libgcrypt.html

package:
  name: libgpg-error
  title: GnuPG error handling helper library
  homepage: ▶
http://www.gnupg.org/related_software/libgpg-error/

package:
  name: libid3tag
  title: An ID3 tag manipulation library
  homepage: https://www.underbit.com/products/mad/

package:
  name: libjpeg
  title: The Independent JPEG Group's JPEG runtime ▶
library
  homepage: http://www.ijg.org/

```

```
package:
  name: liblzo
  title: A real-time data compression library
  homepage: http://www.oberhumer.com/opensource/lzo/

package:
  name: libnghttp2
  title: Library implementing the framing layer ▶
of HTTP/2
  homepage: https://nghttp2.org/

package:
  name: libopenssl
  title: Open source SSL toolkit (libraries ▶
(libcrypto.so, libssl.so))
  homepage: http://www.openssl.org/

package:
  name: libpcap
  title: Low-level packet capture library
  homepage: http://www.tcpdump.org/

package:
  name: libtommath
  title: A free number theoretic multiple-precision ▶
integer library
  homepage: https://www.libtom.net/

package:
  name: libusb
  title: A library for accessing Linux USB devices
  homepage: http://libusb.info/

package:
  name: mini_snmpd
  title: Lightweight SNMP daemon
  homepage: http://troglobit.github.io/mini-snmpd.html

package:
  name: minidlna
  title: UPnP A/V & DLNA Media Server
  homepage: http://minidlna.sourceforge.net/

package:
  name: miniupnpd
  title: Lightweight UPnP daemon
  homepage: http://miniupnp.tuxfamily.org/

package:
  name: netatalk
  title: netatalk
  homepage: http://netatalk.sourceforge.net
```

```

package:
  name: nginx
  title: Nginx web server
  homepage: http://nginx.org/

package:
  name: nginx-stream-module
  title: Nginx stream module
  homepage:

package:
  name: openvpn
  title: Open source VPN solution using OpenSSL
  homepage: http://openvpn.net

package:
  name: pjproject
  title: PJSIP
  homepage: http://www.pjsip.org/

package:
  name: pureftpd
  title: FTP server
  homepage: http://www.pureftpd.org

package:
  name: radvd
  title: Router advertisement daemon
  homepage: http://www.litech.org/radvd/

package:
  name: sstp-client
  title: SSTP client for Linux
  homepage: http://sstp-client.sourceforge.net/

package:
  name: strongswan
  title: Strongswan IKEv1/IKEv2 ISAKMP and IPsec
  homepage: https://www.strongswan.org/
suite

package:
  name: transmission-daemon
  title: A free, lightweight BitTorrent client
  homepage: http://www.transmissionbt.com

package:
  name: tspc
  title: TSP client
  homepage: http://www.broker.ipv6.ac.uk

package:
  name: tzdata
  title: Timezone data files

```

```

homepage: https://www.iana.org/time-zones

package:
  name: udpxy
  title: Convert UDP IPTV streams into HTTP stream
  homepage: http://sourceforge.net/projects/udpxy

package:
  name: zlib
  title: Library implementing the deflate ►
compression method
  homepage: http://www.zlib.net/

```

```
(show)> credits nginx
```

```

copying: /*
        * Copyright (C) 2002-2019 Igor Sysoev
        * Copyright (C) 2011-2019 Nginx, Inc.
        * All rights reserved.
        *
        * Redistribution and use in source and binary ►
forms, with or without
        * modification, are permitted provided that ►
the following conditions
        * are met:
        * 1. Redistributions of source code must ►
retain the above copyright
        * notice, this list of conditions and the ►
following disclaimer.
        * 2. Redistributions in binary form must ►
reproduce the above copyright
        * notice, this list of conditions and the ►
following disclaimer in the
        * documentation and/or other materials ►
provided with the distribution.
        *
        * THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND ►
CONTRIBUTORS ``AS IS'' AND
        * ANY EXPRESS OR IMPLIED WARRANTIES, ►
INCLUDING, BUT NOT LIMITED TO, THE
        * IMPLIED WARRANTIES OF MERCHANTABILITY AND ►
FITNESS FOR A PARTICULAR PURPOSE
        * ARE DISCLAIMED. IN NO EVENT SHALL THE ►
AUTHOR OR CONTRIBUTORS BE LIABLE
        * FOR ANY DIRECT, INDIRECT, INCIDENTAL, ►
SPECIAL, EXEMPLARY, OR CONSEQUENTIAL
        * DAMAGES (INCLUDING, BUT NOT LIMITED TO, ►
PROCUREMENT OF SUBSTITUTE GOODS
        * OR SERVICES; LOSS OF USE, DATA, OR PROFITS; ►
OR BUSINESS INTERRUPTION)
        * HOWEVER CAUSED AND ON ANY THEORY OF ►
LIABILITY, WHETHER IN CONTRACT, STRICT
        * LIABILITY, OR TORT (INCLUDING NEGLIGENCE ►
OR OTHERWISE) ARISING IN ANY WAY

```

```
* OUT OF THE USE OF THIS SOFTWARE, EVEN IF ►
ADVISED OF THE POSSIBILITY OF
* SUCH DAMAGE.
*/
```

History

Version	Description
3.01	The show credits command has been introduced.

3.146.15 show crypto ike key

Description Show info about selected *IKE* key. If you use no argument, the entire list of *IKE* keys will be displayed.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> crypto ike key [name]`

Arguments

Argument	Value	Description
name	<i>String</i>	Name of selected <i>IKE</i> key.

Example

```
(show)> crypto ike key

IpSec:
  ike_key, name = test:
    type: address
    id: 10.10.10.10

  ike_key, name = test2:
    type: any
    id: ►
```

History

Version	Description
2.06	The show crypto ike key command has been introduced.

3.146.16 show crypto map

Description Show info about selected *IPsec* crypto map. If you use no argument, the entire list of *IPsec* crypto maps will be displayed.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **crypto map** [*map-name*]

Arguments

Argument	Value	Description
map-name	<i>String</i>	Name of selected crypto map.

Example

```
(show)> crypto map test

IpSec:
crypto_map, name = test:
  config:
    remote_peer: ipsec.example.com
  crypto_ipsec_profile_name: prof1
    mode: tunnel

    local_network:
      net: 172.16.200.0
      mask: 24
      protocol: IPv4

    remote_network:
      net: 172.16.201.0
      mask: 24
      protocol: IPv4

  status:
    primary_peer: true

    phase1:
      name: test
      unique_id: 572
      ike_state: ESTABLISHED
    establish_time: 1451301596
      rekey_time: 0
      reauth_time: 1451304277
      local_addr: 10.10.10.15
      remote_addr: 10.10.10.20
      ike_version: 2
      local_spi: 00a6ebfc9d90f1c2
      remote_spi: 3cd201ef496df75c
      local_init: yes
      ike_cypher: aes-cbc-256
      ike_hmac: sha1
      ike_dh_group: 2

    phase2_sa_list:
      phase2_sa, index = 0:
        unique_id: 304
        request_id: 185
        sa_state: INSTALLED
```



```

mode: TUNNEL
protocol: ESP
encapsulation: yes
local_spi: ca59bfcf
remote_spi: cde23d83
ipsec_cypher: esp-aes-256
ipsec_hmac: esp-sha1-hmac
ipsec_dh_group:
in_bytes: 7152
in_packets: 115
in_time: 1451302507
out_bytes: 6008
out_packets: 98
out_time: 1451302507
rekey_time: 1451305159
local_ts: 172.16.200.0/24
remote_ts: 172.16.201.0/24

state: PHASE2_ESTABLISHED

```

History

Version	Description
2.06	The show crypto map command has been introduced.

3.146.17 show defaults

Description Show the general default wireless and system parameters.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **defaults**

Example (show)> **defaults**

```

servicetag: 014635737374***
servicehost: ndss.keenetic.ndmsystems.com
servicepass: *****
wlanssid: Keenetic-0000
wlankey: xFxTH***
wlanwps: 75534***
country: RU
ndmhwid: KN-1010
ctrlsum: 4712e0849ccea477ccdd18e2fedb***
serial: S1749WF***
signature: valid
integrity: ok
locked: yes

```

History

Version	Description
2.00	The show defaults command has been introduced.

3.146.18 show dlna

Description Show DLNA server status.

Prefix no No

Change settings No

Multiple input No

Synopsis | (show)> **dlna**

Example (show)> **dlna**
 running: yes

History

Version	Description
2.00	The show dlna command has been introduced.

3.146.19 show dns-proxy

Description Show a list of current *DNS over TLS* and *DNS over HTTPS* servers.

Prefix no No

Change settings No

Multiple input No

Synopsis | (show)> **dns-proxy**

Example (show)> **dns-proxy**
 proxy-status:
 proxy-name: System
 proxy-config:
 rpc_port = 54321
 rpc_ttl = 10000
 rpc_wait = 10000
 timeout = 7000
 proceed = 500
 stat_file = /var/ndnproxymain.stat
 stat_time = 10000

```

dns_server = 127.0.0.1:40500 .
dns_server = 127.0.0.1:40501 .
dns_server = 127.0.0.1:40508 .
dns_server = 127.0.0.1:40509 .
static_a = my.keenetic.net 78.47.125.180
static_a = cc6b5a71a7644903b51a5454.keenetic.io 78.47.125.180
static_a = myhome23.keenetic.pro 78.47.125.180
set-profile-ip 127.0.0.1 0
set-profile-ip ::1 0
dns_tcp_port = 53
dns_udp_port = 53

```

```
proxy-stat:
```

```
# ndnproxy statistics file
```

```
Total incoming requests: 809
Proxy requests sent:      659
Cache hits ratio:        0.192 (155)
Memory usage:            44.41K
```

```
DNS Servers
```

Med.Resp	Avg.Resp	Ip Rank	Port	R.Sent	A.Rcvd	NX.Rcvd	
40ms	40ms	127.0.0.1 10	40500	2	2	0	▶
17ms	17ms	127.0.0.1 10	40501	652	651	0	▶
0ms	0ms	127.0.0.1 4	40508	2	0	0	▶
326ms	326ms	127.0.0.1 3	40509	3	1	0	▶

```
proxy-safe:
```

```
proxy-tls:
```

```
server-tls:
```

```
address: 1.1.1.1
port: 853
sni: cloudflare-dns.com
spki:
interface:
```

```
server-tls:
```

```
address: 8.8.8.8
port: 853
sni: dns.google.com
spki:
interface:
```

```
proxy-tls-filters:
```

```

proxy-https:
server-https:
    uri: https://dns.adguard.com/dns-query
    format: dnsm
    spki:
    interface:

server-https:
    uri: ▶
https://cloudflare-dns.com/dns-query?ct=application/dns-json
    format: json
    spki:
    interface:

proxy-https-filters:

```

History

Version	Description
3.01	The show dns-proxy command has been introduced.

3.146.20 show dns-proxy filter presets

Description Show the list of filtering presets. There is always at least 1 preset, but can be many more.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> dns-proxy filter presets [<lang>]`

Arguments

Argument	Value	Description
lang	<i>String</i>	Language to show in “description” and “short-description” fields. If requested lang is absent English version will be returned.

Output

Element	Description
description	Long readable profile description. Has translation map.
id	Short name to be used in dns-proxy commands.
short-description	Short description to be used in combo-boxes and titles. Has translation map.
stale	Set to true when preset is obsolete and no longer works.

Example

```
(show)> dns-proxy filter presets en

version: 4

presets:
    id: opendns-family
    url: ▶
https://www.opendns.com/home-internet-security/
    stale: no
    short-description: OpenDNS - FamilyShield
    description: Blocks domains that are categorized as ▶
Tasteless, Proxy/Anonymizer, Sexuality and Pornography.

presets:
    id: quad9-security
    url: https://quad9.net/home/individuals/
    stale: no
    short-description: Quad9 - Security Protection
    description: Blocks malicious hostnames to protect ▶
against a wide range of threats such as malware, phishing, ▶
spyware, and botnets. Improves performance in addition to ▶
guaranteeing
    privacy.

presets:
    id: cleanbrowsing-security
    url: https://cleanbrowsing.org/filters
    stale: no
    short-description: CleanBrowsing - Security Filter
    description: Blocks access to phishing, spam, malware ▶
and malicious domains. Our database of malicious domains is ▶
updated hourly and considered to be one of the best in the ▶
industry.
    Note that it does not block adult content.

presets:
    id: cleanbrowsing-adult
    url: https://cleanbrowsing.org/filters
    stale: no
    short-description: CleanBrowsing - Adult Filter
    description: Blocks access to all adult, pornographic ▶
and explicit sites. It does not block proxy or VPNs, nor ▶
mixed-content sites. Sites like Reddit are allowed. Google and ▶
Bing are set
    to the Safe Mode. Malicious and Phishing ▶
domains are blocked.
```

History

Version	Description
3.08	The show dns-proxy filter presets command has been introduced.

3.146.21 show dns-proxy filter profiles

Description Show the list of filtering profiles.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> dns-proxy filter profiles`

Example `(show)> dns-proxy filter profiles`

```
profiles:
  id: DnsProfile0
  description: test
```

History

Version	Description
3.08	The show dns-proxy filter profiles command has been introduced.

3.146.22 show dpn document

Description Show *DPN* agreement text.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> dpn document [<version>] [<language>]`

Arguments

Argument	Value	Description
version	<i>String</i>	Version of <i>DPN</i> . If not specified, the latest version is shown.
language	<i>String</i>	The language of <i>DPN</i> . If not specified, the English version is shown.

Example

```
(show)> dpn document
20200330

DEVICE PRIVACY NOTICE

Last update 2020-30-03

This End User License Agreement (this "Agreement") constitutes ►
```

a valid and binding agreement between Keenetic Limited, including all ► affiliates and subsidiaries (“Keenetic”, “us”, “our” or “we”) and You (as ► defined below) of the Software (as defined below), including the Software ► installed onto any one of our Keenetic products (the “Product”) and/or the ► Software legally obtained from or provided by an App Platform (as defined ► below) authorised by Keenetic. Keenetic and You shall be collectively ► referred to as the “Parties”, and individually as a “Party”.

```
(show)> dpn document 20200330 es
20200330
```

CONTRATO DE LICENCIA DEL USUARIO FINAL

Última actualización 30/03/2020

El presente contrato de licencia del usuario final (el presente ► Contrato”) constituye un acuerdo válido y vinculante celebrado entre Keenetic Limited, incluidas todas las filiales y sucursales (“Keenetic”, “nosotros”, “nuestro/a” o “nos”) y Usted (tal y como se define a ► continuación) del Software (tal y como se define a continuación), ► incluido el Software instalado en cualquiera de nuestros productos de ► Keenetic (el “Producto”) y/o el Software obtenido o proporcionado legalmente ► por la Plataforma de la aplicación (tal y como se define a continuación) autorizado por Keenetic. Se referirá a Keenetic y Usted, en ► conjunto, como las “Partes” y, de forma individual, como una “Parte”.

History

Version	Description
3.05	The show dpn document command has been introduced.

3.146.23 show dpn list

Description	Show the list of <i>DPN</i> available in the system.
Prefix no	No
Change settings	No
Multiple input	No

Synopsis

```
(show)> dpn list
```

Example

```
(show)> dpn list  
    dpn:  
    version: 20200330  
  
    document:  
        lang: de  
  
        format: txt  
  
        format: md  
  
    document:  
        lang: en  
  
        format: txt  
  
        format: md  
  
    document:  
        lang: es  
  
        format: txt  
  
        format: md  
  
    document:  
        lang: fr  
  
        format: txt  
  
        format: md  
  
    document:  
        lang: it  
  
        format: txt  
  
        format: md  
  
    document:  
        lang: pl  
  
        format: txt  
  
        format: md  
  
    document:  
        lang: pt  
  
        format: txt
```



```

format: md
document:
  lang: ru
format: txt
format: md
document:
  lang: sv
format: txt
format: md
document:
  lang: tr
format: txt
format: md
document:
  lang: uk
format: txt
format: md

```

History

Version	Description
3.05	The show dpn list command has been introduced.

3.146.24 show dot1x

Description Show 802.1x client status on the interface. To manage 802.1x client status on the interface authentication must be configured with [interface authentication](#) group of commands.

Prefix no No

Change settings No

Interface type Ethernet

Multiple input No

Synopsis | (show)> **dot1x** [*interface*]

Arguments

Argument	Value	Description
interface	<i>Interface</i>	An Ethernet interface name. You can see the list of available Ethernet interfaces with help of dot1x [Tab] command.

Example

```
(show)> dot1x [Tab]

Usage template:
    dot1x [{name}]

Choose:
    GigabitEthernet1
        ISP
WifiMaster0/AccessPoint2
WifiMaster1/AccessPoint1
WifiMaster0/AccessPoint3
WifiMaster0/AccessPoint0
    AccessPoint

(show)> dot1x ISP

dot1x:
    id: GigabitEthernet1
    state: CONNECTING
```

History

Version	Description
2.02	The show dot1x command has been introduced.

3.146.25 show drivers

Description Show the list of loaded kernel drivers.

Prefix no No

Change settings No

Multiple input No

Synopsis | (show)> **drivers**

Example

```
(show)> drivers

module:
    name: rt2860v2_sta
    size: 546736
    used: 0
    subs: -
module:
    name: rt2860v2_ap
```

```

        size: 554192
        used: 2
        subs: -
    module:
        name: rndis_host
        size: 5024
        used: 0
        subs: -
    module:
        name: dwc_otg
        size: 68416
        used: 0
        subs: -
    module:
        name: lm
        size: 1344
        used: 1
        subs: dwc_otg, [permanent]
    ...
    ...
    ...

```

History

Version	Description
2.00	The show drivers command has been introduced.

3.146.26 show dyndns updaters

Description Show the list of available DynDNS providers.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **dyndns updaters**

Example (show)> **dyndns updaters**

```

    updater:
        type: dyndns
        url: https://account.dyn.com/dns/dyndns
        api: http://members.dyndns.org/nic/update

    updater:
        type: noip
        url: https://www.noip.com/
        api: http://dynupdate.no-ip.com/nic/update

```

History

Version	Description
2.12	The show dyndns updaters command has been introduced.

3.146.27 show easyconfig status

Description Show EasyConfig status and settings.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **easyconfigstatus**

Example

```
(show)> easyconfig status
```

```
easyconfig:
  checked: Tue Aug 6 11:50:21 2019
  enabled: yes
  reliable: yes
gateway-accessible: yes
  dns-accessible: yes
  host-accessible: yes
  internet: yes

gateway:
  interface: GigabitEthernet1
  address: 193.0.175.2
  failures: 0
  accessible: yes
  excluded: no

hosts:
  host:
    name: google.com
  failures: 0
  resolved: no
  accessible: no
```

History

Version	Description
2.00	The show easyconfig status command has been introduced.

3.146.28 show eula document

Description Show [EULA](#) agreement text.

Prefix no	No
Change settings	No
Multiple input	No

Synopsis

```
(show)> eula document [ <version> ] [ <language> ]
```

Arguments

Argument	Value	Description
version	<i>String</i>	Version of <i>EULA</i> . If not specified, the latest version is shown.
language	<i>String</i>	The language of <i>EULA</i> . If not specified, the English version is shown.

Example

```
(show)> eula document 20181001
20181001
```

```
KEENETIC LIMITED
End User License Agreement
```

This End User License Agreement (this “Agreement”) constitutes a valid and binding agreement between Keenetic Limited, including all affiliates and subsidiaries (“Keenetic”, “us”, “our” or “we”) and You (as defined below) of the Software (as defined below), including the Software installed onto any one of our Keenetic products (the “Product”) and/or the Software legally obtained from or provided by an App Platform (as defined below) authorised by Keenetic. Keenetic and You shall be collectively referred to as the “Parties”, and individually as a “Party”.

```
(show)> eula document 20181001 ru
20181001
```

```
KEENETIC LIMITED
Лицензионное соглашение с конечным пользователем
```

Настоящее Лицензионное соглашение с конечным пользователем (настоящее «Соглашение») представляет собой действительное и обязательное соглашение между Keenetic Limited, включая все связанные с ней компании и все её подразделения («Keenetic», «нам», «наш» или «мы»), и Вами (как определено ниже) о Программном обеспечении (как определено ниже), включая Программное обеспечение, устанавливаемое на любом из продуктов производства Keenetic («Продукт») и/или Программное обеспечение, полученное на законных основаниях или предоставленное Магазином Приложений (как определено ниже), авторизованной Keenetic. Keenetic и Вы вместе упоминаетесь как «Стороны», а по отдельности – «Сторона».

History

Version	Description
2.15	The show eula document command has been introduced.

3.146.29 show eula list

Description Show the list of *EULA* available in the system.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> eula list`

Example

```
(show)> eula list
  eula:
    version: 20181001

  document:
    lang: en

    format: md

    format: txt

  document:
    lang: ru

    format: md

    format: txt

  document:
    lang: tr

    format: md

    format: txt

  document:
    lang: uk

    format: md

    format: txt
```

History

Version	Description
2.15	The show eula list command has been introduced.

3.146.30 show interface

Description Show information of specified interface. If you use no argument, the entire list of all network interfaces will be displayed.

Prefix no No

Change settings No

Multiple input No

Interface type IP

Synopsis `(show)> interface <name>`

Arguments

Argument	Value	Description
name	<i>Interface</i>	Full name or an alias of the interface to display.

Example

Example 3.1. Review the status of switch ports

The command **show interface** displays different information depending on the interface type. In particular, for GigabitEthernet0 switch it shows current state of physical ports, speed and duplex, on top of general information.

```
(config)> show interface GigabitEthernet0
```

```

    id: GigabitEthernet0
    index: 0
    type: GigabitEthernet
  description:
  interface-name: GigabitEthernet0
    link: up
  connected: yes
    state: up
    mtu: 1500
    tx-queue: 2000

    port, name = 1:
      id: GigabitEthernet0/0
      index: 0
    interface-name: 1
      type: Port
      link: up
      speed: 1000
      duplex: full
  auto-negotiation: on
  flow-control: on
    eee: off
  last-change: 4578.185413
  last-overflow: 0
  public: no

```

```

    port, name = 2:
      id: GigabitEthernet0/1
      index: 1
interface-name: 2
  type: Port
  link: down
  last-change: 4590.205656
  last-overflow: 0
  public: no

    port, name = 3:
      id: GigabitEthernet0/2
      index: 2
interface-name: 3
  type: Port
  link: up

    role, for = GigabitEthernet0/Vlan2: inet

    speed: 100
    duplex: full
auto-negotiation: on
  flow-control: off
    eee: off
  last-change: 4570.078144
  last-overflow: 0
  public: yes

    port, name = 4:
      id: GigabitEthernet0/3
      index: 3
interface-name: 4
  type: Port
  link: down
  last-change: 4590.202571
  last-overflow: 0
  public: no

```

History

Version	Description
2.00	The show interface command has been introduced.

3.146.31 show interface antennas

Description	Show antenna signal strength.
Prefix no	No
Change settings	No
Multiple input	No

Interface type Usb

Synopsis (show)> **interface** *<name>* **antennas**

Arguments

Argument	Value	Description
name	<i>Interface</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Output

Element	Description
channel	Antenna number.
rs si	Received signal strength indicator.
rs rq	Reference signal received quality for 4G only.
rs rp	Reference signal received power for 4G only.
phase	Offset phase for 4G only.
ecio	Ratio of the received/good energy to the interference/bad energy for 3G only.

Example

```
(show)> interface UsbQmi0 antennas

    antenna:
      channel: 0
      rssi: -61
      rsrp: -81
      rsrq: -8
      phase: 0

    antenna:
      channel: 1
      rssi: -94
      rsrp: -120
      rsrq: -10
      phase: 6
```

History

Version	Description
3.05	The show interface antennas command has been introduced.

3.146.32 show interface bands

Description Show available 3G/LTE bands.

Prefix no No

Change settings No

Multiple input No

Interface type Usb

Synopsis `(show)> interface <name> bands`

Arguments

Argument	Value	Description
name	<i>Interface</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(show)> interface UsbQmi0 bands

    umts:
      band: 1
      enabled: yes

    umts:
      band: 5
      enabled: yes

    lte:
      band: 1
      enabled: yes

    lte:
      band: 3
      enabled: yes

    lte:
      band: 7
      enabled: yes

    lte:
      band: 20
      enabled: yes
```

History

Version	Description
3.05	The show interface bands command has been introduced.

3.146.33 show interface bridge

Description Display interface bridge status.

Prefix no No

Change settings No

Multiple input No**Interface type** Bridge**Synopsis** | (show)> **interface** <name> **bridge****Arguments**

Argument	Value	Description
name	<i>Interface</i>	Full name or an alias of the interface to display.

Output

Element	Value
members	Root node.
interface	Interface name.
link	Link state of interface.
inherited	Attribute of inheritance.

Example(show)> **interface Bridge1 bridge**

```

members:
  interface, link = no, inherited = yes:
    WifiMaster0/AccessPoint2
  interface, link = yes: UsbLte0

```

History

Version	Description
2.03	The show interface bridge command has been introduced.

3.146.34 show interface cells

Description Show base stations in mobile networks.**Prefix no** No**Change settings** No**Multiple input** No**Interface type** Usb**Synopsis** | (show)> **interface** <name> **cells****Arguments**

Argument	Value	Description
name	<i>Interface</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Output

Element	Description
phy-id	Cell identity (Cell ID).
rsssi	Received signal strength indicator.

Example

```
(show)> interface UsbQmi0 cells
```

```
cells:
  phy-id: fc
  rssi: -71
```

```
cells:
  phy-id: 15b
  rssi: -71
```

```
cells:
  phy-id: 187
  rssi: -72
```

History

Version	Description
3.05	The show interface cells command has been introduced.

3.146.35 show interface channel-utilization rrd

Description

Show specific data from the channel utilization monitor.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(show)> interface <name>channel-utilization rrd <attribute> [
<detail>]
```

Arguments

Argument	Value	Description
name	<i>Interface</i>	Full name or an alias of the Wi-Fi interface.
attribute	load	Channel load percentage.
	valid	The data is valid.
detail	0	RRD detalization level 64 x 3-seconds. It is used by default if the parameter is not specified.
	1	RRD detalization level 64 x 1-minutes.
	2	RRD detalization level 64 x 3-minutes.
	3	RRD detalization level 64 x 30-minutes.

Example

```
(show)> interface WifiMaster1 channel-utilization rrd load 1
```

```
data:
    t: 578928.500000
    v: 0

data:
    t: 578868.500000
    v: 1

data:
    t: 578808.500000
    v: 1

data:
    t: 578748.500000
    v: 2

data:
    t: 578688.500000
    v: 1

data:
    t: 578628.500000
    v: 0

data:
    t: 578568.500000
    v: 1

data:
    t: 578508.500000
    v: 1

data:
    t: 578448.500000
    v: 1

data:
    t: 578388.500000
    v: 0

data:
    t: 578328.500000
    v: 1

data:
    t: 578268.500000
    v: 1

data:
    t: 578208.500000
    v: 1
```

```

data:
    t: 578148.500000
    v: 6

data:
    t: 578088.500000
    v: 1

data:
    t: 578028.500000
    v: 11

```

History

Version	Description
3.09	The show interface channel-utilization rrd command has been introduced.

3.146.36 show interface channels

Description Show information about the specified wireless interface channels.

Prefix no No

Change settings No

Multiple input No

Interface type Radio

Synopsis `(show)> interface <name> channels`

Arguments

Argument	Value	Description
name	<i>Interface</i>	Full name or an alias of the interface to display.

Output

Element	Value
channels	Root node.
channel, index	Record number in the list.
number	Channel number.
ext-40-above	Ability to expand channel above.
ext-40-below	Ability to expand channel below.
vhc-80	Ability to expand channel up to 80 MHz.

Example

```

(show)> interface WifiMaster0 channels

channels:

```

```
channel, index = 0:
  number: 1
ext-40-above: yes
ext-40-below: no
  vht-80: yes

channel, index = 1:
  number: 2
ext-40-above: yes
ext-40-below: yes
  vht-80: yes

channel, index = 2:
  number: 3
ext-40-above: yes
ext-40-below: yes
  vht-80: yes

channel, index = 3:
  number: 4
ext-40-above: yes
ext-40-below: yes
  vht-80: yes

channel, index = 4:
  number: 5
ext-40-above: yes
ext-40-below: yes
  vht-80: yes

channel, index = 5:
  number: 6
ext-40-above: yes
ext-40-below: yes
  vht-80: yes

channel, index = 6:
  number: 7
ext-40-above: yes
ext-40-below: yes
  vht-80: yes

channel, index = 7:
  number: 8
ext-40-above: yes
ext-40-below: yes
  vht-80: yes
...
...
...
```

History

Version	Description
2.03	The show interface channels command has been introduced.

3.146.37 show interface chilli

Description Show information about statistics of connected clients to the [RADIUS](#) hotspot.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(show)> interface <name> chilli
```

Arguments

Argument	Value	Description
name	<i>Interface</i>	Full name or an alias of the interface.

Example

```
(show)> interface Chilli0 chilli

      host:
      session-id: 4bf7c55f00000006
          user: 44w3c1
          ip: 10.1.30.3
          mac: 55:a3:f9:51:b4:11
      start-time: 3884
          end-time: 0
          idle-time: 9
      idle-time-limit: 0
          tx-bytes: 695682
      tx-bytes-limit: 0
          rx-bytes: 1627453
      rx-bytes-limit: 0
          tx-speed: 0
      tx-speed-limit: 0
          rx-speed: 0
      rx-speed-limit: 0
```

History

Version	Description
2.10	The show interface chilli command has been introduced.

3.146.38 show interface country-codes

Description Show the list of available country codes on a radio interface.

Prefix no No

Change settings No

Multiple input No

Interface type Radio

Synopsis `(show)> interface <name> country-codes`

Arguments

Argument	Value	Description
name	<i>Interface</i>	Full name or an alias of the interface to display.

Output

Element	Value
country-codes	Root node.
code	Country code.
country	Country name.

Example

```
(show)> interface WifiMaster0 country-codes

country-codes:
  country-code:
    code: AL
    country: Albania

  country-code:
    code: DZ
    country: Algeria

  country-code:
    code: AR
    country: Argentina

  country-code:
    code: AM
    country: Armenia

  country-code:
    code: AU
    country: Australia

...
...
...
```

History

Version	Description
2.03	The show interface country-codes command has been introduced.

3.146.39 show interface mac

Description Show the table of MAC addresses of the switch.

Prefix no No

Change settings No

Multiple input No

Interface type Switch

Synopsis `(show)> interface <name> mac`

Arguments

Argument	Value	Description
name	<i>Interface</i>	Full name or an alias of the interface to display.

Example

```
(show)> interface GigabitEthernet0 mac
=====
Port  MAC                               Aging
=====
0     b0:b2:dc:70:c4:28                     6
0     f0:1b:21:6d:9a:c5                     4
0     00:0c:43:76:20:77                     6
0     b4:18:d1:6e:b5:6a                     3
0     40:4a:03:78:01:af                     2
0     84:8e:0c:3f:79:05                     5
0     ec:43:f6:73:0a:99                     6
0     ec:43:f6:04:2b:05                     6
0     b2:b2:dc:5f:09:b3                     1
0     ec:43:f6:72:4e:51                     6
0     00:30:48:93:91:a7                     6
0     f0:c1:f1:95:c3:fb                     5
0     b8:ca:3a:8a:c7:43                     6
0     ec:43:f6:da:78:79                     5
0     10:7b:ef:59:7b:61                     2
0     ec:43:f6:ff:f8:8b                     6
0     58:8b:f3:65:8c:91                     5
0     ec:43:f6:cf:0e:ef                     2
0     00:ee:bd:a1:18:51                     6
0     ec:43:f6:72:4e:69                     6
0     90:e2:ba:07:9a:81                     6
0     00:00:5e:00:01:01                     6
0     00:08:9b:dc:8d:17                     4
0     50:e5:49:58:2b:5a                     6
0     90:e2:ba:07:99:55                     6
0     ec:43:f6:04:36:8d                     6
0     ec:43:f6:05:44:49                     6
0     de:06:21:02:b3:e2                     6
0     40:4a:03:60:80:05                     6
0     00:0c:29:d5:84:c0                     6
```

```

0      00:08:9b:dc:92:55      6
0      00:08:9b:dc:92:56      6
0      00:1b:0c:7f:b6:41      6
0      10:2a:b3:a6:86:18      5
0      10:7b:ef:df:83:a7      1
0      01:00:5e:00:00:fb      0
.....

```

History

Version	Description
2.00	The show interface mac command has been introduced.

3.146.40 show interface name-server

Description Show a list of current addresses of DNS resolvers used on the interface.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(show)> interface <name> name-server
```

Arguments

Argument	Value	Description
name	<i>Interface</i>	Full name or an alias of the interface.

Example

```
(show)> interface WifiMaster1/WifiStation0 name-server
```

```

server:
  address: 1.1.1.1
  port: 0
  domain:
  global: 0
  service: Dns::Manager
interface:

```

```

server:
  address: 9.9.9.9
  port: 0
  domain:
  global: 0
  service: Dns::Manager
interface:

```

```

server:
  address: 8.8.8.8
  port: 0
  domain:
  global: 0

```

```

    service: Dns::Manager
    interface:

    server:
    address: 192.168.133.1
    port: 0
    domain:
    global: 65318
    service: WifiMaster1/WifiStation0 DHCP client
    interface: WifiMaster1/WifiStation0

    server-tls:
    address: 8.8.8.8
    port: 0
    sni: dns.google
    spki:
    interface:
    domain:

```

History

Version	Description
3.09	The show interface name-server command has been introduced.

3.146.41 show interface operators

Description

Show list of available mobile operators. Before running this command, you must first run the network scan command [interface mobile scan](#). After the scan is complete, the list will be available until the modem is restarted.

Prefix no

No

Change settings

No

Multiple input

No

Interface type

Usb

Synopsis

```
(show)> interface <name> operators
```

Arguments

Argument	Value	Description
name	<i>Interface</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(show)> interface UsbQmi0 operators

    scanning: complete
    age: 80
```

```
operator:
  plmn: 25011
  name: YOTA
  mobile: 4G

  status: used

  status: preferred

operator:
  plmn: 25099
  name: Beeline
  mobile: 4G

  status: available

  status: roaming

  status: forbidden

operator:
  plmn: 25020
  name: Tele2
  mobile: 3G

  status: available

  status: roaming

  status: forbidden

operator:
  plmn: 25001
  name: MTS
  mobile: 3G

  status: available

  status: roaming

  status: forbidden

operator:
  plmn: 25099
  name: Beeline
  mobile: 3G

  status: available

  status: roaming

  status: forbidden

operator:
```

```

        plmn: 25020
        name: Tele2
        mobile: 4G

        status: available

        status: roaming

        status: forbidden

operator:
        plmn: 25001
        name: MTS
        mobile: 4G

        status: available

        status: roaming

        status: forbidden

```

History

Version	Description
2.12	The show interface operators command has been introduced.

3.146.42 show interface rf e2p

Description Show the current contents of all calibration data cells.

Prefix no No

Change settings No

Multiple input No

Interface type Radio

Synopsis `(show)> interface <name> rf e2p`

Arguments

Argument	Value	Description
name	<i>Interface</i>	Full name or an alias of the interface to display.

Example

```

(show)> interface WifiMaster0 rf e2p

[0x0000]:5392 [0x0002]:0103 [0x0004]:43EC [0x0006]:04F6
[0x0008]:042B [0x000A]:5392 [0x000C]:1814 [0x000E]:8001
[0x0010]:0000 [0x0012]:5392 [0x0014]:1814 [0x0016]:0000
[0x0018]:0001 [0x001A]:FF6A [0x001C]:0213 [0x001E]:FFFF

```

```

[0x0020]:FFFF [0x0022]:FFC1 [0x0024]:9201 [0x0026]:FFFF
[0x0028]:43EC [0x002A]:04F6 [0x002C]:052B [0x002E]:FFFF
[0x0030]:758E [0x0032]:4301 [0x0034]:FF22 [0x0036]:0025
[0x0038]:FFFF [0x003A]:012D [0x003C]:FFFF [0x003E]:FAD9
[0x0040]:88CC [0x0042]:FFFF [0x0044]:FF0A [0x0046]:0000
[0x0048]:0000 [0x004A]:0000 [0x004C]:0000 [0x004E]:FFFF
[0x0050]:FFFF [0x0052]:1111 [0x0054]:1111 [0x0056]:1111
[0x0058]:1011 [0x005A]:1010 [0x005C]:1010 [0x005E]:1010
[0x0060]:1111 [0x0062]:1211 [0x0064]:1212 [0x0066]:1312
[0x0068]:1313 [0x006A]:1413 [0x006C]:1414 [0x006E]:2264
[0x0070]:00F1 [0x0072]:1133 [0x0074]:0000 [0x0076]:FC62
[0x01E8]:FFFF [0x01EA]:FFFF [0x01EC]:FFFF [0x01EE]:FFFF
[0x01F0]:FFFF [0x01F2]:FFFF [0x01F4]:FFFF [0x01F6]:FFFF
[0x01F8]:FFFF [0x01FA]:FFFF [0x01FC]:FFFF [0x01FE]:FFFF
.....

```

History

Version	Description
2.04	The show interface rf e2p command has been introduced.

3.146.43 show interface rrd

Description Show network interface loading on the principle of Round Robin Database.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **interface** *<name>* **rrd** *<attribute>* [*<detail>*]

Arguments

Argument	Value	Description
name	<i>Interface</i>	Full name or an alias of the interface.
attribute	rxspeed	Value of data rate type.
	txspeed	
detail	0	Level of detail is 1 second.
	1	Level of detail is 2 seconds.
	2	Level of detail is 3 seconds.
	3	Level of detail is 5 seconds.
	4	Level of detail is 15 seconds.
	5	Level of detail is 30 seconds.
	6	Level of detail is 1 minute.
	7	Level of detail is 2 minutes.

Argument	Value	Description
	8	Level of detail is 3 minutes.
	9	Level of detail is 5 minutes.
	10	Level of detail is 15 minutes.
	11	Level of detail is 30 minutes.

Example

```
(show)> interface GigabitEthernet1 rrd rxspeed
```

```

data:
    t: 90083.990183
    v: 200880

data:
    t: 90082.990128
    v: 152392

data:
    t: 90081.990193
    v: 110976

data:
    t: 90080.990142
    v: 48000

data:
    t: 90079.990178
    v: 38366

```

```
(show)> interface GigabitEthernet1 rrd txspeed
```

```

data:
    t: 87771.249486
    v: 148202

data:
    t: 87768.248974
    v: 10694

data:
    t: 87765.248977
    v: 19070

data:
    t: 87762.249105
    v: 48909

data:
    t: 87759.249105
    v: 149277

```



```
(show)> interface GigabitEthernet1 rrd rxspeed 1

data:
      t: 90176.990054
      v: 164766

      data:
        t: 90174.990061
        v: 121828

      data:
        t: 90172.990052
        v: 95430

      data:
        t: 90170.990085
        v: 57559

      data:
        t: 90168.990119
        v: 97759
```

History

Version	Description
2.10	The show interface rrd command has been introduced.

3.146.44 show interface spectrum rrd

Description Show specific data from the spectrum analyzer.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(show)> interface <name>spectrum rrd <channel> <attribute> [ <detail> ]
```

Arguments

Argument	Value	Description
name	<i>Interface</i>	Full name or an alias of the Wi-Fi interface.
channel	<i>Integer</i>	Wi-Fi channel number.
attribute	load	Channel load percentage.
	dfs	DFS enabled.
	radar	Radar detected.
	valid	The data is valid.
	active	The channel is used by the selected Wi-Fi radio interface.

Argument	Value	Description
detail	0	RRD detalization level 64 x 1-minute. This value is used by default if the parameter is not specified explicitly.
	1	RRD detalization level 64 x 3-minutes.
	2	RRD detalization level 64 x 30-minutes.

Example

```
(show)> interface WifiMaster1 spectrum rrd 36 active
data:
    t: 976.500000
    v: 1

data:
    t: 916.500000
    v: 1

data:
    t: 856.500000
    v: 0

data:
    t: 796.500000
    v: 0

data:
    t: 736.500000
    v: 0

data:
    t: 676.500000
    v: 0

data:
    t: 616.500000
    v: 0

data:
    t: 556.500000
    v: 0

data:
    t: 496.500000
    v: 0

data:
    t: 436.500000
    v: 0

data:
    t: 376.500000
    v: 0
```

```

data:
  t: 316.500000
  v: 0

data:
  t: 256.500000
  v: 0

data:
  t: 196.500000
  v: 0

data:
  t: 136.500000
  v: 0

data:
  t: 76.500000
  v: 0

```

History

Version	Description
3.08	The show interface spectrum rrd command has been introduced.

3.146.45 show interface stat**Description** Show interface statistics.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** `(show)> interface <name> stat`**Arguments**

Argument	Value	Description
name	<i>Interface</i>	Full name or an alias of the interface.

Example

```

(show)> interface WifiMaster0/AccessPoint0 stat

rxpackets: 137033
rxbytes: 23915722
rxerrors: 0
rxdropped: 0
txpackets: 847802
txbytes: 1192583473
txerrors: 0

```

```
txdropped: 0
timestamp: 11754.721178
```

History

Version	Description
2.00	The show interface stat command has been introduced.

3.146.46 show interface traffic-counter

Description Show detailed information about the traffic counter status.

Prefix no No

Change settings No

Multiple input No

Interface type Usb

Synopsis `(show)> interface <name>traffic-counter`

Arguments

Argument	Value	Description
name	<i>Interface</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(show)> interface UsbQmi0 traffic-counter

    enabled: true
    value: 1.47
    threshold: 3.96
    limit: 4
    remaining: 2.46
    unit: GiB

    trigger:
        limit: false
        threshold: false

    saved: Fri Feb 19 18:56:29 2021
```

History

Version	Description
3.06	The show interface traffic-counter command has been introduced.

3.146.47 show interface wps pin

Description Show the access point WPS PIN.

Prefix no No

Change settings No

Multiple input No

Interface type WiFi

Synopsis `(show)> interface <name> wps pin`

Argument	Value	Description
name	<i>Interface</i>	Full name or an alias of the interface.

Element	Value
pin	Pin number.

Example

```
(show)> interface WifiMaster0/AccessPoint0 wps pin
pin: 60180360
```

Version	Description
2.00	The show interface wps pin command has been introduced.

3.146.48 show interface wps status

Description Show the access point WPS status.

Prefix no No

Change settings No

Multiple input No

Interface type WiFi

Synopsis `(show)> interface <name> wps status`

Argument	Value	Description
name	<i>Interface</i>	Full name or an alias of the interface.

Output

Element	Value
wps	Root node.
configured	WPS is configured for Access Point.
auto-self-pin	Auto-self-pin mode state.
status	disabled enabled active
direction	send receive
mode	pbc self-pin peer
left	Time to session closure in seconds.

Example

```
(show)> interface WifiMaster0/AccessPoint0 wps status

      wps:
        configured: yes
    auto-self-pin: yes
          status: active
        direction: send
              mode: self-pin
              left: infinite
```

History

Version	Description
2.00	The show interface wps status command has been introduced.

3.146.49 show internet status

Description

Check for an Internet connection on the device. The "Internet" LED (the globe) lights up as a result of connecting to popular internet sites.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(show)> internet status
```

Example

```
(show)> internet status

        checked: Tue Apr 24 17:14:37 2018
        reliable: yes
gateway-accessible: yes
        dns-accessible: yes
        host-accessible: yes
        internet: yes

gateway:
        interface: GigabitEthernet1
        address: 192.168.1.1
        failures: 0
        accessible: yes
        excluded: no

hosts:
        host:
            name: example.net
            failures: 0
            resolved: yes
            accessible: yes

        host:
            name: google.com
            failures: 0
            resolved: no
            accessible: no
```

History

Version	Description
2.11	The show internet status command has been introduced.

3.146.50 show ip arp

Description Display the contents of the [ARP](#) cache.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(show)> ip arp
```

Example

```
(show)> ip arp
=====
IP                MAC                Interface
=====
192.168.75.209    9c:b7:0d:91:e7:31  Home
```

82.135.72.150	00:0e:0c:09:db:60	ISP
192.168.75.106	88:53:2e:5e:07:1d	Home
192.168.75.201	7c:61:93:eb:6c:77	Home
192.168.75.203	00:19:d2:48:d6:dc	Home
10.10.30.34	a0:88:b4:40:9c:98	GuestWiFi
192.168.75.203	7c:61:93:ee:88:67	Home
192.168.75.211	00:26:c7:4a:e0:16	Home
82.138.72.163	34:51:c9:c6:53:cf	ISP
192.168.75.200	60:d8:19:cb:1b:36	Home
192.168.75.204	4c:0f:6e:4b:3c:ba	Home
82.138.72.129	00:30:48:89:b5:9f	ISP

History

Version	Description
2.00	The show ip arp command has been introduced.

3.146.51 show ip dhcp bindings

Description Show *DHCP server* status. If you use no argument, the entire list of issued IPs for all pools will be displayed.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> ip dhcp bindings [<pool>]`

Arguments

Argument	Value	Description
pool	<i>String</i>	The pool name.

Example

```
(show)> ip dhcp bindings _WEBADMIN

      lease:
        ip: 192.168.15.211
        mac: 00:26:c7:4a:e0:16
        expires: 289
        hostname: lenovo
      lease:
        ip: 192.168.15.208
        mac: 00:19:d2:48:d6:dc
        expires: 258
        hostname: evo
      ...
      ...
```


History	Version	Description
	2.00	The show ip dhcp bindings command has been introduced.

3.146.52 show ip dhcp pool

Description Show information about specified pool. If you use no argument, the information about all system pools will be displayed.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> ip dhcp pool [<pool>]`

Arguments	Argument	Value	Description
	pool	<i>String</i>	The pool name.

Example

```
(show)> ip dhcp pool 123

pool, name = 123:
interface, binding = auto:
  network: 0.0.0.0/0
  begin: 0.0.0.0
  end: 0.0.0.0
router, default = yes: 0.0.0.0
lease, default = yes: 25200
state: down
debug: no
```

History	Version	Description
	2.03	The show ip dhcp pool command has been introduced.

3.146.53 show ip ftp

Description Show home directories for users with **ftp** tag.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> ip ftp`

Example

```
(show)> ip ftp

    enabled: yes
    permissive: yes
    root: ADATA SD600:
    path: /tmp/mnt/ADATA SD600

    user, index = 0:
        name: admin
        root: ADATA SD600:
        path: /tmp/mnt/ADATA SD600
```

History

Version	Description
2.08	The show ip ftp command has been introduced.

3.146.54 show ip hotspot

Description Show hotspot hosts.

Prefix no No

Change settings No

Multiple input No

Synopsis | (show)> **ip hotspot**

Example

```
(show)> ip hotspot

    host:
        mac: 24:92:0e:92:e5:44
        via: 24:92:0e:92:e5:44
        ip: 192.168.1.41
        hostname: android-41d997d510af8ff9
        name:

    interface:
        id: Bridge0
        name: Home
        description: Home network (Wired and wireless hosts)

    expires: 207328
    registered: no
    access: permit
    schedule:
        active: yes
        rxbytes: 0
        txbytes: 0
        uptime: 4911
        link: up
```

```

        ssid: Bewilderbeast
        ap: WifiMaster0/AccessPoint0
    authenticated: yes
    txrate: 65
    ht: 20
    mode: 11n
    gi: 800
    rssi: -24
    mcs: 7

    host:
        mac: 20:aa:4b:5c:09:0e
        via: 20:aa:4b:5c:09:0e
        ip: 192.168.1.51
        hostname: Julia-PC
        name:

    interface:
        id: Bridge0
        name: Home
        description: Home network (Wired and wireless hosts)

    expires: 212967
    registered: no
    access: permit
    schedule:
    active: yes
    rxbytes: 0
    txbytes: 0
    uptime: 884
    link: up
    ssid: Bewilderbeast
    ap: WifiMaster0/AccessPoint0
    authenticated: yes
    txrate: 130
    ht: 20
    mode: 11n
    gi: 800
    rssi: -37
    mcs: 15

```

History

Version	Description
2.09	The show ip hotspot command has been introduced.

3.146.55 show ip hotspot rrd

Description	Show registered host traffic information of Round Robin Database.
Prefix no	No
Change settings	No

Multiple input No

Synopsis (show)> **ip hotspot** *<mac>* **rrd** *<attribute>* [*<detail>*]

Arguments

Argument	Value	Description
mac	MAC address	MAC address of registered host.
attribute	rxspeed	Data rate type.
	txspeed	
	rxbytes	
	txbytes	
detail	0	Level of detail is 1 second.
	1	Level of detail is 2 seconds.
	2	Level of detail is 3 seconds.
	3	Level of detail is 5 seconds.
	4	Level of detail is 15 seconds.
	5	Level of detail is 30 seconds.
	6	Level of detail is 1 minute.
	7	Level of detail is 2 minutes.
	8	Level of detail is 3 minutes.
	9	Level of detail is 5 minutes.
	10	Level of detail is 15 minutes.
11	Level of detail is 30 minutes.	

Example

```
(show)> ip hotspot a8:1e:84:85:f2:11 rrd rxspeed
```

```
data:
  t: 2180.491855
  v: 16298

data:
  t: 2177.492050
  v: 9026
```

```
data:
  t: 2174.491916
  v: 11450
```

```
data:
  t: 2171.491843
  v: 626
```

```
(show)> ip hotspot a8:1e:84:85:f2:11 rrd txspeed
```

```
data:
  t: 2228.491841
  v: 952
```

```
data:
  t: 2225.491920
  v: 8813
```

```
data:
  t: 2222.492053
  v: 28746
```

```
data:
  t: 2219.491845
  v: 22474
```

```
(show)> ip hotspot a8:1e:84:85:f2:11 rrd rxbytes
```

```
data:
  t: 2279.491860
  v: 4197
```

```
data:
  t: 2276.492050
  v: 362
```

```
data:
  t: 2273.492040
  v: 14337
```

```
data:
  t: 2270.491862
  v: 3281
```

```
(show)> ip hotspot a8:1e:84:85:f2:11 rrd txbytes
```

```
data:
  t: 2360.491865
  v: 3342
```

```
data:
  t: 2357.491853
  v: 142
```

```

data:
  t: 2354.491949
  v: 3333

data:
  t: 2351.491847
  v: 3390

```

History

Version	Description
2.14	The show ip hotspot rrd command has been introduced.

3.146.56 show ip hotspot summary

Description Show the information about traffic usage for several registered hosts according to Round Robin Database. Sorting is in descending order.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(show)> ip hotspot summary <attribute> [ detail <detail> ] [ count
<count> ]
```

Arguments

Argument	Value	Description
attribute	rxspeed	Value of data rate type.
	txspeed	
	rxbytes	
	txbytes	
detail	0	Level of detail is 3 seconds.
	1	Level of detail is 60 seconds.
	2	Level of detail is 180 seconds.
	3	Level of detail is 1440 seconds.
count	<i>Integer</i>	The number of hosts. If not specified, the entire list of hosts is displayed.

Example

```
(show)> ip hotspot summary rxspeed

t: 255

host:
  active: yes
  name: toshiba
```

```
rxspeed: 143964
```

```
host:  
  active: yes  
  name: lnx  
  rxspeed: 24749
```

```
host:  
  active: yes  
  name: oneplus6  
  rxspeed: 2558
```

```
(show)> ip hotspot summary rxspeed detail 0
```

```
t: 0
```

```
host:  
  active: yes  
  name: toshiba  
  rxspeed: 186519
```

```
host:  
  active: yes  
  name: oneplus6  
  rxspeed: 94298
```

```
host:  
  active: yes  
  name: lnx  
  rxspeed: 8237
```

```
(show)> ip hotspot summary rxspeed count 3
```

```
t: 255
```

```
host:  
  active: yes  
  name: toshiba  
  rxspeed: 390322
```

```
host:  
  active: yes  
  name: lnx  
  rxspeed: 53518
```

```
host:  
  active: yes  
  name: oneplus6  
  rxspeed: 5284
```

History

Version	Description
2.14	The show ip hotspot summary command has been introduced.

3.146.57 show ip http proxy

Description Show HTTP proxy status.

Prefix no No

Change settings No

Multiple input No

Synopsis | (show)> **ip http proxy**

Example

```
(show)> ip http proxy

proxy:
  name: modem
  domain: myhomemodem.keenetic.link
  upstream: http://192.168.8.1:80
  allow: public
  ndns: yes
```

History

Version	Description
2.09	The show ip http proxy command has been introduced.

3.146.58 show ip http webdav

Description Show [WebDAV](#) server status.

Prefix no No

Change settings No

Multiple input No

Synopsis | (show)> **ip http webdav**

Example

```
(show)> ip http webdav

enabled: yes
permissive: yes
  root: ext4-files:/
  path: /tmp/mnt/7a976f42-a16f-d501-3017-6b42a16fd501

  user, index = 0:
```



```

        name: admin
        root:
        path:

    user, index = 1:
        name: enpa
        root: ext4-files:/
        path: ►
/tmp/mnt/7a976f42-a16f-d501-3017-6b42a16fd501

```

History

Version	Description
3.04	The show ip http webdav command has been introduced.

3.146.59 show ip name-server

Description Show a list of current IPv4 and IPv6 addresses of DNS servers in order of decreasing priority.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ip name-server**

Example (show)> **ip name-server**

```

server:
  address: 1.1.1.1
  port: 0
  domain:
  global: 0
  service: Dns::Manager
  interface:

server:
  address: 9.9.9.9
  port: 0
  domain:
  global: 0
  service: Dns::Manager
  interface:

server:
  address: 2001:4860:4860::8888
  port: 0
  domain: ISP
  global: 0

```

```

    service: Dns::Manager
    interface:

server:
  address: 193.0.174.21
  port: 0
  domain:
  global: 64520
  service: Dhcp::Client-GigabitEthernet1
  interface: GigabitEthernet1

server:
  address: 2a02:290:0:1::4
  port: 0
  domain:
  global: 64520
  service: Ip6::Dhcp::Client-GigabitEthernet1
  interface: GigabitEthernet1

server:
  address: 10.2.0.1
  port: 0
  domain:
  global: 43
  service: Dns::InterfaceSpecific-Wireguard5
  interface: Wireguard5

```

History

Version	Description
2.00	The show ip name-server command has been introduced.

3.146.60 show ip nat

Description Show network address translation table.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ip nat [tcp]**

Arguments

Argument	Value	Description
tcp	<i>Keyword</i>	Only the records with <i>TCP</i> type will be displayed.

Example

```
(show)> ip nat
```

Type	In Out	Source	Port	Destination	Port	Packets
udp		10.1.30.34	6482	111.221.77.159	40005	1
		111.221.77.159	40005	82.138.7.164	6482	1
udp		220.27.130.179	6896	82.138.7.164	28197	1
		192.168.15.204	28197	220.27.130.179	6896	1
tcp		10.1.30.33	57474	78.141.179.15	12350	12
		78.141.179.15	12350	82.138.7.164	57474	11
udp		10.1.30.34	6482	84.201.228.162	44423	11
		84.201.228.162	44423	82.138.7.164	6482	16
tcp		10.1.30.34	46655	96.55.147.21	443	2
		96.55.147.21	443	82.138.7.164	46655	0
udp		10.1.30.34	6482	213.199.179.158	40006	1
		213.199.179.158	40006	82.138.7.164	6482	1

History

Version	Description
2.00	The show ip nat command has been introduced.

3.146.61 show ip neighbour

Description Show the list of discovered hosts on the network at the OSI model network level.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ip neighbour [alive]**

Arguments

Argument	Value	Description
alive	<i>Keyword</i>	Show active hosts.

Example

```
(show)> ip neighbour

neighbour:
  id: 1
  via: b8:88:e1:2b:30:af
  mac: b8:88:e1:2b:30:af
address-family: ipv4
address: 192.168.22.16
```

```

interface: Bridge0
first-seen: 251387
last-seen: 0
leasetime: 7372
  expired: no
  wireless: no

neighbour:
  id: 4
  via: b8:88:e2:4b:30:af
  mac: b8:88:e2:4b:30:af
address-family: ipv6

addresses:
  address:
    address: fe80::a022:a505:fae6:c891
    status: active
    last-seen: 3

interface: Bridge0
first-seen: 251371
last-seen: 251371
leasetime: 0
  expired: no
  wireless: no

```

History

Version	Description
2.10	The show ip neighbour command has been introduced.

3.146.62 show ip policy

Description Show the IP Policy profile status.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> ip policy [<policy>]`

Arguments

Argument	Value	Description
policy	<i>Policy</i>	Name of IP Policy profile.

Example

```

(show)> ip policy
policy, name = Policy0, description = VPN-OpenVPN:
  mark: fffffff0
  table: 42

```

```
route:
destination: 10.1.30.0/24
gateway: 0.0.0.0
interface: Guest
metric: 0
proto: boot
floating: no

route:
destination: 172.16.3.33/32
gateway: 0.0.0.0
interface: L2TPVPN
metric: 0
proto: boot
floating: no

route:
destination: 192.168.1.0/24
gateway: 0.0.0.0
interface: Home
metric: 0
proto: boot
floating: no

policy, name = Policy3, description = Home:
mark: fffffd03
table: 45

route:
destination: 10.1.30.0/24
gateway: 0.0.0.0
interface: Guest
metric: 0
proto: boot
floating: no

route:
destination: 172.16.3.33/32
gateway: 0.0.0.0
interface: L2TPVPN
metric: 0
proto: boot
floating: no

route:
destination: 192.168.1.0/24
gateway: 0.0.0.0
interface: Home
metric: 0
proto: boot
floating: no
```

```
(show)> ip policy Policy0
policy, name = Policy0:
```

```
mark: fffffd00
table: 42

route:
destination: 0.0.0.0/0
gateway: 193.0.174.1
interface: ISP
metric: 0
proto: boot
floating: no

route:
destination: 10.1.30.0/24
gateway: 0.0.0.0
interface: Guest
metric: 0
proto: boot
floating: no

route:
destination: 185.230.127.84/32
gateway: 193.0.174.1
interface: ISP
metric: 0
proto: boot
floating: no

route:
destination: 192.168.1.0/24
gateway: 0.0.0.0
interface: Home
metric: 0
proto: boot
floating: no

route:
destination: 193.0.174.0/24
gateway: 0.0.0.0
interface: ISP
metric: 0
proto: boot
floating: no

route:
destination: 193.0.175.0/25
gateway: 193.0.174.10
interface: ISP
metric: 0
proto: boot
floating: no

route:
destination: 193.0.175.22/32
gateway: 193.0.174.1
```

```

interface: ISP
metric: 0
proto: boot
floating: no

```

History

Version	Description
2.12	The show ip policy command has been introduced.

3.146.63 show ip route

Description Show the current routing table.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ip route** [table <table>] [sort <criteria> <direction>]

Arguments

Argument	Value	Description
table	<i>Integer</i>	The route number.
criteria	interface	Sorting criteria is the interface name.
	gateway	Sorting criteria is the gateway address.
	destination	Sorting criteria is the destination address.
direction	ascending	Routing table records are sorted in ascending order.
	descending	Routing table records are sorted in descending order.

Example

```

(show)> ip route table 254

```

Destination	Gateway	Interface	
F Metric			
0.0.0.0/0	192.168.133.1	WifiMaster1/WifiStation0	▶
U 0			
1.1.1.1/32	0.0.0.0	Wireguard1	▶
U 0			
8.8.8.8/32	0.0.0.0	Wireguard7	▶
U 0			
10.1.30.0/24	0.0.0.0	Guest	▶
U 0			
10.8.0.0/24	0.0.0.0	Wireguard3	▶
U 0			
13.32.99.0/24	0.0.0.0	Wireguard7	▶
U 0			

```

82.3.116.12/32    192.168.133.1    WifiMaster1/WifiStation0 ▶
  U 0
108.157.4.0/24   0.0.0.0          Wireguard7        ▶
  U 0
162.159.192.1/32 192.168.133.1    WifiMaster1/WifiStation0 ▶
  U 0
172.16.85.0/24   0.0.0.0          Wireguard1        ▶
  U 0
176.124.212.86/32 192.168.133.1    WifiMaster1/WifiStation0 ▶
  U 0
188.114.96.0/22  0.0.0.0          Wireguard7        ▶
  U 0
192.168.1.0/24   192.168.15.88    Home              ▶
  U 0
192.168.15.0/24  0.0.0.0          Home              ▶
  U 0
192.168.17.0/24  0.0.0.0          Bridge2           ▶
  U 0
192.168.133.0/24 0.0.0.0          WifiMaster1/WifiStation0 ▶
  U 0
192.168.220.0/24 0.0.0.0          Wireguard1        ▶
  U 0
194.71.130.15/32 192.168.133.1    WifiMaster1/WifiStation0 ▶
  U 0

```

```
(show)> ip route sort interface ascending
```

Destination F Metric	Gateway	Interface	▶
192.168.1.0/24 U 0	192.168.15.88	Home	▶
192.168.15.0/24 U 0	0.0.0.0	Home	▶
10.1.30.0/24 U 0	0.0.0.0	Guest	▶
192.168.17.0/24 U 0	0.0.0.0	Bridge2	▶
0.0.0.0/0 U 0	192.168.133.1	WifiMaster1/WifiStation0	▶
84.2.111.11/32 U 0	192.168.133.1	WifiMaster1/WifiStation0	▶
162.159.192.1/32 U 0	192.168.133.1	WifiMaster1/WifiStation0	▶
176.124.212.86/32 U 0	192.168.133.1	WifiMaster1/WifiStation0	▶
192.168.133.0/24 U 0	0.0.0.0	WifiMaster1/WifiStation0	▶
194.71.130.15/32 U 0	192.168.133.1	WifiMaster1/WifiStation0	▶
1.1.1.1/32 U 0	0.0.0.0	Wireguard1	▶
172.16.85.0/24 U 0	0.0.0.0	Wireguard1	▶


```

192.168.220.0/24    0.0.0.0    Wireguard1    ▶
    U 0
10.8.0.0/24       0.0.0.0    Wireguard3    ▶
    U 0
8.8.8.8/32        0.0.0.0    Wireguard7    ▶
    U 0
13.32.99.0/24     0.0.0.0    Wireguard7    ▶
    U 0
108.157.4.0/24    0.0.0.0    Wireguard7    ▶
    U 0
188.114.96.0/22   0.0.0.0    Wireguard7    ▶
    U 0

```

```
(show)> ip route sort interface descending
```

Destination	Gateway	Interface	
F Metric			▶
188.114.96.0/22	0.0.0.0	Wireguard7	▶
U 0			
108.157.4.0/24	0.0.0.0	Wireguard7	▶
U 0			
13.32.99.0/24	0.0.0.0	Wireguard7	▶
U 0			
8.8.8.8/32	0.0.0.0	Wireguard7	▶
U 0			
10.8.0.0/24	0.0.0.0	Wireguard3	▶
U 0			
192.168.220.0/24	0.0.0.0	Wireguard1	▶
U 0			
172.16.85.0/24	0.0.0.0	Wireguard1	▶
U 0			
1.1.1.1/32	0.0.0.0	Wireguard1	▶
U 0			
194.71.130.15/32	192.168.133.1	WifiMaster1/WifiStation0	▶
U 0			
192.168.133.0/24	0.0.0.0	WifiMaster1/WifiStation0	▶
U 0			
176.124.212.86/32	192.168.133.1	WifiMaster1/WifiStation0	▶
U 0			
162.159.192.1/32	192.168.133.1	WifiMaster1/WifiStation0	▶
U 0			
85.1.112.11/32	192.168.133.1	WifiMaster1/WifiStation0	▶
U 0			
0.0.0.0/0	192.168.133.1	WifiMaster1/WifiStation0	▶
U 0			
192.168.17.0/24	0.0.0.0	Bridge2	▶
U 0			
10.1.30.0/24	0.0.0.0	Guest	▶
U 0			
192.168.15.0/24	0.0.0.0	Home	▶
U 0			
192.168.1.0/24	192.168.15.88	Home	▶
U 0			

History

Version	Description
2.00	The show ip route command has been introduced.

3.146.64 show ip service

Description Show a list of open ports used by system services.

Prefix no No

Change settings No

Multiple input No

Synopsis | (show)> **ip service**

Example

```
(show)> ip service

    service:
    service-name: Telnet
           family: ipv4
           protocol: tcp
           port: 23
    security-level: private

    service:
    service-name: DNS proxy
           family: ipv4
           protocol: udp
           port: 53
    security-level: protected

    service:
    service-name: DNS proxy
           family: ipv4
           protocol: tcp
           port: 53
    security-level: protected

    service:
    service-name: DNS proxy
           family: ipv4
           protocol: udp
           port: 54321
    security-level: private
```

History

Version	Description
3.06	The show ip service command has been introduced.

3.146.65 show ipsec

Description	Show info about <i>IPsec/IKE</i> strongSwan service status.
Prefix no	No
Change settings	No
Multiple input	No

Synopsis | (show)> **ipsec**

Example (show)> **ipsec**

```

ipsec_statusall:

Status of IKE charon daemon (strongSwan 5.3.4, Linux 2.6.36, ▶
mips):
  uptime: 6 days, since Dec 22 10:23:36 2015
  worker threads: 11 of 16 idle, 5/0/0/0 working, job queue: ▶
0/0/0/0, scheduled: 10
  loaded plugins: charon aes des sha1 sha2 md5 random nonce ▶
openssl xcbc cmac hmac attr kernel-netlink socket-default stroke ▶
updown eap-mschapv2 eap-dynamic xauth-generic xauth-eap ▶
error-notify systime-fix
Listening IP addresses:
  192.168.1.1
  10.10.10.15
Connections:
  test: %any...ipsec.example.org IKEv2, dpddelay=10s
  test: local: [ipsec.example.org] uses pre-shared key ▶
authentication
  test: remote: [ipsec.example.com] uses pre-shared key ▶
authentication
  test: child: 172.16.200.0/24 === 172.16.201.0/24 TUNNEL, ▶
dpdaction=restart
Security Associations (1 up, 0 connecting):
  test[572]: ESTABLISHED 24 minutes ago, ▶
10.10.10.15[ipsec.example.org]...10.10.10.20[ipsec.example.com]
  test[572]: IKEv2 SPIs: 00a6ebfc9d90f1c2_i* ▶
3cd201ef496df75c_r, pre-shared key reauthentication in 20 minutes
  test[572]: IKE proposal: ▶
AES_CBC=256/HMAC_SHA1_96/PRF_HMAC_SHA1/MODP_1024/#
  test{304}: INSTALLED, TUNNEL, reqid 185, ESP in UDP SPIs: ▶
ca59bfcf_i cde23d83_o
  test{304}: AES_CBC_256/HMAC_SHA1_96, 10055 bytes_i (164 ▶
pkts, 0s ago), 10786 bytes_o (139 pkts, 0s ago), rekeying in 34 ▶
minutes
  test{304}: 172.16.200.0/24 === 172.16.201.0/24

```

History

Version	Description
2.06	The show ipsec command has been introduced.

3.146.66 show ipv6 addresses

Description Show a list of current IPv6-addresses.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ipv6 addresses**

Example (show)> **ipv6 addresses**

```

address:
  address: 2001:db8::1
  interface: ISP
valid-lifetime: infinite
address:
  address: 2001:db8::ce5d:4eff:fe4f:aab2
  interface: Home
valid-lifetime: infinite
address:
  address: fd3c:4268:1559:0:ce5d:4eff:fe4f:aab2
  interface: Home
valid-lifetime: infinite
address:
  address: fd01:db8:43:0:ce5d:4eff:fe4f:aab2
  interface: Home
valid-lifetime: infinite

```

History

Version	Description
2.00	The show ipv6 addresses command has been introduced.

3.146.67 show ipv6 dhcp bindings

Description Show *DHCPv6 server* status.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(show)> ipv6 dhcp bindings
```

Example

```
(show)> ipv6 dhcp bindings
  subnet:
    name: Default

  subnet:
    name: guest

  lease:
    type: IA-NA
    duid: 00:03:00:01:a8:a1:59:61:57:69
    address: fc34:5678:0:4::cc
    expires: 299

  lease:
    type: IA-PD
    duid: 00:03:00:01:a8:a1:59:61:57:69
    prefix: fc34:5678:0:7::/64
    remote: fe80::2ecb:ff38:a778:66e8
    expires: 299
```

History

Version	Description
4.00	The show ipv6 dhcp bindings command has been introduced.

3.146.68 show ipv6 prefixes

Description

Show a list of current IPv6-prefixes.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(show)> ipv6 prefixes
```

Example

```
(show)> ipv6 prefixes

  prefix:
    prefix: 2001:db8::/64
    interface: ISP
    valid-lifetime: infinite
    preferred-lifetime: infinite
  prefix:
    prefix: fd3c:4268:1559::/48
    interface:
    valid-lifetime: infinite
    preferred-lifetime: infinite
```

```

prefix:
  prefix: fd01:db8:43::/48
  interface:
  valid-lifetime: infinite
  preferred-lifetime: infinite

```

History

Version	Description
2.00	The show ipv6 prefixes command has been introduced.

3.146.69 show ipv6 route

Description Show a list of current IPv6-routes.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ipv6 route** [table *<table>*] [sort *<criteria>* *<direction>*]

Arguments

Argument	Value	Description
table	<i>Integer</i>	The route number.
criteria	interface	Sorting criteria is the interface name.
	gateway	Sorting criteria is the gateway address.
	destination	Sorting criteria is the destination address.
direction	ascending	Routing table records are sorted in ascending order.
	descending	Routing table records are sorted in descending order.

Example

```

(show)> ipv6 route table 42

route6:
destination: 2a02:290:2:65d:52ff:20ff:fe00:1e86/128
gateway: ::
interface: Home
metric: 256
flags: U
rejecting: no
proto: boot
floating: no
static: no

```

```

(show)> ipv6 route sort interface ascending

route6:

```

```

destination: 2a02:290:2:65d:52ff:20ff:fe00:1e86/128
gateway: ::
interface: Home
metric: 256
flags: U
rejecting: no
proto: kernel
floating: no
static: no

```

```
(show)> ipv6 route sort gateway descending
```

```

route6:
destination: ::/0
gateway: fe80::66a0:e7ff:fef5:6392
interface: ISP
metric: 1024
flags: U
rejecting: no
proto: boot
floating: no
static: no

```

History

Version	Description
2.00	The show ipv6 routes command has been introduced.
4.00	New command name is show ipv6 route .

3.146.70 show kabinet status

Description Check for the status and configuration of KAbiNET authenticator.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> kabinet status`

Example `(show)> kabinet status`

```

kabinet:
  enabled: yes
  wan: yes
  state: STOPPED
  server: 10.0.0.1
  access-level: internet
  protocol-version: 2

```

History

Version	Description
2.02	The show kabinet status command has been introduced.

3.146.71 show last-change

Description Show when and who made the latest changes in the settings.

Prefix no No

Change settings No

Multiple input No

Synopsis | (show)> **last-change**

Example (show)> **last-change**

```
date: Thu, 12 Jul 2012 10:01:47 GMT
```

```
agent: cli
```

History

Version	Description
2.00	The show last-change command has been introduced.

3.146.72 show led

Description Show information about specified LED in the system. If you use no argument, the entire list of all LEDs on the device will be displayed. Available LEDs depend on hardware configuration.

Prefix no No

Change settings No

Multiple input No

Synopsis | (show)> **led [<name>]**

Arguments

Argument	Value	Description
name	SYS	The LED name. The number of available indicators depends on the selected device.
	FN	
	FW_UPD	
	ACT_ACK	
	WAN	
	DSL	

Argument	Value	Description
	WLAN	
	WLAN5	
	WPS_1	
	WPS_2	
	WPS_3	
	WPS_4	
	WPS5_1	
	WPS5_2	
	WPS5_3	
	WPS5_4	
	USB_1	
	USB_2	
	LTE	

Example

```
(show)> led FN_1

      leds:
        led, index = 0:
          name: FN_1
        user_configurable: yes
        virtual: no
```

History

Version	Description
2.05	The show led command has been introduced.

3.146.73 show led bindings

Description Show the control associated with the specified LED. If you use no argument, the entire list of all LEDs with their controls will be displayed.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> led [<name>]bindings`

Arguments

Argument	Value	Description
name	SYS	The LED name. Set of available indicators depends on the selected device.
	FN	

Argument	Value	Description
	FW_UPD	
	ACT_ACK	
	WAN	
	DSL	
	WLAN	
	WLAN5	
	WPS_1	
	WPS_2	
	WPS_3	
	WPS_4	
	WPS5_1	
	WPS5_2	
	WPS5_3	
	WPS5_4	
	USB_1	
	USB_2	
	LTE	

Example

```
(show)> led bindings
```

```
bindings:

  binding, index = 0:
    led: SYS
  user_configurable: no
  active_control: SystemState
  default_control: SystemState

  binding, index = 1:
    led: FN_1
  user_configurable: yes
  active_control: Usb1PortDeviceAttached
  default_control: Usb1PortDeviceAttached

  binding, index = 2:
    led: FN_2
  user_configurable: yes
  active_control: Usb2PortDeviceAttached
  default_control: Usb2PortDeviceAttached

  binding, index = 3:
    led: ACT_ACK
  user_configurable: no
```

```
active_control: ButtonActivityAcknowledgement
default_control: ButtonActivityAcknowledgement

binding, index = 4:
    led: FW_UPD
user_configurable: no
active_control:
default_control:

binding, index = 5:
    led: WAN
user_configurable: no
active_control: WanConnected
default_control: WanConnected

binding, index = 6:
    led: WLAN
user_configurable: no
active_control: WlanActivity
default_control: WlanActivity

binding, index = 7:
    led: WPS_1
user_configurable: no
active_control: WlanWps1Activity
default_control: WlanWps1Activity

binding, index = 8:
    led: WPS_2
user_configurable: no
active_control: WlanWps2Activity
default_control: WlanWps2Activity

binding, index = 9:
    led: WPS_3
user_configurable: no
active_control: WlanWps3Activity
default_control: WlanWps3Activity

binding, index = 10:
    led: WPS_4
user_configurable: no
active_control: WlanWps4Activity
default_control: WlanWps4Activity

binding, index = 11:
    led: WPS_STA
user_configurable: no
active_control: WstaWpsActivity
default_control: WstaWpsActivity

binding, index = 12:
    led: WLAN5
user_configurable: no
```

```

active_control: Wlan5Activity
default_control: Wlan5Activity

binding, index = 13:
  led: WPS5_1
user_configurable: no
  active_control: Wlan5Wps1Activity
  default_control: Wlan5Wps1Activity

binding, index = 14:
  led: WPS5_2
user_configurable: no
  active_control: Wlan5Wps2Activity
  default_control: Wlan5Wps2Activity

binding, index = 15:
  led: WPS5_3
user_configurable: no
  active_control: Wlan5Wps3Activity
  default_control: Wlan5Wps3Activity

binding, index = 16:
  led: WPS5_4
user_configurable: no
  active_control: Wlan5Wps4Activity
  default_control: Wlan5Wps4Activity

binding, index = 17:
  led: WPS5_STA
user_configurable: no
  active_control: Wsta5WpsActivity
  default_control: Wsta5WpsActivity

```

History

Version	Description
2.08	The show led bindings command has been introduced.

3.146.74 show led controls

Description Show a list of LED controls in the system. Available controls depend on hardware configuration.

Prefix no No

Change settings No

Multiple input No

Synopsis | (show)> **led controls**

Example

```
(show)> led controls

controls:
  control, index = 0:
    name: SystemState
  short_description: System state
    owner: ndm
  user_configurable: no

  control, index = 1:
    name: ButtonActivityAcknowledgement
  short_description: Button activity acknowledgement
    owner: ndm
  user_configurable: no

  control, index = 2:
    name: SelectedSchedule
  short_description: Selected schedule is active
    owner: ndm
  user_configurable: yes

  control, index = 3:
    name: SelectedWan
  short_description: Selected WAN interface has default route
    owner: ndm
  user_configurable: yes

  control, index = 4:
    name: BackupWan
  short_description: Backup WAN interface has default route
    owner: ndm
  user_configurable: yes

  control, index = 5:
    name: WanConnected
  short_description: WAN interface connected
    owner: ndm
  user_configurable: no

  control, index = 6:
    name: Usb1PortDeviceAttached
  short_description: USB port 1 known device attached
    owner: ndm
  user_configurable: yes

  control, index = 7:
    name: Usb2PortDeviceAttached
  short_description: USB port 2 known device attached
    owner: ndm
  user_configurable: yes

  control, index = 8:
    name: UpdatesAvailable
```

```
short_description: Firmware updates available
  owner: ndm
user_configurable: yes

  control, index = 9:
    name: OpkgLedControl
short_description: OPKG LED control
  owner: ndm
user_configurable: yes

  control, index = 10:
    name: Wlan5Activity
short_description: WLAN 5GHz interface activity
  owner: mt7615_ap
user_configurable: no

  control, index = 11:
    name: Wlan5Wps1Activity
short_description: WLAN 5GHz SSID 1 WPS activity
  owner: mt7615_ap
user_configurable: no

  control, index = 12:
    name: Wlan5Wps2Activity
short_description: WLAN 5GHz SSID 2 WPS activity
  owner: mt7615_ap
user_configurable: no

  control, index = 13:
    name: Wlan5Wps3Activity
short_description: WLAN 5GHz SSID 3 WPS activity
  owner: mt7615_ap
user_configurable: no

  control, index = 14:
    name: Wlan5Wps4Activity
short_description: WLAN 5GHz SSID 4 WPS activity
  owner: mt7615_ap
user_configurable: no

  control, index = 15:
    name: WlanActivity
short_description: WLAN 2.4GHz interface activity
  owner: mt7615_ap
user_configurable: no

  control, index = 16:
    name: WlanWps1Activity
short_description: WLAN 2.4GHz SSID 1 WPS activity
  owner: mt7615_ap
user_configurable: no

  control, index = 17:
    name: WlanWps2Activity
```

```

short_description: WLAN 2.4GHz SSID 2 WPS activity
  owner: mt7615_ap
user_configurable: no

  control, index = 18:
    name: WlanWps3Activity
short_description: WLAN 2.4GHz SSID 3 WPS activity
  owner: mt7615_ap
user_configurable: no

  control, index = 19:
    name: WlanWps4Activity
short_description: WLAN 2.4GHz SSID 4 WPS activity
  owner: mt7615_ap
user_configurable: no

  control, index = 20:
    name: Wsta5WpsActivity
short_description: Station 5GHz WPS activity
  owner: mt7615_ap
user_configurable: no

  control, index = 21:
    name: WstaWpsActivity
short_description: Station 2.4GHz WPS activity
  owner: mt7615_ap
user_configurable: no

```

History

Version	Description
2.08	The show led controls command has been introduced.

3.146.75 show log

Description Show system log contents (records that are present in a circular buffer). The command executes in the background, that is, until forced to stop by the user pressing [Ctrl]+[C].

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> log [<max-lines>] [once]`

Arguments

Argument	Value	Description
max-lines	<i>Integer</i>	Limit for returned log items.
once	<i>Keyword</i>	Show current log and exit to the CLI.

Example**(show)> log**

Time	Message
I [Jul 12 12:08:39]	radvd[228]: attempting to reread config file
I [Jul 12 12:08:39]	radvd[228]: resuming normal operation
I [Jul 12 12:08:40]	wmond: WifiMaster0/AccessPoint0: ► STA(d8:b3:77:36:05:c1) occurred MIC different in key handshaking.
I [Jul 12 12:08:40]	radvd[228]: attempting to reread config file
I [Jul 12 12:08:40]	radvd[228]: resuming normal operation
I [Jul 12 12:08:41]	wmond: WifiMaster0/AccessPoint0: ► STA(d8:b3:77:36:05:c1) occurred MIC different in key handshaking.
I [Jul 12 12:08:41]	radvd[228]: attempting to reread config file
I [Jul 12 12:08:41]	radvd[228]: resuming normal operation
I [Jul 12 12:08:44]	wmond: WifiMaster0/AccessPoint0: ► STA(d8:b3:77:36:05:c1) pairwise key handshaking timeout.
I [Jul 12 12:08:44]	wmond: WifiMaster0/AccessPoint0: ► STA(d8:b3:77:36:05:c1) had deauthenticated.

History

Version	Description
2.00	The show log command has been introduced.

3.146.76 show media**Description**

Show info about system USB-drives and their partitions.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis**(show)> media****Example****(show)> media**

```

media:
  name: Media0
  port: 1
  state: ACTIVE
manufacturer: Western Digital
product: My Passport 074A
serial: 575832314139324D36383139
size: 1000202043392

partition:

```



```

        uuid: 01D55E919F06F5C0
        label: MyPassport
        fstype: ntfs
        state: MOUNTED
        total: 982291312640
        free: 285839884288

    partition:
        uuid: dd5e899f-915e-d501-101e-899f915ed501
        label: fls_wd_ext4
        fstype: ext4
        state: MOUNTED
        total: 15756732416
        free: 15741890560

    partition:
        uuid: 00000000-0000-0000-0000-000000000000
        label:
        fstype: swap
        state: MOUNTED
        total: 1081077760
        free: 1081077760

```

History

Version	Description
3.04	The show media command has been introduced.

3.146.77 show mws associations

Description Show the list of Access Points on the repeater(s) associated with *MWS* controller.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **mws associations**

Example (show)> **mws associations**

```

station:
    mac: 51:ef:22:11:17:1a
    ap: WifiMaster1/Backhaul0
authenticated: yes
txrate: 585
rxrate: 270
uptime: 31
txbytes: 33569
rxbytes: 74324

```

```

ht: 80
mode: 1lac
gi: 800
rssi: -27
mcs: 7
txss: 2
ebf: yes
mu: yes

```

History

Version	Description
3.01	The show mws associations command has been introduced.

3.146.78 show mws candidate

Description Show the list of candidates or the description of specified candidate by the given identifier.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> mws candidate [<candidate>]`

Arguments

Argument	Value	Description
candidate	<i>String</i>	Device ID — MAC address or CID.

Example

```
(show)> mws candidate 50:ff:20:08:71:61
```

```

candidate:
  mac: 50:ff:20:08:71:61
  cid:
  mode:
  model:
  state: DISCONNECTED

```

```
(show)> mws candidate 50:ff:20:08:71:61
```

```

candidate:
  mac: 50:ff:20:08:71:61
  cid: ab1409a2-0f87-11e8-8f23-3d5f5921b253
  mode: ap
  model: Extra (KN-1710)
  state: COMPATIBLE
  fw: 2.15.A.4.0-1
fw-available: 2.15.A.4.0-1
license: 273720056272398

```

History	Version	Description
	2.15	The show mws candidate command has been introduced.

3.146.79 show mws log

Description Show log of connections and transitions from one Access Point to another within *MWS*. The command executes in the background, that is, until forced to stop by the user pressing [Ctrl]+[C].

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> mws log [<max-lines>] [once]`

Arguments	Argument	Value	Description
	max-lines	<i>Integer</i>	Limit of entries in the response.
	once	<i>Keyword</i>	Show recent entries in the log.

Example

```
(show)> mws log 1
```

Time	Message
[Jan 17 15:04:58]	: 64:a2:f9:51:b1:82: associated -> ▶ 50:ff:20:00:11:82 (5 GHz)

```
(show)> mws log once
```

Time	Message
[Jan 17 14:46:37]	: 64:a2:f9:51:b1:82: associated -> ▶ 50:ff:20:00:11:82 (5 GHz)
[Jan 17 15:04:50]	: 64:a2:f9:51:b1:82: 50:ff:20:00:11:82 (5 GHz) -> disassociated
[Jan 17 15:04:58]	: 64:a2:f9:51:b1:82: associated -> ▶ 50:ff:20:00:11:82 (5 GHz)

History	Version	Description
	2.15	The show mws log command has been introduced.

3.146.80 show mws member

Description Show the list of members or the description of specified member by the given identifier.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> mws member [<member>]`

Arguments

Argument	Value	Description
member	<i>String</i>	Device ID — MAC address or CID.

Example

```
(show)> mws member 40f829b8-71a8-11ec-9396-5fb681ed4743

member:
    cid: 40f829b8-71a8-11ec-9396-5fb681ed4743
    model: Speedster (KN-3310)
    mac: 50:ff:21:69:21:7d
    known-host: Keenetic Hopper 116***591
    ip: 192.168.15.42
    mode: extender
    hw-type: router
    license: 116232491843591
    fqdn: 1fb1227d6b44e5863f46cb5a.keenetic.io
fqdn-certificate-valid: yes
    fw: 3.8 Beta 2
    fw-available: 3.8.2
    region: EU
    associations: 0
    rebooting: yes

capabilities:
    mode-hw: no
    dual-band: yes
auto-ap-shutdown: yes
    wpa3: yes
    owe: yes
    wind: yes
    wpa-eap: no
    acme: yes
    auth-token: yes
    backhaul-bss: yes
    sta-mask: yes
    country-code: yes
    notify: yes

system:
```

```

cpuload: 2
memory: 97592/262144
uptime: 567

backhaul:
uplink: GigabitEthernet0/Vlan1
bridge: 8000.50:ff:21:69:21:7d
cost: 5
speed: 1000
duplex: full

rci:
errors: 0

```

History

Version	Description
2.15	The show mws member command has been introduced.

3.146.81 show ndns

Description Show KeenDNS parameters from the latest request to the server (see [ndns get-booked](#) and [ndns get-update](#) commands).

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ndns**

Example (show)> **ndns**

```

name: testname
booked: testname
domain: mykeenetic.com
address: 41.189.34.56
updated: yes
access: direct

ttp:
direct: yes
interface: GigabitEthernet1
address: 41.189.34.56

```

History

Version	Description
2.07	The show ndns command has been introduced.

3.146.82 show netfilter

Description Show information about the firewall working. Need to provide remote technical support.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> netfilter`

History

Version	Description
2.00	The show netfilter command has been introduced.

3.146.83 show nextdns availability

Description Check and show *NextDNS* availability.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> nextdns availability`

Example

```
(show)> nextdns availability
```

```
available: yes
port: 53
doh-supported: yes
doh-available: yes
```

History

Version	Description
3.08	The show nextdns availability command has been introduced.

3.146.84 show nextdns profiles

Description Show *NextDNS* profiles.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(show)> nextdns profiles
```

Example

```
(show)> nextdns profiles

  profiles:
    profile:
      name: No filtering
      token: 0

    profile:
      name: My First Configuration
      token: 1f3a36

NextDns::Client: Loaded profiles.
```

History

Version	Description
3.08	The show nextdns profiles command has been introduced.

3.146.85 show ntce applications

Description

Show the list of applications supported by the [NTCE](#) service.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(show)> ntce applications
```

Example

```
(show)> ntce applications

  application:
    id-num: 1
    short: facebook
    long: Facebook
    group-id: 2065
    group-long: Social
    groupset-id: 4
  groupset-short-id: surfing
  groupset-long-id: Web surfing

  application:
    id-num: 2
    short: magicjack
    long: magicJack
    group-id: 2054
    group-long: Voice over IP
  groupset-id: 0
```

```
groupset-short-id: calling
groupset-long-id: Calling and conferencing

application:
  id-num: 3
  short: itunes
  long: iTunes
  group-id: 2056
  group-long: Streaming
  groupset-id: 2
groupset-short-id: streaming
groupset-long-id: Video & Audio streaming

application:
  id-num: 4
  short: myspace
  long: MySpace
  group-id: 2065
  group-long: Social
  groupset-id: 4
groupset-short-id: surfing
groupset-long-id: Web surfing

application:
  id-num: 5
  short: facetime
  long: FaceTime
  group-id: 2054
  group-long: Voice over IP
  groupset-id: 0
groupset-short-id: calling
groupset-long-id: Calling and conferencing

application:
  id-num: 6
  short: truphone
  long: Truphone
  group-id: 2054
  group-long: Voice over IP
  groupset-id: 0
groupset-short-id: calling
groupset-long-id: Calling and conferencing

application:
  id-num: 7
  short: twitter
  long: Twitter
  group-id: 2065
  group-long: Social
  groupset-id: 4
groupset-short-id: surfing
groupset-long-id: Web surfing

application:
```



```

        id-num: 8
        short: xbox
        long: XBOX gaming console
    group-id: 2050
    group-long: Gaming
    groupset-id: 1
groupset-short-id: gaming
groupset-long-id: Gaming

    application:
        id-num: 9
        short: realmedia
        long: RealMedia
        group-id: 2088
        group-long: Removed
        groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

    application:
        id-num: 10
        short: google-mail
        long: Google Mail
        group-id: 2059
        group-long: Mail
        groupset-id: 3
groupset-short-id: work
groupset-long-id: Work & Learn from home

```

History

Version	Description
3.07	The show ntce applications command has been introduced.

3.146.86 show ntce attributes

Description Show the list of attributes supported by the [NTCE](#) service.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> ntce attributes`

Example `(show)> ntce attributes`

```

attribute:
    id-num: 1
    short: encrypted

```

```
        long: Indicates that the current connection is ►
encrypted traffic.

        attribute:
            id-num: 2
            short: audio
            long: Indicates that the current connection is ►
an audio or voice signal.

        attribute:
            id-num: 3
            short: out
            long: Indicates that the current connection is ►
a landline call, e.g. a call to a home phone.

        attribute:
            id-num: 4
            short: video
            long: Indicates that the current connection is ►
a video signal.

        attribute:
            id-num: 5
            short: file-transfer
            long: Indicates that the current connection is ►
a file transfer.

        attribute:
            id-num: 6
            short: web
            long: Indicates that the current connection is ►
a surf the Internet session.

        attribute:
            id-num: 7
            short: chat
            long: Indicates that the current connection is ►
a chat session.

        attribute:
            id-num: 8
            short: mail
            long: Indicates that the current connection is ►
mail traffic.

        attribute:
            id-num: 9
            short: stream
            long: Indicates that the current connection is ►
a continues unidirectional stream of audio and / or video.

        attribute:
            id-num: 10
            short: android
```

```
        long: Indicates that the client side uses the ▶
operating system Android.

        attribute:
            id-num: 11
            short: ios
            long: Indicates that the client side uses the ▶
operating system iOS.

        attribute:
            id-num: 12
            short: windows-mobile
            long: Indicates that the client side uses the ▶
operating system Windows Mobile.

        attribute:
            id-num: 13
            short: blackberry
            long: Indicates that the client side uses the ▶
operating system Blackberry.

        attribute:
            id-num: 14
            short: picture
            long: Indicates that the current connection ▶
transfers pictures.

        attribute:
            id-num: 15
            short: ddl
            long: Indicates that the current connection is ▶
a Direct Download Host.

        attribute:
            id-num: 16
            short: google
            long: Indicates that the current connection is ▶
a Google service.

        attribute:
            id-num: 17
            short: outlook_web_access
            long: Indicates that the current connection ▶
uses the Microsoft Exchange Outlook Web Access as authentication ▶
mechanism.

        attribute:
            id-num: 18
            short: amazon-cloud
            long: Indicates that the current connection is ▶
a service of Amazon Cloud.

        attribute:
            id-num: 19
```

```
        short: apache
        long: Indicates that the server side is an Apache server.

    attribute:
        id-num: 20
        short: mysql-server
        long: Indicates that the server side is a MySQL database server.

    attribute:
        id-num: 21
        short: mariadb-server
        long: Indicates that the server side is a MariaDB database server.

    attribute:
        id-num: 22
        short: ntlm
        long: Current connection uses NTLM as authentication mechanism.

    attribute:
        id-num: 23
        short: microsoft-windows
        long: Indicates that the client side is the operating system Microsoft Windows.

    attribute:
        id-num: 24
        short: chrome
        long: Indicates that the client side is the operating system Chrome.

    attribute:
        id-num: 25
        short: akamai-cloud
        long: Indicates that the current connection is a service of Akamai Cloud.

    attribute:
        id-num: 26
        short: dox
        long: Indicates that the current connection is DoT (DNS over TLS) or DoH (DNS over HTTPS).

    attribute:
        id-num: 27
        short: rcs
        long: Indicates that the current connection is RCS (Rich Communication Services).
```

History

Version	Description
3.07	The show ntce attributes command has been introduced.

3.146.87 show ntce groups

Description Show the list of groups supported by the [NTCE](#) service.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> ntce groups`

Example `(show)> ntce groups`

```

group:
  id-num: 2048
  long: Generic
groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

group:
  id-num: 2049
  long: Peer to Peer
groupset-id: 6
groupset-short-id: filetransferring
groupset-long-id: File transferring

group:
  id-num: 2050
  long: Gaming
groupset-id: 1
groupset-short-id: gaming
groupset-long-id: Gaming

group:
  id-num: 2051
  long: Tunnel
groupset-id: 3
groupset-short-id: work
groupset-long-id: Work & Learn from home

group:
  id-num: 2052
  long: Business
groupset-id: 3
groupset-short-id: work

```

```
groupset-long-id: Work & Learn from home

  group:
    id-num: 2053
    long: E-Commerce
  groupset-id: 3
groupset-short-id: work
groupset-long-id: Work & Learn from home

  group:
    id-num: 2054
    long: Voice over IP
  groupset-id: 0
groupset-short-id: calling
groupset-long-id: Calling and conferencing

  group:
    id-num: 2055
    long: Messaging
  groupset-id: 0
groupset-short-id: calling
groupset-long-id: Calling and conferencing

  group:
    id-num: 2056
    long: Streaming
  groupset-id: 2
groupset-short-id: streaming
groupset-long-id: Video & Audio streaming

  group:
    id-num: 2057
    long: Mobile
  groupset-id: 0
groupset-short-id: calling
groupset-long-id: Calling and conferencing

  group:
    id-num: 2058
    long: Remote Control
  groupset-id: 3
groupset-short-id: work
groupset-long-id: Work & Learn from home

  group:
    id-num: 2059
    long: Mail
  groupset-id: 3
groupset-short-id: work
groupset-long-id: Work & Learn from home

  group:
    id-num: 2060
    long: Network Management
```

```

    groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

    group:
        id-num: 2061
        long: Database
    groupset-id: 3
groupset-short-id: work
groupset-long-id: Work & Learn from home

    group:
        id-num: 2062
        long: Filetransfer
    groupset-id: 6
groupset-short-id: filetransferring
groupset-long-id: File transferring

    group:
        id-num: 2063
        long: Web
    groupset-id: 4
groupset-short-id: surfing
groupset-long-id: Web surfing

    group:
        id-num: 2064
        long: Conference
    groupset-id: 0
groupset-short-id: calling
groupset-long-id: Calling and conferencing

    group:
        id-num: 2065
        long: Social
    groupset-id: 4
groupset-short-id: surfing
groupset-long-id: Web surfing

    group:
        id-num: 2066
        long: Sharehosting
    groupset-id: 6
groupset-short-id: filetransferring
groupset-long-id: File transferring

    group:
        id-num: 2067
        long: Deprecated
    groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

    group:

```

```
        id-num: 2068
        long: Industrial
    groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

    group:
        id-num: 2069
        long: Encrypted
    groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

    group:
        id-num: 2070
        long: Advertisement and Analytic Services
    groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

    group:
        id-num: 2071
        long: News
    groupset-id: 4
groupset-short-id: surfing
groupset-long-id: Web surfing

    group:
        id-num: 2072
        long: Health and Fitness
    groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

    group:
        id-num: 2073
        long: Cloud and CDN Services
    groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

    group:
        id-num: 2074
        long: Navigation
    groupset-id: 4
groupset-short-id: surfing
groupset-long-id: Web surfing

    group:
        id-num: 2075
        long: Finance
    groupset-id: 5
groupset-short-id: other
groupset-long-id: Other
```



```
group:
  id-num: 2076
  long: Travel and Transportation
groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

group:
  id-num: 2077
  long: Pornography
groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

group:
  id-num: 2078
  long: Books and Magazines
groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

group:
  id-num: 2079
  long: Audio Entertainment
groupset-id: 2
groupset-short-id: streaming
groupset-long-id: Video & Audio streaming

group:
  id-num: 2080
  long: Education
groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

group:
  id-num: 2081
  long: M2M and IoT
groupset-id: 3
groupset-short-id: work
groupset-long-id: Work & Learn from home

group:
  id-num: 2082
  long: Device Security
groupset-id: 4
groupset-short-id: surfing
groupset-long-id: Web surfing

group:
  id-num: 2083
  long: Multimedia Service Providers
groupset-id: 2
```

```

groupset-short-id: streaming
groupset-long-id: Video & Audio streaming

    group:
        id-num: 2084
        long: Organizers
    groupset-id: 3
groupset-short-id: work
groupset-long-id: Work & Learn from home

    group:
        id-num: 2085
        long: Enterprise Services
    groupset-id: 4
groupset-short-id: surfing
groupset-long-id: Web surfing

    group:
        id-num: 2086
        long: App-Stores and OS Updates
    groupset-id: 6
groupset-short-id: filetransferring
groupset-long-id: File transferring

    group:
        id-num: 2087
        long: Browsers
    groupset-id: 4
groupset-short-id: surfing
groupset-long-id: Web surfing

    group:
        id-num: 2088
        long: Removed
    groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

    group:
        id-num: 2089
        long: Moved
    groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

```

History

Version	Description
3.07	The show ntce groups command has been introduced.

3.146.88 show ntce groupsets**Description**

Show the list of groupsets supported by the *NTCE* service.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> ntce groupsets`

Example `(show)> ntce groupsets`

```

groupset:
  id-num: 0
  short: calling
  long: Calling and conferencing

groupset:
  id-num: 1
  short: gaming
  long: Gaming

groupset:
  id-num: 2
  short: streaming
  long: Video & Audio streaming

groupset:
  id-num: 3
  short: work
  long: Work & Learn from home

groupset:
  id-num: 4
  short: surfing
  long: Web surfing

groupset:
  id-num: 5
  short: other
  long: Other

groupset:
  id-num: 6
  short: filetransferring
  long: File transferring

```

History

Version	Description
3.07	The show ntce groupsets command has been introduced.

3.146.89 show ntce hosts

Description Show application statistics, which *NTCE* service has detected for hosts.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> ntce hosts`

Example `(show)> ntce hosts`

```

    host:
      mac: 04:d4:c4:54:31:12

    application:
      id-num: 7
      short: twitter
      long: Twitter
      group-id: 2065
      group-long: Social
      groupset-id: 4
      groupset-short-id: surfing
      groupset-long-id: Web surfing
    groupset-service-class: 2
      rxbytes: 62274
      txbytes: 6020

    application:
      id-num: 43
      short: instagram
      long: Instagram
      group-id: 2065
      group-long: Social
      groupset-id: 4
      groupset-short-id: surfing
      groupset-long-id: Web surfing
    groupset-service-class: 2
      rxbytes: 57606
      txbytes: 11148

    application:
      id-num: 428
      short: spotify
      long: Spotify
      group-id: 2079
      group-long: Audio Entertainment
      groupset-id: 2
      groupset-short-id: streaming
      groupset-long-id: Video & Audio streaming
    groupset-service-class: 2

```

```

rxbytes: 155317
txbytes: 80526

application:
  id-num: 438
  short: whatsapp
  long: WhatsApp
  group-id: 2055
  group-long: Messaging
  groupset-id: 0
  groupset-short-id: calling
  groupset-long-id: Calling and conferencing
groupset-service-class: 2
  rxbytes: 826
  txbytes: 706

application:
  id-num: 461
  short: google-cloud
  long: Google Cloud
  group-id: 2073
  group-long: Cloud and CDN Services
  groupset-id: 5
  groupset-short-id: other
  groupset-long-id: Other
groupset-service-class: 2
  rxbytes: 313
  txbytes: 352

application:
  id-num: 498
  short: telegram
  long: Telegram
  group-id: 2055
  group-long: Messaging
  groupset-id: 0
  groupset-short-id: calling
  groupset-long-id: Calling and conferencing
groupset-service-class: 2
  rxbytes: 109895
  txbytes: 15561

application:
  id-num: 559
  short: google-play
  long: Google Play
  group-id: 2086
  group-long: App-Stores and OS Updates
  groupset-id: 6
  groupset-short-id: filetransferring
  groupset-long-id: File transferring
groupset-service-class: 2
  rxbytes: 16736
  txbytes: 28451

```

```
application:
    id-num: 611
    short: zendesk
    long: ZenDesk
    group-id: 2052
    group-long: Business
    groupset-id: 3
    groupset-short-id: work
    groupset-long-id: Work & Learn from home
groupset-service-class: 2
    rxbytes: 101697
    txbytes: 187527

application:
    id-num: 621
    short: slack
    long: Slack
    group-id: 2064
    group-long: Conference
    groupset-id: 0
    groupset-short-id: calling
    groupset-long-id: Calling and conferencing
groupset-service-class: 2
    rxbytes: 30568
    txbytes: 3650

application:
    id-num: 632
    short: google-services
    long: Google Shared Services
    group-id: 2085
    group-long: Enterprise Services
    groupset-id: 4
    groupset-short-id: surfing
    groupset-long-id: Web surfing
groupset-service-class: 2
    rxbytes: 614512
    txbytes: 202174

application:
    id-num: 664
    short: microsoft-services
    long: Microsoft Services
    group-id: 2085
    group-long: Enterprise Services
    groupset-id: 4
    groupset-short-id: surfing
    groupset-long-id: Web surfing
groupset-service-class: 2
    rxbytes: 20243
    txbytes: 10699

application:
```

```

        id-num: 700
        short: fastly
        long: Fastly
        group-id: 2073
        group-long: Cloud and CDN Services
        groupset-id: 5
        groupset-short-id: other
        groupset-long-id: Other
groupset-service-class: 2
        rxbytes: 14859
        txbytes: 3147

application:
        id-num: 703
        short: cloudflare
        long: Cloudflare
        group-id: 2073
        group-long: Cloud and CDN Services
        groupset-id: 5
        groupset-short-id: other
        groupset-long-id: Other
groupset-service-class: 2
        rxbytes: 2172
        txbytes: 3593

application:
        id-num: 719
        short: google-apis
        long: Google APIs
        group-id: 2052
        group-long: Business
        groupset-id: 3
        groupset-short-id: work
        groupset-long-id: Work & Learn from home
groupset-service-class: 2
        rxbytes: 11837
        txbytes: 7602

application:
        id-num: 933
        short: bamtech-media
        long: BAMTech Media
        group-id: 2083
        group-long: Multimedia Service Providers
        groupset-id: 2
        groupset-short-id: streaming
        groupset-long-id: Video & Audio streaming
groupset-service-class: 2
        rxbytes: 4734
        txbytes: 6006

        os-id: 3
        os-long: Windows

```

```

host:
  mac: 04:d4:c4:54:31:12
  via: 04:d4:c4:54:31:12
  ip: 192.168.11.19
  hostname: MyHost
  name: MyHost

interface:
  id: Bridge0
  name: Home
  description: Home network

  dhcp:
    static: yes

registered: yes
access: permit
schedule:
  active: yes
  rxbytes: 0
  txbytes: 0
  uptime: 9083
first-seen: 9097
last-seen: 1
link: up
auto-negotiation: yes
speed: 1000
duplex: yes
port: 2

traffic-shape:
  rx: 0
  tx: 0
  mode: mac
  schedule:

```

History

Version	Description
3.07	The show ntce hosts command has been introduced.

3.146.90 show ntce oses

Description Show the list of OSes supported by the [NTCE](#) service.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> ntce oses`

Example

```
(show)> ntce oses

OS:
id-num: 1
long: Not detected

OS:
id-num: 2
long: Other

OS:
id-num: 3
long: Windows

OS:
id-num: 4
long: Linux

OS:
id-num: 5
long: OS X

OS:
id-num: 6
long: iOS

OS:
id-num: 7
long: Symbian

OS:
id-num: 8
long: Android

OS:
id-num: 9
long: Blackberry

OS:
id-num: 10
long: WindowsMobile

OS:
id-num: 11
long: WindowsPhone

OS:
id-num: 12
long: Chrome

OS:
id-num: 13
long: Darwin
```

History

Version	Description
3.07	The show ntce oses command has been introduced.

3.146.91 show ntce status

Description Show *NTCE* service info.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> ntce status`

Example `(show)> ntce status`

```

contrack:
  hosts: 2
  applications: 16
  applications-flows: 63
  applications-events: 0
  groups: 12
  groups-flows: 64
  groups-events: 0

  memory:
  applications-flows: 1512
  applications-events: 0
  applications: 512
  groups-flows: 1536
  groups-events: 0
  groups: 384
  hosts: 72
  total: 4016

  event:
  count: 0

  memory:
  total: 0

database:
  hosts: 1
  applications: 54
  groups: 30
  attributes: 6

  memory:
  applications: 2372976
  groups: 1318320

```

```
attributes: 263664
total: 3954960
```

History

Version	Description
3.07	The show ntce status command has been introduced.

3.146.92 show ntp status

Description Show *NTP* system settings.

NTP state general info

- ❶ The time elapsed since the last synchronization in seconds.
- ❷ The indicator of the last synchronization.
- ❸ The indicator of the initial synchronization.
- ❹ Time is taken from NDSS server.
- ❺ Time is set by the user manually.

Prefix no No

Change settings No

Multiple input No

Synopsis | (show)> **ntp status**

Example (show)> **ntp status**

```
status:
  elapsed: 435146 ❶
  server: 1.pool.ntp.org
  accurate: yes ❷
  synchronized: yes ❸
  ndsstime: no ❹
  usertime: no ❺
```

History

Version	Description
2.00	The show ntp status command has been introduced.

3.146.93 show ping-check

Description Show *Ping Check* profile status. If you use no arguments, the command displays information about all profiles.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ping-check** [*profile_name*]

Arguments

Argument	Value	Description
profile_name	String	Profile name.

Example

```
(show)> ping-check

pingcheck:
  profile: TEST
  host: 8.8.8.8
  port: 80
  max-fails: 7
  timeout: 1
  mode: connect

  interface: ISP
  fail count: 0
  status: pass

pingcheck:
  profile: TEST1
  mode: icmp

pingcheck:
  profile: TEST2
  mode: icmp
```

History

Version	Description
2.04	The show ping-check command has been introduced.

3.146.94 show printers

Description Show attached printer list.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **printers**

Example

```
(show)> printers

printers:
  printer: Canon MF8300C Series
```

History

Version	Description
2.00	The show printers command has been introduced.

3.146.95 show processes

Description Show statistics of CPU usage by services and processes.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> processes`

Example `(show)> processes`

```

process, id = NETBIOS browser:
  name: nqnd

  arg: -i

  arg: 50ff20001e87

  state: S (sleeping)
  pid: 629
  ppid: 192
  vm-size: 3188 kB
  vm-data: 1548 kB
  vm-stk: 136 kB
  vm-exe: 4 kB
  vm-lib: 1448 kB
  vm-swap: 0 kB
  threads: 1
  fds: 15

statistics:
  interval: 30

  cpu:
    now: 17319.483753
    min: 0
    max: 0
    avg: 0
    cur: 0

  service:
    configured: yes
    alive: yes
    started: yes
    state: STARTED

```

```

process, id = Dns::Proxy::Policy0:
  name: ndnproxy

  arg: -c

  arg: /var/ndnproxy_Policy0.conf

  arg: -p

  arg: /var/ndnproxy_Policy0.pid

  state: S (sleeping)
  pid: 630
  ppid: 192
  vm-size: 1676 kB
  vm-data: 504 kB
  vm-stk: 136 kB
  vm-exe: 108 kB
  vm-lib: 896 kB
  vm-swap: 0 kB
  threads: 1
  fds: 10

statistics:
  interval: 30

  cpu:
    now: 17319.483764
    min: 0
    max: 0
    avg: 0
    cur: 0

  service:
    configured: yes
    alive: yes
    started: yes
    state: STARTED

```

History

Version	Description
2.09	The show processes command has been introduced.

3.146.96 show running-config

Description	Show current settings, that is file system: running-config contains, just like command more does.
Prefix no	No
Change settings	No

Multiple input No

Synopsis (show)> **running-config**

Example

```
(show)> running-config
! $$$ Model: Keenetic Start
! $$$ Version: 2.06.1
! $$$ Agent: http/rci
! $$$ Last change: Fri, 12 Jan 2017 07:23:56 GMT
system
  set net.ipv4.ip_forward 1
  set net.ipv4.netfilter.ip_conntrack_max 4096
  set net.ipv4.netfilter.ip_conntrack_tcp_timeout_established 1200
  set net.ipv4.netfilter.ip_conntrack_udp_timeout 60
  set net.ipv4.tcp_fin_timeout 30
  set net.ipv4.tcp_keepalive_time 120
  set net.ipv6.conf.all.forwarding 1
  hostname Keenetic
  domainname WORKGROUP
!
ntp server 0.pool.ntp.org
ntp server 1.pool.ntp.org
ntp server 2.pool.ntp.org
ntp server 3.pool.ntp.org
access-list _WEBADMIN_GuestWiFi
  deny tcp 0.0.0.0 0.0.0.0 10.1.30.1 255.255.255.255
!
access-list _WEBADMIN_ISP
  permit tcp 0.0.0.0 0.0.0.0 192.168.15.200 255.255.255.255 port eq 3389
  permit icmp 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0
!
isolate-private
dyndns profile _ABCD
!
dyndns profile _WEBADMIN
  type dyndns
!
interface GigabitEthernet0
  up
!
interface GigabitEthernet0/0
  switchport mode access
  switchport access vlan 1
!
interface GigabitEthernet0/1
  switchport mode access
  switchport access vlan 1
!
interface Bridge0
  name Home
  description "Home network"
```

```
inherit GigabitEthernet0/Vlan1
include AccessPoint
security-level private
ip address 192.168.15.43 255.255.255.0
up
!
interface WiMax0
description Yota
security-level public
ip address auto
ip global 400
up
!
interface PPTP0
description "Office VPN"
peer crypton.example.net
lcp echo 30 3
ipcp default-route
ipcp name-servers
ccp
security-level public
authentication identity "00441"
authentication password 123456
authentication mschap
authentication mschap-v2
encryption mppe
ip tcp adjust-mss pmtu
connect via ISP
up
!
ip route 82.138.7.141 ISP auto
ip route 82.138.7.132 ISP auto
ip route 82.138.7.27 PPTP0 auto
ip dhcp pool _WEBADMIN
range 192.168.15.200 192.168.15.219
bind Home
!
ip dhcp pool _WEBADMIN_GUEST_AP
range 10.1.30.33 10.1.30.52
bind GuestWiFi
!
ip dhcp host A 00:01:02:03:04:05 1.1.1.1
ip dhcp host B 00:01:02:03:04:06 1.1.1.2
ip nat Home
ip nat GuestWiFi
ipv6 subnet Default
bind Home
number 0
mode slaac
!
ipv6 local-prefix default
no ppe
upnp lan Home
torrent
```



```

    rpc-port 8090
    peer-port 51413
!
user admin
  password md5 2320924ba6e5c1fec3957e587a21535b
  tag cli
  tag cifs
  tag http
  tag ftp
!
user test
  password md5 baadfb946f5d516379cfd75e31e409d9
  tag readonly
!
service dhcp
service dns-proxy
service ftp
service cifs
service http
service telnet
service ntp
service upnp
cifs
  share 9430B54530B52EDC 9430B54530B52EDC:
  automount
  permissive
!
!
!
```

History

Version	Description
2.00	The show running-config command has been introduced.

3.146.97 show schedule

Description Show parameters of defined schedule. If you use no argument, the entire list of system schedules will be displayed.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **schedule** [<name>]

Arguments

Argument	Value	Description
name	<i>String</i>	A schedule name.

Example

```
(show)> schedule 123

    schedule, name = 123:
      action, type = start, left = 561514, next = yes:
        dow: Tue
        time: 01:29

      action, type = stop, left = 564274:
        dow: Tue
        time: 02:15
```

History

Version	Description
2.06	The show schedule command has been introduced.

3.146.98 show self-test

Description Show summary information about system activity. Need to provide remote technical support.

Prefix no No

Change settings No

Multiple input No

Synopsis | (show)> **self-test**

History

Version	Description
2.00	The show self-test command has been introduced.

3.146.99 show site-survey

Description Show available wireless networks.

Prefix no No

Change settings No

Multiple input No

Interface type Radio

Synopsis | (show)> **site-survey** <name>

Arguments

Argument	Value	Description
name	<i>Interface</i>	Full name or an alias of the interface. You can see the list of available interfaces with help of site-survey [Tab] command.

Example

```
(show)> site-survey WifiMaster0
```

SSID	Q	MAC	Ch	Mode ▶
Hello_123		11:22:d4:70:97:f1	1	▶
11b/g/n	31			
BRT		78:69:87:b3:9d:68	1	▶
11b/g/n	13			
SVH34-34		23:bf:45:7b:0e:2e	1	▶
11b/g/n	5			
Keenetic-1234		56:f4:ab:56:9a:48	3	▶
11b/g/n	26			

```
(show)> site-survey WifiMaster1
```

SSID	Q	MAC	Ch	Mode ▶
Keenetic-1153 (5)		34:ff:22:3d:69:fc	36	▶
11a/n/ac	2			
RT-5WiFi-87F8		15:a3:b8:e6:57:fa	44	▶
11a/n/ac	42			
GPON5		23:9a:34:b1:b1:26	48	▶
11a/n/ac	0			

History

Version	Description
2.00	The show site-survey command has been introduced.

3.146.100 show ssh fingerprint

Description Show current SSH server keys.

Prefix no No

Change settings No

Multiple input No

Synopsis | (show)> **ssh fingerprint**

Example

```
(show)> ssh fingerprint

rsa: MD5:d0:b0:d4:f7:da:7b:c0:e0:d0:c8:8f:ea:85:3c:09:00

rsa: SHA1:Nhxg8KNeE62E8zAZJngImcrJkmA

rsa: SHA256:LM7MyrIaq4qFGT/dyF/t8TbJk5tCzreeGuh03zaydu4

ecdsa: ▶
MD5:a6:db:b4:fb:3c:b9:ae:31:ca:6d:ca:ed:62:73:a5:7e

ecdsa: SHA1:ndWg/dx/dP/P8rMkJcVC3XB8nFo

ecdsa: ▶
SHA256:Wp1K9d8MsquQBt1BeB1pVlyKdCN1Vay3BtBwbj0xs+o
```

History

Version	Description
2.12	The show ssh fingerprint command has been introduced.

3.146.101 show ssh sftp

Description

Show home directories for users with **sftp** tag.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(show)> ssh sftp
```

Example

```
(show)> ssh sftp

enabled: yes
permissive: yes
root: files_ssd:/
path: /tmp/mnt/963b0583-4017-401b-9542-7ff1255add40

user, index = 0:
name: admin
root:
path: ▶
```

History

Version	Description
3.04	The show ssh sftp command has been introduced.

3.146.102 show sstp-server

Description	Show current connections to the <i>SSTP</i> server.
Prefix no	No
Change settings	No
Multiple input	No

Synopsis | (show)> **sstp-server**

Example (show)> **sstp-server**

```

enabled: yes
ndns-name: mymy.keenetic.link
has-ndns-certificate: yes

tunnel:
clientaddress: 172.16.3.33
username: mymy
uptime: 29

statistic:
rxpackets: 121
rx-multicast-packets: 0
rx-broadcast-packets: 0
rxbytes: 14715
rxerrors: 0
rxdropped: 0
txpackets: 78
tx-multicast-packets: 0
tx-broadcast-packets: 0
txbytes: 48265
txerrors: 0
txdropped: 0
timestamp: 104530.202229
last-overflow: 0.000000

```

History

Version	Description
2.12	The show sstp-server command has been introduced.

3.146.103 show system

Description Show the general state of the system.

System state general info

- ❶ CPU load, percentage.
- ❷ Occupied and available memory info, kilobytes.

- ③ Swap file usage info, kilobytes.
- ④ System uptime from the start, seconds.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **system**

Example (config)> **show system**

```
hostname: Undefined
domainname: WORKGROUP
cpuload: 0 ①
memory: 13984/28976 ②
swap: 0/0 ③
uptime: 153787 ④
```

History

Version	Description
2.00	The show system command has been introduced.

3.146.104 show system country

Description Show country-specific configuration status depending on the factory region.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **system country**

Example (show)> **system country**

```
factory: EA
selected: KZ
default-language: ru

country:
  code: AM
  short-name: Armenia
  default-language: en

country:
  code: AZ
  short-name: Azerbaijan
  default-language: en
```

```

country:
  code: BY
  short-name: Belarus
default-language: ru

country:
  code: KG
  short-name: Kyrgyzstan
default-language: en

country:
  code: KZ
  short-name: Kazakhstan
default-language: ru

country:
  code: RU
  short-name: Russian Federation
default-language: ru

country:
  code: UZ
  short-name: Uzbekistan
default-language: en

```

History

Version	Description
4.00	The show system country command has been introduced.

3.146.105 show system cpustat**Description** Show device CPU usage.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (show)> **system cpustat****Example** (show)> **system cpustat**

```

interval: 36

  busy:
    cur: 1
    min: 0
    max: 11

```

```

    avg: 2

    user:
        cur: 0
        min: 0
        max: 10
        avg: 1

    nice:
        cur: 0
        min: 0
        max: 0
        avg: 0

    system:
        cur: 0
        min: 0
        max: 2
        avg: 0

    iowait:
        cur: 0
        min: 0
        max: 0
        avg: 0

    irq:
        cur: 0
        min: 0
        max: 0
        avg: 0

    sirq:
        cur: 0
        min: 0
        max: 0
        avg: 0

```

History

Version	Description
2.09	The show system cpustat command has been introduced.

3.146.106 show system zram

Description	Show system zRam swap status.
Prefix no	No
Change settings	No
Multiple input	No

Synopsis

```
(show)> system zram
```

Example

```
(show)> system zram

      zram:
        enabled: yes
    compression-algo: lzo
        disk-size: 268435456
    compressed-size: 87
        original-size: 4096
    total-memory-used: 12288
    compression-threads: 4
    compressed-ratio-pcs: 300
```

History

Version	Description
2.09	The show system zram command has been introduced.

3.146.107 show tags

Description

Show available authentication tags.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(show)> tags
```

Example

```
(show)> tags

      tag: cli
      tag: readonly
      tag: http-proxy
      tag: http
      tag: printers
      tag: cifs
      tag: ftp
      tag: ipsec-xauth
      tag: ipsec-l2tp
      tag: opt
      tag: sstp
      tag: torrent
      tag: vpn
```

History

Version	Description
2.00	The show tags command has been introduced.

3.146.108 show threads

Description Show the list of active threads in NDM.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> threads`

Example

```
(show)> threads

      thread:
        name: Cloud agent service
        tid: 518
lock_list_complete: yes
      locks:

      statistics:
        interval: 30

      cpu:
        now: 17771.481435
        min: 0
        max: 0
        avg: 0
        cur: 0

      thread:
        name: FTP brute force detection
        tid: 519
lock_list_complete: yes
      locks:

      statistics:
        interval: 30

      cpu:
        now: 17771.481440
        min: 0
        max: 0
        avg: 0
        cur: 0
```

History

Version	Description
2.09	The show threads command has been introduced.

3.146.109 show torrent status

Description Show BitTorrent client status.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> torrent status`

Example `(show)> torrent status`

```
state: running
rpc-port: 8090
```

History

Version	Description
2.03	The show torrent status command has been introduced.

3.146.110 show upnp redirect

Description Show *UPnP* port translation rules. If you use no arguments, the entire list of translation rules will be displayed.

Prefix no No

Change settings No

Multiple input No

Interface type IP

Synopsis `(show)> upnp redirect [(<protocol> <interface> <port>) | <index>]`

Arguments

Argument	Value	Description
protocol	tcp	Rules with <i>TCP</i> protocol will be displayed.
	udp	Rules with <i>UDP</i> protocol will be displayed.
interface	<i>Interface</i>	Rules with specified interface name will be displayed.
port	<i>Integer</i>	Rules with specified port will be displayed.
index	<i>Integer</i>	Rule with specified number in the list will be displayed.

Example `(show)> upnp redirect udp ISP 11175`

```
entry:
```

```

        index: 1
        interface: ISP
        protocol: udp
        port: 11175
        to-address: 192.168.15.206
        to-port: 11175
        description: Skype UDP at 192.168.12.286:11175 (2024)
        packets: 0
        bytes: 0

```

History

Version	Description
2.00	The show upnp redirect command has been introduced.

3.146.111 show usb

Description Show list of USB-devices.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **usb**

Example (show)> **usb**

```

        device:
            name: 12F6-312F:
            label: PENDRIVE
            subsystem: storage
        device:
            name: 69f2894d-56a1-4632-9521-dbdc8ab5c53d:
            label: EXT3
            subsystem: storage
        device:
            name: 4FCC-A585:
            label: FAT32
            subsystem: storage
        device:
            name: 226F114C088FC43D:
            label: NTFS
            subsystem: storage

```

History

Version	Description
2.00	The show usb command has been introduced.

3.146.112 show version

Description Show firmware version.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> version`

Example

```
(show)> version

release: 2.10.C.1.0-0
arch: mips

ndm:
  exact: 0-d32118a
  cdate: 11 Dec 2017

bsp:
  exact: 0-cbe0525
  cdate: 11 Dec 2017

ndw:
  version: 4.2.3.92
  features: ▶
wifi_button,flexible_menu,emulate_firmware_progress
  components: ▶
ddns,dot1x,interface-extras,miniupnpd,nathelper-ftp,
  ▶
nathelper-pptp,nathelper-sip,ppe,trafficcontrol,
  ▶
cloudcontrol,base,components,corewireless,dhcpd,l2tp,
  ▶
igmp,easyconfig,pingcheck,ppp,pptp,pppoe,ydns

manufacturer: Keenetic Ltd.
vendor: Keenetic
series: KN
model: Start (KN-1110)
hw_version: 10118000
hw_id: KN-1110
device: Start
class: Internet Center
```

History

Version	Description
2.00	The show version command has been introduced.

3.146.113 show vpn-server

Description Show current connections to the VPN server.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **vpn-server**

Example

```
(show)> vpn-server

      tunnel:
clientaddress: 172.16.1.33
      username: test
      uptime: 3

      statistic:
      rxpackets: 51
rx-multicast-packets: 0
rx-broadcast-packets: 0
      rxbytes: 5440
      rxerrors: 0
      rxdropped: 0
      txpackets: 46
tx-multicast-packets: 0
tx-broadcast-packets: 0
      txbytes: 9229
      txerrors: 0
      txdropped: 0
      timestamp: 146237.254244
      last-overflow: 0.000000
```

History

Version	Description
2.04	The show vpn-server command has been introduced.

3.147 sms

Description Access to a group of commands to configure [SMS](#) on the interface.

Prefix no No

Change settings No

Multiple input No

Interface type Usb

Group entry (sms)

Synopsis (config)> **sms** <name>

Arguments

Argument	Value	Description
name	<i>Interface</i>	Interface with SMS service.

Example

```
(config)> sms UsbQmi0
(sms)>
```

History

Version	Description
3.03	The sms command has been introduced.

3.147.1 sms delete

Description Delete SMS message.

Prefix no No

Change settings No

Multiple input No

Synopsis (sms)> **delete** <id>

Arguments

Argument	Value	Description
id	<i>String</i>	Message ID.

Example

```
(sms)> delete sim-5
UsbQmi::Sms: "UsbQmi0": message deleted.
```

History

Version	Description
3.03	The sms delete command has been introduced.

3.147.2 sms list

Description Show a list of received SMS messages.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(sms)> list [ unread ] [ id <id> ] [ no-content ]
```

Arguments

Argument	Value	Description
unread	<i>Keyword</i>	Show a list of unread SMS messages only.
id	<i>Keyword</i>	Show message with the given identifier.
no-content	<i>Keyword</i>	Disable message text output.

Example

```
(sms)> list

nv-free-slots: 23
nv-total-slots: 23
sim-free-slots: 0
sim-total-slots: 15

messages, id = sim-0:
  read: yes
  from: +79658283425
  timestamp: Thu Aug 20 14:39:57 2020
  parts: 1
  total-parts: 1
  text: Accepted

messages, id = sim-1:
  read: yes
  from: MegaFon
  timestamp: Wed Sep 9 13:57:21 2020
  parts: 2
  total-parts: 2
  text: 636-269 – your personal login code.
  Do not share this code with anyone.

messages, id = sim-3:
  read: yes
  from: +79658283425
  timestamp: Wed Sep 9 16:32:26 2020
  parts: 1
  total-parts: 1
  text: Our time to your time to yes to

messages, id = sim-4:
  read: yes
  from: +79658283425
  timestamp: Mon Sep 14 17:14:11 2020
  parts: 1
  total-parts: 1
  text: Ok

messages, id = sim-5:
  read: yes
  from: MegaFon
```



```

        timestamp: Wed Sep 16 10:24:46 2020
        parts: 7
        total-parts: 7
        text: Listen to audiobooks on management, ►
leadership,
        personal efficiency and self-development ►
2 weeks free!
        Just subscribe to the MegaFon AudioBooks ►
and
        listen to them without advertising on any ►
convenient device.
        The cost after the trial period - 1 euro ►
/ day.
        Payment from the phone account without ►
card binding. Cancel
        subscriptions at any time: pay only for ►
days
        of usage. Learn more:
        http://i.megafon.com/Q2XadzRp9xusLwS1

messages, id = sim-12:
        read: no
        from: +79252384670
        timestamp: Fri Sep 18 19:02:27 2020
        parts: 3
        total-parts: 4
        text: This subscriber left you 18.09.2020 at ►
18:35
        voice message. You can listen to it for ►
free by
        number 0525. / Listen to podcasts and ►
book parodies in
        convenient application without advertising ►
for 5 e/d. Detailed[...].

(sms)> list id xnv-64

        nv-free-slots: 68
        nv-total-slots: 128
        sim-free-slots: 15
        sim-total-slots: 15
        messages-count: 1

messages, id = xnv-64:
        read: yes
        from: mTinkoff
        timestamp: Sat Jul 3 17:30:46 2021
        parts: 2
        total-parts: 2
        text: Replenishment: 10.00 €. Available: 31.00 €.

```

```
(sms)> list no-content
```

```
nv-free-slots: 12
nv-total-slots: 23
sim-free-slots: 10
sim-total-slots: 10
messages-count: 5
```

```
messages, id = nv-3:
  read: yes
```

```
messages, id = nv-7:
  read: yes
```

```
messages, id = nv-2:
  read: yes
```

```
messages, id = nv-0:
  read: yes
```

```
messages, id = nv-1:
  read: yes
```

History

Version	Description
3.03	The sms list command has been introduced.
3.07	The id and no-content arguments were added.

3.147.3 sms read

Description

Mark SMS as read.

Command with **no** prefix return unread SMS mark.

Prefix no

Yes

Change settings

No

Multiple input

No

Synopsis

```
(sms)> read <id>
```

Arguments

Argument	Value	Description
id	<i>String</i>	Message ID.

Example

```
(sms)> read sim-5
UsbQmi::Sms: "UsbQmi0": message marked as read.
```

```
(sms)> no read sim-5
UsbQmi::Sms: "UsbQmi0": message marked as unread.
```

History	Version	Description
	3.03	The sms read command has been introduced.

3.147.4 sms send

Description Send SMS to specified number. The maximum value of saved incoming SMS messages in the router's memory is 128. If the memory is full, the oldest SMS from the memory will be automatically deleted when a new SMS is received.

Prefix no No

Change settings No

Multiple input No

Synopsis | (sms)> **send** <to> <message>

Arguments	Argument	Value	Description
	to	<i>String</i>	The receiver's phone number.
	message	<i>String</i>	Text message to send.

Example (sms)> **send +79261122777 "hello world!"**
 UsbQmi::Sms: "UsbQmi0": message sent.

History	Version	Description
	3.03	The sms send command has been introduced.

3.148 snmp community

Description Set new name for *SNMP* community. By default, common name `public` is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis | (config)> **snmp community** <community>

| (config)> **no snmp community**

Arguments

Argument	Value	Description
community	<i>String</i>	New community name.

Example

```
(config)> snmp community Co_test
Snmp::Manager: SNMP community set to "Co_test".
(config)> no snmp community
Snmp::Manager: SNMP community reset to "public".
```

History

Version	Description
2.08	The snmp community command has been introduced.

3.149 snmp contact

Description

Assign the contact name of *SNMP* agent. By default, the name is not defined.

Command with **no** prefix resets setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> snmp contact <contact>
```

```
(config)> no snmp contact
```

Arguments

Argument	Value	Description
contact	<i>String</i>	<i>SNMP</i> contact info.

Example

```
(config)> snmp contact Cont_test
Snmp::Manager: SNMP contact info set to "Cont_test".
(config)> no snmp contact
Snmp::Manager: SNMP community info reset.
```

History

Version	Description
2.08	The snmp contact command has been introduced.

3.150 snmp location

Description

Assign the location of *SNMP* agent. By default, the location is not defined.

Command with **no** prefix resets setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> snmp location <location>
(config)> no snmp location
```

Argument	Value	Description
location	String	SNMP device location.

Example

```
(config)> snmp location Odintsovo
Snmp::Manager: SNMP device location set to "Odintsovo".
(config)> no snmp location
Snmp::Manager: SNMP device location reset.
```

Version	Description
2.08	The snmp location command has been introduced.

3.151 sstp-server

Description Access to a group of commands to configure *SSTP* server parameters.

Prefix no No

Change settings No

Multiple input No

Group entry (sstp-server)

Synopsis

```
(config)> sstp-server
```

Version	Description
2.12	The sstp-server command has been introduced.

3.151.1 sstp-server allow-bridging

Description Enable Ethernet bridging mode for *SSTP* server. By default, this mode is disabled.

Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes**Multiple input** No

Synopsis

```
(sstp-server)> allow-bridging
(sstp-server)> no allow-bridging
```

Example

```
(sstp-server)> allow-bridging
SstpServer::Manager: Enabled Ethernet mode.
```

```
(sstp-server)> no allow-bridging
SstpServer::Manager: Disabled Ethernet mode.
```

History

Version	Description
3.09	The sstp-server allow-bridging command has been introduced.

3.151.2 sstp-server dhcp route

Description Assign a route which is transmitted in DHCP INFORM messages to the [SSTP](#) server clients.

Command with **no** prefix cancels the specified route. If you use no arguments, the entire list of routes will be cleared.

Prefix no Yes**Change settings** Yes**Multiple input** Yes

Synopsis

```
(sstp-server)> dhcp route <address> <mask>
```

```
(sstp-server)> no dhcp route [ <address> <mask> ]
```

Arguments

Argument	Value	Description
address	<i>IP address</i>	Network client address.
mask	<i>IP-mask</i>	Network client mask. There are two ways to enter the mask: the canonical form (for example, 255.255.255.0) and the form of prefix bit length (for example, /24).

Example

```
(sstp-server)> dhcp route 192.168.2.0/24
SstpServer::Manager: Added DHCP INFORM route to ►
192.168.2.0/255.255.255.0.
```

```
(sstp-server)> no dhcp route
SstpServer::Manager: Cleared DHCP INFORM routes.
```

History	Version	Description
	2.12	The sstp-server dhcp route command has been introduced.

3.151.3 sstp-server interface

Description Bind *SSTP* server to the specified interface.
Command with **no** prefix unbinds the interface.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(sstp-server)> interface <interface>
(sstp-server)> no interface
```

Arguments	Argument	Value	Description
	interface	<i>Interface</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example (sstp-server)> **interface** [Tab]

```
Usage template:
  interface {interface}
```

```
Choose:
  GigabitEthernet1
  ISP
  WifiMaster0/AccessPoint2
  WifiMaster1/AccessPoint1
  WifiMaster0/AccessPoint3
  WifiMaster0/AccessPoint0
  AccessPoint
  WifiMaster1/AccessPoint2
  WifiMaster0/AccessPoint1
  GuestWiFi
```

```
(sstp-server)> interface Bridge0
SstpServer::Manager: Bound to Bridge0.
```

History	Version	Description
	2.12	The sstp-server interface command has been introduced.

3.151.4 sstp-server ipv6cp

Description Enable IPv6 support. DHCP IPv6 pools are created for each *SSTP* server. By default, the setting is disabled.

Command with **no** prefix disables IPv6 support.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(sstp-server)>  ipv6cp
(sstp-server)> no ipv6cp
```

Example

```
(sstp-server)> ipv6cp
SstpServer::Manager: IPv6 control protocol enabled.
```

```
(sstp-server)> no ipv6cp
SstpServer::Manager: IPv6 control protocol disabled.
```

History

Version	Description
3.00	The sstp-server ipv6cp command has been introduced.

3.151.5 sstp-server lcp echo

Description Specify the testing rules of the SSTP-connections with *LCP* echo tools.

Command with **no** prefix disables *LCP* echo.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(sstp-server)>  lcp echo <interval> <count> [adaptive]
(sstp-server)> no lcp echo
```

Arguments

Argument	Value	Description
interval	<i>Integer</i>	Interval between sending <i>LCP</i> echo, in seconds. If within the specified time interval there is no <i>LCP</i> echo request from the remote location, the same request will be sent there asking for response <i>LCP</i> reply.

Argument	Value	Description
count	<i>Integer</i>	The number of consecutive requests <i>LCP</i> echo sent, for which no response <i>LCP</i> reply was received. If count of <i>LCP</i> echo requests goes unanswered, the connection is terminated.
adaptive	<i>Keyword</i>	Pppd will send LCP echo-request frames only if no traffic was received from the peer since the last echo-request was sent.

Example

```
(sstp-server)> lcp echo 5 3
SstpServer::Manager: LCP echo parameters updated.
```

History

Version	Description
2.12	The sstp-server lcp echo command has been introduced.

3.151.6 sstp-server lcp force-pap

Description

Enforce the *PAP* authentication only for *SSTP* server.
Command with **no** prefix disables *PAP* authentication.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(sstp-server)> lcp force-pap
```

```
(sstp-server)> no lcp force-pap
```

Example

```
(sstp-server)> lcp force-pap
SstpServer::Manager: Forced PAP-only authentication.
```

```
(sstp-server)> no lcp force-pap
SstpServer::Manager: Disabled forcing PAP-only authentication.
```

History

Version	Description
3.05	The sstp-server lcp force-pap command has been introduced.

3.151.7 sstp-server mru

Description

Set *MRU* value to be transmitted to *SSTP* server. By default, 1350 value is used.

Command with **no** prefix resets value to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(sstp-server)> mru <value>
(sstp-server)> no mru
```

Arguments

Argument	Value	Description
value	<i>Integer</i>	<i>MRU</i> value. Can take values in the range from 128 to 1500 inclusively.

Example

```
(sstp-server)> mru 200
SstpServer::Manager: MRU set to 200.
```

History

Version	Description
2.12	The sstp-server mru command has been introduced.

3.151.8 sstp-server mtu

Description Set *MTU* value to be transmitted to *SSTP* server. By default, 1350 value is used.

Command with **no** prefix resets value to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(sstp-server)> mtu <value>
(sstp-server)> no mtu
```

Arguments

Argument	Value	Description
value	<i>Integer</i>	<i>MTU</i> value. Can take values in the range from 128 to 1500 inclusively.

Example

```
(sstp-server)> mtu 200
SstpServer::Manager: MTU set to 200.
```

History	Version	Description
	2.12	The sstp-server mtu command has been introduced.

3.151.9 sstp-server multi-login

Description Allow connection to *SSTP* server for multiple users from one account.
Command with **no** prefix disables this feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(sstp-server)> multi-login
(sstp-server)> no multi-login
```

Example

```
(sstp-server)> multi-login
SstpServer::Manager: Enabled multiple login.
```

History	Version	Description
	2.12	The sstp-server multi-login command has been introduced.

3.151.10 sstp-server pool-range

Description Assign a pool of addresses for the clients that connect to the *SSTP* server. By default, pool size 10 is used.

Command with **no** prefix removes a pool.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(sstp-server)> pool-range <begin> [ <size> ]
(sstp-server)> no pool-range
```

Arguments	Argument	Value	Description
	begin	<i>IP address</i>	Start address of pool.
	size	<i>Integer</i>	Pool size.

Example (sstp-server)> **pool-range 192.168.1.22 7**
 SstpServer::Manager: Configured pool range 192.168.1.22 to ► 192.168.1.28.

History

Version	Description
2.12	The sstp-server pool-range command has been introduced.

3.151.11 sstp-server static-ip

Description Bind IP address to the user. User account must have sstp tag.

Command with **no** prefix removes binding.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(sstp-server)> static-ip <name> <address>
```

```
(sstp-server)> no static-ip <name>
```

Arguments

Argument	Value	Description
name	<i>String</i>	Username.
address	<i>IP address</i>	IP address to bind.

Example (sstp-server)> **static-ip admin 192.168.1.22**
 SstpServer::Manager: Static IP 192.168.1.22 assigned to user ► "admin".

History

Version	Description
2.12	The sstp-server static-ip command has been introduced.

3.152 system

Description Access to a group of commands to configure global parameters.

Prefix no No

Change settings No

Multiple input No

Group entry (system)

Synopsis

```
(config)> system
```

History

Version	Description
2.00	The system command has been introduced.

3.152.1 system button

Description

Configure device buttons to handle specific actions. Available handlers depend on hardware configuration and installed modules.

Command with **no** prefix remove setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(system)> button <button> on <action> do <handler>
```

```
(system)> no button <button>
```

Arguments

Argument	Value	Description
button	RESET	RESET button.
	WLAN	Wireless LAN button.
	FN1	FN1 button.
	FN2	FN2 button.
action	click	Single click.
	double-click	Double click.
	hold	Push and hold for 3 seconds. RESET button hold is 10 seconds.
handler	FactoryReset	Reset system to factory defaults.
	Reboot	System reboot.
	WifiToggle	Switch Wi-Fi on/off.
	WifiGuestApToggle	Switch Guest Wi-Fi on/off.
	WpsStartMainAp	Start WPS (2.4GHz only).
	WpsStartMainAp5	Start WPS (5GHz only).
	WpsStartAllMainAp	Start WPS (all frequency bands).
	UnmountAll	Unmount all disks.
	DlnaDirectoryRescan	Search for new files.

Argument	Value	Description
	DlnaDirectoryFullRescan	Full rescan.
	TorrentAltSpeedToggle	Alternative speed on/off (component Transmission BitTorrent client required).
	TorrentClientStateToggle	Switch the BitTorrent client on/off (component Transmission BitTorrent client required).
	OpkgRunScript	Run the script on opkg-section, /etc/ndm/button.d/ folder (component OPKG required).

Example

```
(system)> button WLAN on double-click do WifiGuestApToggle
Peripheral::Manager: "WLAN/double-click" handler set.
```

History

Version	Description
2.03	The system button command has been introduced.
2.06	The OpkgRunScript handler was added.

3.152.2 system caption

Description Set the Web interface title and header for ease of navigation.

Prefix no No

Change settings Yes

Multiple input No

Synopsis `(system)> caption <template>`

Arguments

Argument	Value	Description
template	default	Combination of Brand and Model (for example, Keenetic Speedster).
	product	The Model name (for example, Speedster).
	description	The System description (for example, Speedster (KN-3010)).
	hwid	The Model identifier (for example, KN-3010).
	hostname	The System name (for example, Keenetic-Speedster).
	ndns-domain	The KeenDNS name (for example, mywork.keenetic.name).

Argument	Value	Description
	default-ssid	The Default Wi-Fi name (for example, Keenetic-8665).

Example

```
(system)> caption product
Core::System::Caption: Template set to product.
```

History

Version	Description
3.08	The system caption command has been introduced.

3.152.3 system clock date

Description Adjust system date and time.

Prefix no No

Change settings Yes

Multiple input No

Synopsis

```
(system)> clock date <date-and-time>
```

Arguments

Argument	Value	Description
date-and-time	<i>String</i>	Current date and time in DD MM YYYY HH:MM:SS format.

Example

```
(system)> clock date 18 07 2012 09:52:33
System date and time has been changed.
```

History

Version	Description
2.00	The system clock date command has been introduced.

3.152.4 system clock timezone

Description Set the system timezone.

Command with **no** prefix resets timezone to default (GMT).

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(system)> clock timezone <locality>
```

```
(system)> no clock timezone <locality>
```

Arguments

Argument	Value	Description
locality	<i>String</i>	Name of the city, indicating the time zone.

Example

```
(system)> clock timezone Dublin
the system timezone is set to "Dublin".
```

History

Version	Description
2.00	The system clock timezone command has been introduced.

3.152.5 system configuration factory-reset

Description

Reset configuration to the factory settings for all modes.

Prefix no

No

Change settings

Yes

Multiple input

No

Synopsis

```
(system)> configuration factory-reset
```

Example

```
(system)> configuration factory-reset
Core::Configuration: the system configuration reset to factory ►
defaults.
```

History

Version	Description
2.00	The system configuration factory-reset command has been introduced.

3.152.6 system configuration fail-safe commit

Description

Commit all unsaved changes and stop the timer.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(system)> configuration fail-safe commit
```


Example

```
(system)> configuration fail-safe commit
Core::System::Mtd::ConfigStorage: Committed fail-safe ►
configuration changes.
```

History

Version	Description
3.08	The system configuration fail-safe commit command has been introduced.

3.152.7 system configuration fail-safe keep-alive

Description Silently restart the fail-safe timer.

If the fail-safe mode is inactive or there are no configuration changes the command does nothing.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(system)> configuration fail-safe keep-alive
```

Example

```
(system)> configuration fail-safe keep-alive
```

History

Version	Description
3.08	The system configuration fail-safe keep-alive command has been introduced.

3.152.8 system configuration fail-safe rollback

Description Rollback all unsaved changes and reboot the system. The system brings to a special rollback state while rebooting. In this state commit and timer reconfiguration actions are blocked, except timer disable.

If there are no configuration changes the command does nothing.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(system)> configuration fail-safe rollback
```

Example

```
(system)> configuration fail-safe rollback
Core::System::Mtd::ConfigStorage: Ignored a fail-safe rollback: ►
no pending changes.
```

History

Version	Description
3.08	The system configuration fail-safe rollback command has been introduced.

3.152.9 system configuration fail-safe timer**Description**

Setup or cancel the fail-safe timer. The command configures (or reconfigures) a timer state that is permanent between reboots — it does not require explicit configuration saving. Implemented for the router mode only.

Command with **no** prefix disables the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(system)> configuration fail-safe timer <action> <interval>
```

```
(system)> no configuration fail-safe timer
```

Arguments

Argument	Value	Description
action	reboot	Action when the timer expires.
interval	<i>Integer</i>	Timer value in the range from 60 to 86400 seconds.

Example

```
(system)> configuration fail-safe timer reboot 60  
Core::System::Mtd::ConfigStorage: Enabled a 60-second fail-safe ►  
"reboot" timer.
```

```
(system)> no configuration fail-safe timer  
Core::System::Mtd::ConfigStorage: Turned off the fail-safe mode.
```

History

Version	Description
3.08	The system configuration fail-safe timer command has been introduced.

3.152.10 system configuration save**Description**

Save the system configuration asynchronously.

Prefix no

No

Change settings

Yes

Multiple input

No

Synopsis | (system)> **configuration save**

Example (system)> **configuration save**
Saving configuration.

Version	Description
2.05.B.1	The system configuration save command has been introduced.

3.152.11 system country

Description Select a country from the list of countries available in the factory region. The selected country is permanently stored in the persistent storage and does not require configuration save commands.

The country setting affects all system modes.

Command with **no** prefix resets the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis | (system)> **country** *<country>*

Argument	Value	Description
country	<i>String</i>	The country code from ISO 3166-1 alpha-2 ⁷ .

Example (system)> **country EN**
Core::System::Country: Set the system country code to "EN".

(system)> **no country**
Core::System::Country: Reset the system country code.

Version	Description
4.00	The system country command has been introduced.

3.152.12 system debug

Description Enable system debug. By default, setting is disabled.

Command with **no** prefix disables the feature.

⁷ https://en.wikipedia.org/wiki/ISO_3166-1_alpha-2

Prefix no Yes**Change settings** Yes**Multiple input** No

Synopsis

```
(system)> debug
```

```
(system)> no debug
```

Example

```
(system)> debug
```

```
Core::Debug: System debug enabled.
```

Version	Description
2.03	The system debug command has been introduced.

3.152.13 system description

Description Set the system description as an arbitrary string. By default, description Titan (KN-1810) is used.

Command with **no** prefix resets description to default.

Prefix no Yes**Change settings** Yes**Multiple input** No

Synopsis

```
(system)> description <description>
```

```
(system)> no description
```

Argument	Value	Description
description	<i>String</i>	System description no longer than 256 bytes.

Example

```
(system)> description DEVICE
```

```
Core::System::Info: Description saved.
```

```
(config)> show version
```

```
...
```

```
  manufacturer: Keenetic Ltd.
```

```
  vendor: Keenetic
```

```
  series: KN
```

```
  model: Ultra (KN-1810)
```

```
  hw_version: 10188000
```

```
  hw_id: KN-1810
```

```
  device: Ultra
```

```

class: Internet Center
region: RU
description: DEVICE

```

```

(config)> show running-config
...
set vm.swappiness 60
set vm.overcommit_memory 0
set vm.vfs_cache_pressure 1000
set dev.usb.force_usb2 0
domainname WORKGROUP
hostname Keenetic_Ultra
description DEVICE
...

```

```

(system)> no description
Core::System::Info: Description reset to default.

```

```

(config)> show version
...
manufacturer: Keenetic Ltd.
vendor: Keenetic
series: KN
model: Ultra (KN-1810)
hw_version: 10188000
hw_id: KN-1810
device: Ultra
class: Internet Center
region: RU
description: Keenetic Ultra (KN-1810)

```

History

Version	Description
2.15	The system description command has been introduced.

3.152.14 system domainname

Description Assign domain name for the system.
Command with **no** prefix removes domain name.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```

(system)> domainname <domain>
(system)> no domainname

```

Arguments

Argument	Value	Description
domain	<i>String</i>	The domain name to assign.

Example

```
(system)> domainname keenetic
Domainname saved.
```

History

Version	Description
2.00	The system domainname command has been introduced.

3.152.15 system eject

Description

Stop and eject SCSI/SATA USB-drive. To display all media drive names, use [show media](#) command.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(system)> eject <name>
```

Arguments

Argument	Value	Description
name	<i>String</i>	Name of media drive to eject.

Example

```
(system)> eject Media0
Storage::Manager: Started "Media0" eject.
```

History

Version	Description
3.04	The system eject command has been introduced.

3.152.16 system hostname

Description

Set the host name. Host name used to identify a node in the network. It is required to enable some of the built-in services, such as CIFS.

Command with **no** prefix sets the default value, which depends on the model name.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(system)> hostname <hostname>
```

```
(system)> no hostname
```

Argument	Value	Description
hostname	<i>String</i>	Name of the host.

Example

```
(system)> hostname KN1010  
Core::System::Hostname: The host name set.
```

```
(system)> no hostname  
Core::System::Hostname: The host name reset.
```

Version	Description
2.00	The system hostname command has been introduced.

3.152.17 system led

Description Configure general purpose LEDs. By default, LEDs FN_1 and FN_2 show the status of devices connected to USB_1 and USB_2.

Command with **no** prefix resets the setting to default.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(system)> led <led> indicate <control>
```

```
(system)> no led [ <led> [ indicate ] ]
```

Argument	Value	Description
led	FN_1	LED name.
	FN_2	
control	UpdatesAvailable	LED notifies you the updates for your device are available.
	BackupWan	LED shows that backup connection is active at the moment.
	SelectedWan	LED shows status of the interface defined with interface led wan command.

Argument	Value	Description
	SelectedSchedule	LED shows status of scheduled event assigned with schedule led command.
	OpkgLedControl	LED shows status of <i>opkg</i> .
	Usb1PortDeviceAttached	LED shows status of device connected to USB_1.
	Usb2PortDeviceAttached	LED shows status of device connected to USB_2.
indicate	<i>Keyword</i>	Turn off the indicator completely.

Example

```
(system)> led FN_1 indicate BackupWan
Peripheral::Manager: "BackupWan" control bound to "FN_1" LED.
```

```
(system)> led FN_2 indicate SelectedWan
Peripheral::Manager: "SelectedWan" control bound to "FN_2" LED.
```

```
(system)> no led FN_1 indicate
Peripheral::Manager: "FN_1" LED control binding removed.
```

```
(system)> no led FN_1
Peripheral::Manager: "FN_1" LED control binding reset to default.
```

History

Version	Description
2.08	The system led command has been introduced.

3.152.18 system led power schedule

Description

Assign a schedule for the LEDs on the device. Schedule must be created and customized with [schedule action](#) command before execution.

Command with **no** prefix unbinds the schedule.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(system)> led power schedule <schedule>
```

```
(system)> no led power schedule
```

Arguments

Argument	Value	Description
schedule	<i>Schedule</i>	The name of the schedule that was created with schedule group of commands.

Example

```
(system)> led power schedule schedule1
Core::Peripheral::Manager: Set LED power schedule "schedule1".
```

```
(system)> no led power schedule
Core::Peripheral::Manager: Clear LED power schedule.
```

Version	Description
3.06	The system led power schedule command has been introduced.

3.152.19 system led power shutdown

Description Shutdown the LEDs on the device.
Command with **no** prefix turns LEDs on.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(system)> led power shutdown <mode>
```

```
(system)> no led power shutdown
```

Argument	Value	Description
mode	all	Shutdown all the LEDs.
	front	Shutdown the LEDs on the front panel.
	back	Shutdown the LEDs on the back panel.

Example

```
(system)> led power shutdown all
Core::Peripheral::Manager: Set LED shutdown mode to "all".
```

```
(system)> no led power shutdown
Core::Peripheral::Manager: Set LED shutdown mode to "none".
```

Version	Description
3.06	The system led power shutdown command has been introduced. Previous command name is system led shutdown .

3.152.20 system log clear

Description Clear the system log.

Prefix no No**Change settings** No**Multiple input** No**Synopsis** `(system)> log clear`**Example**
`(system)> log clear`
Syslog: the system log has been cleared.**History**

Version	Description
2.00	The system log clear command has been introduced.

3.152.21 system log reduction

Description Enable repeated message reduction. By default, the setting is enabled.
Command with **no** prefix disables the feature.**Prefix no** Yes**Change settings** Yes**Multiple input** No**Synopsis**
`(system)> log reduction`
`(system)> no log reduction`**Example**
`(system)> log reduction`
`(system)> no log reduction`**History**

Version	Description
2.04	The system log reduction command has been introduced.

3.152.22 system log server

Description Add remote log server.**Prefix no** Yes**Change settings** Yes**Multiple input** Yes

Synopsis

```
(system)> log server <address> [: <port>]
```

```
(system)> no log server [ <address> [: <port>] ]
```

Arguments

Argument	Value	Description
address	<i>IP address</i>	Remote log server address.
port	<i>Integer</i>	Remote log server port.

Example

```
(system)> log server 192.168.1.1:8080
Syslog: server 192.168.1.1:8080 added.
```

History

Version	Description
2.00	The system log server command has been introduced.

3.152.23 system log suppress

Description

Add message suppression rule.

Command with **no** prefix removes the rule.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(system)> log suppress <ident>
```

```
(system)> no log suppress [ <ident> ]
```

Arguments

Argument	Value	Description
ident	<i>String</i>	Process ID which messages need to suppress.

Example

```
(system)> log suppress kernel
Core::Syslog: Added suppression "kernel".
```

```
(system)> no log suppress kernel
Core::Syslog: Deleted suppression "kernel".
```

```
(system)> log suppress transmissiond
Core::Syslog: Added suppression "transmissiond".
```

```
(system)> no log suppress transmissiond
Core::Syslog: Deleted suppression "transmissiond".
```

History

Version	Description
2.04	The system log suppress command has been introduced.

3.152.24 system mode

Description Select system operating mode for Titan.

Prefix no No

Change settings Yes

Multiple input No

Synopsis

```
(system)> mode <mode>
```

Arguments

Argument	Value	Description
mode	router	Main mode.
	client	Network adapter mode to connect Ethernet devices to Wi-Fi network.
	repeater	Repeater mode to extend Wi-Fi network using a wireless connection.
	ap	Access point mode to extend Wi-Fi network using a wired Ethernet connection.

Example

```
(system)> mode repeater
Core::Mode: The system switched to "repeater" mode, reboot the ►
device to apply the settings.
```

History

Version	Description
2.05	The system mode command has been introduced.

3.152.25 system mount

Description Mount USB-drive. To display all mounted drives use **show usb** command.

Command with **no** prefix unmount the drive.

Prefix no Yes

Change settings No

Multiple input No

Synopsis

```
(system)> mount <filesystem>
```

```
(system)> no mount <filesystem>
```

Arguments

Argument	Value	Description
filesystem	<i>String</i>	Name of filesystem to mount/unmount.

Example

```
(system)> mount 9430B54530B52EDC:
Filesystem mounted
```

History

Version	Description
2.00	The system mount command has been introduced.

3.152.26 system ndss dump-report disable

Description

Disable product improvement program. By default, setting is enabled.

Command with **no** prefix enables the program.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(system)> ndss dump-report disable
```

```
(system)> no ndss dump-report disable
```

Example

```
(system)> ndss dump-report disable
Core::Ndss: Dump-reporting disabled.
```

```
(system)> no ndss dump-report disable
Core::Ndss: Dump-reporting enabled.
```

History

Version	Description
3.05	The system ndss dump-report disable command has been introduced. Previous command name is system dump-report disable .

3.152.27 system reboot

Description

Reboot the system. If the parameter is set, reboot is executed after a timeout, in seconds. If the timer is already set, using of the command replaces the old value of the timer to the new one.

Using a scheduled reboot is convenient in the case when the device is under remote control, and the user doesn't understand the effect of the commands

he/she is trying. The user can turn on a scheduled reboot for fear of losing control over the device. After reboot the system will return to its original state and become available.

Command with **no** prefix cancels reboot or removes the reboot on schedule.

Prefix no Yes

Change settings No

Multiple input No

Synopsis

```
(system)> reboot [ <interval> | schedule <schedule> ]
(system)> no reboot [ schedule ]
```

Arguments

Argument	Value	Description
interval	<i>Integer</i>	Timeout for reboot, in seconds. If not specified, the reboot will be executed immediately.
schedule	<i>Schedule</i>	The name of the schedule that was created with schedule group of commands.

Example

```
(system)> reboot 20
Core::System::RebootManager: Rebooting in 20 seconds.
```

```
(system)> no reboot
Core::System::RebootManager: Reboot cancelled.
```

```
(system)> reboot schedule rebootroute
Core::System::RebootManager: Set reboot schedule "rebootroute".
```

```
(system)> no reboot schedule
Core::System::RebootManager: Schedule disabled.
```

History

Version	Description
2.00	The system reboot command has been introduced.
2.12	The schedule argument has been added.

3.152.28 system set

Description Set the value of the specified system parameter and save it in the current settings.

Command with **no** prefix returns the default value to the specified parameter (before the first change).

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(system)> set <name> <value>
```

```
(system)> no set <name>
```

Arguments

Argument	Value	Description
name	<i>String</i>	Identifier of the system parameter.
value	<i>String</i>	New value of the system parameter.

Example

```
(config)> system
(system)> set net.ipv4.ip_forward 1
(system)> set net.ipv4.tcp_fin_timeout 30
(system)> set net.ipv4.tcp_keepalive_time 120
(system)> set ►
net.ipv4.netfilter.ip_conntrack_tcp_timeout_established 1200
(system)> set net.ipv4.netfilter.ip_conntrack_udp_timeout 60
(system)> set net.ipv4.netfilter.ip_conntrack_max 4096
(system)> exit
(config)> show running-config
system
set net.ipv4.ip_forward 1
  set net.ipv4.tcp_fin_timeout 30
  set net.ipv4.tcp_keepalive_time 120
  set net.ipv4.netfilter.ip_conntrack_tcp_timeout_established ►
1200
  set net.ipv4.netfilter.ip_conntrack_udp_timeout 60
  set net.ipv4.netfilter.ip_conntrack_max 4096
!
...
(config)>
```

History

Version	Description
2.00	The system set command has been introduced.

3.152.29 system swap

Description Configure swap area. If the file is not found, the command tries to create it.
Command with **no** prefix disables the swap.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(system)> swap (<area> | <area>) <size>
```

```
(system)> no swap
```

Arguments

Argument	Value	Description
area	<i>Filename</i>	Full path to the swap-file in <file system>:<path> format.
size	<i>Integer</i>	Swap-file size, in Kbytes.

Example

```
(system)> swap OPKG:/swap/swapfile 2097152
Storage::Swap::Manager: Swap is being initialized in background.
```

```
(system)> no swap
Storage::Swap::Manager: Swap area OPKG:/swap/swapfile disabled.
```

History

Version	Description
2.00	The system swap command has been introduced.

3.152.30 system trace lock threshold

Description

Set a trace lock threshold for the system threads. If the threshold value is exceeded, information about this thread (for example, SCGI session) is saved in the system log. By default, setting is disabled.

Command with **no** prefix disables the trace lock threshold feature.

Prefix no

Yes

Change settings

No

Multiple input

No

Synopsis

```
(system)> system trace lock threshold <threshold>
```

```
(system)> no system trace lock threshold
```

Arguments

Argument	Value	Description
threshold	<i>String</i>	Threshold value in milliseconds. Can take values in the range from 100 to 100000000 inclusively. The threshold value is not saved into startup-config.

Example

```
(system)> system trace lock threshold 100
Lockable: Set threshold to 100 ms.
```



```
(system)> no trace lock threshold
Lockable: Reset threshold.
```

History

Version	Description
3.03	The system trace lock threshold command has been introduced.

3.152.31 system usb power schedule

Description

Assign a schedule for the USB port. Schedule must be created and customized with **schedule action** command before execution.

Command with **no** prefix unbinds the schedule.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(system)> usb <port> power schedule <schedule>
```

```
(system)> no usb <port> power schedule <schedule>
```

Arguments

Argument	Value	Description
port	2	USB port 2.
schedule	<i>Schedule</i>	The name of the schedule that was created with schedule group of commands.

Example

```
(system)> usb 1 power schedule schedule0
Usb::Manager: Port "1" schedule "schedule0" assigned.
```

```
(system)> no usb 1 power schedule
Usb::Manager: Port "1" schedule unassigned.
```

History

Version	Description
4.00	The system usb power schedule command has been introduced.

3.152.32 system usb power shutdown

Description

Switch off the power on the USB port.

Command with **no** prefix turns the power on.

Prefix no

Yes

Change settings Yes**Multiple input** No

Synopsis

```
(system)> port <port> power shutdown
```

```
(system)> no port <port> power shutdown
```

Arguments

Argument	Value	Description
port	2	USB port 2.

Example

```
(system)> usb 1 power shutdown
Usb::Manager: Port "1" power is shutting down.
```

```
(system)> no usb 1 power shutdown
Usb::Manager: Port "1" power is activated.
```

History

Version	Description
4.00	The system usb power shutdown command has been introduced.

3.152.33 system zram

Description Configure zRam swap file. If you use no argument, size of zRam file will be set automatically.

Command with **no** prefix removes zRam file.

Prefix no Yes**Change settings** Yes**Multiple input** No

Synopsis

```
(system)> zram [ <size> ]
```

```
(system)> no zram
```

Arguments

Argument	Value	Description
size	<i>Integer</i>	Size of zRam file, in Kbytes.

Example

```
(system)> zram
Zram::Manager: Enabled zram swap of size 262144Kb.
```

```
(system)> no zram
Zram::Manager: Zram swap disabled.
```

History	Version	Description
	2.09	The system zram command has been introduced.

3.153 tools

Description Access to a group of commands to test the environment.

Prefix no No

Change settings No

Multiple input No

Group entry (tools)

Synopsis (config)> **tools**

History	Version	Description
	2.00	The tools command has been introduced.

3.153.1 tools arping

Description Command action is analogous to **tools ping** command, but operates at the link layer of the OSI model using the *ARP* protocol.

Prefix no No

Change settings No

Multiple input No

Synopsis (tools)> **arping** *address* **source-interface** *source-interface* [**count** *count*] [**wait-time** *wait-time*]

Arguments	Argument	Value	Description
	address	<i>IP address</i>	IP address of the respondent.
	source-interface	<i>Interface</i>	Name of source-interface.
	count	<i>Integer</i>	Quantity of requests. If not specified, the command will run until interrupted by the user.
	wait-time	<i>Integer</i>	The maximum response time, in milliseconds.

Example (tools)> **arping 192.168.15.51 source-interface Home count 4 wait-time 3000** ▶

```
Starting the ARP ping to "192.168.15.51"...
ARPING 192.168.15.51 from 192.168.15.1 br0.
Unicast reply from 192.168.15.51 [9c:b7:0d:ce:51:6a] 1.884 ms.
Unicast reply from 192.168.15.51 [9c:b7:0d:ce:51:6a] 1.831 ms.
Sent 4 probes, received 2 responses.
Process terminated.
```

History

Version	Description
2.00	The tools arping command has been introduced.

3.153.2 tools ping

Description

Send Echo-Request requests of ICMP protocol to specified network node and register received Echo-Reply responses. The time between sending request and receiving the response Round Trip Time (RTT) allows you to define double ended delays on the route and frequency of packet losses, that is, indirectly determine loading on the channels of data transmission and intermediate devices.

Total absence of ICMP-replies can also mean that the remote node (or any of the intermediate routers) blocks ICMP Echo-Reply or ignores ICMP Echo-Request.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(tools)> ping <host> [ count <count> ] [ size <packetsize> ]
```

Arguments

Argument	Value	Description
host	<i>String</i>	Domain name or host IP address.
count	<i>Integer</i>	Quantity of ICMP Echo requests. If not specified, the command will run until interrupted by the user.
packetsize	<i>Integer</i>	Size of the ICMP Echo-Request data field in bytes. By default — 56, which together with the 8-byte header specifies the size of the ICMP-pack — 64 bytes.

Example

```
(tools)> ping 192.168.1.33 count 3 size 100
Sending ICMP ECHO request to 192.168.1.33
PING 192.168.1.33 (192.168.1.33) 72 (100) bytes of data.
100 bytes from 192.168.1.33: icmp_req=1, ttl=128, time=2.35 ms.
100 bytes from 192.168.1.33: icmp_req=2, ttl=128, time=1.07 ms.
100 bytes from 192.168.1.33: icmp_req=3, ttl=128, time=1.06 ms.
--- 192.168.1.33 ping statistics ---
```

```
3 packets transmitted, 3 packets received, 0% packet loss,
0 duplicate(s), time 2002.65 ms.
Round-trip min/avg/max = 1.06/1.49/2.35 ms.
Process terminated.
```

History

Version	Description
2.00	The tools ping command has been introduced.

3.153.3 tools ping6

Description

Send Echo-Request requests of ICMPv6 protocol to specified network node and register received Echo-Reply responses. The time between sending request and receiving the response Round Trip Time (RTT) allows you to define double ended delays on the route and frequency of packet losses, that is, indirectly determine loading on the channels of data transmission and intermediate devices.

Total absence of ICMP-replies can also mean that the remote node (or any of the intermediate routers) blocks ICMP Echo-Reply or ignores ICMP Echo-Request.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(tools)> ping6 <host> [ count <count> ] [ size <packetsize> ]
```

Arguments

Argument	Value	Description
host	<i>String</i>	Domain name or host IPv6-address.
count	<i>Integer</i>	Quantity of ICMPv6 Echo requests. If not specified, the command will run until interrupted by the user.
packetsize	<i>Integer</i>	Size of the ICMPv6 Echo-Request data field in bytes. By default — 56, which together with the 8-byte header specifies the size of the ICMPv6-pack — 64 bytes.

Example

```
(tools)> ping6 fd4b:f12b:5d59:0:1108:4407:b772:20cd count 3 size ►
100
Sending ICMPv6 ECHO request to ►
fd4b:f12b:5d59:0:1108:4407:b772:20cd
PING fd4b:f12b:5d59:0:1108:4407:b772:20cd ►
(fd4b:f12b:5d59:0:1108:4407:b772:20cd) 52 (60) bytes of data.
60 bytes from fd4b:f12b:5d59:0:1108:4407:b772:20cd ►
(fd4b:f12b:5d59:0:1108:4407:b772:20cd): icmp_req=1, ttl=64, ►
time=7.18 ms.
```

```

60 bytes from fd4b:f12b:5d59:0:1108:4407:b772:20cd ▶
(fd4b:f12b:5d59:0:1108:4407:b772:20cd): icmp_req=2, ttl=64, ▶
time=8.42 ms.
60 bytes from fd4b:f12b:5d59:0:1108:4407:b772:20cd ▶
(fd4b:f12b:5d59:0:1108:4407:b772:20cd): icmp_req=3, ttl=64, ▶
time=1.51 ms.
--- fd4b:f12b:5d59:0:1108:4407:b772:20cd ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss,
0 duplicate(s), time 2002.61 ms.
Round-trip min/avg/max = 1.51/5.70/8.42 ms.
Process terminated.

```

History

Version	Description
2.00	The tools ping6 command has been introduced.

3.153.4 tools traceroute

Description Show the route to a network host.

Prefix no No

Change settings No

Multiple input No

Synopsis

```

(tools)> traceroute <host> [count <count>] [interval <interval>]
[wait-time <wait-time>] [packet-size <packet-size>]
[max-ttl <max-ttl>] [port <port>] [source-address <source-address>]
[source-interface <source-interface>] [type <type>] [tos <tos>]

```

Arguments

Argument	Value	Description
host	<i>String</i>	Name of the target host.
count	<i>Integer</i>	Number of probe packets per hop. Default value — 3. Value must be in the range [1;10].
interval	<i>Integer</i>	Time in seconds between sending packets. Default value — 0. Value must be in the range [0;15].
wait-time	<i>Integer</i>	Time to wait for a response to a probe (in seconds). Default value — 1. Value must be in the range [1;15].
packet-size	<i>Integer</i>	Size of packet according to the protocol type. For tcp type default packet size is 52. Range of values [52]. For udp and icmp types default packet size is 60. Range of values [28;65535].

Argument	Value	Description
max-ttl	<i>Integer</i>	Maximum number of hops (max time-to-live value) traceroute will probe. Default value — 30. Value must be in the range [1;255].
port	<i>Integer</i>	Destination port. For tcp type default port is 80. For udp type default port is 33434. For icmp type default port is 1.
source-address	<i>String</i>	Address of the outgoing interface.
source-interface	<i>String</i>	Interface to be used as the source interface in outgoing probe packets.
type	tcp	TCP protocol.
	udp	UDP protocol. Used by default.
	icmp	ICMP protocol.
tos	<i>Integer</i>	Type Of Service. Default value — 0. Value must be in the range [0;255].

Example

```
(tools)> traceroute google.com count 5 interval 5
starting traceroute to google.com...
traceroute to google.com (64.233.161.113), 30 hops maximum, 60 ►
byte packets.
 1 192.168.233.1 (192.168.233.1) 2.742 ms 2.406 ms 2.460 ms ►
 2.191 ms 2.957 ms
 2 10.77.140.1 (10.77.140.1) 3.301 ms 3.847 ms 3.839 ms
process terminated
```

History

Version	Description
2.00	The tools traceroute command has been introduced.

3.154 torrent

Description Access to a group of commands to configure BitTorrent parameters.

Prefix no No

Change settings No

Multiple input No

Group entry (config-torrent)

Synopsis | (config)> **torrent**

History	Version	Description
	2.00	The torrent command has been introduced.

3.154.1 torrent directory

Description Specify a folder for downloads. If the folder is not found, the command tries to create it.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-torrent)> directory <directory>
(config-torrent)> no directory
```

Arguments	Argument	Value	Description
	directory	<i>String</i>	Path to the folder with filesystem defining. Filesystems — temp:, system:, flash:, sys:, proc:, usb:.

Example

```
(config-torrent)> directory ►
46E243F4E243E6B1:/components/transmission/
(config-torrent)> no directory
```

History	Version	Description
	2.00	The torrent directory command has been introduced.

3.154.2 torrent peer-port

Description Set peer port. By default, 51413 value is used.

Prefix no No

Change settings Yes

Multiple input No

Synopsis

```
(config-torrent)> peer-port <port>
```


Argument	Value	Description
port	<i>Integer</i>	Incoming <i>TCP</i> listen port. Can take values in the range from 1024 to 65535.

Example

```
(config-torrent)> peer-port 11122
Torrent::Client: Peer port changed to 11122.
```

Version	Description
2.00	The torrent peer-port command has been introduced.

3.154.3 torrent policy

Description Define the IP Policy for BitTorrent client.

Command with **no** prefix removes the defined IP Policy profile for BitTorrent client.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-torrent)> policy <policy>
(config-torrent)> no policy
```

Argument	Value	Description
policy	<i>Policy</i>	Name of IP Policy profile.

Example

```
(config-torrent)> policy PolicyNaN
Torrent::Client: Policy PolicyNaN applied.
```

```
(config-torrent)> no policy
Torrent::Client: Policy cleared.
```

Version	Description
3.01	The torrent policy command has been introduced.

3.154.4 torrent reset

Description Reset settings of BitTorrent client.

Prefix no No

Change settings No**Multiple input** No**Synopsis** `(config-torrent)> reset`**Example**
`(config-torrent)> reset`
Torrent::Client: Reset performed.**History**

Version	Description
2.10	The torrent reset command has been introduced.

3.154.5 torrent rpc-port

Description Set *RPC* port. By default, 8090 value is used.**Prefix no** No**Change settings** Yes**Multiple input** No**Synopsis** `(config-torrent)> rpc-port <port> [public]`**Arguments**

Argument	Value	Description
port	<i>Integer</i>	Webadmin listen port. Can take values in the range from 1024 to 65535.
public	<i>Keyword</i>	Access to BitTorrent client managing by public interfaces.

Example
`(config-torrent)> rpc-port 9945`
Torrent::Client: RPC port changed to 9945 (private).`(config-torrent)> rpc-port 9945 public`
Torrent::Client: RPC port changed to 9945 (public).**History**

Version	Description
2.00	The torrent rpc-port command has been introduced.

3.155 udpxy

Description Access to a group of commands to configure *udpxy* parameters.**Prefix no** No

Change settings No**Multiple input** No**Group entry** (udpxy)**Synopsis**
| (config)> **udpxy**

Version	Description
2.03	The udpxy command has been introduced.

3.155.1 udpxy buffer-size

Description Set *udpxy* buffer size. By default, 2048 value is used.
Command with **no** prefix resets buffer size to default.

Prefix no Yes**Change settings** Yes**Multiple input** No

Synopsis
| (udpxy)> **buffer-size** <size>
| (udpxy)> **no buffer-size**

Argument	Value	Description
size	<i>Integer</i>	Buffer size in bytes. Can take values in the range from 1 to 1048576.

Example
(udpxy)> **buffer-size 500**
Udpxy::Manager: a buffer size set to 500 bytes.

Version	Description
2.04	The udpxy buffer-size command has been introduced.

3.155.2 udpxy buffer-timeout

Description Set *udpxy* timeout to hold data in the buffer. By default, 1 value is used.
Command with **no** prefix resets timeout to default.

Prefix no Yes**Change settings** Yes

Multiple input No

Synopsis

```
(udpxy)> buffer-timeout <timeout>
```

```
(udpxy)> no buffer-timeout
```

Argument	Value	Description
timeout	<i>Integer</i>	Timeout value in seconds. Can take values in the range from -1 to 60. -1 — unlimited timeout.

Example

```
(udpxy)> buffer-timeout 10  
Udpxy::Manager: a hold data timeout set to 10 sec.
```

Version	Description
2.04	The udpxy buffer-timeout command has been introduced.

3.155.3 udpxy interface

Description Bind *udpxy* to the specified interface. By default, current default gateway is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(udpxy)> interface <interface>
```

```
(udpxy)> no interface
```

Argument	Value	Description
interface	<i>Interface</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(udpxy)> interface [Tab]
```

Usage template:

```
interface {interface}
```

Choose:

```
GigabitEthernet1
```

```

ISP
WifiMaster0/AccessPoint2
WifiMaster1/AccessPoint1
WifiMaster0/AccessPoint3
WifiMaster0/AccessPoint0
AccessPoint

```

```

(udpxy)> interface ISP
Udpxy::Manager: bound to GigabitEthernet1.

```

History

Version	Description
2.02	The udpxy interface command has been introduced.

3.155.4 udpxy port

Description

Specify port for HTTP requests. By default, 4022 value is used.

Command with **no** prefix resets setting to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(udpxy)> port <port>
```

```
(udpxy)> no port
```

Arguments

Argument	Value	Description
port	<i>Integer</i>	Port number. Can take values in the range from 0 to 65535.

Example

```

(udpxy)> port 2323
Udpxy::Manager: a port set to 2323.

```

History

Version	Description
2.03	The udpxy port command has been introduced.

3.155.5 udpxy renew-interval

Description

Set renew interval of subscription to the multicast channel. By default, 0 value is used, i.e. the subscription is not renewed.

Command with **no** prefix resets setting to default.

Prefix no Yes**Change settings** Yes**Multiple input** No

Synopsis

```
(udpxy)> renew-interval <renew-interval>
(udpxy)> no renew-interval
```

Arguments

Argument	Value	Description
renew-interval	<i>Integer</i>	Renew interval of subscription in seconds. Can take values in the range from 0 to 3600.

Example

```
(udpxy)> renew-interval 120
Udpxy::Manager: a renew subscription interval value set to 120 ►
sec.
```

History

Version	Description
2.03	The udpxy renew-interval command has been introduced.

3.155.6 udpxy timeout

Description Set connection timeout. By default, 5 value is used.Command with **no** prefix resets setting to default.**Prefix no** Yes**Change settings** Yes**Multiple input** No

Synopsis

```
(udpxy)> timeout <timeout>
(udpxy)> no timeout
```

Arguments

Argument	Value	Description
timeout	<i>Integer</i>	Timeout in seconds. Can take values in the range from 5 to 60.

Example

```
(udpxy)> timeout 10
Udpxy::Manager: a stream timeout set to 10 sec.
```

History	Version	Description
	2.03	The udpxy timeout command has been introduced.

3.156 upnp forward

Description Add *UPnP* forwarding rule.
Command with **no** prefix removes rule from the list.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type IP

Synopsis

```
(config)> upnp forward <protocol> [ interface ] <address> <port>
(config)> no upnp forward [ <index> | ( <protocol> <address> <port> ) ]
```

Arguments	Argument	Value	Description
	protocol	tcp	Rule for <i>TCP</i> protocol will be added/deleted.
		udp	Rule for <i>UDP</i> protocol will be added/deleted.
	interface	<i>Interface</i>	Rule for specified interface name will be added.
	address	<i>IP address</i>	Rule for specified IP address will be added/deleted.
	port	<i>Integer</i>	Rule for specified port will be added/deleted.
	index	<i>Integer</i>	Rule with specified number in the list will be removed.

History	Version	Description
	2.00	The upnp forward command has been introduced.

3.157 upnp lan

Description Set LAN interface where the *UPnP* service is running. The service works for one network segment only.

Command with **no** prefix removes setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config)> upnp lan <interface>
```

```
(config)> no upnp lan
```

Arguments

Argument	Value	Description
interface	<i>Interface</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(config)> upnp lan [Tab]
```

```
Usage template:
```

```
    lan {interface}
```

```
Choose:
```

```
    GigabitEthernet1
```

```
    ISP
```

```
    WifiMaster0/AccessPoint2
```

```
    WifiMaster1/AccessPoint1
```

```
    WifiMaster0/AccessPoint3
```

```
    WifiMaster0/AccessPoint0
```

```
    AccessPoint
```

```
    WifiMaster1/AccessPoint2
```

```
    WifiMaster0/AccessPoint1
```

```
    GuestWiFi
```

```
(config)> upnp lan PPTP0
```

```
using LAN interface: PPTP0.
```

History

Version	Description
2.00	The upnp lan command has been introduced.

3.158 upnp redirect

Description Add *UPnP* port translation rule.

Command with **no** prefix removes rule from the list. If you use no arguments, the entire list of rules will be removed.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type IP

Synopsis

```
(config)> upnp redirect <protocol> <interface> <port> <to-address> [
to-port ]

(config)> no upnp redirect [and forward | [ <index> | ( <protocol> <port> )
]]
```

Arguments

Argument	Value	Description
protocol	tcp	Rule for <i>TCP</i> protocol will be added/deleted.
	udp	Rule for <i>UDP</i> protocol will be added/deleted.
interface	<i>Interface</i>	Rule for specified interface name will be added.
port	<i>Integer</i>	Rule for specified port will be added/deleted.
to-address	<i>IP address</i>	Rule for specified destination address will be added.
to-port	<i>Integer</i>	Rule for specified destination port will be added.
and forward	<i>Keyword</i>	Lists of forwarding and redirecting rules will be cleared.
index	<i>Integer</i>	Rule with specified number in the list will be removed.

History

Version	Description
2.00	The upnp redirect command has been introduced.

3.159 user

Description Access to a group of commands to configure user account parameters. If specified user is not found, the command tries to create it.

Note: Account with reserved name admin can not be removed. In addition, the admin user can not lose the access right to command line.

Command with **no** prefix removes user account.

Prefix no Yes

Change settings Yes

Multiple input Yes

Group entry (config-user)

Synopsis

```
(config)> user <name>
```

```
(config)> no user <name>
```

Arguments

Argument	Value	Description
name	<i>String</i>	The user name.

History

Version	Description
2.00	The user command has been introduced.

3.159.1 user home

Description

Set home directory for user.

Command with **no** prefix resets the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-user)> home <directory>
```

```
(config-user)> no home
```

Arguments

Argument	Value	Description
directory	<i>String</i>	Path to the home directory for FTP server, SFTP server and WeDAV server.

Example

```
(config-user)> home files_ssd:/  
Core::Authenticator: "test" user root directory set to ►  
"files_ssd/".
```

```
(config-user)> no home  
(config-user)>
```

History

Version	Description
3.04	The user home command has been introduced.

3.159.2 user password

Description

Set the user password. The password is stored as MD5-hash, computed from the "user:realm:password" string. *realm* is the device model name from startup-config.txt file.

The command takes open string or hash-function value as argument. Saved password is used for user authentication.

Command with **no** prefix removes the password so that the user can access to the device unauthenticated.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-user)> password ( md5 <hash> | <password> )
(config-user)> no password
```

Arguments

Argument	Value	Description
hash	<i>String</i>	MD5-hash value.
password	<i>String</i>	Value of the password in open form, from which the hash value is calculated automatically.

Example

```
(config-user)> password 1111
Core::Authenticator: Password set has been changed for user ►
"test".
```

History

Version	Description
2.00	The user password command has been introduced.

3.159.3 user tag

Description

Assign a special tag to the user account, which presence is checked at the time of user authorization as well as performing any action in the system. Set of permitted tag values depends on the system functionality. The full list is shown in the table below.

Several different tags can be assigned to one account by entering the command several times. Each tag can be viewed as granting or revoking certain permissions.

Command with **no** prefix removes the specified tag.

Note: The admin account can not be untagged cli.

The admin account can not be untagged http in Repeater mode.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config-user)> tag <tag>
(config-user)> no tag [ <tag> ]
```

Arguments

Argument	Value	Description
tag	cli	Access to the command line (TELNET and SSH).
	readonly	Restrict commands that change the settings.
	http-proxy	Access to the HTTP proxy.
	http	Access to the Web-interface.
	afp	Access to USB drives via Apple File Protocol.
	printers	Access to USB printers via SMB/CIFS.
	cifs	Connection to the Windows files and printers service.
	vpn-dlna	Access to the <i>DLNA</i> for PPTP, L2TP/IPSec, SSTP tunnels.
	ftp	Connection to an integrated FTP server.
	ipsec-xauth	Connection to an integrated IPsec/XAuth server.
	ipsec-l2tp	Connection to an integrated L2TP/IPSec server.
	opt	Access to services managed by OptWare.
	sftp	Access to SFTP file server.
	sstp	Connection to an integrated SSTP server.
	torrent	Access to the BitTorrent client GUI.
vpn	Connection to an integrated PPTP server.	
webdav	Access to WebDAV file server.	

Example

```
(config-user)> tag cli
Core::Authenticator: User "test" tagged with "cli".
```

```
(config-user)> tag readonly
Core::Authenticator: User "test" tagged with "readonly".
```

```
(config-user)> tag http-proxy
Core::Authenticator: User "test" tagged with "http-proxy".
```

```
(config-user)> tag http
Core::Authenticator: User "test" tagged with "http".
```

```
(config-user)> tag afp
Core::Authenticator: User "test" tagged with "afp".
```

```
(config-user)> tag printers
Core::Authenticator: User "test" tagged with "printers".
```

```
(config-user)> tag cifs
Core::Authenticator: User "test" tagged with "cifs".
```

```
(config-user)> tag vpn-dlna
Core::Authenticator: User "test" tagged with "vpn-dlna".
```

```
(config-user)> tag ftp
Core::Authenticator: User "test" tagged with "ftp".
```

```
(config-user)> tag ipsec-xauth
Core::Authenticator: User "test" tagged with "ipsec-xauth".
```

```
(config-user)> tag ipsec-l2tp
Core::Authenticator: User "test" tagged with "ipsec-l2tp".
```

```
(config-user)> tag opt
Core::Authenticator: User "test" tagged with "opt".
```

```
(config-user)> tag sftp
Core::Authenticator: User "test" tagged with "sftp".
```

```
(config-user)> tag sstp
Core::Authenticator: User "test" tagged with "sstp".
```

```
(config-user)> tag torrent
Core::Authenticator: User "test" tagged with "torrent".
```

```
(config-user)> tag vpn
Core::Authenticator: User "test" tagged with "vpn".
```

```
(config-user)> tag webdav
Core::Authenticator: User "test" tagged with "webdav".
```

```
(config-user)> no tag readonly
Core::Authenticator: User "test": "readonly" tag deleted.
```

History

Version	Description
2.00	The user tag command has been introduced.
2.04	The vpn tag has been added.
2.06	The opt , ipsec-xauth tags have been added.
2.10	The http-proxy tag has been added.
2.11	The ipsec-l2tp tag has been added.
2.12	The sstp tag has been added.
3.04	The vpn-dlna sftp and webdav tags have been added.

3.160 ussd send

Description Send *USSD* request to the mobile operator.

Prefix no No

Change settings No

Multiple input No

Interface type Usb

Synopsis `(config)> ussd <interface> send <request>`

Arguments

Argument	Value	Description
interface	<i>Interface</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.
request	<i>String</i>	USSD command.

Example

```
(config)> ussd UsbQmi0 send *100#

request: *100#
response: Your number: +79953332211
         Available: 10 dol
         4.01 / 5 GB
```

History

Version	Description
3.05	The ussd send command has been introduced.

3.161 vpn-server

Description Access to a group of commands to configure VPN server parameters.

Prefix no No

Change settings No

Multiple input No

Group entry (vpn-server)

Synopsis `(config)> vpn-server`

History

Version	Description
2.04	The vpn-server command has been introduced.

3.161.1 vpn-server dhcp route

Description Assign a route which is transmitted in DHCP INFORM messages to the VPN server clients.

Command with **no** prefix cancels the specified route. If you use no arguments, the entire list of routes will be cleared.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(vpn-server)> dhcp route <address> <mask>
```

```
(vpn-server)> no dhcp route [ <address> <mask> ]
```

Arguments

Argument	Value	Description
address	<i>IP address</i>	Network client address.
mask	<i>IP-mask</i>	Network client mask. There are two ways to enter the mask: the canonical form (for example, 255.255.255.0) and the form of prefix bit length (for example, /24).

Example

```
(vpn-server)> dhcp route 192.168.2.0/24  
VpnServer::Manager: Added DHCP INFORM route to ►  
192.168.2.0/255.255.255.0.
```

```
(vpn-server)> no dhcp route  
VpnServer::Manager: Cleared DHCP INFORM routes.
```

History

Version	Description
2.12	The vpn-server dhcp route command has been introduced.

3.161.2 vpn-server interface

Description Bind VPN server to the specified interface.

Command with **no** prefix unbinds the interface.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(vpn-server)> interface <interface>
```

```
(vpn-server)> no interface
```

Arguments

Argument	Value	Description
interface	Interface	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(vpn-server)> interface [Tab]
```

```
Usage template:
  interface {interface}
```

```
Choose:
```

```
  GigabitEthernet1
  ISP
  WifiMaster0/AccessPoint2
  WifiMaster1/AccessPoint1
  WifiMaster0/AccessPoint3
  WifiMaster0/AccessPoint0
  AccessPoint
```

```
(vpn-server)> interface GigabitEthernet0/Vlan1
VpnServer::Manager: Bound to GigabitEthernet0/Vlan1
```

```
(vpn-server)> no interface
VpnServer::Manager: Reset interface binding.
```

History

Version	Description
2.04	The vpn-server interface command has been introduced.

3.161.3 vpn-server ipv6cp

Description

Enable IPv6 support. DHCP IPv6 pools are created for each VPN server. By default, the setting is disabled.

Command with **no** prefix disables IPv6 support.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(vpn-server)> ipv6cp
```

```
(vpn-server)> no ipv6cp
```


Example

```
(vpn-server)> ipv6cp
VpnServer::Manager: IPv6 control protocol enabled.
```

```
(vpn-server)> no ipv6cp
VpnServer::Manager: IPv6 control protocol disabled.
```

History

Version	Description
3.00	The vpn-server ipv6cp command has been introduced.

3.161.4 vpn-server lcp echo

Description Specify the testing rules of the PPTP connections with *LCP* echo tools.
Command with **no** prefix disables *LCP* echo.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(vpn-server)> lcp echo <interval> <count> [adaptive]
```

```
(vpn-server)> no lcp echo
```

Arguments

Argument	Value	Description
interval	<i>Integer</i>	Interval between sending <i>LCP</i> echo, in seconds. If within the specified time interval there is no <i>LCP</i> echo request from the remote location, the same request will be sent there asking for response <i>LCP</i> reply.
count	<i>Integer</i>	The number of consecutive requests <i>LCP</i> echo sent, for which no response <i>LCP</i> reply was received. If count of <i>LCP</i> echo requests goes unanswered, the connection is terminated.
adaptive	<i>Keyword</i>	Pppd will send LCP echo-request frames only if no traffic was received from the peer since the last echo-request was sent.

Example

```
(vpn-server)> lcp echo 5 3
LCP echo parameters updated.
```

History

Version	Description
2.06	The vpn-server lcp echo command has been introduced.

3.161.5 vpn-server lockout-policy

Description Set VPN server bruteforce detection parameters. By default, feature is enabled. If you use 0 as an argument, all bruteforce detection parameters will be reset to default.

Command with **no** prefix disables bruteforce detection.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(vpn-server)> lockout-policy <threshold> [ <duration> [
<observation-window> ]]
```

```
(vpn-server)> no lockout-policy
```

Arguments

Argument	Value	Description
threshold	<i>Integer</i>	The number of failed attempts to log in. By default, 5 value is used. Can take values in the range from 2 to 20.
duration	<i>Integer</i>	An authorization ban duration for the specified IP in minutes. By default, 15 value is used. Can take values in the range from 1 to 120.
observation-window	<i>Integer</i>	Duration of suspicious activity observation in minutes. By default, 3 value is used. Can take values in the range from 1 to 20.

Example

```
(vpn-server)> lockout-policy 10 30 2
VpnServer::Manager: Bruteforce detection is reconfigured.
```

```
(vpn-server)> no lockout-policy
VpnServer::Manager: Bruteforce detection is disabled.
```

```
(vpn-server)> lockout-policy 0
VpnServer::Manager: Bruteforce detection reset to default.
```

History

Version	Description
3.01	The vpn-server lockout-policy command has been introduced.

3.161.6 vpn-server mppe

Description Set mode for *MPPE* encryption. 40-bit key is used by default.

Command with **no** prefix disables selected mode.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(vpn-server)> mppe <mode>
(vpn-server)> no mppe <mode>
```

Arguments

Argument	Value	Description
mode	40	Length of the encryption key is 40 bits.
	128	Length of the encryption key is 128 bits.

Example

```
(vpn-server)> mppe 40
VpnServer::Manager: Set encryption 40.
```

History

Version	Description
2.05	The vpn-server mppe command has been introduced.

3.161.7 vpn-server mppe-optional

Description Enable *MPPE* encryption.

Command with **no** prefix disables encryption.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(vpn-server)> mppe-optional
(vpn-server)> no mppe-optional
```

Example

```
(vpn-server)> mppe-optional
VpnServer::Manager: Unencrypted connections enabled.
```

History

Version	Description
2.04	The vpn-server mppe-optional command has been introduced.

3.161.8 vpn-server mru

Description Set *MRU* value to be transmitted to PPTP server. By default, 1350 value is used.
Command with **no** prefix resets value to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(vpn-server)> mru <value>
(vpn-server)> no mru
```

Arguments

Argument	Value	Description
value	<i>Integer</i>	<i>MRU</i> value. Can take values in the range from 128 to 1500 inclusively.

Example

```
(vpn-server)> mru 200
VpnServer::Manager: mru set to 200.
```

History

Version	Description
2.04	The vpn-server mru command has been introduced.

3.161.9 vpn-server mtu

Description Set *MTU* value to be transmitted to PPTP server. By default, 1350 value is used.
Command with **no** prefix resets value to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(vpn-server)> mtu <value>
(vpn-server)> no mtu
```

Argument	Value	Description
value	<i>Integer</i>	<i>MTU</i> value. Can take values in the range from 128 to 1500 inclusively.

Example

```
(vpn-server)> mtu 200
VpnServer::Manager: mtu set to 200.
```

Version	Description
2.04	The vpn-server mtu command has been introduced.

3.161.10 vpn-server multi-login

Description Allow connection to VPN server for multiple users from one account.
Command with **no** prefix disables this feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(vpn-server)> multi-login
(vpn-server)> no multi-login
```

Example

```
(vpn-server)> multi-login
VpnServer::Manager: multi login enabled.
```

Version	Description
2.04	The vpn-server multi-login command has been introduced.

3.161.11 vpn-server pool-range

Description Assign a pool of addresses for the clients that connect to the VPN server.
Command with **no** prefix removes a pool.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(vpn-server)> pool-range <begin> [ <size> ]
```

```
(vpn-server)> no pool-range
```

Arguments

Argument	Value	Description
begin	<i>IP address</i>	Start address of pool.
size	<i>Integer</i>	Pool size. Can take values in the range from 1 to 64 inclusively. If the size is not specified, it is determined automatically depending on the device.

Example

```
(vpn-server)> pool-range 172.168.1.22 20
VpnServer::Manager: Configured pool range 172.168.1.22 to ►
172.168.1.41.
```

```
(vpn-server)> no pool-range
VpnServer::Manager: Reset pool range.
```

History

Version	Description
2.04	The vpn-server pool-range command has been introduced.

3.161.12 vpn-server static-ip

Description

Bind IP address to the user. User account must have vpn tag.

Command with **no** prefix removes binding.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(vpn-server)> static-ip <name> <address>
```

```
(vpn-server)> no static-ip <name>
```

Arguments

Argument	Value	Description
name	<i>String</i>	Username.
address	<i>IP address</i>	IP address to bind.

Example

```
(vpn-server)> static-ip test 172.16.1.35
VpnServer::Manager: Static IP 172.16.1.35 assigned to user "test".
```

```
(vpn-server)> static-ip test
VpnServer::Manager: Static IP address removed for user "test".
```

History

Version	Description
2.04	The vpn-server static-ip command has been introduced.

Glossary

Address and Control Field Compression	<i>LCP</i> configuration option that provides a method to negotiate the compression of the Data Link Layer Address and Control fields.
Address Resolution Protocol	is a protocol for mapping an Internet Protocol address (IP address) to a physical machine address that is recognized in the local network. For example, in IP Version 4, the most common level of IP in use today, an address is 32 bits long. In an Ethernet local area network, however, addresses for attached devices are 48 bits long. (The physical machine address is also known as a Media Access Control or MAC address.) A table, usually called the ARP cache, is used to maintain a correlation between each MAC address and its corresponding IP address. ARP provides the protocol rules for making this correlation and providing address conversion in both directions.
Airtime Fairness	it is a technology intended to increase the overall performance of the wireless network by solving a problem with slow clients. With a high activity of a slow device, the Wi-Fi network bandwidth is reduced. So that fast clients don't have to wait for their data transfer queues, Airtime Fairness technology limits the session of communication with the client device not by the number of packets, but by the time of their transmission.
Apple Filing Protocol	is a proprietary network protocol, and part of the Apple File Service (AFS), that offers file services for macOS and the classic Mac OS.
Authenticated Encryption with Associated Data	this form of encryption which simultaneously assure the confidentiality and authenticity of data. AEAD is a variant of AE that allows a recipient to check the integrity of both the encrypted and unencrypted information in a message.
Automatic Certificate Management Environment	is a communications protocol for automating interactions between certificate authorities and their users' web servers, allowing the automated deployment of public key infrastructure at very low cost. It was designed by the Internet Security Research Group (ISRG) for their Let's Encrypt service.
Band Steering	is a feature that encourages dual-band capable wireless clients to connect to the less crowded 5GHz network, and leave the 2.4GHz network available for those clients who support 2.4GHz only; thus, Wi-Fi performance can be improved for all clients.
Beamforming	is a kind of radio frequency management in which an access point makes use of various antennas to transmit the exact same signal. By broadcasting various signals and examining client feedback, the wireless LAN infrastructure could very well modify the signals it transmits. This way, it can identify the ideal path the signal must follow

	to get to a client device. Beamforming efficiently enhances the uplink and downlink SNR performances as well as the overall network capacity.
Challenge-Handshake Authentication Protocol	widely used algorithm for authentication, which provides the transfer of indirect information about user password. CHAP provides better security than Password Authentication Protocol .
Change of Authorization	is a provides a mechanism for changing RADIUS authentication and authorization session attributes. Allows you to set up an active client session.
Command Line Interface	is a user interface to a computer's operating system or an application in which the user responds to a visual prompt by typing in a command on a specified line, receives a response back from the system, and then enters another command, and so forth.
Common Applications Kept Enhanced	is a shaping-capable queue discipline which uses both AQM and FQ. It combines COBALT, which is an AQM algorithm combining Codel and BLUE, a shaper which operates in deficit mode, and a variant of DRR++ for flow isolation. 8-way set-associative hashing is used to virtually eliminate hash collisions. Priority queuing is available through a simplified diffserv implementation. CAKE uses a deficit-mode shaper, which does not exhibit the initial burst typical of token-bucket shapers. It will automatically burst precisely as much as required to maintain the configured throughput.
Common Internet File System	is a protocol that lets programs make requests for files and services on remote computers on the Internet. CIFS uses the client/server programming model. A client program makes a request of a server program (usually in another computer) for access to a file or to pass a message to a program that runs in the server computer. The server takes the requested action and returns a response.
Compression Control Protocol	is used for establishing and configuring data compression algorithms over PPP .
Dead Peer Detection	is a method that network devices use to verify the current existence and availability of other peer devices.
Device Privacy Notice	is a Keenetic device privacy notice on data processing.
DHCP	is a network protocol that is used to configure network devices so that they can communicate on an IP network. A DHCP client uses the DHCP protocol to acquire configuration information, such as an IP address, a default route, and one or more DNS server addresses from a DHCP server. The DHCP client then uses this information to configure its host. Once the configuration process is complete, the host is able to communicate on the Internet.
DHCP server	manages a pool of IP addresses and information about client configuration parameters such as default gateway, domain name, the name servers, other servers such as time servers, and so forth. On receiving a valid request, the server assigns the computer an IP address, a lease (length of time the allocation is valid), and other IP configuration parameters, such as the subnet mask and the default gateway.

Depending on implementation, the DHCP server may have three methods of allocating IP-addresses:

- *dynamic allocation*: A network administrator assigns a range of IP addresses to DHCP, and each client computer on the LAN is configured to request an IP address from the DHCP server during network initialization. The request-and-grant process uses a lease concept with a controllable time period, allowing the DHCP server to reclaim (and then reallocate) IP addresses that are not renewed.
- *automatic allocation*: The DHCP server permanently a free IP address to a requesting client from the range defined by the administrator. This is like dynamic allocation, but the DHCP server keeps a table of past IP address assignments, so that it can preferentially assign to a client the same IP address that the client previously had.
- *static allocation*: The DHCP server allocates an IP address based on a table with MAC address/IP address pairs, which are manually filled in (perhaps by a network administrator). Only requesting clients with a MAC address listed in this table will be allocated an IP address. This feature (which is not supported by all DHCP servers) is variously called Static DHCP Assignment (by DD-WRT), fixed-address (by the dhcpd documentation), Address Reservation (by Netgear), DHCP reservation or Static DHCP (by Cisco/Linksys), and IP reservation or MAC/IP binding (by various other router manufacturers).

DHCPv6 server	is a network protocol for configuring Internet Protocol version 6 (IPv6) hosts with IP addresses, IP prefixes, default route, local segment MTU, and other configuration data required to operate in an IPv6 network. IPv6 hosts may automatically generate IP addresses internally using stateless address autoconfiguration ¹ (SLAAC), or they may be assigned configuration data with DHCPv6.
Diffie-Hellman	is that part of the <i>IKE</i> protocol used for exchanging the material from which the symmetrical keys are built. The Diffie-Hellman algorithm builds an encryption key known as a "shared secret" from the private key of one party and the public key of the other. Since the <i>IPsec</i> symmetrical keys are derived from this DH key shared between the peers, at no point are symmetric keys actually exchanged.
DLNA	standard that allows compatible devices to transfer media content (images, music, videos) over the home network and display it in real time. This technology is to connect home computers, mobile phones, notebooks and home electronics in a single digital network. DLNA-certified devices can be configured and combined in a home network automatically.
Domain Name System	is a hierarchical distributed naming system for computers, services, or any resource connected to the Internet or a private network. It associates various information with domain names assigned to each of the participating entities. A Domain Name Service resolves queries for these names into IP addresses for the purpose of locating computer

¹ [https://en.wikipedia.org/wiki/IPv6#Stateless_address_autoconfiguration_\(SLAAC\)](https://en.wikipedia.org/wiki/IPv6#Stateless_address_autoconfiguration_(SLAAC))

	services and devices worldwide. By providing a worldwide, distributed keyword-based redirection service, the Domain Name System is an essential component of the functionality of the Internet.
DNS over HTTPS	is a domain name system, computer distributed system for obtaining information about domains using secure data transfer between internet nodes resolution via the HTTPS protocol. The method is to increase user privacy and security by preventing eavesdropping and manipulation of DNS data by man-in-the-middle attacks. The standard is described in RFC 8484 ² .
DNS over TLS	is a domain name system, computer distributed system for obtaining information about domains using secure data transfer between internet nodes. The standard is described in RFC 7858 ³ and RFC 8310 ⁴ .
DNS rebinding	is a method of manipulating resolution of domain names. In this attack, a malicious web page causes visitors to run a client-side script that attacks machines elsewhere on the network. This attack can be used to breach a private network by causing the victim's web browser to access computers at private IP addresses and return the results to the attacker.
Energy-Efficient Ethernet	also Green Ethernet is a set of enhancements to the twisted-pair and backplane Ethernet family of computer networking standards that reduce power consumption during periods of low data activity. The intention is to reduce power consumption by 50% or more, while retaining full compatibility with existing equipment.
Encapsulating Security Payload	is a member of the <i>IPsec</i> protocol suite. In IPsec it provides origin authenticity, integrity, and confidentiality protection of packets.
End-user license agreement	is a legal contract between a software application author or publisher and the user of that application.
Fast Transition	is a new concept of roaming where the initial handshake with the new AP is done even before the client roams to the target AP.
Fair Queuing Controlled Delay	is queuing discipline that combines Fair Queuing with the CoDel AQM scheme. FQ_Codel uses a stochastic model to classify incoming packets into different flows and is used to provide a fair share of the bandwidth to all the flows using the queue. Each such flow is managed by the CoDel queuing discipline.
Fully Qualified Domain Name	is a domain name that specifies its exact location in the tree hierarchy of the <i>Domain Name System</i> . It specifies all domain levels, including the top-level domain and the root zone. A fully qualified domain name is distinguished by its lack of ambiguity: it can be interpreted only in one way.
Full Cone NAT	also Static NAT, one to one NAT, port forwarding

² <https://tools.ietf.org/html/rfc8484>

³ <https://tools.ietf.org/html/rfc7858>

⁴ <https://tools.ietf.org/html/rfc8310>

	<p>is the only type of NAT where the port is permanently open and allows inbound connections from any external host. A full cone NAT maps a public IP address and port to a LAN IP and port. Any external host can send data to the LAN IP through the mapped NAT IP and port. If it tries to send data through a different port it will fail. Static NAT is required when a network device on a private network must be accessible from the Internet.</p>
Generic Routing Encapsulation	<p>is a tunneling protocol developed by Cisco Systems that can encapsulate a wide variety of network layer protocols inside virtual point-to-point links over an Internet Protocol network.</p>
Hash Message Authentication Code	<p>is a specific construction for calculating a message authentication code (MAC) involving a cryptographic hash function in combination with a secret cryptographic key. As with any MAC, it may be used to simultaneously verify both the data integrity and the authentication of a message. Any cryptographic hash function, such as MD5 or SHA-1, may be used in the calculation of an HMAC; the resulting MAC algorithm is termed HMAC-MD5 or HMAC-SHA1 accordingly. The cryptographic strength of the HMAC depends upon the cryptographic strength of the underlying hash function, the size of its hash output, and on the size and quality of the key.</p>
HTTP Proxy	<p>Hypertext Transfer Protocol (HTTP) and HTTPS (HyperText Transfer Protocol Secure) Proxy is a proxy server that uses the Hypertext Transfer Protocol (HTTP) to connect to a web server and a client (browser). HTTPS (HyperText Transfer Protocol Secure) proxies work with SSL (Secure Socket Layer), which is an additional layer of security imposed on HTTP to protect its data. It supports security certificates, which are used to end-to-end encrypt traffic and prevent data interception during transmission. A proxy server that supports SSL establishes a secure connection to the client and to the web server to avoid any outside interference.</p>
Idempotence	<p>is the property of certain operations in computer science, that they can be applied multiple times without changing the result beyond the initial application.</p>
Inter-Access Point Protocol	<p>is a standard IEEE 802.11F protocol exchange of service information for data transfer between access points. The protocol is responsible for combining the wireless network, secure data exchange between the current access point and the new access point in the specified period.</p>
Internet Control Message Protocol	<p>is a message control and error-reporting protocol between a host server and a gateway to the Internet. ICMP uses Internet Protocol (IP) datagrams, but the messages are processed by the IP software and are not directly apparent to the application user.</p>
Internet Control Message Protocol version 6	<p>is the implementation of the Internet Control Message Protocol (ICMP) for Internet Protocol version 6 (IPv6). ICMPv6 is an integral part of IPv6 and performs error reporting and diagnostic functions. ICMPv6 is defined in RFC 4443⁵.</p>

⁵ <https://datatracker.ietf.org/doc/html/rfc4443>

Internet Group Management Protocol	is an Internet protocol that provides a way for an Internet computer to report its multicast group membership to adjacent routers. Multicasting allows one computer on the Internet to send content to multiple other computers. Multicasting can be used for streaming media to an audience that has "tuned in" by setting up a multicast group membership.
Internet Key Exchange	is a standard protocol IPsec, used to ensure the safety of interaction in virtual private networks. IKE purpose is to establish a secure authenticated communication channel by using the <i>Diffie-Hellman</i> key exchange algorithm to generate a shared secret key to encrypt further <i>IPsec</i> communications.
Internet Protocol	is the principal communications protocol in the Internet. The first major version of IP, Internet Protocol Version 4 (IPv4), is the dominant protocol of the Internet. Its successor is Internet Protocol Version 6 (IPv6).
Internet Protocol Control Protocol	is a network control protocol for establishing and configuring Internet Protocol over a <i>Point-to-Point Protocol</i> (PPP) link. IPCP uses the same packet exchange mechanism as the Link Control Protocol. IPCP packets may not be exchanged until PPP has reached the Network-Layer Protocol phase, and any IPCP packets received before this phase is reached should be silently discarded.
Internet Protocol Security	commonly called IPsec, is a protocol suite for secure <i>Internet Protocol</i> (IP) communications by authenticating and encrypting each IP packet of a communication session. IPsec includes protocols for establishing mutual authentication between agents at the beginning of the session and negotiation of cryptographic keys to be used during the session. IPsec can be used in protecting data flows between a pair of hosts (host-to-host), between a pair of security gateways (network-to-network), or between a security gateway and a host (network-to-host). Internet Protocol security (IPsec) uses cryptographic security services to protect communications over Internet Protocol (IP) networks. IPsec supports network-level peer authentication, data origin authentication, data integrity, data confidentiality (encryption), and replay protection.
IPsec Passthrough	is technology that allows VPN-traffic to pass through NAT.
IPsec Security Association	is fundamental to IPsec. An SA is a relationship between two or more entities that describes how the entities will use security services to communicate securely. Each IPsec connection can provide encryption, integrity, authenticity, or all three. When the security service is determined, the two IPsec peers must determine exactly which algorithms to use (for example, DES or 3DES for encryption, MD5 or SHA for integrity). After deciding on the algorithms, the two devices must share session keys. The Security Association is the method that IPsec uses to track all the particulars concerning a given IPsec communication session.
IP in IP	is an IP tunneling protocol that encapsulates one IP packet in another IP packet.

IPv6CP	is responsible for configuring, enabling, and disabling the IPv6 protocol modules on both ends of the <i>Point-to-Point</i> (PPP) link. IPv6CP uses the same packet exchange mechanism as the <i>Link Control Protocol</i> . IPv6CP packets may not be exchanged until PPP has reached the Network-Layer Protocol phase. IPv6CP packets received before this phase is reached should be silently discarded.
Layer 2 Tunneling Protocol	is a tunneling protocol used to support virtual private networks (VPNs) or as part of the delivery of services by ISPs. It does not provide any encryption or confidentiality by itself. Rather, it relies on an encryption protocol that it passes within the tunnel to provide privacy.
Link Control Protocol	<p>establishes, configures, and tests data-link Internet connections in the <i>Point-to-Point Protocol</i> (PPP). Before establishing communications over a point-to-point link, each end of the PPP link must send out LCP packets. The LCP packet either accepts or rejects the identity of its linked peer, agrees up on packet size limits, and looks for common misconfiguration errors.</p> <p>LCP packets are divided into three classes:</p> <ul style="list-style-type: none">• Link configuration packets used to establish and configure a link• Link termination packets used to terminate a link• Link maintenance packets used to manage and debug a link
Link Layer Discovery Protocol	<p>is a vendor-neutral link layer protocol in the Internet Protocol Suite used by network devices for advertising their identity, capabilities, and neighbors on an IEEE 802 local area network, principally wired Ethernet.</p> <p>Information gathered with LLDP is stored in the device as a management information database (MIB) and can be queried with the Simple Network Management Protocol (SNMP).</p>
Low-Density Parity-Check	is a linear error correcting code, a method of transmitting a message over a noisy transmission channel. An LDPC is constructed using a sparse bipartite graph. LDPC codes are capacity-approaching codes, which means that practical constructions exist that allow the noise threshold to be set very close (or even arbitrarily close to the BEC) to the theoretical maximum (the Shannon limit) for a symmetric memoryless channel. The noise threshold defines an upper bound for the channel noise, up to which the probability of lost information can be made as small as desired. Using iterative belief propagation techniques, LDPC codes can be decoded in time linear to their block length.
Master Browser	is a tool that provides information about, and typically a way to access, SMB/CIFS files and printer shares. It is responsible for the browse host list within its respective subnet and portion of the domain on its subnet. Is used to host information of other Windows computers within the same Windows domain or TCP/IP network.
Maximum Receive Unit	is the maximum size (in bytes) of the frame, which can be received at the data link layer of communication protocol.

Maximum Segment Size	is a parameter of the options field of the TCP header that specifies the largest amount of data, specified in bytes, that a computer or communications device can receive in a single TCP segment. It does not count the TCP header or the IP header.
Maximum Transmission Unit	is the largest size packet or frame, specified in octets (eight-bit bytes), that can be sent in a packet- or frame-based network such as the Internet. The Internet's Transmission Control Protocol (TCP) uses the MTU to determine the maximum size of each packet in any transmission. Most computer operating systems provide a default MTU value that is suitable for most users. In general, Internet users should follow the advice of their Internet service provider (ISP) about whether to change the default value and what to change it to.
Microsoft Point-to-Point Encryption	encrypts data in Point-to-Point Protocol based dial-up connections or Point-to-Point Tunneling Protocol (PPTP) connections. 128-bit key (strong), 56-bit key, and 40-bit key (standard) MPPE encryption schemes are supported. MPPE provides data security for the PPTP connection that is between the VPN client and the VPN server.
Modular Wi-Fi System	a system that allows several Keenetic devices to be combined into a single Internet space distributed over an area. One of the devices is defined as the controller, the others as the members.
Multicast DNS	is a way of using familiar DNS programming interfaces, packet formats and operating semantics, in a small network where no conventional DNS server has been installed. The mDNS protocol uses IP multicast UDP packets, and is implemented by the Apple Bonjour and open source Avahi software packages.
Network Access Control List	rules that are applied to IP interfaces that are available on a router, each with a list of hosts or networks that are permitted or denied to use the service. Access control lists can be configured to control both inbound and outbound traffic.
Network Flow	network protocol for network traffic accounting, uses UDP or SCTP protocols to send traffic data to the collector. Collector is an application that runs on a server and collects statistics received from sensors. A sensor is a device that collects traffic statistics and sends it to a collector. The sensor can be a Cisco third-level router or switch.
NEXTDNS	service of NextDNS protects you from all kinds of security threats, blocks ads and trackers on websites and in apps and provides a safe and supervised Internet for kids — on all devices and on all networks.
Network Time Protocol	is a protocol that is used to synchronize computer clock times in a network of computers. Developed by David Mills at the University of Delaware, NTP is now an Internet standard. In common with similar protocols, NTP uses Coordinated Universal Time (UTC) to synchronize computer clock times to a millisecond, and sometimes to a fraction of a millisecond.
Network Traffic Classification Engine	also DPI, Deep Deep Packet Inspection

	<p>is a technology for accumulating statistics and inspecting network packets based on their contents. Deep Packet Inspection analyzes not only packet headers, but also the full content of traffic at OSI layers 2 and above.</p> <p>Deep Packet Inspection can determine which network application has generated or received data, collecting detailed connection statistics for each device and application individually. With quality of service Deep Packet Inspection controls the transmission speed of individual packets by raising or lowering it.</p> <p>The Traffic Classification Engine component operates completely independently and does not make any calls to external services.</p>
Open Package	<p>lightweight package management system. It is intended for use on embedded Linux devices and is used in this capacity in the OpenWrt⁶ and Entware⁷ projects. Opkg packages use the .ipk extension.</p>
Opportunistic Wireless Encryption	<p>is an extension of the IEEE 802.11 standard, similar encryption method Simultaneous Authentication of Equals (SAE). This encryption method provides users with better protection when connected to an open Wi-Fi network.</p>
Password Authentication Protocol	<p>is an authentication protocol that uses a password. PAP is used by Point-to-Point Protocol to validate users before allowing them access to the remote network. PAP transmits unencrypted ASCII passwords over the network and is therefore considered insecure.</p>
Protected Extensible Authentication Protocol	<p>is a protocol that encapsulates the Extensible Authentication Protocol (EAP) within an encrypted and authenticated Transport Layer Security (TLS) tunnel. The purpose was to correct deficiencies in EAP; EAP assumed a protected communication channel, such as that provided by physical security, so facilities for protection of the EAP conversation were not provided.</p>
Perfect Forward Secrecy	<p>is a property of secure communication protocols: a secure communication protocol is said to have forward secrecy if compromise of long-term keys does not compromise past session keys. PFS protects past sessions against future compromises of secret keys or passwords.</p>
Ping Check	<p>performs ICMP and TCP based tests to verify if the internet connection is working fine. Test results may be used to switch between primary and backup connections.</p>
Point-to-Point Protocol	<p>is a protocol used to establish a direct connection between two nodes. It can provide connection authentication, transmission encryption, and compression. PPP is used over many types of physical networks including serial cable, phone line, cellular telephone, specialized radio links, and fiber optic links. After the link has been established, additional network (layer 3) configuration may take place. Most commonly, the Internet Protocol Control Protocol (IPCP) is used.</p>

⁶ <https://www.openwrt.org/>

⁷ <https://github.com/Entware/Entware>

Public Land Mobile Network	is a combination of wireless communication services offered by a specific operator in a specific country. PLMN typically consists of several cellular technologies like GSM/2G, UMTS/3G, LTE/4G, offered by a operator cellular network.
Preamble	<p>it is the first part of the Physical Layer Convergence Protocol/Procedure (PLCP) Protocol Data Unit (PDU). A header is the remaining part of the data packets and has more information identifying the modulation scheme, transmission rate, and length of time to transmit the whole data frame.</p> <p>The Preamble type in IEEE 802.11 based wireless communication defines the length of the CRC (Cyclic Redundancy Check) block for communication between the Access Point and roaming wireless adapters.</p> <p>Long preamble:</p> <ul style="list-style-type: none">• PLCP with long preamble is transmitted at 1 Mbps regardless of transmit rate of data frames• Total long preamble transfer time is a constant at 192 usec• Compatible with legacy IEEE 802.11 systems running at 1 and 2 Mbps <p>Short preamble:</p> <ul style="list-style-type: none">• Preamble is transmitted at 1 Mbps and header at 2 Mbps• Total short preamble transfer time is a constant at 96 usec• Not compatible with legacy IEEE 802.11 systems operating at 1 and 2 Mbps
Protected Management Frames	IEEE 802.11w is the Protected Management Frames standard for the IEEE 802.11 family of standards. This functionality is necessary to improve security by ensuring data confidentiality in control frames.
Protocol Field Compression	is a method to negotiate the compression of the PPP Protocol field. By default, all implementations MUST transmit packets with two octet PPP Protocol fields.
Pseudo-Random Function	is similar to an integrity algorithm, but instead of being used to authenticate messages, it is only used to provide randomness for purposes such as keying material. PRFs are primarily used with an authenticated encryption algorithm type such as AES-GCM.
Radio Resource Management	is the system level management of co-channel interference, radio resources, and other radio transmission characteristics in wireless communication systems. RRM includes control parameters such as transmit power, user allocation, beamforming, data rates, handover criteria, modulation scheme, coding scheme errors.

Remote Authentication in Dial-In User Service	is a protocol to implement authentication, authorization, and resource collection. It is used for charging the used resources by a specific user. Used to authenticate users on open Wi-Fi wireless networks.
Remote Procedure Call	is a protocol that one program can use to request a service from a program located in another computer in a network without having to understand network details. (A procedure call is also sometimes known as a function call or a subroutine call.) RPC uses the client/server model. The requesting program is a client and the service-providing program is the server. Like a regular or local procedure call, an RPC is a synchronous operation requiring the requesting program to be suspended until the results of the remote procedure are returned.
Restricted NAT	also Dynamic NAT works in the same way as a <i>Full Cone NAT</i> but applies additional restrictions based on an IP address. The internal client must first have sent packets to IP address (X) before it can receive packets from X. In terms of restrictions the only requirement is that packets come in on the mapped port and from an IP address that the internal client has sent packets to.
Secure Socket Tunneling Protocol	is a type of VPN tunnel that utilizes an SSL 3.0 channel to send PPP or L2TP traffic. SSL allows for transmission and data encryption, as well as traffic integrity checking. Due to this, SSTP can pass through most firewalls and proxy servers by using the SSL channel over TCP port 443.
Service Set Identifier	is a sequence of characters that uniquely names a wireless local area network (WLAN). An SSID is sometimes referred to as a "network name". This name allows stations to connect to the desired network when multiple independent networks operate in the same physical area.
Simple Network Time Protocol	is an Internet Protocol (IP) used to synchronize the clocks of networks of computers. SNTP is based upon the TCP/IP protocol suite. It is an application layer time protocol, part of the Network Time Protocol base protocol. Along with NTP, SNTP communicates using the User Datagram Protocol (UDP). By default, UDP port 123 is used. SNTP can operate on IPv4 and IPv6 networks. The standard is described in RFC 4330 ⁸ .
SOCKS	is an Internet protocol that exchanges network packets between a client and server through a proxy server. SOCKS5 optionally provides authentication so only authorized users may access a server. SOCKS server proxies TCP connections to an arbitrary IP address, and provides a means for UDP packets to be forwarded.
Shared key	is a mode by which a computer can gain access to a wireless network that uses the Wired Equivalent Privacy protocol. With Shared Key, a computer equipped with a wireless modem can fully access any WEP network and exchange encrypted or unencrypted data.

⁸ <https://www.rfc-editor.org/rfc/rfc4330>

Short Message Service	is a text messaging service component of most telephone, Internet, and mobile device systems. It uses standardized communication protocols to enable mobile devices to exchange short text messages.
Simple Network Management Protocol	is an Internet-standard protocol for collecting and organizing information about managed devices on IP networks and for modifying that information to change device behavior. Devices that typically support SNMP include routers, switches, servers, workstations, printers, modem racks and more.
SSH File Transfer Protocol	is a application layer protocol for transferring files over a reliable and secure connection over TCP port 22.
Transmission Control Protocol	is a core protocol of the <i>Internet Protocol</i> suite. TCP provides reliable, ordered, and error-checked delivery of a stream of octets between applications running on hosts communicating over an IP network.
Temporal Key Integrity Protocol	is a security protocol used in the IEEE 802.11 wireless networking standard. TKIP was designed by the IEEE 802.11i task group and the Wi-Fi Alliance as an interim solution to replace WEP without requiring the replacement of legacy hardware.
Universal Access Method	is a method that allows a subscriber to access a wireless Wi-Fi network. The Internet browser will open a login page where the user should fill in his credentials before he can access. UAM uses the RADIUS client and the RADIUS server for authorization.
User Datagram Protocol	is a core protocol of the <i>Internet Protocol</i> suite. UDP uses a simple connectionless transmission model with a minimum of protocol mechanism. It has no handshaking dialogues, and thus exposes the user's program to any unreliability of the underlying network protocol. There is no guarantee of delivery, ordering, or duplicate protection. Time-sensitive applications often use UDP because dropping packets is preferable to waiting for delayed packets, which may not be an option in a real-time system.
udpxy	is a UDP-to-HTTP multicast traffic relay daemon: it forwards UDP traffic from a given multicast subscription to the requesting HTTP client.
Universal Plug and Play	is a standard that uses Internet and Web protocols to enable devices such as PCs, peripherals, intelligent appliances, and wireless devices to be plugged into a network and automatically know about each other. With UPnP, when a user plugs a device into the network, the device will configure itself, acquire a TCP/IP address, and use a discovery protocol based on the HTTP to announce its presence on the network to other devices.
Unstructured Supplementary Service Data	is a communications protocol used by cellular telephones to communicate with the mobile network operator's computers. USSD is commonly used by prepaid cellular phones to query the available balance.
Virtual LAN	is a local area network with a definition that maps workstations on some other basis than geographic location (for example, by department, type of user, or primary application). The virtual LAN

	controller can change or add workstations and manage loadbalancing and bandwidth allocation more easily than with a physical picture of the LAN.
Web Distributed Authoring and Versioning	is an extension of the Hypertext Transfer Protocol (HTTP) that allows clients to perform remote Web content authoring operations. Supports web server authentication and SSL encryption for HTTPS using the default TCP port 443.
Web Proxy Auto-Discovery Protocol	is a method used by clients to locate the URL of a configuration file using DHCP and/or DNS discovery methods. Once detection and download of the configuration file is complete, it can be executed to determine the proxy for a specified URL.
WireGuard	is a free and open-source software application and virtual private network (VPN) protocol to create secure point-to-point connections in routed configurations. WireGuard protocol uses modern cryptography options Curve25519 for key exchange, ChaCha20 for encryption, and Poly1305 for data authentication, SipHash for hashtable keys, and BLAKE2s for hashing. Supports layer 3 for both protocols IPv4 and IPv6.
Wi-Fi Multimedia	<p>previously known as Wireless Multimedia Extensions (WME), is a subset of the 802.11e wireless LAN (WLAN) specification that enhances quality of service (QoS) on a network by prioritizing data packets according to four access categories (AC). Ranging from highest priority to lowest, these categories are: voice (AC_VO), video (AC_VI), best effort (AC_BE), and background (AC_BK).</p> <p>WMM also features a Power Save certification that helps small devices on a network conserve battery life. Power Save allows small devices, such as phones and PDAs, to transmit data while in a low-power "dozing" status. The certification gives software developers and hardware manufacturers a way to fine-tune battery use in the ever-increasing number of small devices that have Wi-Fi capabilities.</p>
Wi-Fi Protected Access	<p>Wi-Fi Protected Access II (WPA2), and Wi-Fi Protected Access 3 (WPA3) are three security protocols and security certification programs developed by the Wi-Fi Alliance to secure wireless computer networks. The Alliance defined these in response to serious weaknesses researchers had found in the previous system, WEP. WPA advantages are enhanced data security and tightened access control for wireless networks. Important characteristic is the compatibility between multiple wireless devices at the hardware level as well as at software level.</p> <p>WPA3 uses 128-bit encryption in WPA3-Personal mode (192-bit in WPA3-Enterprise). The WPA3 standard also replaces the Pre-Shared Key exchange with Simultaneous Authentication of Equals as defined in IEEE 802.11-2016 resulting in a more secure initial key exchange in personal mode.</p> <p>WPA Enterprise is a protocol-based authentication mode IEEE 802.1X using an external authentication server RADIUS and local client Supplicant.</p>

Wi-Fi Protected Setup	provides an industry-wide mechanism to set up and configure networks for home and small office (SOHO) environments. Wi-Fi Protected Setup enables typical users who possess little understanding of traditional Wi-Fi configuration and security settings to easily configure new wireless networks, to add new devices and to enable security.
Wired Equivalent Privacy	is a security algorithm for IEEE 802.11 wireless networks. WEP, recognizable by the key of 10 or 26 hexadecimal digits, is widely in use and is often the first security choice presented to users by router configuration tools. In 2004, with the ratification of the full 802.11i standard (i.e. WPA2), the IEEE declared that both WEP-40 and WEP-104 have been deprecated.
Wireless Internet Service Provider	<p>is an Internet service provider (ISP) that allows subscribers to connect to a server at designated hotspots (access points) using a wireless connection such as Wi-Fi. This type of ISP offers Broadband service and allows subscriber computers, called stations, to access the Internet and the Web from anywhere within the zone of coverage provided by the server antenna. This is usually a region with a radius of several kilometers.</p> <p>The simplest WISP is a basic service set (BSS) consisting of one server and numerous stations all linked to that server by wireless. More sophisticated WISP networks employ the extended service set (ESS) topology, consisting of two or more BSSs linked together at access points (APs). Both BSS and ESS are supported by the IEEE 802.11b specification.</p>
Extended Authentication	or XAUTH, provides an additional level of authentication by allowing the IPsec gateway to request extended authentication from remote users, thus forcing remote users to respond with their credentials before being allowed access to the VPN.

Interface Hierarchy

Figure A.1. Core interfaces

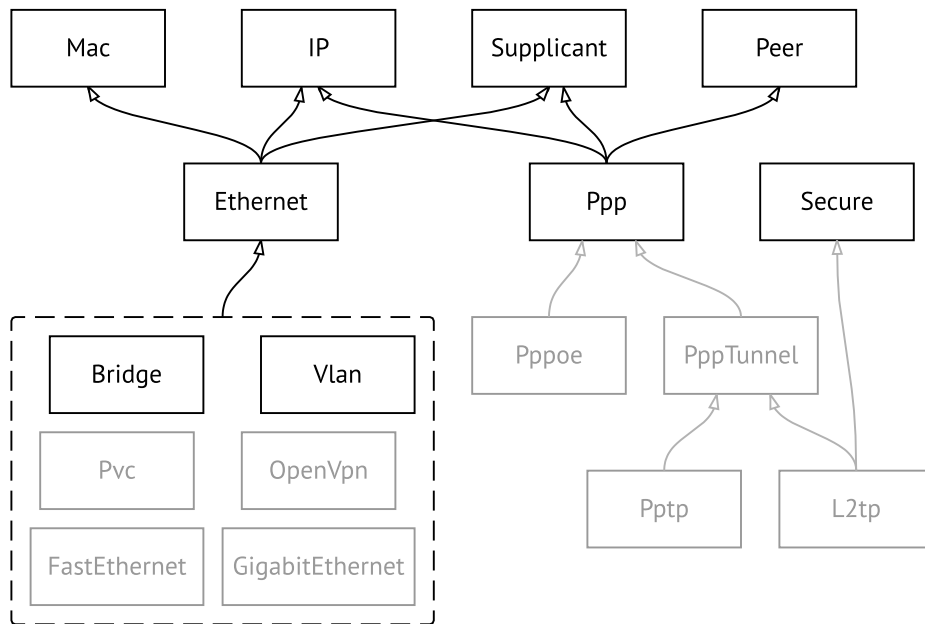


Figure A.2. Tunnel interfaces

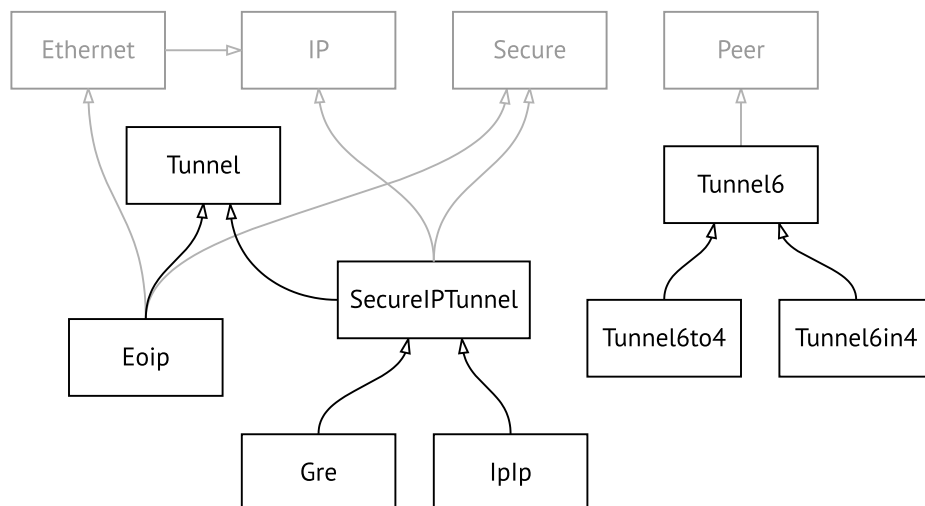


Figure A.3. USB interfaces


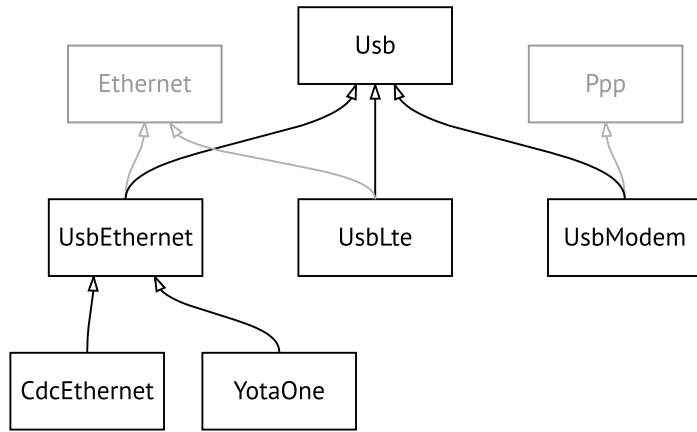


Figure A.4. Wi-Fi interfaces

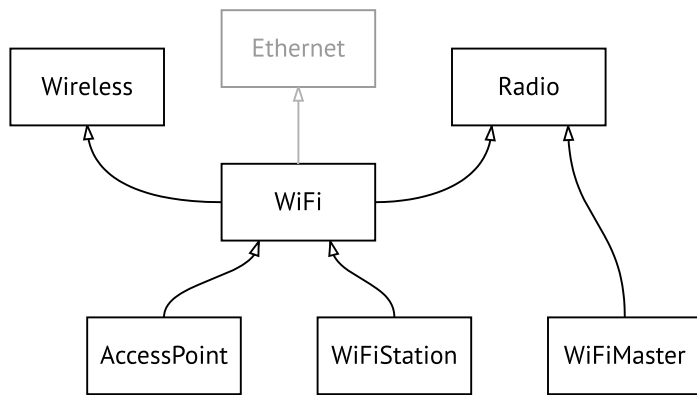

B.1 REST Core Interface

Titan HTTP API lets you develop a custom application, that will access Titan settings using simple HTTP methods, such as GET and POST.

The base URL for all operations is `/rci`, that simply stands for REST Core Interface. It replaces the [XML Core Interface](#), which is now deprecated but continues to be functional.

B.1.1 Resource Location

RCI is based on the Titan command tree. Device settings are mapped to RCI resources in such a way that every “a b c” command corresponds to the `/rci/a/b/c` URL.

As a result, hereby [Command Reference](#) gives you a complete picture of all RCI resources and their parameters. The words “command” and “resource” are used interchangeably in this manual.

Parameters are listed in the Arguments table of each command. They can be passed as part of the request using HTTP query: `/rci/a/b/c?parameter=value`. Unless otherwise specified for a certain command, query parameters are optional. Multiple parameters should be separated by ampersand (&) characters.

Parameters can also be passed in the POST request body, as described in [Section B.1.3 on page 690](#).

B.1.2 Methods

Method semantics depend on the type of resource. There are three types of resources in RCI:

- Settings
- Actions
- Background processes

B.1.2.1 Settings

Settings are device configuration elements. You can view, modify, or delete settings using standard HTTP methods.

GET Retrieve settings.

- POST Create or modify settings.
- DELETE Delete settings (reset to default).

B.1.2.2 Actions

Actions are commands that do not modify settings. Actions run instantly as opposed to background processes, see also [Section B.1.2.3 on page 690](#)

- GET Mapped to POST for /rci/show. Not applicable to other actions.
- POST Execute a command and return its output.
- DELETE Not applicable.

B.1.2.3 Background processes

Background processes are instances that can be created and polled for updates. Such processes are bound to a particular session, and cannot be accessed from anywhere else.

- GET Retrieve updates from existing process. Returns 404 if there is no such process.
- POST Create a background process.
- DELETE Terminate a background process.

B.1.3 Data Format

HTTP POST requests must be submitted in a free-form JSON,¹ that is interpreted as a batch of parameters and nested settings, depending on the data type. Conversely, HTTP GET returns JSON data that was previously POSTed to the specified resource.

The primary data type is Object. This is unordered collection of key-value pairs, enclosed in curly brackets {}. Each key must be unique within an object.

Objects can be put one into another, or be combined in arrays as detailed in [Section B.1.3.2 on page 691](#) and [Section B.1.3.3 on page 691](#)

B.1.3.1 Parameters

String, boolean and number values of an object are interpreted as parameters of the resource being addressed.

```
{  
  "parameter": value  
}
```

Example B.1. Set hotspot policy

Set policy "permit" for the Home network. Refer to [Section 3.44.8 on page 333](#) to see how "interface" and "access" parameters are mentioned in the Arguments table.

¹In compliance with RFC 7159.

```
POST /rci/ip/hotspot/policy HTTP/1.1
Host: 192.168.1.1
Content-length: 48
Content-type: application/json

{
  "interface": "Home",
  "access": "permit"
}
```

B.1.3.2 Nested resources

Object and array values of a parent object are interpreted as nested resources.

```
{
  "command": {
    "parameter": value
  }
}
```

In particular, empty object denotes a command with no parameters.

```
{
  "command": {}
}
```

Using this rule, you can address multiple resources at a time. RCI engine will process your request from top to bottom, recursing over the JSON structure. Parameters of a parent resource apply to all nested resources within the nearest surrounding scope.

Example B.2. Create and enable a PPP interface

Call “interface” to create a new PPPoE connection, as described in [Section 3.29 on page 145](#), and enable it with “interface up”. The “name” parameter applies to both “interface” and “up”.

```
POST /rci HTTP/1.1
Host: 192.168.1.1
Content-length: 39
Content-type: application/json

{"interface":{"name":"PPPoE1","up":{}}}
```

B.1.3.3 Arrays

Arrays can be used to operate on a specific resource multiple times. The important thing is that arrays preserve the order of their elements, in contrast to object members.

```
{
  "command": [
    {"parameter1": value1},
    {"parameter2": value2} ]
}
```

B.1.3.4 Response structure

The structure of POST output strictly corresponds to input. RCI reproduces input arrays and nested objects, and replaces input parameters with output data. This approach lets you locate any part of the response using a resource name.

Example B.3. Show version and interface Home

Run two different “show” commands in a certain order.

```
POST /rci/show HTTP/1.1
Host: 192.168.1.1
Content-length: 46
Content-type: application/json

[{"version":{}}, {"interface":{"name":"Home"}}]
```

Response is an array of two elements, in accordance with the request.

```
[
  {
    "version": {
      "release": "2.12.A.1.0-1",
      "arch": "mips",
      "ndm": {
        "exact": "0-cbf8590",
        "cdate": "15 Jan 2018"
      },
      "bsp": {
        "exact": "0-06ee10b",
        "cdate": "15 Jan 2018"
      },
      "ndw": {
        "version": "0.2.1",
        "features": "wifi_button,single_usb_port,dual_image",
        "components": "base,cloudcontrol,..."
      },
      "manufacturer": "Keenetic Ltd.",
      "vendor": "Keenetic",
      "series": "KN",
      "model": "4G (KN-1210)",
      "hw_version": "10128000",
      "hw_id": "KN-1210",
      "device": "4G",
      "class": "Internet Center"
    },
    "interface": {
      "id": "Bridge0",
      "index": 0,
      "type": "Bridge",
      "description": "Home network",
      "interface-name": "Home",
    }
  }
]
```

```

    "link": "up",
    "connected": "yes",
    "state": "up",
    "mtu": 1500,
    "tx-queue": 1000,
    "address": "192.168.1.1",
    "mask": "255.255.255.0",
    "uptime": 2621,
    "global": false,
    "security-level": "private",
    "mac": "50:ff:20:00:00:08",
    "auth-type": "none"
  }
}
]

```

B.2 XML Core Interface

Warning: XML Core Interface is deprecated and is maintained for backward compatibility.

Titan provides an HTTP XML API. The API is implemented as /ci resource that accepts POST XML requests and returns XML after the user agent has been authenticated.

If Titan is reset to factory defaults, authentication is not required.

Example B.4. XML API call

Execute the **"show interface"** command for the WAN interface named ISP. This interface exists by default in Titan.

```

POST /ci HTTP/1.1
Host: 192.168.1.1
Connection: keep-alive
Content-Length: 177
Origin: http://192.168.1.1
User-Agent: Mozilla/5.0 (Windows NT 6.1; WOW64)
Content-Type: application/xml
Referer: http://192.168.1.1/

<packet ref="/">
  <request id="1" ref="former.ifaces[load]">
    <command name="show interface">
      <name>ISP</name>
    </command>
  </request>
</packet>

```

The device responds with the current status of ISP:

```

HTTP/1.0 200 OK
Server: Ag [47]
Set-Cookie: _authorized=*; path=/

```

```

Content-type: text/xml
Content-Length: 760

<packet>
  <response id="1">
    <interface name="ISP">
      <mac>ec:43:f6:d3:22:d9</mac>
      <id>GigabitEthernet1</id>
      <index>2</index>
      <type>VLAN</type>
      <description>Broadband connection</description>
      <link>down</link>
      <connected>no</connected>
      <state>up</state>
      <mtu>1500</mtu>
      <tx-queue>1000</tx-queue>
      <global>yes</global>
      <defaultgw>no</defaultgw>
      <priority>700</priority>
      <security-level>public</security-level>
      <auth-type>none</auth-type>
    </interface>
    <message code="268370345" ident="Network::Interface::Base"
source="">done</message>
  </response>
</packet>

```

The `<request>` element is always sent from the user agent to the device. The device always responds with a `<response>`. The `id` attribute can be used to establish one-to-one correspondence between them.

Figure B.1. Request Element

```

<request id="identifier">
  <!-- request content -->
</request>

```

Figure B.2. Response Element

```

<response id="identifier">
  <!-- response content -->
</response>

```

There are two basic types of XML requests:

Command Request	Execute a specific command on the device. Available commands are described in Chapter 3 on page 39
Configuration Request	Get parameters that have been configured by a specific command.

B.2.1 Command Request

Command request can be used to execute a specific command on the device.

Figure B.3. Command Request

```
<request id="identifier">
  <command name="command">
    <no/>
    <argument>value</argument>
    ...
  </command>
</request>
```

command Space separated name of the command. Available commands are listed in [Chapter 3 on page 39](#).

argument Name of the argument. Available arguments for each command are listed in [Chapter 3 on page 39](#). Some commands do not require any arguments.

value Value of the argument.

no Optional element that is used to negate the action of the command. It has the same effect as the prefix *no*, see [Section 2.3 on page 35](#).

B.2.2 Configuration Request

Configuration request can be used to get configured parameters. Web interface uses this kind of request to fill out the HTML forms.

Figure B.4. Configuration Request

```
<request id="identifier">
  <config name="command" />
</request>
```

B.2.3 Request Packet

Multiple requests can be arranged in packets to optimize the performance.

Figure B.5. Request Packet

```
<packet>
  <request id="1">
    <!-- request content -->
  </request>
  <request id="2">
    <!-- request content -->
  </request>
  ...
</packet>
```

Response elements are returned as a packet. Response identifiers are used to bind response elements to requests. If there is no response, an empty `<response/>` element is returned.

Figure B.6. Response Packet

```
<packet>
  <response id="1">
    <!-- response content -->
  </response>
  <response id="2"/>
    <!-- no response for id=2 -->
    . . .
</packet>
```


NVOX CLI commands

NVOX is an IP telephony application designed to work with Keenetic Linear USB module. Allows you to connect telephones to your Keenetic router to make and receive calls over the Internet using SIP.

Why the prefix substitution rule is used

In some cases, in incoming calls, the calling numbers are defined in a format that is not compatible with the dialing rules of the IP telephony operator. This makes it impossible to call back the number from the phone's call log.

For example: during an incoming call on the phone display, you can see +393921234567 and to call back the subscriber, you need to dial 3921234567. In this case, the prefix substitution rule **(+39>)x**. can remove **+39** from the caller's number. With this rule, when a call comes in, the handset display shows the number 3921234567, compatible with the operator's dialing rules.

Syntax of prefix substitution rules

01234567890*#+ABCDx[]()|-> — allowed characters.

T — waiting for the next digit of the number.

x — any digit from 0 to 9.

[146] — any of the numbers in square brackets (1, 4, or 6).

[1-6] — any of the digits in the range specified in square brackets (1,2,3,4,5 or 6).

(8>+7) — replacement/substitution/deletion. To the left of the > symbol, there is a sequence of digits that should be replaced with the sequence to the right of the >. If only the sequence on the left is specified, it will be deleted from the dialed number. If only the sequence on the right is specified, it will be added. The expression must be enclosed in parentheses.

2. — the digit to the left of the dot is repeated any number of times.

The | character separates two or more prefix replacement rules in a string.

Examples of a prefix substitution rules

(+7>8)49(589)x. — in numbers with the prefix **+7** and code **495**, **498** or **499** the prefix changes to 8, the rest of the number remains unchanged.

8[49]xxxxxxxxxx — any number with 11 digits, the first digit of which is **8** and the second digit of which is **4** or **9**.

10xx — any four-digit number in which the first digits are **10**.

xx#** — a four-digit sequence in which the first character is **, followed by any two digits and the character **#**.

[1-79]xxxxxx — any number of seven digits in which the first digit is any digit except 8.

x. — any number consists of digits from 0 to 9.

0T|00T|000 — the numbers 0, 00 or 000. The **T** symbol is used to wait for dialing to continue after dialling 0 and 00. It should be used if you need to dial in conversational mode (press the call button, then dial the number).

(8>+7)x. — in any number, the first digit of **8** will be replaced by **+7**.

(*2>84951234567) — dialing ***2** will send a call to 84951234567. You can configure a speed dialing.

8[49]xxxxxxxxxx|10xx|*xx# — the three rules discussed above are written on one line, separated by **|**. The telephone exchange checks such rules one by one, from left to the right.

C.1 nvox

Description Access to a group of commands to manage the telephone station.

Prefix no No

Change settings No

Multiple input No

Group entry (nvox)

Synopsis (config)> **nvox**

Example

```
(config)> nvox
Core::Configurator: Done.
(nvox)>
```

History

Version	Description
2.00	The nvox command has been introduced.

C.2 nvox call-history clear

Description Delete all entries from the call log.

Prefix no No

Change settings No

Multiple input No

Synopsis | (nvox)> **call-history clear**

Example (nvox)> **call-history clear**
Nvox::CallHistory: Call history cleared.

Version	Description
2.06	The dect call-history clear command has been introduced.
3.05	The command renamed to nvox call-history clear .

C.3 nvox call-history delete-call

Description Delete a call log entry.

Prefix no No

Change settings No

Multiple input No

Synopsis | (nvox)> **call-history delete-call** <call-index>

Argument	Value	Description
call-index	Hex	Four-digit entry identifier.

Example (nvox)> **call-history delete-call 000f**

Version	Description
3.05	The nvox call-history delete-call command has been introduced.

C.4 nvox call-history directory

Description Specify a directory on the external USB drive to store call log files. By default, the call log is stored in the Keenetic router's RAM and is cleared after a reboot.

Command with **no** prefix resets setting to default.

Note: The phone book is stored in the same directory as the call log.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox)> call-history directory <directory>
```

```
(nvox)> no call-history directory
```

Arguments

Argument	Value	Description
directory	<i>Filename</i>	Path to the folder on the external drive.

Example

```
(nvox)> call-history directory DATA:/call-history
Nvox::Manager: Set call history directory to DATA:/call-history.
```

```
(nvox)> no call-history directory
Nvox::Manager: Call history directory reset to default.
```

History

Version	Description
3.05	The nvox call-history directory command has been introduced.

C.5 nvox call-history dump

Description Save the call log to a *.csv file.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(nvox)> call-history dump
```

Example

```
(nvox)> call-history dump
Nvox::CallHistory: Dump call history to file: ►
/tmp/mnt/ff085e00-8850-4ac3-9f46-3c209fcf3a13/nvox/nvox.history_calls.
```

History

Version	Description
3.05	The nvox call-history dump command has been introduced.

C.6 nvox call-history filter

Description Configure a filter to output the call history by the [show nvox call-history](#) command.

Command with **no** prefix disables the filter.

Prefix no Yes**Change settings** Yes**Multiple input** No

Synopsis

```
(nvox)> call-history filter <time-from> <time-to> <type> [text]
```

```
(nvox)> no call-history filter
```

Arguments

Argument	Value	Description
time-from	String	Date and time of the period start in DD MM YYYY HH:MM:SS format.
	*	The beginning of the interval is not set.
time-to	String	Date and time of the period end in DD MM YYYY HH:MM:SS format.
	*	The end of the interval is not set.
type	in	Search in incoming calls.
	out	Search in outgoing calls.
	missed	Search in missed calls.
	*	Search in any calls.
text	String	Text to find.

Example

```
(nvox)> call-history filter "12 Aug 2021 00:00:00" "15 Aug 2021 23:59:59" in 1234567
Nvox::CallHistory: Filter enabled.
```

```
(nvox)> no call-history filter
Nvox::CallHistory: Filter disabled.
```

History

Version	Description
3.05	The nvox call-history filter command has been introduced.

C.7 nvox call-history length

Description Set the maximum number of records in the call log. By default, value 500 is used.

Command with **no** prefix resets setting to default.

Prefix no Yes**Change settings** Yes**Multiple input** No

Synopsis

```
(nvox)> call-history length <length>
```

```
(nvox)> no call-history length
```

Arguments

Argument	Value	Description
length	<i>Integer</i>	The number of entries in the call log in the range from 2 to 8000.

Example

```
(nvox)> call-history length 400  
Nvox::CallHistory: Set history length to 400.
```

```
(nvox)> no call-history length  
Nvox::CallHistory: Reset history length to default value (500).
```

History

Version	Description
3.05	The nvox call-history length command has been introduced.

C.8 nvox fxs

Description

Access to a group of commands to configure the USB FXS adapter.

Prefix no

No

Change settings

No

Multiple input

No

Group entry

(nvox - fxs)

Synopsis

```
(config)> nvox fxs
```

Example

```
(config)> nvox fxs  
Core::Configurator: Done.  
(nvox - fxs)>
```

History

Version	Description
2.00	The nvox fxs command has been introduced.

C.8.1 nvox fxs country

Description

Set the national FXS settings profile. Tones, ringtone, port impedance, etc. will be configured according to the standards in force in that country.

Command with **no** prefix resets the country code value to what is hardwired into the router.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-fxs)> country <country>
```

```
(nvox-fxs)> no country
```

Arguments

Argument	Value	Description
country	BG	Two-letter country code (ISO 3166-1 alpha-2).
	CA	
	CS	
	DE	
	DK	
	EE	
	ES	
	FI	
	FR	
	GR	
	HR	
	HU	
	IT	
	KZ	
	LT	
	LV	
	NO	
	PL	
	PT	
	RO	
RS		
RU		
SE		
SI		
SK		
TR		

Argument	Value	Description
	UA	

Example

```
(nvox-fxs)> country DE
Nvox::Manager: Set FXS Country for FXS configuration to "DE".
```

```
(nvox-fxs)> no country
Nvox::Manager: Reset FXS Country for FXS configuration to "TR".
```

History

Version	Description
3.05	The nvox fxs country command has been introduced.

C.8.2 nvox fxs echo-canc-mode

Description

Set echo cancellation mode on FXS ports. By default, 2 value is used.

Command with **no** prefix resets the mode to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(nvox-fxs)> echo-canc-mode mode
```

```
(nvox-fxs)> no echo-canc-mode
```

Arguments

Argument	Value	Description
mode	0	Echo cancellation is off.
	1	Weak echo cancellation.
	2	Medium echo cancellation.
	3	Maximum echo cancellation.

Example

```
(nvox-fxs)> echo-canc-mode 3
Nvox::Manager: Set FXS Echo cancellation mode to "3".
```

```
(nvox-fxs)> no echo-canc-mode
Nvox::Manager: Reset FXS Echo cancellation mode.
```

History

Version	Description
3.05	The nvox fxs echo-canc-mode command has been introduced.

C.8.3 nvox fxs echo-canc-thresholds

Description Set the threshold levels of the audio signal to activate echo cancellation. By default, 20 and 15 values is used. The upper threshold must be higher than the lower threshold.

Command with **no** prefix resets settings to default.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(nvox-fxs)> echo-canc-thresholds mute_threshold unmute_threshold
(nvox-fxs)> no echo-canc-thresholds
```

Arguments

Argument	Value	Description
mute_threshold	<i>Integer</i>	Upper threshold signal level between 1 and 127.
unmute_threshold	<i>Integer</i>	Lower threshold signal level between 1 and 127.

Example

```
(nvox-fxs)> echo-canc-thresholds 15 10
Nvox::Manager: Set FXS Echo cancellation mute threshold to "15" ►
and Echo cancellation unmute threshold to "10".
```

```
(nvox-fxs)> no echo-canc-thresholds
Nvox::Manager: Reset FXS Echo cancellation mute threshold and ►
Echo cancellation unmute threshold.
```

History

Version	Description
3.05	The nvox fxs echo-canc-thresholds command has been introduced.

C.8.4 nvox fxs force-calibration

Description Perform LB calibration for FXS ports each time FXS is initialized.

Command with **no** prefix disables LB calibration, using factory calibration data.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis | (nvox-fxs)> **force-calibration**

| (nvox-fxs)> **no force-calibration**

Example (nvox-fxs)> **force-calibration**
Nvox::Manager: Set FXS Force FXS longitudinal balance calibration ▶ on start to "1".

(nvox-fxs)> **no force-calibration**
Nvox::Manager: Set FXS Force FXS longitudinal balance calibration ▶ on start to "0".

History

Version	Description
3.05	The nvox fxs force-calibration command has been introduced.

C.8.5 nvox fxs init-timer

Description Set FXS initialisation waiting timer in milliseconds. By default, 15000 value is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis | (nvox-fxs)> **init-timer** <timer>

| (nvox-fxs)> **no init-timer**

Arguments

Argument	Value	Description
timer	<i>Integer</i>	Timer value in milliseconds. Can take values in the range from 1000 to 300000.

Example (nvox-fxs)> **init-timer 1000**
Nvox::Manager: Set FXS Timer to exit on DECT dongle ▶ initialization failure to "1000".

(nvox-fxs)> **no init-timer**
Nvox::Manager: Reset FXS Timer to exit on DECT dongle ▶ initialization failure.

History

Version	Description
3.05	The nvox fxs init-timer command has been introduced.

C.8.6 nvox fxs led-blinking-timer

Description Set the switching period (flashing frequency) of the FXS port status LEDs in talk mode. By default, 15000 value is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-fxs)> led-blinking-timer <timer>
(nvox-fxs)> no led-blinking-timer
```

Arguments

Argument	Value	Description
timer	<i>Integer</i>	Timer value in milliseconds. Can take values in the range from 0 to 60000.

Example

```
(nvox-fxs)> led-blinking-timer 1000
Nvox::Manager: Set FXS LED blinking period during calls to "1000".
```

```
(nvox-fxs)> no led-blinking-timer
Nvox::Manager: Reset FXS LED blinking period during calls.
```

History

Version	Description
3.05	The nvox fxs led-blinking-timer command has been introduced.

C.8.7 nvox fxs port-paging

Description Enable FXS port paging.

Command with **no** prefix disables the paging.

Prefix no Yes

Change settings No

Multiple input No

Synopsis

```
(nvox-fxs)> port-paging <id>
(nvox-fxs)> no port-paging
```

Arguments

Argument	Value	Description
id	1	FXS port ID.
	2	

Example

```
(nvox-fxs)> port-paging 1
Nvox::Fxs: Start paging FXS port 1.
```

```
(nvox-fxs)> no port-paging
Nvox::Fxs: Stop paging FXS ports.
```

History

Version	Description
3.05	The nvox fxs port-paging command has been introduced.

C.8.8 nvox fxs pulse-dial-mode

Description

Set the pulse detection mode on the FXS ports. By default, 1 value is used.

Command with **no** prefix resets setting to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(nvox-fxs)> pulse-dial-mode <mode>
```

```
(nvox-fxs)> no pulse-dial-mode
```

Arguments

Argument	Value	Description
mode	0	Pulse dialing is not detected.
	1	Pulse dialing is not detected during a call.
	2	Pulse dialing is detected all the time.

Example

```
(nvox-fxs)> pulse-dial-mode 2
Nvox::Manager: Set FXS Pulse dialing mode to "2".
```

```
(nvox-fxs)> no pulse-dial-mode
Nvox::Manager: Reset FXS Pulse dialing mode to 1.
```

History

Version	Description
3.05	The nvox fxs pulse-dial-mode command has been introduced.

C.8.9 nvox fxs unmute-timer

Description Set the timer to delay the sound on the FXS ports in milliseconds after connecting the audio channel during a call. The turn-on delay helps to eliminate noises and other unwanted sounds when answering a call. By default, the 200 value is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-fxs)> unmute-timer <timer>
(nvox-fxs)> no unmute-timer
```

Arguments

Argument	Value	Description
timer	<i>Integer</i>	Timer value in milliseconds. Can take values in the range from 0 to 5000.

Example

```
(nvox-fxs)> unmute-timer 300
Nvox::Manager: Set FXS Delay before unmuting the voice channel ►
to "300".
```

```
(nvox-fxs)> no unmute-timer
Nvox::Manager: Reset FXS Delay before unmuting the voice channel.
```

History

Version	Description
3.05	The nvox fxs unmute-timer command has been introduced.

C.9 nvox parallel accept

Description Set the code to answer a parallel incoming call. Dial this code to answer a call that comes in during a call. By default, the R value is used.

Command with **no** prefix disables the answer to a parallel incoming call function.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox)> parallel accept <accept>
```

```
(nvox)> no parallel accept
```

Arguments

Argument	Value	Description
accept	<i>String</i>	A string from 1 to 3 characters in length. The first character is R,* or #. The second and third characters are numbers from 0 to 9 or characters R,* or #.

Example

```
(nvox)> parallel accept **R
Nvox::Manager: Handset info "012345ABCD" created.
```

```
(nvox)> no parallel accept
Nvox::Manager: Disabled an action to accept a call.
```

History

Version	Description
3.05	The nvox parallel accept command has been introduced.

C.10 nvox parallel disable

Description

Disable support for parallel calls on the Keenetic telephone station. By default, the parallel calls are enabled.

Command with **no** prefix enables support for parallel calls.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(nvox)> parallel disable
```

```
(nvox)> no parallel disable
```

Example

```
(nvox)> parallel disable
Nvox::Manager: Disabled parallel calls.
```

```
(nvox)> no parallel disable
Nvox::Manager: Enabled parallel calls.
```

History

Version	Description
3.05	The nvox parallel disable command has been introduced.

C.11 nvox parallel call-external

Description Set the code to create a parallel outgoing external call. To call another caller during a call, dial this code, then the caller's number. By default, the R value is used.

Command with **no** prefix disables the parallel outgoing external call function.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox)> parallel call-external <call-external>
```

```
(nvox)> no parallel call-external
```

Arguments

Argument	Value	Description
call-external	<i>String</i>	A string from 1 to 3 characters in length. The first character is R,*or #. The second and third characters are numbers from 0 to 9 or characters R,*or #.

Example

```
(nvox)> parallel call-external **R
Nvox::Manager: "**R" sequence set to start an external call.
```

```
(nvox)> no parallel call-external
Nvox::Manager: Disabled an action to start an external call.
```

History

Version	Description
3.05	The nvox parallel call-external command has been introduced.

C.12 nvox parallel call-internal

Description Set the code to create a parallel outgoing internal call. To call another phone port or DECT-handset during a call, dial this code, then the extension number of the port or handset. By default, the * value is used.

Command with **no** prefix disables this feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox)> parallel call-internal <call-internal>
```

```
(nvox)> no parallel call-internal
```

Arguments

Argument	Value	Description
call-internal	<i>String</i>	A string from 1 to 3 characters in length. The first character is R,*or#. The second and third characters are numbers from 0 to 9 or characters R,*or#.

Example

```
(nvox)> parallel call-internal ***
Nvox::Manager: "****" sequence set to start an internal call.
```

```
(nvox)> no parallel call-internal
Nvox::Manager: Disabled an action to start an internal call.
```

History

Version	Description
3.05	The nvox parallel call-internal command has been introduced.

C.13 nvox parallel hold-resume

Description

Configure code to put on hold and unholding a call on phone during a conversation. Dial this code during the call to put the caller on hold. To remove the hold and continue the call, dial this code again. By default, the R value is used.

Command with **no** prefix disables this feature.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(nvox)> parallel hold-resume <hold-resume>
```

```
(nvox)> no parallel hold-resume
```

Arguments

Argument	Value	Description
hold-resume	<i>String</i>	A string from 1 to 3 characters in length. The first character is R,*or#. The second and third characters are numbers from 0 to 9 or characters R,*or#.

Example (nvox)> **parallel hold-resume **R**
Nvox::Manager: "**R" sequence set to hold or resume a call.

(nvox)> **no parallel hold-resume**
Nvox::Manager: Disabled an action to hold or resume a call.

History

Version	Description
3.05	The nvox parallel hold-resume command has been introduced.

C.14 nvox parallel intercept

Description Configure code to intercept the call. Dial this code, which to transfer the caller from another handset to this handset. When incoming call to the other handset, dial this code to answer the call. By default, the R value is used.

Command with **no** prefix disables this feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox)> parallel intercept <intercept>
```

```
(nvox)> no parallel intercept
```

Arguments

Argument	Value	Description
intercept	<i>String</i>	A string from 1 to 3 characters in length. The first character is R,*or#. The second and third characters are numbers from 0 to 9 or characters R,*or#.

Example (nvox)> **parallel intercept **R**
Nvox::Manager: "**R" sequence set to intercept a call.

(nvox)> **no parallel intercept**
Nvox::Manager: Disabled an action to intercept a call.

History

Version	Description
3.05	The nvox parallel intercept command has been introduced.

C.15 nvox parallel reject

Description Configure code to reject an incoming parallel call. Dial this code to reject a call that comes in during a call. By default, the # value is used.

Command with **no** prefix disables this feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox)> parallel intercept <reject>
```

```
(nvox)> no parallel intercept
```

Arguments

Argument	Value	Description
reject	String	A string from 1 to 3 characters in length. The first character is R,*or #. The second and third characters are numbers from 0 to 9 or characters R,*or #.

Example

```
(nvox)> parallel reject ***
Nvox::Manager: "***#" sequence set to reject a call.
```

```
(nvox)> no parallel reject
Nvox::Manager: Disabled an action to reject a call.
```

History

Version	Description
3.05	The nvox parallel reject command has been introduced.

C.16 nvox parallel release-active

Description Configure code to end of an active parallel call. Dial this code to end an active call and continue the conversation with the caller on hold. By default, the # value is used.

Command with **no** prefix disables this feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox)> parallel release-active <release-active>
```

```
(nvox)> no parallel release-active
```

Arguments

Argument	Value	Description
release-active	<i>String</i>	A string from 1 to 3 characters in length. The first character is R,*or#. The second and third characters are numbers from 0 to 9 or characters R,*or#.

Example

```
(nvox)> parallel release-active **1
Nvox::Manager: "**1" sequence set to release an active call.
```

```
(nvox)> no parallel release-active
Nvox::Manager: Disabled an action to release an active call.
```

History

Version	Description
3.05	The nvox parallel release-active command has been introduced.

C.17 nvox parallel release-passive

Description

Configure code to end of a parallel call on hold. Dial this code to end the connection with the caller on hold and continue the conversation with the current caller. By default, the # value is used.

Command with **no** prefix disables this feature.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(nvox)> parallel release-passive <release-passive>
```

```
(nvox)> no parallel release-passive
```

Arguments

Argument	Value	Description
release-passive	<i>String</i>	A string from 1 to 3 characters in length. The first character is R,*or#. The second and third characters are numbers from 0 to 9 or characters R,*or#.

Example

```
(nvox)> parallel release-passive **0
Nvox::Manager: "**0" sequence set to release a passive call.
```

```
(nvox)> no parallel release-passive
Nvox::Manager: Disabled an action to release a passive call.
```

History

Version	Description
3.05	The nvox parallel release-passive command has been introduced.

C.18 nvox parallel toggle

Description

Configure code to switch between two parallel calls. Dial this code to continue a call on hold and put the current call on hold. By default, the R value is used.

Command with **no** prefix disables this feature.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(nvox)> parallel toggle <toggle>
```

```
(nvox)> no parallel toggle
```

Arguments

Argument	Value	Description
toggle	<i>String</i>	A string from 1 to 3 characters in length. The first character is R,*or #. The second and third characters are numbers from 0 to 9 or characters R,*or #.

Example

```
(nvox)> parallel toggle **5
Nvox::Manager: "**5" sequence set to toggle a call.
```

```
(nvox)> no parallel toggle
Nvox::Manager: Disabled an action to toggle a call.
```

History

Version	Description
3.05	The nvox parallel toggle command has been introduced.

C.19 nvox parallel transfer

Description

Configure code to transfer the caller on hold to another caller or phone port/DECT-handset. Dial this code to connect the caller on hold with the caller who is talking to you at the moment. By default, the * value is used.

Command with **no** prefix disables this feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox)> parallel transfer <transfer>
(nvox)> no parallel transfer
```

Arguments

Argument	Value	Description
transfer	String	A string from 1 to 3 characters in length. The first character is R,*or#. The second and third characters are numbers from 0 to 9 or characters R,*or#.

Example

```
(nvox)> parallel transfer ***
Nvox::Manager: "****" sequence set to transfer a call.
```

```
(nvox)> no parallel transfer
Nvox::Manager: Disabled an action to transfer a call.
```

History

Version	Description
3.05	The nvox parallel transfer command has been introduced.

C.20 nvox phone

Description Access to a group of commands to configure the FXS ports and DECT handsets.

Prefix no No

Change settings No

Multiple input No

Group entry (nvox - phone)

Synopsis

```
(config)> nvox phone
```

Example

```
(config)> nvox phone
Core::Configurator: Done.
(nvox - phone)>
```

History

Version	Description
3.05	The nvox phone command has been introduced.

C.20.1 nvox phone cadence

Description

Set the parameters for one of the six ringtones, each of which can be linked to a specific type of incoming call (external, internal, paging, call from a particular number). Such a setting will allow you to identify the type of call by the sound of the ringtone.

Default values:

Ringtone N	active1	passive1	active2	passive2	active3	passive3
0	400	500	400	2000	0	0
1	1000	4000	0	0	0	0
2	400	500	0	0	0	0
3	400	2000	1200	1200	0	0
4	400	500	400	2000	2000	2000
5	4000	2000	0	0	0	0

Command with **no** prefix resets settings to default.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(nvox-phone)> cadence <cadence> <active1> <passive1> <active2>
<passive2> <active3> <passive3>
```

```
(nvox-phone)> no cadence [<cadence>]
```

Arguments

Argument	Value	Description
cadence	<i>Integer</i>	Ringtone number in the range from 0 to 5.
active1	<i>Integer</i>	First signal duration in the range from 200 to 5000 ms or 0.
passive1	<i>Integer</i>	Second pause duration in the range from 200 to 5000 ms or 0.
active2	<i>Integer</i>	Second signal duration in the range from 200 to 5000 ms or 0.
passive2	<i>Integer</i>	First pause duration in the range from 200 to 5000 ms or 0.

Argument	Value	Description
active3	<i>Integer</i>	Third signal duration in the range from 200 to 5000 ms or 0.
passive3	<i>Integer</i>	Third pause duration in the range from 200 to 5000 ms or 0.

Example

```
(nvox-phone)> cadence 1 800 320 0 0 0 0
Nvox::Phone: Set phone cadence 1 to 800/320, 0/0, 0/0 ►
(active/passive periods).
```

```
(nvox-phone)> no cadence 1
Nvox::Phone: Reset phone cadence 1 to 1000/4000, 0/0, 0/0 ►
(active/passive periods).
```

History

Version	Description
3.05	The nvox phone cadence command has been introduced.

C.20.2 nvox phone dial-digit-timer

Description

Set the timer in milliseconds to wait for the next digit to be dialed in the dialing mode during an outgoing call. When the timer countdown finishes, the outgoing call is made on the dialed number. By default, 5000 value is used.

Command with **no** prefix resets setting to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(nvox-phone)> dial-digit-timer <timer>
```

```
(nvox-phone)> no dial-digit-timer
```

Arguments

Argument	Value	Description
timer	<i>Integer</i>	The timer duration is in the range from 100 to 10000 ms.

Example

```
(nvox-phone)> dial-digit-timer 7000
Nvox::Manager: Set dial digit timer.
```

```
(nvox-phone)> no dial-digit-timer
Nvox::Manager: Reset dial digit timer.
```

History	Version	Description
	3.05	The nvox phone dial-digit-timer command has been introduced.

C.20.3 nvox phone intercom-cadence

Description Set a ringtone for internal calls. By default, 0 value is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-phone)> intercom-cadence <cadence>
(nvox-phone)> no intercom-cadence
```

Arguments	Argument	Value	Description
	cadence	<i>Integer</i>	Ringtone number in the range from 0 to 5.

Example

```
(nvox-phone)> intercom-cadence 4
Nvox::Phone: Set intercom cadence to 4.
```

```
(nvox-phone)> no intercom-cadence
Nvox::Phone: Reset intercom cadence to 0.
```

History	Version	Description
	3.05	The nvox phone intercom-cadence command has been introduced.

C.20.4 nvox phone offhook-timer

Description Set the timer in milliseconds to wait for the first digit to be dialed after activating the talk mode for an outgoing call. When the timer countdown is over, the waiting stops and a short beep sounds. By default, 10000 value is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-phone)> offhook-timer <timer>
```

```
(nvox-phone)> no offhook-timer
```

Argument	Value	Description
timer	<i>Integer</i>	The timer duration is in the range from 100 to 10000 ms.

Example

```
(nvox-phone)> offhook-timer 8000  
Nvox::Manager: Set offhook timer.
```

```
(nvox-phone)> no offhook-timer  
Nvox::Manager: Reset offhook timer.
```

Version	Description
3.05	The nvox phone offhook-timer command has been introduced.

C.20.5 nvox phone paging-cadence

Description Set a ringtone for paging. By default, 0 value is used.
Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-phone)> paging-cadence <cadence>
```

```
(nvox-phone)> no paging-cadence
```

Argument	Value	Description
cadence	<i>Integer</i>	Ringtone number in the range from 0 to 5.

Example

```
(nvox-phone)> paging-cadence 3  
Nvox::Phone: Set paging cadence to 3.
```

```
(nvox-phone)> no paging-cadence  
Nvox::Phone: Reset paging cadence to 0.
```

History	Version	Description
	3.05	The nvox phone paging-cadence command has been introduced.

C.21 nvox postdial key

Description Set the postdial key. The part of the number to the right of the postdial key is transmitted to the line after connecting to the number to the left of this key. By default, ******* value is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox)> postdial key <key>
```

```
(nvox)> no postdial key
```

Arguments	Argument	Value	Description
	key	<i>String</i>	A postdial key of 1 to 3 digits in the range from 0 to 9 or R, *, # characters in any combination.

Example

```
(nvox)> postdial key **#  
Nvox::Manager: Set postdial key.
```

```
(nvox)> no postdial key  
Nvox::Manager: Reset postdial key.
```

History	Version	Description
	3.05	The nvox postdial key command has been introduced.

C.22 nvox postdial mid-timer

Description Set the duration of pauses between digits transmitted to the line during postdialing. By default, 250 value is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input	No						
Synopsis	<pre>(nvox)> postdial mid-timer <timeout></pre> <pre>(nvox)> no postdial mid-timer</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>timeout</td> <td><i>Integer</i></td> <td>Pause duration in the range from 250 to 10000 ms.</td> </tr> </tbody> </table>	Argument	Value	Description	timeout	<i>Integer</i>	Pause duration in the range from 250 to 10000 ms.
Argument	Value	Description					
timeout	<i>Integer</i>	Pause duration in the range from 250 to 10000 ms.					
Example	<pre>(nvox)> postdial mid-timer 300</pre> <pre>Nvox::Manager: Set postdial mid timer.</pre> <pre>(nvox)> no postdial mid-timer</pre> <pre>Nvox::Manager: Reset postdial mid timer.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>3.05</td> <td>The nvox postdial mid-timer command has been introduced.</td> </tr> </tbody> </table>	Version	Description	3.05	The nvox postdial mid-timer command has been introduced.		
Version	Description						
3.05	The nvox postdial mid-timer command has been introduced.						

C.23 nvox postdial post-timer

Description	Set the sound delay timer after postdialing. By default, 250 value is used. Command with no prefix resets setting to default.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Synopsis	<pre>(nvox)> postdial post-timer <timeout></pre> <pre>(nvox)> no postdial post-timer</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>timeout</td> <td><i>Integer</i></td> <td>Delay duration in the range from 250 to 10000 ms.</td> </tr> </tbody> </table>	Argument	Value	Description	timeout	<i>Integer</i>	Delay duration in the range from 250 to 10000 ms.
Argument	Value	Description					
timeout	<i>Integer</i>	Delay duration in the range from 250 to 10000 ms.					
Example	<pre>(nvox)> postdial post-timer 500</pre> <pre>Nvox::Manager: Set postdial post timer.</pre> <pre>(nvox)> no postdial post-timer</pre> <pre>Nvox::Manager: Reset postdial post timer.</pre>						

History

Version	Description
3.05	The nvox postdial post-timer command has been introduced.

C.24 nvox postdial pre-timer

Description

Set the postdialing delay after a connection is established (SIP 200 OK). By default, 6000 value is used.

Command with **no** prefix resets setting to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(nvox)> postdial pre-timer <timeout>
```

```
(nvox)> no postdial pre-timer
```

Arguments

Argument	Value	Description
timeout	<i>Integer</i>	Delay duration in the range from 250 to 10000 ms.

Example

```
(nvox)> postdial pre-timer 8000
Nvox::Manager: Set postdial pre timer.
```

```
(nvox)> no postdial pre-timer
Nvox::Manager: Reset postdial pre timer.
```

History

Version	Description
3.05	The nvox postdial pre-timer command has been introduced.

C.25 nvox sip

Description

Access to a group of commands to configure the selected SIP line. If the line is not found, the command tries to create it. The maximum number of telephone lines supported by the telephone station is 10.

Command with **no** prefix deletes the line.

Prefix no

Yes

Change settings

No

Multiple input	Yes						
Group entry	(nvox-sip)						
Synopsis	<pre>(nvox)> sip <id></pre> <pre>(nvox)> no sip <id></pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>id</td> <td>String</td> <td>SIP line identifier of Latin letters and numbers from 0 to 9. The maximum string length is 64 characters.</td> </tr> </tbody> </table>	Argument	Value	Description	id	String	SIP line identifier of Latin letters and numbers from 0 to 9. The maximum string length is 64 characters.
Argument	Value	Description					
id	String	SIP line identifier of Latin letters and numbers from 0 to 9. The maximum string length is 64 characters.					
Example	<pre>(nvox)> sip sipline1</pre> <pre>Nvox::Manager: Created SIP line "sipline1".</pre> <pre>(nvox-sip)></pre> <pre>(nvox)> no sip sipline1</pre> <pre>Nvox::Manager: Deleted SIP line "sipline1".</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.00</td> <td>The nvox sip command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.00	The nvox sip command has been introduced.		
Version	Description						
2.00	The nvox sip command has been introduced.						

C.25.1 nvox sip audio-protocol

Description	<p>Select the audio transport protocol for the SIP line. By default, RTP value is used.</p> <p>Command with no prefix resets setting to default.</p>										
Prefix no	Yes										
Change settings	Yes										
Multiple input	No										
Synopsis	<pre>(nvox-sip)> audio-protocol <protocol></pre> <pre>(nvox-sip)> no audio-protocol</pre>										
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td rowspan="3">protocol</td> <td>rtp</td> <td>RTP protocol.</td> </tr> <tr> <td>srtplib</td> <td>SRTP protocol.</td> </tr> <tr> <td>both</td> <td>Where possible, SRTP is used, otherwise RTP.</td> </tr> </tbody> </table>	Argument	Value	Description	protocol	rtp	RTP protocol.	srtplib	SRTP protocol.	both	Where possible, SRTP is used, otherwise RTP.
Argument	Value	Description									
protocol	rtp	RTP protocol.									
	srtplib	SRTP protocol.									
	both	Where possible, SRTP is used, otherwise RTP.									

Example (nvox-sip)> **audio-protocol srtp**
Nvox::Manager: Set SIP line sipline1 audio protocol to "srtp".

(nvox-sip)> **no audio-protocol**
Nvox::Manager: Reset SIP line sipline1 audio protocol.

History

Version	Description
3.05	The nvox sip audio-protocol command has been introduced.

C.25.2 nvox sip cadence

Description Select the ringtone that will sound for incoming calls on this line. By default, the 1 value is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> cadence <cadence>
```

```
(nvox-sip)> no cadence
```

Arguments

Argument	Value	Description
cadence	<i>Integer</i>	Ringtone number in the range from 0 to 5.

Example (nvox-sip)> **cadence 3**
Nvox::Manager: Set SIP line 1 Cadence for incoming calls (0 is for internal calls) to "3".

(nvox-sip)> **no cadence**
Nvox::Manager: Reset SIP line 1 Cadence for incoming calls (0 is for internal calls).

History

Version	Description
3.05	The nvox sip cadence command has been introduced.

C.25.3 nvox sip cadence-rule

Description Set a rule to select a melody that will sound for incoming calls from specific numbers on this line. You can recognize by the sound of the ringtone who is calling you.

Command with **no** prefix removes the rule.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(nvox-sip)> cadence-rule <rule> <cadence> <digitmap>
(nvox-sip)> no cadence-rule
```

Arguments

Argument	Value	Description
rule	<i>Integer</i>	Rule number of 0 to 2.
cadence	<i>Integer</i>	Ringtone number of 0 to 5.
digitmap	<i>String</i>	The pattern to which the caller's number must correspond. For more information see Syntax of prefix substitution rules .

Example

```
(nvox-sip)> cadence-rule 0 4 4951234567
Nvox::Sip: Add SIP sipline1 cadence rule 0: cadence 4 for digit map "4951234567".
```

```
(nvox-sip)> no cadence-rule 0
Nvox::Sip: Reset SIP sipline1 cadence rule 0.
```

History

Version	Description
3.05	The nvox sip cadence-rule command has been introduced.

C.25.4 nvox sip codec

Description Allow use of audio codec for calls on this line. When configuring codecs with this command, you should consider:

- 1) Keenetic Linear only supports codecs G.711a and G.711u;
- 2) Codec G.722 only supports DECT-handset with support CAT-iq 1/CAT-iq 2.x (handset Gigaset).

Command with **no** prefix denies the use of this codec or resets configuration.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(nvox-sip)> codec <codec>
```

```
(nvox-sip)> no codec
```

Argument	Value	Description
codec	g711u	Codec G.711u (ULAW, PCMU).
	g711a	Codec G.711a (ALAW, PCMA).
	g726	Codec G.726-32.
	g722	Codec G.722.

Example

```
(nvox-sip)> codec g726  
Nvox::Manager: Added g726 to SIP line "sipline1" codecs.
```

```
(nvox-sip)> no codec g726  
Nvox::Manager: Removed g726 from SIP line "sipline1" codecs.
```

```
(nvox-sip)> no codec  
Nvox::Manager: Reset SIP line "sipline1" codecs.
```

Version	Description
3.05	The nvox sip codec command has been introduced.

C.25.5 nvox sip deny-interception

Description Prohibit interception of connections on this line (user 1 is on the phone, user 2 dials a special code, intercepts the call and talks with the interlocutor of the user 1). By default, the connection interception is allowed.

Command with **no** prefix allows the connection interception.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> deny-interception
```

```
(nvox-sip)> no deny-interception
```

Example

```
(nvox-sip)> deny-interception  
Nvox::Manager: Set SIP line sipline1 deny interception to "1".
```

```
(nvox-sip)> no deny-interception  
Nvox::Manager: Set SIP line sipline1 deny interception to "0".
```


History	Version	Description
	3.05	The nvox sip deny-interception command has been introduced.

C.25.6 nvox sip deny-pickup

Description Prohibit interception of incoming calls on this line (user 1 is on the phone, user 2 dials a special code on his phone/DECT-handset and answers the phone instead of user 1). By default, the incoming calls interception is allowed.

Command with **no** prefix allows the incoming calls interception.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> deny-pickup
(nvox-sip)> no deny-pickup
```

Example

```
(nvox-sip)> deny-pickup
Nvox::Manager: Set SIP line sipline1 deny pickup to "1".
```

```
(nvox-sip)> no deny-pickup
Nvox::Manager: Set SIP line sipline1 deny pickup to "0".
```

History	Version	Description
	3.05	The nvox sip deny-pickup command has been introduced.

C.25.7 nvox sip digit-map

Description Create dialing rules the number, outgoing calls to which are allowed through this line. If the dialed number doesn't match any of the dialing rules, the outgoing call will be dismiss. If there are no dialing rules, calls to any number are allowed. By default, dialing rules is not configured.

For more information see [Syntax of prefix substitution rules](#).

Command with **no** prefix removes the dialing rules.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> digit-map <map>
```

```
(nvox-sip)> no digit-map
```

Arguments

Argument	Value	Description
map	<i>String</i>	String to 250 characters long. Valid characters: 01234567890*#+ABCDxT[] >.-

Example

```
(nvox-sip)> digit-map 8[49]xxxxxxxx|10xx|*xx#
Nvox::Manager: Set SIP line sipline1 digit map to ►
"8[49]xxxxxxxx|10xx|*xx#".
```

```
(nvox-sip)> no digit-map
Nvox::Manager: Reset SIP line sipline1 digit map.
```

History

Version	Description
3.05	The nvox sip digit-map command has been introduced.

C.25.8 nvox sip disable

Description

Shutdown the telephone line. If the line is off, outgoing and incoming calls cannot be made through this line.

Command with **no** prefix enables the telephone line.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(nvox-sip)> disable
```

```
(nvox-sip)> no disable
```

Example

```
(nvox-sip)> deny-pickup
Nvox::Manager: Disabled SIP line "sipline1".
```

```
(nvox-sip)> no deny-pickup
Nvox::Manager: Enabled SIP line "sipline1".
```

History

Version	Description
3.05	The nvox sip disable command has been introduced.

C.25.9 nvox sip disable-extended-keepalive

Description	<p>Disable Extended Keep Alive feature, which sends keepalive packets to all servers resolved from the DNS SRV record. By default, the feature is enabled.</p> <p>Note: If Extended Keep Alive is disabled, keepalive packets should only be sent to the server where SIP registration is performed.</p> <p>Command with no prefix enables the feature.</p>				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Synopsis	<pre>(nvox-sip)> disable-extended-keepalive</pre> <pre>(nvox-sip)> no disable-extended-keepalive</pre>				
Example	<pre>(nvox-sip)> disable-extended-keepalive</pre> <pre>Nvox::Manager: Set SIP line test disable extended keepalive to ► "1".</pre> <pre>(nvox-sip)> no disable-extended-keepalive</pre> <pre>Nvox::Manager: Reset SIP line test disable extended keepalive ► to 0.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>4.01</td> <td>The nvox sip disable-extended-keepalive command has been introduced.</td> </tr> </tbody> </table>	Version	Description	4.01	The nvox sip disable-extended-keepalive command has been introduced.
Version	Description				
4.01	The nvox sip disable-extended-keepalive command has been introduced.				

C.25.10 nvox sip disable-force-registration-retry

Description	<p>Disable sending retry SIP registration requests in situations where registration was rejected or there is no response to the request. By default, the request sending is enabled.</p> <p>Command with no prefix enables retry registration requests.</p>
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	<pre>(nvox-sip)> disable-force-registration-retry</pre> <pre>(nvox-sip)> no disable-force-registration-retry</pre>

Example

```
(nvox-sip)> disable-force-registration-retry
Nvox::Manager: Set SIP line sipline1 disable force registration ►
retry to "1".
```

```
(nvox-sip)> no disable-force-registration-retry
Nvox::Manager: Reset SIP line sipline1 disable force registration ►
retry.
```

History

Version	Description
3.05	The nvox sip disable-force-registration-retry command has been introduced.

C.25.11 nvox sip disable-stun

Description Shutdown the STUN client used to successfully pass SIP messages and RTP audio data through NAT. By default, STUN client is enabled.

Command with **no** prefix enables the STUN client.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> disable-stun
```

```
(nvox-sip)> no disable-stun
```

Example

```
(nvox-sip)> disable-stun
Nvox::Manager: Set SIP line sipline1 disable STUN to "1".
```

```
(nvox-sip)> no disable-stun
Nvox::Manager: Reset SIP line sipline1 disable STUN.
```

History

Version	Description
3.05	The nvox sip disable-stun command has been introduced.

C.25.12 nvox sip display-name

Description Specify the name that will be displayed on the phone of the called party during an outgoing call on this line. By default, the name is not specified.

Command with **no** prefix removes the name.

Prefix no Yes

Change settings	Yes						
Multiple input	No						
Synopsis	<pre>(nvox-sip)> display-name <name></pre> <pre>(nvox-sip)> no display-name</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>name</td> <td><i>String</i></td> <td>String of printed symbols of the set ASCII. Maximum string length is 100 characters.</td> </tr> </tbody> </table>	Argument	Value	Description	name	<i>String</i>	String of printed symbols of the set ASCII. Maximum string length is 100 characters.
Argument	Value	Description					
name	<i>String</i>	String of printed symbols of the set ASCII. Maximum string length is 100 characters.					
Example	<pre>(nvox-sip)> display-name office_12</pre> <pre>Nvox::Manager: Set SIP line sipline1 display name to "office_12".</pre> <pre>(nvox-sip)> no display-name</pre> <pre>Nvox::Manager: Reset SIP line sipline1 display name.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>3.05</td> <td>The nvox sip display-name command has been introduced.</td> </tr> </tbody> </table>	Version	Description	3.05	The nvox sip display-name command has been introduced.		
Version	Description						
3.05	The nvox sip display-name command has been introduced.						

C.25.13 nvox sip dnd

Description	<p>Enable DND (Do Not Disturb) mode for this line. When DND is enabled, phones and handsets do not ring on incoming calls, callers are receive a notification that the user is busy and information about missed calls is entered into the call log and system log. By default, the setting is disabled.</p> <p>Command with no prefix disables DND (Do Not Disturb) function.</p>
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	<pre>(nvox-sip)> dnd</pre> <pre>(nvox-sip)> no dnd</pre>
Example	<pre>(nvox-sip)> dnd</pre> <pre>Nvox::Manager: Set SIP line sipline1 Do Not Disturb to "1".</pre> <pre>(nvox-sip)> no dnd</pre> <pre>Nvox::Manager: Reset SIP line sipline1 Do Not Disturb.</pre>

History	Version	Description
	3.05	The nvox sip dnd command has been introduced.

C.25.14 nvox sip dnd-schedule

Description Assign a schedule work to the DND (Do Not Disturb). Schedule must be created and customized with **schedule action** command before execution.

Command with **no** prefix unbinds the schedule.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> dnd-schedule <schedule>
(nvox-sip)> no dnd-schedule
```

Arguments	Argument	Value	Description
	schedule	<i>Schedule</i>	The name of the schedule that was created with schedule group of commands.

Example

```
(nvox-sip)> dnd-schedule
Nvox::Sip: SIP line "sipline1" set schedule "schedule0" for dnd.
```

```
(nvox-sip)> no dnd-schedule
Nvox::Sip: SIP line "sipline1" delete schedule for dnd.
```

History	Version	Description
	3.05	The nvox sip dnd-schedule command has been introduced.

C.25.15 nvox sip domain

Description Specify the domain name of the IP Telephony operator to which this line is connected.

Command with **no** prefix removes the domain name.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> domain <domain>
```

```
(nvox-sip)> no domain
```

Argument	Value	Description
domain	String	The domain name. Maximum domain name length is 100 characters.

Example

```
(nvox-sip)> domain voipprovider
Nvox::Manager: Set SIP line sipline1 domain to "voipprovider".
```

```
(nvox-sip)> no domain
Nvox::Manager: Reset SIP line sipline1 domain.
```

Version	Description
3.05	The nvox sip domain command has been introduced.

C.25.16 nvox sip dtmf-flash-signal

Description Enable FLASH signal transmission (calibrated loop plume) in SIP INFO messages. By default, the feature is disabled.

Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> dtmf-flash-signal
```

```
(nvox-sip)> no dtmf-flash-signal
```

Example

```
(nvox-sip)> dtmf-flash-signal
Nvox::Manager: Set SIP line sipline1 DTMF flash signal to "1".
```

```
(nvox-sip)> no dtmf-flash-signal
Nvox::Manager: Reset SIP line sipline1 DTMF flash signal.
```

Version	Description
3.05	The nvox sip dtmf-flash-signal command has been introduced.

C.25.17 nvox sip dtmf-mode

Description Set the DTMF transmission method for this line. By default, method rfc2833 is used.

Command with **no** prefix resets transmission method to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> dtmf-mode <mode>
(nvox-sip)> no dtmf-mode
```

Arguments

Argument	Value	Description
mode	rfc2833	Transmission of DTMF signals by RTP protocol messages.
	sip-info	Transmission of DTMF signals with SIP INFO requests.
	inband	Transmission of DTMF signals in the media stream along with voice. Can only be used with G.711a and G.711u codecs.

Example

```
(nvox-sip)> dtmf-mode rfc2833
Nvox::Manager: Set SIP line sipline1 DTMF mode to "rfc2833".
```

```
(nvox-sip)> no dtmf-mode
Nvox::Manager: Reset SIP line sipline1 DTMF mode.
```

History

Version	Description
3.05	The nvox sip dtmf-mode command has been introduced.

C.25.18 nvox sip forward

Description Enable unconditional forwarding of incoming calls to a specified SIP ID through this line. By default, the feature is disabled.

Command with **no** prefix resets the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> forward <number>
```

```
(nvox-sip)> no forward
```

Argument	Value	Description
number	<i>String</i>	The caller ID consists of ASCII characters (not more than 100 characters). The call is forwarded to the SIP URL sip:sipid@domain.

Example

```
(nvox-sip)> forward +49301234567  
Nvox::Manager: Set SIP line 1 unconditional forward to ►  
"+49301234567".
```

```
(nvox-sip)> no forward  
Nvox::Manager: Reset SIP line 1 unconditional forward.
```

Version	Description
3.05	The nvox sip forward command has been introduced.

C.25.19 nvox sip forward-if-busy

Description Enable forwarding of incoming calls to a specified SIP ID through this line, if the phones/DECT-handsets, which are allowed to make incoming calls from this line at the time of the call are busy.

Command with **no** prefix resets the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> forward-if-busy <{number}>
```

```
(nvox-sip)> no forward-if-busy
```

Argument	Value	Description
number	<i>String</i>	The caller ID consists of ASCII characters (not more than 100 characters). The call is forwarded to the SIP URL sip:sipid@domain.

Example

```
(nvox-sip)> forward-if-busy +49301234567  
Nvox::Manager: Set SIP line 1 forward if busy to "+49301234567".
```

```
(nvox-sip)> no forward-if-busy  
Nvox::Manager: Reset SIP line 1 forward if busy.
```

History

Version	Description
3.05	The nvox sip forward-if-busy command has been introduced.

C.25.20 nvox sip forward-if-busy-schedule

Description

Assign a schedule for the forwarding of incoming calls on busy. Schedule must be created and customized with **schedule action** command before execution.

Command with **no** prefix unbinds the schedule.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(nvox-sip)> forward-if-busy-schedule <schedule>
```

```
(nvox-sip)> no forward-if-busy-schedule
```

Arguments

Argument	Value	Description
schedule	<i>Schedule</i>	The name of the schedule that was created with schedule group of commands.

Example

```
(nvox-sip)> forward-if-busy-schedule telephony-fwd-busy
Nvox::Sip: SIP line "1" set schedule "telephony-fwd-busy" for ►
forward-if-busy.
```

```
(nvox-sip)> no forward-if-busy-schedule
Nvox::Sip: SIP line "1" delete schedule for forward-if-busy.
```

History

Version	Description
3.05	The nvox sip forward-if-busy-schedule command has been introduced.

C.25.21 nvox sip forward-if-timeout

Description

Enable forwarding of incoming calls to a specified SIP ID through this line, if the phones/DECT-handsets, which are allowed to make incoming calls from this line do not answer within a specified time.

Command with **no** prefix resets the setting.

Prefix no

Yes

Change settings

Yes

Multiple input No

Synopsis

```
(nvox-sip)> forward-if-timeout <number> <timeout>
```

```
(nvox-sip)> no forward-if-timeout
```

Argument	Value	Description
number	<i>String</i>	The caller ID consists of ASCII characters (not more than 100 characters). The call is forwarded to the SIP URL sip:sipid@domain.
timeout	<i>Integer</i>	Response time in the range from 1 to 60 seconds.

Example

```
(nvox-sip)> forward-if-timeout +49301234567 10  
Nvox::Manager: Set SIP line 1 forward timeout to "10".
```

```
(nvox-sip)> no forward-if-timeout  
Nvox::Manager: Reset SIP line 1 forward timeout.
```

Version	Description
3.05	The nvox sip forward-if-timeout command has been introduced.

C.25.22 nvox sip forward-if-timeout-schedule

Description Assign a schedule for the forwarding of incoming calls on timeout. Schedule must be created and customized with [schedule action](#) command before execution.

Command with **no** prefix unbinds the schedule.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> forward-if-timeout-schedule <schedule>
```

```
(nvox-sip)> no forward-if-timeout-schedule
```

Argument	Value	Description
schedule	<i>Schedule</i>	The name of the schedule that was created with schedule group of commands.

Example

```
(nvox-sip)> forward-if-timeout-schedule telephony-fwd-timeout
Nvox::Sip: SIP line "1" set schedule "telephony-fwd-timeout" for forward-if-timeout.
```

```
(nvox-sip)> no forward-if-timeout-schedule
Nvox::Sip: SIP line "1" delete schedule for forward-if-timeout.
```

History

Version	Description
3.05	The nvox sip forward-if-timeout-schedule command has been introduced.

C.25.23 nvox sip forward-schedule

Description Enable unconditional forwarding by schedule. Schedule must be created and customized with **schedule action** command before execution.

Command with **no** prefix unbinds the schedule.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> forward-schedule <schedule>
```

```
(nvox-sip)> no forward-schedule
```

Arguments

Argument	Value	Description
schedule	<i>Schedule</i>	The name of the schedule that was created with schedule group of commands.

Example

```
(nvox-sip)> forward-schedule telephony-fwd
Nvox::Sip: SIP line "1" set schedule "telephony-fwd" for forward.
```

```
(nvox-sip)> no forward-schedule
Nvox::Sip: SIP line "1" delete schedule for forward.
```

History

Version	Description
3.05	The nvox sip forward-schedule command has been introduced.

C.25.24 nvox sip identity

Description Set the SIP user ID for this line received from your IP telephony provider.

Command with **no** prefix removes SIP ID.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> identity <identity>
```

```
(nvox-sip)> no identity
```

Argument	Value	Description
identity	<i>String</i>	The caller ID consists of ASCII characters (not more than 100 characters).

Example

```
(nvox-sip)> identity sipuser1001  
Nvox::Manager: Set SIP line 1 identity to "sipuser1001".
```

```
(nvox-sip)> no identity  
Nvox::Manager: Reset SIP line 1 identity.
```

Version	Description
3.05	The nvox sip identity command has been introduced.

C.25.25 nvox sip incoming-mask

Description Allow a telephone (Keenetic Linear) or DECT handset with a given ID to receive incoming calls on this line. By default, all phones and handsets are not allowed to receive incoming calls through this line.

Command with **no** prefix denies incoming calls for this handset.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(nvox-sip)> incoming-mask <ipui>
```

```
(nvox-sip)> no incoming-mask <ipui>
```

Argument	Value	Description
ipui	1	Keenetic Linear Adapter Port 1 ID.
	2	Keenetic Linear Adapter Port 2 ID.
	<i>String</i>	Ten-digit DECT handset identifier (IPUI). Consists of 10 characters A, B, C, D, E, F and digits from 0 to 9.

Example (nvox-sip)> **incoming-mask 01234ABCDE**
Nvox::Manager: Added phone 01234ABCDE to SIP "1" incoming-mask.

(nvox-sip)> **no incoming-mask 01234ABCDE**
Nvox::Manager: Removed phone 01234ABCDE from SIP "1" ►
incoming-mask.

History

Version	Description
3.05	The nvox sip incoming-mask command has been introduced.

C.25.26 nvox sip keepalive

Description Set a timeout for sending keepalive messages to the SIP proxy server signal port to keep the server connection open through NAT. By default, 15 value is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis (nvox-sip)> **keepalive** *<keepalive>*

(nvox-sip)> **no keepalive**

Arguments

Argument	Value	Description
keepalive	<i>Integer</i>	Keepalive timeout in the range from 10 to 3600 seconds. 0 value disables the sending of keepalive messages.

Example (nvox-sip)> **keepalive 50**
Nvox::Manager: Set SIP line 1 keepalive to "50".

(nvox-sip)> **no keepalive**
Nvox::Manager: Reset SIP line 1 keepalive.

(nvox-sip)> **keepalive 0**
Nvox::Manager: Set SIP line 1 keepalive to "0".

History

Version	Description
3.05	The nvox sip keepalive command has been introduced.

C.25.27 nvox sip lock-codec

Description Force a single codec for the connection by requesting re-INVITE when the remote party chooses multiple codecs.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> lock-codec
(nvox-sip)> no lock-codec
```

Example

```
(nvox-sip)> lock-codec
Nvox::Manager: Set SIP line 3 lock SIP audio codec to "1".
```

```
(nvox-sip)> no lock-codec
Nvox::Manager: Set SIP line 3 lock SIP audio codec to "0".
```

History

Version	Description
3.05	The nvox sip lock-codec command has been introduced.

C.25.28 nvox sip login

Description Set SIP Auth ID — the name used for authentication on the IP-telephony provider's servers. By default, SIP Auth ID is not configured.

Command with **no** prefix removes the SIP Auth ID from the line parameters.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> login <login>
(nvox-sip)> no login
```

Arguments

Argument	Value	Description
login	String	A string of ASCII characters. The maximum length of the string is 64 characters.

Example

```
(nvox-sip)> login user1001
Nvox::Manager: Set SIP line 1 login to "user1001".
```

```
(nvox-sip)> no login
Nvox::Manager: Reset SIP line 1 login.
```

History

Version	Description
3.05	The nvox sip login command has been introduced.

C.25.29 nvox sip name

Description

Set the line name, which is displayed in the call log and system log. By default, the line name is not configured.

Command with **no** prefix removes the line name from the line parameters.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(nvox-sip)> name <name>
```

```
(nvox-sip)> no name
```

Arguments

Argument	Value	Description
name	<i>String</i>	A string of ASCII characters. The maximum length of the string is 100 characters.

Example

```
(nvox-sip)> name line-1001
Nvox::Manager: Set SIP line 3 line name to "line-1001".
```

```
(nvox-sip)> no name
Nvox::Manager: Reset SIP line 3 line name.
```

History

Version	Description
3.05	The nvox sip name command has been introduced.

C.25.30 nvox sip outgoing-mask

Description

Allow a telephone (Keenetic Linear) or DECT handset with a given ID to perform outgoing calls via this line. By default, for all phones and handsets outgoing calls are denied via this line.

Command with **no** prefix denies outgoing calls for this handset.

Prefix no

Yes

Change settings

Yes

Multiple input Yes

Synopsis

```
(nvox-sip)> outgoing-mask <ipui>
(nvox-sip)> no outgoing-mask <ipui>
```

Arguments

Argument	Value	Description
ipui	1	Keenetic Linear Adapter Port 1 ID.
	2	Keenetic Linear Adapter Port 2 ID.
	<i>String</i>	Ten-digit DECT handset identifier (IPUI). Consists of 10 characters A, B, C, D, E, F and digits from 0 to 9.

Example

```
(nvox-sip)> outgoing-mask 1
Nvox::Manager: Added phone 1 to SIP "1" outgoing-mask.
```

```
(nvox-sip)> outgoing-mask 034725D054
Nvox::Manager: Added phone 034725D054 to SIP "1" outgoing-mask.
```

```
(nvox-sip)> no outgoing-mask 2
Nvox::Manager: Removed phone 2 from SIP "1" outgoing-mask.
```

History

Version	Description
3.05	The nvox sip outgoing-mask command has been introduced.

C.25.31 nvox sip password

Description Set the password used for authentication on the IP-telephony provider's servers. By default, the password is not configured.

Command with **no** prefix removes the password from the line parameters.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> password <password>
(nvox-sip)> no password
```

Arguments

Argument	Value	Description
password	<i>String</i>	A string of ASCII characters. The maximum length of the string is 64 characters.

Example

```
(nvox-sip)> password 1234567
Nvox::Manager: Set SIP line 1 password.
```

```
(nvox-sip)> no password
Nvox::Manager: Reset SIP line 1 password.
```

History

Version	Description
3.05	The nvox sip password command has been introduced.

C.25.32 nvox sip priority

Description Set the priority for this line. Line priorities are taken into account when selecting a line for an outgoing call: the system selects the line with the highest priority of those that are allowed for the phone or handset and have dialing rules that correspond to the dialed number.

Command with **no** prefix sets priority to 1 for this line, rearranging the priorities of the other lines accordingly if necessary.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> priority <priority>
```

```
(nvox-sip)> no priority
```

Arguments

Argument	Value	Description
priority	<i>Integer</i>	The priority number in the range from 0 to 9, where 0 is the lowest priority; 9 — highest priority.

Example

```
(nvox-sip)> priority 7
Nvox::Manager: Set SIP line 1 priority to "7".
```

```
(nvox-sip)> no priority
Nvox::Manager: Reset SIP line 1 priority.
```

History

Version	Description
3.05	The nvox sip priority command has been introduced.

C.25.33 nvox sip proxy

Description Set the domain name or IP address of the IP telephony operator's SIP proxy for this line. By default, the SIP proxy is not configured.

Command with **no** prefix removes the SIP proxy from the line parameters.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> proxy <proxy>
(nvox-sip)> no proxy
```

Arguments

Argument	Value	Description
proxy	<i>String</i>	Domain name or IP address. If the SIP proxy uses a non-standard port (other than 5060), it must be specified to the right of the domain name/IP address with a colon.

Example

```
(nvox-sip)> proxy sip.proxy.local:5090
Nvox::Manager: Set SIP line 1 proxy URI to "sip.proxy.local:5090".
```

```
(nvox-sip)> no proxy
Nvox::Manager: Reset SIP line 1 proxy URI.
```

History

Version	Description
3.05	The nvox sip proxy command has been introduced.

C.25.34 nvox sip reg-timeout

Description Set the SIP registration validity period on the IP-telephony operator's server, after which the registration should be resumed. This parameter can be changed during the registration process by the server. By default, 180 value is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> reg-timeout <timeout>
```

```
(nvox-sip)> no reg-timeout
```

Arguments

Argument	Value	Description
timeout	<i>Integer</i>	SIP registration validity period in the range from 10 to 3600 seconds.

Example

```
(nvox-sip)> reg-timeout 1800
Nvox::Manager: Set SIP line 1 registration timeout to "1800".
```

```
(nvox-sip)> no reg-timeout
Nvox::Manager: Reset SIP line 1 registration timeout.
```

History

Version	Description
3.05	The nvox sip reg-timeout command has been introduced.

C.25.35 nvox sip registration-first-retry

Description

Set the first SIP registration retry timeout. Registration attempts are repeated if the IP telephony operator's SIP server does not respond to SIP registration requests. By default, 120 value is used.

Command with **no** prefix resets setting to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(nvox-sip)> registration-first-retry <timeout>
```

```
(nvox-sip)> no registration-first-retry
```

Arguments

Argument	Value	Description
timeout	<i>Integer</i>	First SIP registration repeat timeout in the range from 0 to 1800 seconds.

Example

```
(nvox-sip)> registration-first-retry 180
Nvox::Manager: Set SIP line 1 registration first retry to "180".
```

```
(nvox-sip)> no registration-first-retry
Nvox::Manager: Reset SIP line 1 registration first retry.
```

History	Version	Description
	3.05	The nvox sip registration-first-retry command has been introduced.

C.25.36 nvox sip registration-retry

Description Set the SIP registration retry timeout. Registration attempts are repeated if the IP telephony operator's server does not respond to SIP registration requests. By default, 120 value is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> registration-retry <timeout>
```

```
(nvox-sip)> no registration-retry
```

Arguments	Argument	Value	Description
	timeout	<i>Integer</i>	SIP registration repeat timeout in the range from 0 to 1800 seconds.

Example

```
(nvox-sip)> registration-retry 180  
Nvox::Manager: Set SIP line 1 registration retry to "180".
```

```
(nvox-sip)> no registration-retry  
Nvox::Manager: Reset SIP line 1 registration retry.
```

History	Version	Description
	3.05	The nvox sip registration-retry command has been introduced.

C.25.37 nvox sip registration-uri

Description Set the domain name or IP address of the SIP registration server of the IP telephony operator for this line. By default, the registration server is not set.

Command with **no** prefix removes the registration server from parameters.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> registration-uri <uri>
```

```
(nvox-sip)> no registration-uri
```

Arguments

Argument	Value	Description
uri	<i>String</i>	Domain name or IP address. If the SIP proxy uses a non-standard port (other than 5060), it must be specified to the right of the domain name/IP address with a colon.

Example

```
(nvox-sip)> registration-uri sip.registrar.local:5090
Nvox::Manager: Set SIP line 1 registration URI to ►
"sip.registrar.local:5090".
```

```
(nvox-sip)> no registration-uri
Nvox::Manager: Reset SIP line 1 registration URI.
```

History

Version	Description
3.05	The nvox sip registration-uri command has been introduced.

C.25.38 nvox sip sdp-nat-rewrite

Description

Enable receiving your IP address (or NAT IP address) from the registration server and overwriting by it the appropriate fields in the Via, Contact headers, as well as in SIP/SDP in all further outgoing SIP messages. This ensures the successful exchange of SIP signaling messages and two-way audibility. Use this option when a secondary channel, such as a VPN tunnel, is used to communicate with the server, or when there is a symmetric NAT between the Keenetic device and the operator's public server that STUN technology does not work with. By default, the feature is disabled.

Command with **no** prefix disables IP address rewriting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(nvox-sip)> sdp-nat-rewrite
```

```
(nvox-sip)> no sdp-nat-rewrite
```

Example

```
(nvox-sip)> sdp-nat-rewrite
Nvox::Manager: Set SIP line 1 SDP NAT, Contact and Via rewrite ►
to "1".
```

```
(nvox-sip)> no sdp-nat-rewrite
Nvox::Manager: Reset SIP line 1 SDP NAT, Contact and Via rewrite.
```

History

Version	Description
3.05	The nvox sip sdp-nat-rewrite command has been introduced.

C.25.39 nvox sip selection-id

Description

Set the line selection code 0..9, which allows you to select this line for an outgoing call. To select a line, dial #, the line selection code and the subscriber number. When you select a line with a dialing code, the dialing rules are ignored and you can call a number that does not match the dialing rules of that line. With the code you can select only the lines, outgoing calls through which are allowed for this phone or DECT handset. The default selection code is not configured.

Command with **no** prefix removes the selection code from the line settings.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(nvox-sip)> selection-id <sel-id>
```

```
(nvox-sip)> no selection-id
```

Arguments

Argument	Value	Description
sel-id	<i>Integer</i>	Line selection code in the range from 0 to 9.

Example

```
(nvox-sip)> selection-id 9
Nvox::Manager: Set SIP line 1 selection id to "9".
```

```
(nvox-sip)> no selection-id
Nvox::Manager: Reset SIP line 1 selection id.
```

History

Version	Description
3.05	The nvox sip selection-id command has been introduced.

C.25.40 nvox sip session-timer

Description

Set the SIP session timer for this line. By default, the 120 value is used.

Command with **no** prefix resets setting to default.

Prefix no Yes**Change settings** Yes**Multiple input** No

Synopsis

```
(nvox-sip)> session-timer <timer>
```

```
(nvox-sip)> no session-timer
```

Arguments

Argument	Value	Description
timer	<i>Integer</i>	Timer value in the range from 90 to 86400 seconds.

Example

```
(nvox-sip)> session-timer 180
```

```
Nvox::Manager: Set SIP line 1 session timer to "180".
```

```
(nvox-sip)> no session-timer
```

```
Nvox::Manager: Reset SIP line 1 session timer.
```

History

Version	Description
3.05	The nvox sip session-timer command has been introduced.

C.25.41 nvox sip session-timer-mode

Description Set the SIP-session timer mode for this line. By default, the optional value is used.

Command with **no** prefix resets setting to default.

Prefix no Yes**Change settings** Yes**Multiple input** No

Synopsis

```
(nvox-sip)> session-timer-mode <mode>
```

```
(nvox-sip)> no session-timer-mode
```

Arguments

Argument	Value	Description
mode	disable	The session timer is not used, except when required by the remote party.
	optional	The session timer is used if the remote party supports and uses it.

Argument	Value	Description
	required	Session timer support is a requirement for the remote party to establish a connection.
	always	Session timer is used in every connection, regardless of whether the remote party supports it or not.

Example

```
(nvox-sip)> session-timer-mode always
Nvox::Manager: Set SIP line 1 session timer mode to "always".
```

```
(nvox-sip)> no session-timer-mode
Nvox::Manager: Reset SIP line 1 session timer mode.
```

History

Version	Description
3.05	The nvox sip session-timer-mode command has been introduced.

C.25.42 nvox sip substitute

Description

Set up a prefix substitution rule to delete some digits or a group of digits in the caller's number that appears on the handset display when a call comes in. The symbol > is used for substitution. To the left of the > must be a sequence of numbers, which should be replaced by the sequence to the right of this symbol. The substitution expression must be enclosed in parentheses. In a substitution rule there can be several substitution expressions. By default, the prefix substitution rule is not configured. Numbers that do not comply with the prefix substitution rule are displayed on the phone screen unchanged.

For more information see [Syntax of prefix substitution rules](#).

Command with **no** prefix removes the prefix substitution rule.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(nvox-sip)> substitute <substitute>
```

```
(nvox-sip)> no substitute
```

Arguments

Argument	Value	Description
substitute	<i>String</i>	A string up to 100 characters long. Valid characters: 01234567890*#+ABCDx[]() >.-.

Example

```
(nvox-sip)> substitute (+39>)x.|(+>00)x.
Nvox::Manager: Set SIP line 1 substitute to "(+39>)x.|(+>00)x.".
```

```
(nvox-sip)> no substitute
Nvox::Manager: Reset SIP line 1 substitute.
```

History

Version	Description
3.05	The nvox sip substitute command has been introduced.

C.25.43 nvox sip tls-security-mode

Description Set the security mode when using the TLS transport protocol. By default, the sip-tls value is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> tls-security-mode <mode>
```

```
(nvox-sip)> no tls-security-mode
```

Arguments

Argument	Value	Description
mode	sip-tls	The SIP URI scheme is used. During a call, the TLS transport is only used to transmit SIP signaling between the Keenetic router and your IP telephony provider's proxy server.
	sips	The SIPS URI scheme is used. It is designed to ensure that during a phone call, secure transport protocols are used to send SIP signaling all the way between the Keenetic router and the remote caller.

Example

```
(nvox-sip)> tls-security-mode sips
Nvox::Manager: Set SIP line 1 TLS security mode to "sips".
```

```
(nvox-sip)> no tls-security-mode
Nvox::Manager: Reset SIP line 1 TLS security mode to sip-tls.
```

History

Version	Description
3.05	The nvox sip tls-security-mode command has been introduced.

C.25.44 nvox sip transport

Description Set the transport protocol used to transmit SIP signaling messages. By default, the udp value is used.

Note: If communication is only possible over IPv4, the UDP over IPv4 transport will be used, even if UDP over IPv6 was selected.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip)> transport <transport>
(nvox-sip)> no transport
```

Arguments

Argument	Value	Description
transport	udp	The UDP transport protocol over IPv4 is the most commonly used transport. It is supported by most SIP servers and subscriber devices.
	udp6	The UDP transport protocol over IPv6.
	tcp	Transport protocol TCP over IPv4. It guarantees the delivery of messages, including long messages that cannot be transmitted by the UDP transport without fragmentation.
	tcp6	Transport protocol TCP over IPv6.
	tls	TLS transport protocol over IPv4. It ensures secure exchange of SIP signaling messages with the operator's proxy server. Helps prevent theft of credentials and other important information transmitted in SIP signaling messages.
	tls6	TLS transport protocol over IPv6.

Example

```
(nvox-sip)> transport tls
Nvox::Manager: Set SIP line 1 transport to "tls".
```

```
(nvox-sip)> transport udp6
Nvox::Manager: Set SIP line 1 transport to "udp6".
```

```
(nvox-sip)> no transport
Nvox::Manager: Reset SIP line 1 transport to udp.
```

History

Version	Description
3.05	The nvox sip transport command has been introduced.

4.00	The udp6, tcp6, tls6 arguments were added.
------	--

C.26 nvox sip-common

Description Access to a group of commands to configure the SIP common settings.

Prefix no No

Change settings No

Multiple input No

Group entry (nvox-sip-common)

Synopsis (nvox)> **sip-common**

Example (nvox)> **sip-common**
Core::Configurator: Done.
(nvox-sip-common)>

History

Version	Description
2.00	The nvox sip-common command has been introduced.

C.26.1 nvox sip-common 100rel

Description Enable support of 100rel for reliable SIP Class 100 messaging on incoming and outgoing calls. By default, 100rel is enabled.

Command with **no** prefix disables 100rel support.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis (nvox-sip-common)> **100rel**

(nvox-sip-common)> **no 100rel**

Example (nvox-sip-common)> **100rel**
Nvox::Manager: Set SIP enable 100rel/PRACK SIP extension to "1".

(nvox-sip-common)> **no 100rel**
Nvox::Manager: Set SIP enable 100rel/PRACK SIP extension to "0".

History	Version	Description
	3.05	The nvox sip-common 100rel command has been introduced.

C.26.2 nvox sip-common agent

Description Configure the User Agent name. By default, the name is used of the router's model, for example "Keenetic Giga (KN-1011)".

Command with **no** prefix removes the User Agent name configured by the user.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip-common)> agent <agent>
(nvox-sip-common)> no agent
```

Arguments	Argument	Value	Description
	agent	<i>String</i>	String of printed symbols of the set ASCII. Maximum string length is 100 characters.

Example

```
(nvox-sip-common)> agent Keenetic
Nvox::Manager: Set SIP user agent to "Keenetic".
```

```
(nvox-sip-common)> no agent
Nvox::Manager: Reset SIP user agent.
```

History	Version	Description
	3.05	The nvox sip-common agent command has been introduced.

C.26.3 nvox sip-common disable-dns-srv

Description Disable the DNS SRV resolving feature. With this feature, the system gets the IP address and signal port of the SIP proxy server from the DNS SRV record. By default, the feature is enabled.

Note: If the DNS SRV resolving function is disabled, the system gets the IP address of the SIP proxy server from entry A, and gets its signal port from the SIP line settings.

Command with **no** prefix enables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip-common)> disable-dns-srv
(nvox-sip-common)> no disable-dns-srv
```

Example

```
(nvox-sip-common)> disable-dns-srv
Nvox::Manager: Set SIP disable DNS SRV to "1".
```

```
(nvox-sip-common)> no disable-dns-srv
Nvox::Manager: Reset SIP disable DNS SRV.
```

History

Version	Description
3.05	The nvox sip-common disable-dns-srv command has been introduced.

C.26.4 nvox sip-common disable-tls-validation

Description Disable the SIP proxy validation when using SIP TLS transport. By default, the SIP proxy validation is enabled.

Validation is performed when a TLS connection is established with a SIP proxy server. A proxy server is considered valid if the following conditions are met:

- 1) The x.509 certificate of the proxy server is signed by one of the trusted certificate authorities whose root certificates are in the certificate store of the Keenetic device.
- 2) The SIP proxy server domain name in the SIP telephone line settings must match the "commonName" field in the SIP proxy certificate.

Keenetic establishes a TLS connection if the validation is successful and starts exchanging SIP messages with the SIP proxy server. Keenetic terminates the TLS connection if a validation error occurs, and displays "503 SSL certificate validation error" in the system log.

Command with **no** prefix enables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip-common)> disable-tls-validation
(nvox-sip-common)> no disable-tls-validation
```

Example

```
(nvox-sip-common)> disable-tls-validation
Nvox::Manager: Set SIP disable proxy verification to "1".
```

```
(nvox-sip-common)> no disable-tls-validation
Nvox::Manager: Set SIP disable proxy verification to "0"
```

History

Version	Description
3.09	The nvox sip-common disable-tls-validation command has been introduced.

C.26.5 nvox sip-common g726-dynamic-payload

Description Configure the dynamic payload type for the G.726 codec. By default, 109 value is used.

Note: G.726 codec is not supported with Keenetic Linear.

Command with **no** prefix resets the dynamic payload to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip-common)> g726-dynamic-payload <payload>
```

```
(nvox-sip-common)> no g726-dynamic-payload
```

Arguments

Argument	Value	Description
payload	<i>Integer</i>	Dynamic payload type ranging from 96 to 127.

Example

```
(nvox-sip-common)> g726-dynamic-payload 98
Nvox::Manager: Set SIP G726 dynamic payload to "98".
```

```
(nvox-sip-common)> no g726-dynamic-payload
Nvox::Manager: Reset SIP G726 dynamic payload.
```

History

Version	Description
3.05	The nvox sip-common g726-dynamic-payload command has been introduced.

C.26.6 nvox sip-common outbound-proxy

Description Configure the domain name or IP address of the outgoing SIP proxy server for all SIP telephone lines configured in the system. By default, the proxy server is not configured.

Note: If the outgoing proxy uses a non-standard port (other than 5060), it must be specified to the right of the domain name/IP address with a colon.

Command with **no** prefix deletes the outgoing SIP proxy server.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip-common)> outbound-proxy <proxy>
(nvox-sip-common)> no outbound-proxy
```

Argument	Value	Description
proxy	String	Domain name or IP address.

Example

```
(nvox-sip-common)> outbound-proxy sip.proxy.local:5090
Nvox::Manager: Set SIP outbound proxy to "sip.proxy.local:5090".

(nvox-sip-common)> no outbound-proxy
Nvox::Manager: Reset SIP outbound proxy.
```

Version	Description
3.05	The nvox sip-common outbound-proxy command has been introduced.

C.26.7 nvox sip-common qos

Description Access to a group of commands to configure the QoS. These settings apply to all SIP lines in the system.

Prefix no No

Change settings No

Multiple input No

Group entry (sip-common-qos)

Synopsis

```
(nvox-sip)> qos
```

Example

```
(nvox-sip)> qos
Core::Configurator: Done.
(sip-common-qos)>
```


History	Version	Description
	3.05	The nvox sip qos command has been introduced.

C.26.7.1 nvox sip-common qos rtp-dscp

Description Set the priority in the IP header DS field of outgoing packets with audio data transmitted over RTP. The upstream network equipment can read the DS field and prioritize packets according to the priority specified in this field. The default setting is lowest priority.

Command with **no** prefix sets lowest priority (0) to DS.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(sip-common-qos)> rtp-dscp <dscp>
```

```
(sip-common-qos)> no rtp-dscp
```

Arguments	Argument	Value	Description
	dscp	<i>Integer</i>	The priority number in the range from 0 to 63.

Example

```
(sip-common-qos)> rtp-dscp 46
```

Nvox::Manager: Set SIP Default RTP ToS/DSCP (Type of Service) ► to "46".

```
(sip-common-qos)> no rtp-dscp
```

Nvox::Manager: Reset SIP Default RTP ToS/DSCP (Type of Service).

History	Version	Description
	3.05	The nvox sip-common qos rtp-dscp command has been introduced.

C.26.7.2 nvox sip-common qos rtp-so-prio

Description Set the priority in the 3-bit PCP field of the IEEE 802.1Q header of outgoing packets with audio data transmitted via RTP over VLAN. The upstream network equipment can read the PCP field and prioritize packets according to the priority specified in this field. The default setting is lowest priority.

Command with **no** prefix sets 0 priority to PCP.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(sip-common-qos)> rtp-so-prio <so_prio>
(sip-common-qos)> no rtp-so-prio
```

Arguments

Argument	Value	Description
so_prio	<i>Integer</i>	The priority number in the range from 0 to 7, where 0 is the lowest priority; 7 — highest priority.

Example

```
(sip-common-qos)> rtp-so-prio 7
Nvox::Manager: Set SIP Default RTP CoS (Class of Service) to "7".
```

```
(sip-common-qos)> no rtp-so-prio
Nvox::Manager: Reset SIP Default RTP CoS (Class of Service).
```

History

Version	Description
3.05	The nvox sip-common qos rtp-so-prio command has been introduced.

C.26.7.3 nvox sip-common qos sip-dscp

Description Set the priority in the DS field of the IP header packets with outgoing messages transmitted via the SIP protocol. The upstream network equipment can read the DS field and prioritize packets according to the priority specified in this field. The default setting is lowest priority.

Command with **no** prefix sets lowest priority (0) to DS.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(sip-common-qos)> sip-dscp <dscp>
(sip-common-qos)> no sip-dscp
```

Arguments

Argument	Value	Description
dscp	<i>Integer</i>	The priority number in the range from 0 to 63.

Example

```
(sip-common-qos)> sip-dscp 24
Nvox::Manager: Set SIP Default SIP ToS/DSCP (Type of Service) ▶
to "24".
```

```
(sip-common-qos)> no sip-dscp
Nvox::Manager: Reset SIP Default SIP ToS/DSCP (Type of Service).
```

History

Version	Description
3.05	The nvox sip-common qos sip-dscp command has been introduced.

C.26.7.4 nvox sip-common qos sip-so-prio

Description Set the priority in the 3-bit PCP field of the IEEE 802.1Q header of outgoing packets with audio data transmitted via SIP over VLAN. The upstream network equipment can read the PCP field and prioritize packets according to the priority specified in this field. The default setting is lowest priority.

Command with **no** prefix sets 0 priority to PCP.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(sip-common-qos)> sip-so-prio <so_prio>
(sip-common-qos)> no sip-so-prio
```

Arguments

Argument	Value	Description
so_prio	<i>Integer</i>	The priority number in the range from 0 to 7, where 0 is the lowest priority; 7 — highest priority.

Example

```
(sip-common-qos)> sip-so-prio 7
Nvox::Manager: Set SIP Default SIP CoS (Class of Service) to "7".
```

```
(sip-common-qos)> no sip-so-prio
Nvox::Manager: Reset SIP Default SIP CoS (Class of Service).
```

History

Version	Description
3.05	The nvox sip-common qos sip-so-prio command has been introduced.

C.26.8 nvox sip-common rtp-port

Description Configure the range of UDP ports that the system uses to exchange RTP audio data during a telephone connection. By default, the range of UDP ports is from 4000 to 4015.

Command with **no** prefix resets the range of UDP ports by default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip-common)> rtp-port <port> through <end-port>
(nvox-sip-common)> no rtp-port
```

Arguments

Argument	Value	Description
port	<i>Integer</i>	The first port of the range. Valid values are from 1 to 65534.
end-port	<i>Integer</i>	The last port of the range. Valid values are from 1 to 65534.

Example

```
(nvox-sip-common)> rtp-port 10000 through 10200
Nvox::Manager: Set RTP port range from 10000 to 10200.
```

```
(nvox-sip-common)> no rtp-port
Nvox::Manager: Reset SIP RTP port range to default, the transport ►
will be bound to any available port.
```

History

Version	Description
3.05	The nvox sip-common rtp-port command has been introduced.

C.26.9 nvox sip-common sdp rtcp

Description Enable RTCP parameter negotiation in SDP. By default, function is disabled. Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip-common)> sdp rtcp
```

```
(nvox-sip-common)> no sdp rtcp
```

Example

```
(nvox-sip-common)> sdp rtcp
Nvox::Manager: Set SIP RTCP in SDP to "1".
```

```
(nvox-sip-common)> no sdp rtcp
Nvox::Manager: Reset SIP RTCP in SDP.
```

History

Version	Description
3.05	The nvox sip-common sdp rtcp command has been introduced.

C.26.10 nvox sip-common sdp tias

Description

Add TIAS bandwidth modifier to SDP (SDP bandwidth modifier TIAS, RFC3890). By default, the TIAS is absent in SDP.

Command with **no** prefix removes TIAS from SDP.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(nvox-sip-common)> sdp tias
```

```
(nvox-sip-common)> no sdp tias
```

Example

```
(nvox-sip-common)> sdp tias
Nvox::Manager: Set SIP TIAS in SDP to "1".
```

```
(nvox-sip-common)> no sdp tias
Nvox::Manager: Reset SIP TIAS in SDP.
```

History

Version	Description
3.05	The nvox sip-common sdp tias command has been introduced.

C.26.11 nvox sip-common stun-server

Description

Configure the domain name or IP address of the STUN server common to all SIP telephone lines configured in the system.

By default, the STUN server is `stun.1.google.com:19302`.

Command with **no** prefix resets configuration by default.

Prefix no Yes**Change settings** Yes**Multiple input** No

Synopsis

```
(nvox-sip-common)> stun-server <stun>
```

```
(nvox-sip-common)> no stun-server
```

Arguments

Argument	Value	Description
stun	<i>String</i>	Domain name or IP address.

Example

```
(nvox-sip-common)> stun-server stun.sipnet.ru:3478  
Nvox::Manager: Set SIP STUN server to "stun.sipnet.ru:3478".
```

```
(nvox-sip-common)> no stun-server  
Nvox::Manager: Reset SIP STUN server.
```

History

Version	Description
3.05	The nvox sip-common stun-server command has been introduced.

C.26.12 nvox sip-common tcp-keepalive

Description Set the interval of keepalive packet sending to the SIP proxy's TCP signaling port to keep an open connection to the server through NAT. By default, 90 value is set.

Command with **no** prefix resets setting to default.

Prefix no Yes**Change settings** Yes**Multiple input** No

Synopsis

```
(nvox-sip-common)> tcp-keepalive <interval>
```

```
(nvox-sip-common)> no tcp-keepalive
```

Arguments

Argument	Value	Description
interval	<i>Integer</i>	The interval of keepalive packet sending in seconds. Can take values in the range from 5 to 600 inclusively. 0 value disables the sending of keepalive messages.

Example

```
(nvox-sip-common)> tcp-keepalive 120
Nvox::Manager: Set SIP TCP keepalive to "120".
```

```
(nvox-sip-common)> no tcp-keepalive
Nvox::Manager: Reset SIP TCP keepalive.
```

```
(nvox-sip-common)> tcp-keepalive 0
Nvox::Manager: Set SIP TCP keepalive to "0".
```

History

Version	Description
3.05	The nvox sip-common tcp-keepalive command has been introduced.

C.26.13 nvox sip-common tcp-port

Description Configure the number of the local TCP port used to exchange SIP signaling messages with IP-telephony providers servers over the TCP transport protocol. By default, 5060 value is set.

Command with **no** prefix resets port to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip-common)> tcp-port <port>
```

```
(nvox-sip-common)> no tcp-port
```

Arguments

Argument	Value	Description
port	<i>Integer</i>	TCP port number in the range from 1 to 65534. Use 0 value to force the system to select a random free TCP port automatically.

Example

```
(nvox-sip-common)> tcp-port 8075
Nvox::Manager: Set SIP TCP port to "8075".
```

```
(nvox-sip-common)> no tcp-port
Nvox::Manager: Reset SIP TCP port.
```

```
(nvox-sip-common)> tcp-port 0
Nvox::Manager: Set SIP TCP port to "0".
```

History

Version	Description
3.05	The nvox sip-common tcp-port command has been introduced.

C.26.14 nvox sip-common td-timeout

Description Set the timeout for switching SIP proxies. Switching becomes possible if the DNS SRV record contains a list of several servers. The system selects from a list the server with the highest priority for SIP messaging. If this server does not respond, the system switches to the next highest priority server.

Note: This command is relevant if the [DNS SRV resolving](#) is enabled.

By default, 10000 value is set.

Command with **no** prefix resets timeout to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip-common)> td-timeout <timeout>
(nvox-sip-common)> no td-timeout
```

Arguments

Argument	Value	Description
timeout	<i>Integer</i>	The switchover timeout to another server in the range from 10000 to 100000 ms.

Example

```
(nvox-sip-common)> td-timeout 12000
Nvox::Manager: Set SIP wait time for response retransmissions ►
to "12000".
```

```
(nvox-sip-common)> no td-timeout
Nvox::Manager: Reset SIP wait time for response retransmissions.
```

History

Version	Description
3.05	The nvox sip-common td-timeout command has been introduced.

C.26.15 nvox sip-common tls-keepalive

Description Set the interval of keepalive packet sending to the SIP proxy's TLS signaling port to keep an open connection to the server through NAT. By default, 90 value is set.

Note: This command is relevant when using the TLS transport protocol.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip-common)> tls-keepalive <interval>
```

```
(nvox-sip-common)> no tls-keepalive
```

Arguments

Argument	Value	Description
interval	<i>Integer</i>	The interval of keepalive packet sending in seconds. Can take values in the range from 5 to 600 inclusively. 0 value disables the sending of keepalive messages.

Example

```
(nvox-sip-common)> tls-keepalive 120  
Nvox::Manager: Set SIP TLS keepalive to "120".
```

```
(nvox-sip-common)> no tls-keepalive  
Nvox::Manager: Reset SIP TLS keepalive.
```

```
(nvox-sip-common)> tls-keepalive 0  
Nvox::Manager: Set SIP TLS keepalive to "0".
```

History

Version	Description
3.05	The nvox sip-common tls-keepalive command has been introduced.

C.26.16 nvox sip-common tls-port

Description Configure the number of the local TLS port used to exchange SIP signaling messages with IP-telephony providers servers over the TLS protocol. By default, 5061 value is set.

Note: Local TLS port number must not be the same as the local UDP and TCP port numbers that the system uses to exchange SIP messages.

Command with **no** prefix resets port to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip-common)> tcp-port <port>
```

```
(nvox-sip-common)> no tcp-port
```

Arguments

Argument	Value	Description
port	<i>Integer</i>	TLS port number in the range from 1 to 65534. Use 0 value to force the system to select a random free TLS port automatically.

Example

```
(nvox-sip-common)> tls-port 8076
Nvox::Manager: Set SIP TLS port to "8076".
```

```
(nvox-sip-common)> no tls-port
Nvox::Manager: Reset SIP TLS port.
```

```
(nvox-sip-common)> tls-port 0
Nvox::Manager: Set SIP TLS port to "0".
```

History

Version	Description
3.05	The nvox sip-common tls-port command has been introduced.

C.26.17 nvox sip-common udp-port

Description

Configure the number of the local UDP port used to exchange SIP signaling messages with IP-telephony providers servers over the UDP protocol. By default, 5060 value is set.

Command with **no** prefix resets port to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(nvox-sip-common)> udp-port <port>
```

```
(nvox-sip-common)> no udp-port
```

Arguments

Argument	Value	Description
port	<i>Integer</i>	UDP port number in the range from 1 to 65534. Use 0 value to force the system to select a random free UDP port automatically.

Example

```
(nvox-sip-common)> udp-port 34577
Nvox::Manager: Set SIP UDP port to "34577".
```

```
(nvox-sip-common)> no udp-port
Nvox::Manager: Reset SIP UDP port.
```

```
(nvox-sip-common)> udp-port 0
Nvox::Manager: Set SIP UDP port to "0".
```

History

Version	Description
3.05	The nvox sip-common udp-port command has been introduced.

C.26.18 nvox sip-common unescape-hash-char

Description Allow the # symbol in Request URI of INVITE requests in ASCII encoding, which is necessary for normal work with some IP-telephony operators. By default, the feature is disabled.

Command with **no** prefix disables the setting. The # symbol is encoded as %23, which corresponds to RFC2396.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(nvox-sip-common)> unescape-hash-char
(nvox-sip-common)> no unescape-hash-char
```

Example

```
(nvox-sip-common)> unescape-hash-char
Nvox::Manager: Set SIP unescape # char in outgoing SIP URI to "1".
```

```
(nvox-sip-common)> no unescape-hash-char
Nvox::Manager: Reset SIP unescape # char in outgoing SIP URI.
```

History

Version	Description
3.05	The nvox sip-common unescape-hash-char command has been introduced.

C.27 show nvox active-calls

Description Show the list of active calls that are being made at the moment.

Prefix no No

Change settings No

Multiple input No

Synopsis`(show)> nvox active-calls`**Example**

```
(show)> nvox active-calls

active_calls:
  call:
    type: outgoing
    index: 0
    status: hold
    hs: phone 1
    line: 1001
    number: 9999
    start_time: Fri Dec 17 12:04:06 2021
    duration: 30
    matched_name:

    call:
      type: outgoing
      index: 1
      status: connected
      hs: phone 1
      line: 1001
      number: 1002
      start_time: Fri Dec 17 12:04:17 2021
      duration: 12
      matched_name:

    call:
      type: incoming
      index: 2
      status: connected
      hs: phone 2
      line: 1002
      number: 1001
      start_time: Fri Dec 17 12:04:21 2021
      duration: 12
      matched_name:
```

History

Version	Description
3.05	The show nvox active-calls command has been introduced.

C.28 show nvox cadences

Description Show the settings of the selected ringtone. If you use no argument, the settings of all ringtones will be displayed.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **nvox cadences** [*cadence*]

Arguments

Argument	Value	Description
cadence	<i>Integer</i>	Ringtone number in the range from 0 to 5.

Example

```
(show)> nvox cadences

cadences:
  cadence:
    id: 0
    active1: 400
    passive1: 500
    active2: 400
    passive2: 2000
    active3: 0
    passive3: 0

  cadence:
    id: 1
    active1: 1000
    passive1: 4000
    active2: 0
    passive2: 0
    active3: 0
    passive3: 0

  cadence:
    id: 2
    active1: 400
    passive1: 500
    active2: 0
    passive2: 0
    active3: 0
    passive3: 0

  cadence:
    id: 3
    active1: 400
    passive1: 2000
    active2: 1200
    passive2: 1200
    active3: 0
    passive3: 0

  cadence:
    id: 4
    active1: 400
    passive1: 500
    active2: 400
```

```

passive2: 2000
active3: 2000
passive3: 2000

```

```

cadence:
  id: 5
  active1: 4000
  passive1: 2000
  active2: 0
  passive2: 0
  active3: 0
  passive3: 0

```

```
(show)> nvox cadences 1
```

```

cadence:
  id: 1
  active1: 1000
  passive1: 4000
  active2: 0
  passive2: 0
  active3: 0
  passive3: 0

```

History

Version	Description
3.05	The show nvox cadences command has been introduced.

C.29 show nvox call-history

Description Show list of calls registered since the router is switched on. If you use no arguments, the entire call log will be displayed.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> nvox call-history [<offset> [<count>]]`

Arguments

Argument	Value	Description
offset	<i>Integer</i>	The number of call log entries, starting from the last entry, that you want to skip when displaying on the screen. The offset must not exceed the maximum number of records specified by the nvox call-history length command.
count	<i>Integer</i>	The number of records to be shown. The records are displayed in descending order. If

Argument	Value	Description
		this parameter is absent, all records with the specified offset are displayed.

Example

```
(show)> nvox call-history

call_history:
  call:
    type: outgoing
    index: 3
    start_time: Wed Dec 29 13:15:17 2021
    line: 1002
    hs: phone 2
  other_party_number: 9996
  other_party_name:
  duration: 47
  release_code:
  release_reason:

  call:
    type: outgoing
    index: 2
    start_time: Wed Dec 29 13:15:17 2021
    line: 1001
    hs: phone 1
  other_party_number: 9997
  other_party_name:
  duration: 48
  release_code:
  release_reason:

  call:
    type: outgoing
    index: 1
    start_time: Wed Dec 29 13:13:39 2021
    line: 1002
    hs: phone 2
  other_party_number: 9998
  other_party_name:
  duration: 13
  release_code:
  release_reason:

  call:
    type: outgoing
    index: 0
    start_time: Wed Dec 29 13:13:36 2021
    line: 1001
    hs: phone 1
  other_party_number: 9999
  other_party_name:
  duration: 18
```

```

release_code:
release_reason:

(show)> nvox call-history 2 2

call_history:
  call:
    type: outgoing
    index: 1
    start_time: Wed Dec 29 13:13:39 2021
    line: 1002
    hs: phone 2
  other_party_number: 9998
  other_party_name:
  duration: 13
  release_code:
  release_reason:

  call:
    type: outgoing
    index: 0
    start_time: Wed Dec 29 13:13:36 2021
    line: 1001
    hs: phone 1
  other_party_number: 9999
  other_party_name:
  duration: 18
  release_code:
  release_reason:

```

History

Version	Description
2.06	The show dect call-history command has been introduced.
3.05	The command renamed to show nvox call-history .

C.30 show nvox fxs

Description Show Keenetic Linear USB module settings.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **nvox fxs**

Example (show)> **nvox fxs**

```
fxs-status:
```



```

country-codes: BG CA CS DE DK EE ES FI FR GR HR
                HU IT KZ LT LV NO PL PT RO RS RU ►
SE SI SK TR UA
selected-country: DE
force-calibration: disabled
pulse-dial-modes: 0 - disabled, 1 - disabled
                  during voice calls, 2 - always ►
enabled
selected-pulse-dial-mode: 1
led-blinking-timer: 1000
unmute-timer: 200

```

History

Version	Description
3.05	The show nvox fxs command has been introduced.

C.31 show nvox fxs-ports

Description Show phone port settings of Keenetic Linear USB module.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> nvox fxs-ports`

Example `(show)> nvox fxs-ports`

```

ports:
  port:
    id: 1
    name: phone 1
  int-number: 1
    status: enabled
    volume-rx: -4
    volume-tx: -4
    impedance: 220_820_115
  hash-ends-dial: enabled
  echo-cancellation: enabled

  port:
    id: 2
    name: phone 2
  int-number: 2
    status: enabled
    volume-rx: -4
    volume-tx: -4
    impedance: 220_820_115

```

```
hash-ends-dial: enabled
echo-cancellation: enabled
```

History

Version	Description
3.05	The show nvox fxs-ports command has been introduced.

C.32 show nvox info

Description Show information about the IP telephony system application installed on Keenetic OS.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> nvox info`

Example `(show)> nvox info`

```
info:
  app_name: nvox
  app_version: 0.8.2.53
  app_suffix: singledongle
  compile_date: Dec 15 2021
  sip_name: pjsip
  sip_version: 2.6
  sip_status: stopped
  tel_type: FXS
  tel_name: Si32287
tel_api_version: 9.2.0
tel_serial: S2135NS000404
tel_fw_date: 17:28:49 Feb 24 2021
tel_fw_version: 0044
  plugged: yes
supported_codecs: g711u,g711a,g726,g722
```

History

Version	Description
3.05	The show nvox info command has been introduced.

C.33 show nvox license

Description Show information about the connected USB module service code.

Prefix no No

Change settings No**Multiple input** No**Synopsis** `(show)> nvox license`

Example

```
(show)> nvox license
      plugged: yes
      license: 123456789012345
      integrity: ok
```

History

Version	Description
3.05	The show nvox license command has been introduced.

C.34 show nvox sip-lines

Description Show SIP registration status of telephone lines configured in the system.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** `(show)> nvox sip-lines`

Example

```
(show)> nvox sip-lines
      lines:
        line:
          id: 2
          name: 1002
          code: 401
          status: failure
          description: Unauthorized
        line:
          id: 1
          name: 1001
          code: 200
          status: registered
          description: OK
```

History

Version	Description
3.05	The show nvox sip-lines command has been introduced.

C.35 show nvox sip-profiles

Description Show settings profiles for connecting to IP telephony operators, which are used to configure phone lines in the web interface.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> nvox sip-profiles [default]`

Argument	Value	Description
default	<i>Keyword</i>	Show the default settings profile that is used when no operator is selected.

Example `(show)> nvox sip-profiles`

```

profile:
  provider: Actionvoip
registration-uri: sip.actionvoip.com
  proxy: sip.actionvoip.com:5060
  domain: sip.actionvoip.com
reg-timeout: 180

profile:
  provider: Chief 070
registration-uri:
  proxy: 202.133.231.17
  domain: chiefcall.com.tw

profile:
  provider: Deutsche Telekom (UDP)
  domain: tel.t-online.de
registration-uri: tel.t-online.de
  proxy: tel.t-online.de
  substitute: (+49>0)x.
reg-timeout: 480

profile:
  provider: Deutsche Telekom (TCP)
  domain: tel.t-online.de
registration-uri: tel.t-online.de
  proxy: tel.t-online.de
  substitute: (+49>0)x.
  transport: tcp
reg-timeout: 480

profile:
  provider: FreeCall

```

```
registration-uri: sip.voiparound.com
  proxy: sip.voiparound.com:5060
  domain: sip.voiparound.com
  reg-timeout: 180

  profile:
    provider: Nonoh
registration-uri: sip.nonoh.net
  proxy: sip.nonoh.net:5060
  domain: sip.nonoh.net
  reg-timeout: 180

  profile:
    provider: Telbo
registration-uri: telbo.com
  proxy: telbo.com
  domain: telbo.com

  profile:
    provider: TIM Telecom Italia
registration-uri: telecomitalia.it
  domain: telecomitalia.it
  transport: udp
  keepalive: 30
  substitute: (+39>)x.|(+>00)x.

  codec: g711a

  codec: g711u

  reg-timeout: 3600

  profile:
    provider: VoipDiscount
registration-uri: sip.voipdiscount.com
  proxy: sip.voipdiscount.com:5060
  domain: sip.voipdiscount.com
  reg-timeout: 180

  profile:
    provider: WebCallDirect
registration-uri: webcalldirect.com
  proxy: webcalldirect.com
  domain: webcalldirect.com
  reg-timeout: 180
```

```
(show)> nvox sip-profiles default
```

```
  profile:
    provider: CUSTOM
    name: CUSTOM
registration-uri:
  reg-timeout: 180
  proxy:
```

```

    domain:
      transport: udp
      tls-security-mode: SIP-TLS
      dtmf-mode: rfc2833
      lock-codec: yes
      disable-stun: yes
      sdp-nat-rewrite: no
      keepalive: 30

      codec: g711u

      codec: g711a

      digit-map:
      substitute:

```

History

Version	Description
3.05	The show nvox sip-profiles command has been introduced.

C.36 show nvox try-dial

Description

Show the telephone line through which an outgoing call will go to a specified telephone number from a specified DECT handset or telephone port.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(show)> nvox try-dial <ipui> <number>
```

Arguments

Argument	Value	Description
ipui	<i>Hex Integer</i>	Ten-digit DECT handset identifier or telephone port number (1 or 2).
number	<i>String</i>	Phone number, a string consisting of digits from 0 to 9 as well as the symbols # and *. The length of the string is up to 19 characters.

Example

```
(show)> nvox try-dial 034725D054 1234567
```

```

    line: 1
    line_id: 1
    line_name: 1001
    status: registered
    code: 200
    description: OK

```

```
(show)> nvox try-dial 1 1234567

    line: 1
    line_id: 1
    line_name: 1001
    status: registered
    code: 200
    description: OK
```

History

Version	Description
3.05	The show nvox try-dial command has been introduced.

C.37 show nvox try-dial-ext

Description

Show the routing of an outgoing call to a specified telephone number for all DECT handsets or telephone ports registered in the system. The command output for each handset displays a list of phone lines that are allowed to make an outgoing call from that handset. The lines in the list are displayed according to their priority — the higher the line in the list, the higher its priority. For the outgoing call the system selects the line with the highest priority and successful SIP registration (status "registered").

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(show)> nvox try-dial-ext <number>
```

Arguments

Argument	Value	Description
number	<i>String</i>	Phone number, a string consisting of digits from 0 to 9 as well as the symbols # and *. The length of the string is up to 19 characters.

Example

```
(show)> nvox try-dial-ext 1234567

    number: 1234567

    handset:
        name: phone 1

        line:
            id: 1
            name: 1001
            status: registered

    handset:
```

```
name: phone 2

line:
  id: 3
  name: 1003
  status: registered

line:
  id: 2
  name: 1002
  status: unregistered
```

History

Version	Description
3.05	The show nvox try-dial-ext command has been introduced.

SNMP MIB

Management Information Bases (MIBs) are read-only.

The following MIBs are supported:

D.1 SNMPv2-MIB

OID: 1.3.6.1.2.1.1

The following data elements are supported:

- SNMPv2-MIB::sysDescr
- SNMPv2-MIB::sysUpTime
- SNMPv2-MIB::sysContact
- SNMPv2-MIB::sysName
- SNMPv2-MIB::sysLocation
- SNMPv2-MIB::sysServices

D.2 IF-MIB

OID: 1.3.6.1.2.1.2 and 1.3.6.1.2.1.31

The following data elements are supported:

Basical

OID: 1.3.6.1.2.1.2

- IF-MIB::ifNumber
- IF-MIB::ifIndex
- IF-MIB::ifDescr
- IF-MIB::ifType
- IF-MIB::ifMtu
- IF-MIB::ifSpeed
- IF-MIB::ifPhysAddress
- IF-MIB::ifAdminStatus

- IF-MIB::ifOperStatus
- IF-MIB::ifLastChange
- IF-MIB::ifInOctets
- IF-MIB::ifInUcastPkts
- IF-MIB::ifInDiscards
- IF-MIB::ifInErrors
- IF-MIB::ifOutOctets
- IF-MIB::ifOutUcastPkts
- IF-MIB::ifOutDiscards
- IF-MIB::ifOutErrors

Advanced

OID 1.3.6.1.2.1.31

- IF-MIB::ifName
- IF-MIB::ifInMulticastPkts
- IF-MIB::ifInBroadcastPkts
- IF-MIB::ifOutMulticastPkts
- IF-MIB::ifOutBroadcastPkts
- IF-MIB::ifHCInOctets
- IF-MIB::ifHCInUcastPkts
- IF-MIB::ifHCInMulticastPkts
- IF-MIB::ifHCInBroadcastPkts
- IF-MIB::ifHCOctets
- IF-MIB::ifHCOUcastPkts
- IF-MIB::ifHCOMulticastPkts
- IF-MIB::ifHCOBroadcastPkts
- IF-MIB::ifLinkUpDownTrapEnable
- IF-MIB::ifHighSpeed
- IF-MIB::ifPromiscuousMode
- IF-MIB::ifConnectorPresent
- IF-MIB::ifAlias

- IF-MIB::ifCounterDiscontinuityTime

Main chipset	Switch	Device	Description
MT7621/RT63368	MT7530	Keenetic Giga III	64-bit per port octet counters. 32-bit per port packet counters. Separate per port broadcast, multicast and unicast packet counters.
	RTL8370M	Keenetic Ultra II Keenetic LTE	
MT7620	RTL8367B	Keenetic Viva Keenetic Extra	32-bit per port octet counters & 16-bit per port packet counters. Last counter overflow event time set in IF-MIB::ifCounterDiscontinuityTime.
	Integrated	Keenetic 4G III Keenetic Lite II Keenetic Lite III Keenetic Omni Keenetic Omni II	
MT7628	Integrated	Keenetic Start II Keenetic Lite III rev.B Keenetic 4G III rev.B Keenetic Air Keenetic Extra II	16-bit per port packet counters only. Last counter overflow event time set in IF-MIB::ifCounterDiscontinuityTime.

D.3 IP-MIB

OID: 1.3.6.1.2.1.49

The following data elements are supported:

- TCP-MIB::tcpRtoAlgorithm
- TCP-MIB::tcpRtoMin
- TCP-MIB::tcpRtoMax
- TCP-MIB::tcpMaxConn
- TCP-MIB::tcpActiveOpens
- TCP-MIB::tcpPassiveOpens
- TCP-MIB::tcpAttemptFails

- TCP-MIB::tcpEstabResets
- TCP-MIB::tcpCurrEstab
- TCP-MIB::tcpInSegs
- TCP-MIB::tcpOutSegs
- TCP-MIB::tcpRetransSegs
- TCP-MIB::tcpInErrs
- TCP-MIB::tcpOutRsts

D.4 UDP-MIB

OID: 1.3.6.1.2.1.50

The following data elements are supported:

- UDP-MIB::udpInDatagrams
- UDP-MIB::udpNoPorts
- UDP-MIB::udpInErrors
- UDP-MIB::udpOutDatagrams
- UDP-MIB::udpHCInDatagrams
- UDP-MIB::udpHCOutDatagrams

D.5 HOST-RESOURCES-MIB

OID: 1.3.6.1.2.1.25

The following data elements are supported:

- HOST-RESOURCES-MIB::hrSystemUptime

D.6 UCD-SNMP-MIB

OID 1.3.6.1.4.1.2021

The following data elements are supported:

- RAM info**
- UCD-SNMP-MIB::memTotalReal
 - UCD-SNMP-MIB::memAvailReal
 - UCD-SNMP-MIB::memShared
 - UCD-SNMP-MIB::memBuffer

- UCD-SNMP-MIB::memCached
- USB-storage info**
- UCD-SNMP-MIB::dskIndex
 - UCD-SNMP-MIB::dskPath
 - UCD-SNMP-MIB::dskTotal
 - UCD-SNMP-MIB::dskAvail
 - UCD-SNMP-MIB::dskUsed
 - UCD-SNMP-MIB::dskPercent
 - UCD-SNMP-MIB::dskPercentNode
- System load info**
- UCD-SNMP-MIB::laIndex
 - UCD-SNMP-MIB::laNames
 - UCD-SNMP-MIB::laLoad
 - UCD-SNMP-MIB::laConfig
 - UCD-SNMP-MIB::laLoadInt
 - UCD-SNMP-MIB::ssCpuRawUser
 - UCD-SNMP-MIB::ssCpuRawNice
 - UCD-SNMP-MIB::ssCpuRawSystem
 - UCD-SNMP-MIB::ssCpuRawIdle
 - UCD-SNMP-MIB::ssRawInterrupts
 - UCD-SNMP-MIB::ssRawContexts

IPsec Encryption Levels

The encryption level defines a set of *IKE* and *IPsec SA* algorithms.

Below a complete list of algorithms is displayed for each level in order of decreasing priority, as well as a set of commands **crypto ike proposal** to setup this profile manually.

In the list of algorithms is indicated:

- encryption with key length
- hash function for *HMAC* forming
- *PFS* mode (NO if disabled)

E.1 weak

Protocol	Encryption	Proposal
IKEv1	AES-128-CBC/SHA1/MODP1024	encryption aes-128-cbc
	AES-128-CBC/SHA1/MODP768	encryption 3des
	AES-128-CBC/MD5/MODP1024	encryption des
	AES-128-CBC/MD5/MODP768	integrity sha1
	3DES-CBC/SHA1/MODP1024	integrity md5
	3DES-CBC/SHA1/MODP768	dh-group 2
	3DES-CBC/MD5/MODP1024	dh-group 1
	3DES-CBC/MD5/MODP768	
	DES-CBC/SHA1/MODP1024	
	DES-CBC/SHA1/MODP768	
	DES-CBC/MD5/MODP1024	
	DES-CBC/MD5/MODP768	
IKEv2	AES-128-CBC/SHA1/MODP1024	encryption aes-128-cbc
	AES-128-CBC/SHA1/MODP768	encryption 3des
	AES-128-CBC/MD5/MODP1024	encryption des
	AES-128-CBC/MD5/MODP768	integrity sha1

Protocol	Encryption	Proposal
	3DES-CBC/SHA1/MODP1024	integrity md5
	3DES-CBC/SHA1/MODP768	dh-group 2
	3DES-CBC/MD5/MODP1024	dh-group 1
	3DES-CBC/MD5/MODP768	
	DES-CBC/SHA1/MODP1024	
	DES-CBC/SHA1/MODP768	
	DES-CBC/MD5/MODP1024	
	DES-CBC/MD5/MODP768	
IPsec SA	DES/MD5	cypher esp-des
	AES-128-CBC/SHA1	cypher esp-3des
	3DES-CBC/SHA1	cypher esp-aes-128
	DES/SHA1	hmac esp-md5-hmac
	AES-128-CBC/MD5	hmac esp-sha1-hmac
	3DES-CBC/MD5	

E.2 weak-pfs

Protocol	Encryption	Proposal
IKEv1	AES-128-CBC/SHA1/MODP1024	encryption aes-128-cbc
	AES-128-CBC/SHA1/MODP768	encryption 3des
	AES-128-CBC/MD5/MODP1024	encryption des
	AES-128-CBC/MD5/MODP768	integrity sha1
	3DES-CBC/SHA1/MODP1024	integrity md5
	3DES-CBC/SHA1/MODP768	dh-group 2
	3DES-CBC/MD5/MODP1024	dh-group 1
	3DES-CBC/MD5/MODP768	
	DES-CBC/SHA1/MODP1024	
	DES-CBC/SHA1/MODP768	
	DES-CBC/MD5/MODP1024	
	DES-CBC/MD5/MODP768	

Protocol	Encryption	Proposal
IKEv2	AES-128-CBC/SHA1/MODP1024	encryption aes-128-cbc
	AES-128-CBC/SHA1/MODP768	encryption 3des
	AES-128-CBC/MD5/MODP1024	encryption des
	AES-128-CBC/MD5/MODP768	integrity sha1
	3DES-CBC/SHA1/MODP1024	integrity md5
	3DES-CBC/SHA1/MODP768	dh-group 2
	3DES-CBC/MD5/MODP1024	dh-group 1
	3DES-CBC/MD5/MODP768	
	DES-CBC/SHA1/MODP1024	
	DES-CBC/SHA1/MODP768	
	DES-CBC/MD5/MODP1024	
	DES-CBC/MD5/MODP768	
	IPsec SA	DES/MD5/MODP1024
AES-128-CBC/SHA1		cypher esp-3des
3DES-CBC/SHA1		cypher esp-aes-128
DES/SHA1		hmac esp-md5-hmac
AES-128-CBC/MD5		hmac esp-sha1-hmac
3DES-CBC/MD5		dh-group 2
AES-128-CBC/SHA1/MODP1024		dh-group 1
3DES-CBC/SHA1/MODP1024		
DES-CBC/SHA1/MODP1024		
AES-128-CBC/SHA1/MODP768		
3DES-CBC/SHA1/MODP768		
DES-CBC/SHA1/MODP768		
AES-128-CBC/MD5/MODP1024		
3DES-CBC/MD5/MODP1024		
AES-128-CBC/MD5/MODP768		
3DES-CBC/MD5/MODP768		
DES-CBC/MD5/MODP768		

E.3 normal

Protocol	Encryption	Proposal
IKEv1	AES-256-CBC/SHA1/MODP1536	encryption aes-256-cbc
	AES-256-CBC/SHA1/ECP384	encryption aes-128-cbc
	AES-256-CBC/SHA1/MODP2048	encryption 3des
	AES-256-CBC/SHA1/MODP1024	integrity sha1
	AES-128-CBC/SHA1/MODP1536	integrity sha256
	AES-128-CBC/SHA1/ECP256	dh-group 5
	AES-128-CBC/SHA1/MODP1024	dh-group 20
	3DES-CBC/SHA1/MODP2048	dh-group 14
	3DES-CBC/SHA1/MODP1536	dh-group 2
	3DES-CBC/SHA1/MODP1024	dh-group 26
	AES-256-CBC/SHA256/MODP1024	
	AES-128-CBC/SHA256/MODP1024	
	3DES-CBC/SHA256/MODP1024	
IKEv2	AES-256-CBC/SHA256/MODP1024	encryption aes-256-cbc
	AES-128-CBC/SHA256/MODP1024	encryption aes-128-cbc
	3DES-CBC/SHA256/MODP1024	encryption 3des
	AES-256-CBC/SHA1/MODP1024	integrity sha256
	AES-256-CBC/SHA1/ECP384	integrity sha1
	AES-256-CBC/SHA1/MODP2048	dh-group 2
	AES-128-CBC/SHA1/MODP1024	dh-group 20
	AES-128-CBC/SHA1/ECP256	dh-group 14
	AES-256-CBC/SHA256/MODP2048	dh-group 5
	3DES-CBC/SHA1/MODP2048	dh-group 26
	3DES-CBC/SHA1/MODP1536	
	3DES-CBC/SHA1/MODP1024	
IPsec SA	AES-128-CBC/SHA1	cypher esp-aes-128
	AES-256-CBC/SHA1	cypher esp-aes-256

Protocol	Encryption	Proposal
	3DES-CBC/SHA1	cypher esp-3des
	AES-128-CBC/SHA256	hmac esp-sha1-hmac
	AES-256-CBC/SHA256	hmac esp-sha256-hmac
	3DES-CBC/SHA256	

E.4 normal-pfs

Protocol	Encryption	Proposal
IKEv1	AES-256-CBC/SHA1/MODP1536	encryption aes-256-cbc
	AES-256-CBC/SHA1/ECP384	encryption aes-128-cbc
	AES-256-CBC/SHA1/MODP2048	encryption 3des
	AES-256-CBC/SHA1/MODP1024	integrity sha1
	AES-128-CBC/SHA1/MODP1536	integrity sha256
	AES-128-CBC/SHA1/ECP256	dh-group 5
	AES-128-CBC/SHA1/MODP1024	dh-group 20
	3DES-CBC/SHA1/MODP2048	dh-group 14
	3DES-CBC/SHA1/MODP1536	dh-group 2
	3DES-CBC/SHA1/MODP1024	dh-group 26
	AES-256-CBC/SHA256/MODP1024	
	AES-128-CBC/SHA256/MODP1024	
	3DES-CBC/SHA256/MODP1024	
IKEv2	AES-256-CBC/SHA256/MODP1024	encryption aes-256-cbc
	AES-128-CBC/SHA256/MODP1024	encryption aes-128-cbc
	3DES-CBC/SHA256/MODP1024	encryption 3des
	AES-256-CBC/SHA1/MODP1024	integrity sha256
	AES-256-CBC/SHA1/ECP384	integrity sha1
	AES-256-CBC/SHA1/MODP2048	dh-group 2
	AES-128-CBC/SHA1/MODP1024	dh-group 20
	AES-128-CBC/SHA1/ECP256	dh-group 14
	AES-256-CBC/SHA256/MODP2048	dh-group 5

Protocol	Encryption	Proposal
	3DES-CBC/SHA1/MODP2048	dh-group 26
	3DES-CBC/SHA1/MODP1536	
	3DES-CBC/SHA1/MODP1024	
IPsec SA	AES-128-CBC/SHA1/MODP1024	esp-aes-128
	AES-128-CBC/SHA1	cypher esp-aes-256
	AES-256-CBC/SHA1	cypher esp-3des
	3DES-CBC/SHA1	hmac esp-sha1-hmac
	AES-256-CBC/SHA1/MODP1536	hmac esp-sha256-hmac
	AES-128-CBC/SHA1/MODP1536	dh-group 2
	3DES-CBC/SHA1/MODP1536	dh-group 14
	AES-256-CBC/SHA1/MODP1024	
	3DES-CBC/SHA1/MODP1024	

E.5 normal-3des

Protocol	Encryption	Proposal
IKEv1	AES-256-CBC/SHA1/MODP1536	encryption aes-256-cbc
	AES-256-CBC/SHA1/ECP384	encryption aes-128-cbc
	AES-256-CBC/SHA1/MODP2048	encryption 3des
	AES-256-CBC/SHA1/MODP1024	integrity sha1
	AES-128-CBC/SHA1/MODP1536	integrity sha256
	AES-128-CBC/SHA1/ECP256	dh-group 5
	AES-128-CBC/SHA1/MODP1024	dh-group 20
	3DES-CBC/SHA1/MODP2048	dh-group 14
	3DES-CBC/SHA1/MODP1536	dh-group 2
	3DES-CBC/SHA1/MODP1024	dh-group 26
	AES-256-CBC/SHA256/MODP1024	
	AES-128-CBC/SHA256/MODP1024	
	3DES-CBC/SHA256/MODP1024	
IKEv2	AES-256-CBC/SHA256/MODP1024	encryption aes-256-cbc

Protocol	Encryption	Proposal
	AES-128-CBC/SHA256/MODP1024	encryption aes-128-cbc
	3DES-CBC/SHA256/MODP1024	encryption 3des
	AES-256-CBC/SHA1/MODP1024	integrity sha256
	AES-256-CBC/SHA1/ECP384	integrity sha1
	AES-256-CBC/SHA1/MODP2048	dh-group 2
	AES-128-CBC/SHA1/MODP1024	dh-group 20
	AES-128-CBC/SHA1/ECP256	dh-group 14
	AES-256-CBC/SHA256/MODP2048	dh-group 5
	3DES-CBC/SHA1/MODP2048	dh-group 26
	3DES-CBC/SHA1/MODP1536	
	3DES-CBC/SHA1/MODP1024	
IPsec SA	3DES-CBC/SHA1	cypher esp-3des
	AES-256-CBC/SHA1	cypher esp-aes-256
	AES-128-CBC/SHA1	cypher esp-aes-128
	3DES-CBC/SHA256	hmac esp-sha1-hmac
	AES-256-CBC/SHA256	hmac esp-sha256-hmac
	AES-128-CBC/SHA256	

E.6 normal-3des-pfs

Protocol	Encryption	Proposal
IKEv1	AES-256-CBC/SHA1/MODP1536	encryption aes-256-cbc
	AES-256-CBC/SHA1/ECP384	encryption aes-128-cbc
	AES-256-CBC/SHA1/MODP2048	encryption 3des
	AES-256-CBC/SHA1/MODP1024	integrity sha1
	AES-128-CBC/SHA1/MODP1536	integrity sha256
	AES-128-CBC/SHA1/ECP256	dh-group 5
	AES-128-CBC/SHA1/MODP1024	dh-group 20
	3DES-CBC/SHA1/MODP2048	dh-group 14
	3DES-CBC/SHA1/MODP1536	dh-group 2

Protocol	Encryption	Proposal
	3DES-CBC/SHA1/MODP1024 AES-256-CBC/SHA256/MODP1024 AES-128-CBC/SHA256/MODP1024 3DES-CBC/SHA256/MODP1024	dh-group 26
IKEv2	AES-256-CBC/SHA256/MODP1024 AES-128-CBC/SHA256/MODP1024 3DES-CBC/SHA256/MODP1024 AES-256-CBC/SHA1/MODP1024 AES-256-CBC/SHA1/ECP384 AES-256-CBC/SHA1/MODP2048 AES-128-CBC/SHA1/MODP1024 AES-128-CBC/SHA1/ECP256 AES-256-CBC/SHA256/MODP2048 3DES-CBC/SHA1/MODP2048 3DES-CBC/SHA1/MODP1536 3DES-CBC/SHA1/MODP1024	encryption aes-256-cbc encryption aes-128-cbc encryption 3des integrity sha256 integrity sha1 dh-group 2 dh-group 20 dh-group 14 dh-group 5 dh-group 26
IPsec SA	3DES-CBC/SHA1/MODP1024 3DES-CBC/SHA1 AES-256-CBC/SHA1 AES-128-CBC/SHA1 AES-256-CBC/SHA1/MODP1536 AES-128-CBC/SHA1/MODP1536 3DES-CBC/SHA1/MODP1536 AES-256-CBC/SHA1/MODP1024 AES-128-CBC/SHA1/MODP1024	cypher esp-3des cypher esp-aes-256 cypher esp-aes-128 hmac esp-sha1-hmac hmac esp-sha256-hmac dh-group 2 dh-group 14

E.7 high

Protocol	Encryption	Proposal
IKEv1	AES-256-CBC/SHA256/MODP1024	encryption aes-256-cbc

Protocol	Encryption	Proposal
	AES-256-CBC/SHA256/ECP384	encryption aes-128-cbc
	AES-256-CBC/SHA256/MODP1536	integrity sha256
	AES-256-CBC/SHA1/MODP2048	integrity sha1
	AES-256-CBC/SHA1/ECP384	dh-group 2
	AES-256-CBC/SHA1/MODP1536	dh-group 20
	AES-128-CBC/SHA1/MODP2048	dh-group 5
	AES-128-CBC/SHA1/ECP256	dh-group 14
	AES-128-CBC/SHA1/MODP1536	dh-group 26
IKEv2	AES-256-CBC/SHA256/MODP1024	encryption aes-256-cbc
	AES-256-CBC/SHA256/ECP384	encryption aes-128-cbc
	AES-256-CBC/SHA256/MODP1536	integrity sha256
	AES-256-CBC/SHA1/MODP2048	integrity sha1
	AES-256-CBC/SHA1/ECP384	dh-group 2
	AES-256-CBC/SHA1/MODP1536	dh-group 20
	AES-128-CBC/SHA1/MODP2048	dh-group 5
	AES-128-CBC/SHA1/ECP256	dh-group 14
	AES-128-CBC/SHA1/MODP1536	dh-group 26
IPsec SA	AES-256-CBC/SHA256	cypher esp-aes-256
	AES-128-CBC/SHA256	cypher esp-aes-128
		hmac esp-hmac-sha256

E.8 strong

Protocol	Encryption	Proposal
IKEv1	AES-256-CBC/SHA1/MODP2048	encryption aes-256-cbc
	AES-256-CBC/SHA1/ECP384	encryption aes-128-cbc
	AES-256-CBC/SHA1/MODP1536	integrity sha1
	AES-128-CBC/SHA1/MODP2048	dh-group 14
	AES-128-CBC/SHA1/ECP256	dh-group 20
	AES-128-CBC/SHA1/MODP1536	dh-group 5

Protocol	Encryption	Proposal
		dh-group 26
IKEv2	AES-256-CBC/SHA1/MODP2048 AES-256-CBC/SHA1/ECP384 AES-256-CBC/SHA1/MODP1536 AES-128-CBC/SHA1/MODP2048 AES-128-CBC/SHA1/ECP256 AES-128-CBC/SHA1/MODP1536	encryption aes-256-cbc encryption aes-128-cbc integrity sha1 dh-group 14 dh-group 20 dh-group 5 dh-group 26
IPsec SA	AES-256-CBC/SHA1/MODP1536 AES-256-CBC/SHA1/MODP2048 AES-128-CBC/SHA1/MODP2048 AES-128-CBC/SHA1/MODP1536	cypher esp-aes-256 cypher esp-aes-128 hmac esp-sha1-hmac dh-group 5 dh-group 14

E.9 strong-aead

Protocol	Encryption	Proposal
IKEv1	AES-256-GCM-16/PRF-SHA384/ECP384	aead encryption aes-256-gcm-16 prf sha384 dh-group 20
IKEv2	AES-256-GCM-16/PRF-SHA384/ECP384	aead encryption aes-256-gcm-16 prf sha384 dh-group 20
IPsec SA	AES-256-GCM-16 CHACHA20POLY1305	aead cypher aes-256-gcm-16

E.10 strong-aead-pfs

Protocol	Encryption	Proposal
IKEv1	AES-256-GCM-16/PRF-SHA384/ECP384	aead

Protocol	Encryption	Proposal
		encryption aes-256-gcm-16 prf sha384 dh-group 20
IKEv2	AES-256-GCM-16/PRF-SHA384/ECP384	aead encryption aes-256-gcm-16 prf sha384 dh-group 20
IPsec SA	AES-256-GCM-16/ECP384 CHACHA20POLY1305-ECP384	aead cypher aes-256-gcm-16 dh-group 20

